

INDUSTRIAL UTILITY CART

Item Number W53991

OWNER'S MANUAL





Performance Tool®

▲WARNING: READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

PT[®]
Performance Tool

TOOL FEATURES

1. Upper Tray
2. Storage Compartments
3. Handle
4. Towel Rack
5. Hooks
6. Lower Tray
7. Fixed Casters
8. Swivel Casters

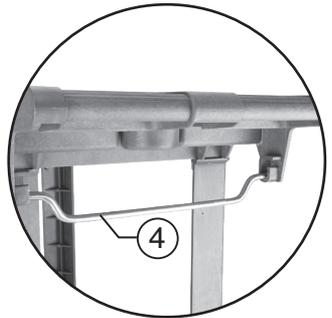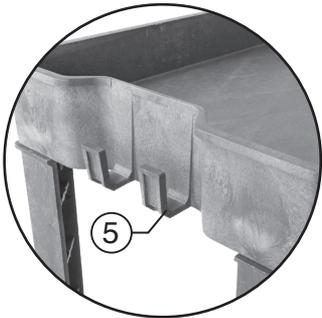

SPECIFICATIONS:

Construction: High Impact Poly-Propylene
Maximum Capacity: 500 lbs.
Upper Tray Size: 30 in. L x 15-3/4 in. W x 2-7/8 in. D
Lower Tray Size: 29 in. L x 15-3/4 in. W x 2-7/8 in. D
Overall Dimensions: 39-1/2 in. L x 17 in. W x 33-1/4 in. H
Wheel Diameter: 4-7/8 in.


Specifications are subject to change without notice.

IMPORTANT SAFETY INFORMATION

- Read these safety warnings before operation.
- Assemble only according to these instructions. Improper assembly can create hazards.
- Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- Keep assembly area clean and well lit.
- Keep bystanders out of the area during assembly.
- Do not assemble when tired or when under the influence of drugs or medication.
- Weight capacity and other product capabilities apply to properly and completely assembled product only.
- This product is not a toy. Do not allow children to play with or near this item.
- Use as intended only.
- Inspect before every use: do not use if parts are loose or damaged. Do not exceed listed weight capacity and keep weight evenly distributed. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
- Use only on flat, level, hard surface able to properly support cart and load.
- Maintain product labels and nameplates. These carry important safety information.

ASSEMBLY INSTRUCTIONS


1. Place the upper tray upside-down on a flat work surface.
2. Turn the push handle upside down with the cup holder towards the tray. (Fig. 1) Using a rubber mallet, tap the push handle down into the grooves on the tray. Make sure the handle is all the way on the tray.

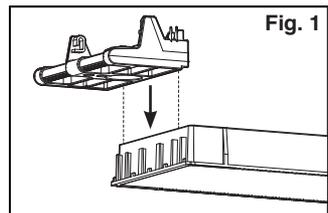

NOTE: To overcome the friction between the two plastic surfaces, rub a little petroleum jelly onto the grooved surface. The two parts should slide together with a few gentle taps of the rubber mallet.


ASSEMBLY INSTRUCTIONS CONTINUED

3. Locate two of the legs taking note of the positions of the bottom flanges. (Fig. 2) Place one nearest the handle and the other diagonally across the shelf tray corner. Using a rubber mallet, tap the legs onto the upper tray until the tab with the three screw holes is in contact with the shelf tray. Repeat this process with the other two legs so all four legs are in solid contact with the shelf tray.

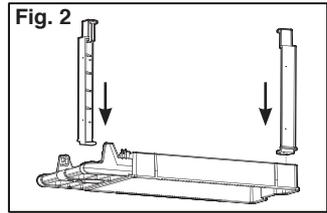


4. Insert and tighten three screws per leg so that the legs are secured in the shelf tray.


5. For the lower tray place it onto the four legs. The flanges on the four legs should fit into the depressions in this shelf tray. (Fig. 3) If all 12 screws were correctly secured through the four legs into the shelf tray, everything should fit together. Gently tap shelf tray onto the four legs until the tabs and shelf tray depressions are in contact with each other.

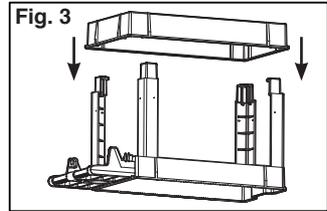


6. Insert the carriage bolts up through the leg tabs and the shelf tray. (Fig. 4) Attach the casters by first hand tightening the washers and nuts. (Fig. 5) Once all four casters are in place, go back and use an adjustable wrench to make sure all nuts and bolts are fully tightened and secure.

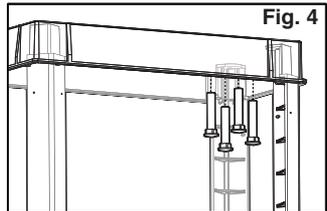

NOTE: To maximize control, we suggest installing the fixed casters on the same side as the handle, while the swivel casters go on the opposite side of the cart. However, if you prefer to have them the opposite way in order to make sharper turns and pivots, that will also work.

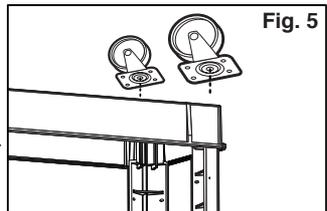


7. Turn service cart upright and install the towel rack. (Fig. 6) Make certain all hardware is tight and that the casters roll properly before adding any weight onto the cart.

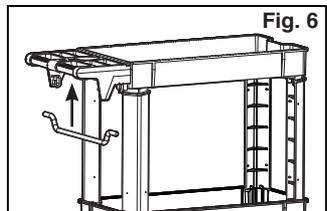

EXPANDED PARTS LIST

No.	Description	Qty.	No.	Description	Qty.
1	Upper Tray	1	7	Swivel Casters	2
2	Lower Tray	1	8	Fixed Casters.....	2
3	Handle.....	1	9	Carriage Bolts M8.....	16
4	Towel Rack.....	1	10	Washers	16
5	Legs	4	11	Lock Nuts, M8	16
6	Screws	12			

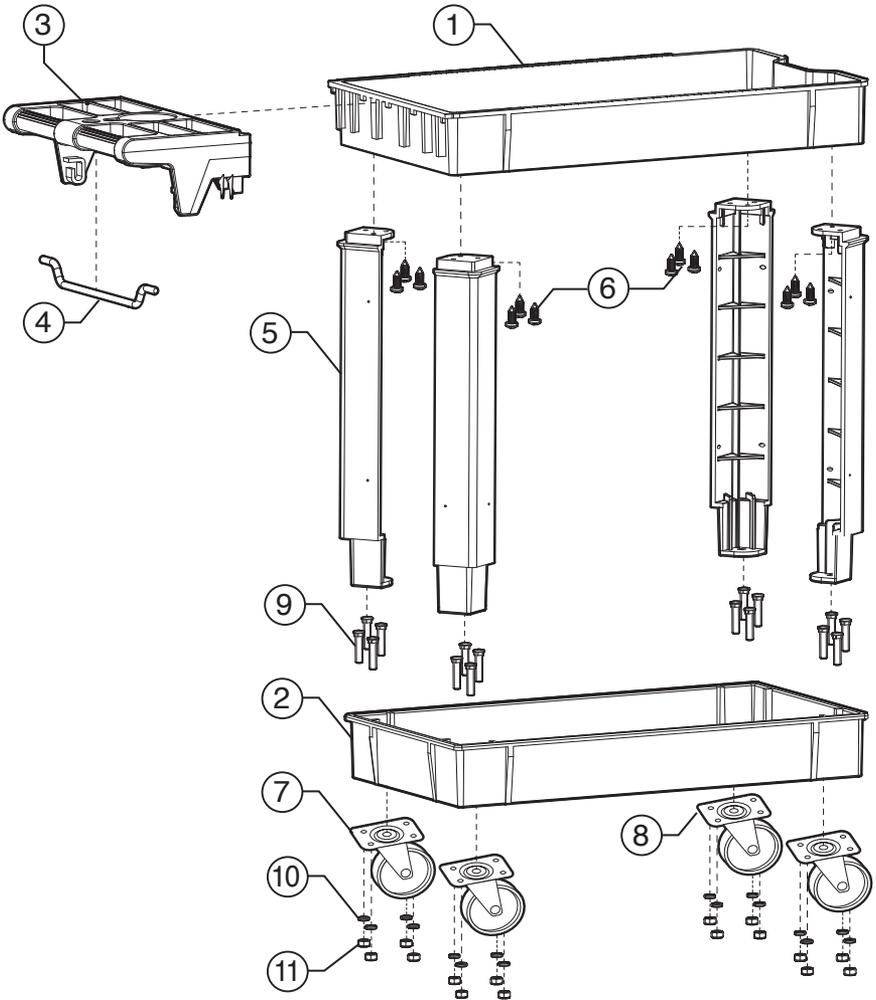

1 YEAR WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.