

# KITCHEN ISLAND CART WITH STORAGE


## RTA-096

Carefully review assembly and care instructions before using this product. Save this document for future reference.

**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**



Fully inspect all packaging to ensure all components are accounted for before disposing of any packing materials.

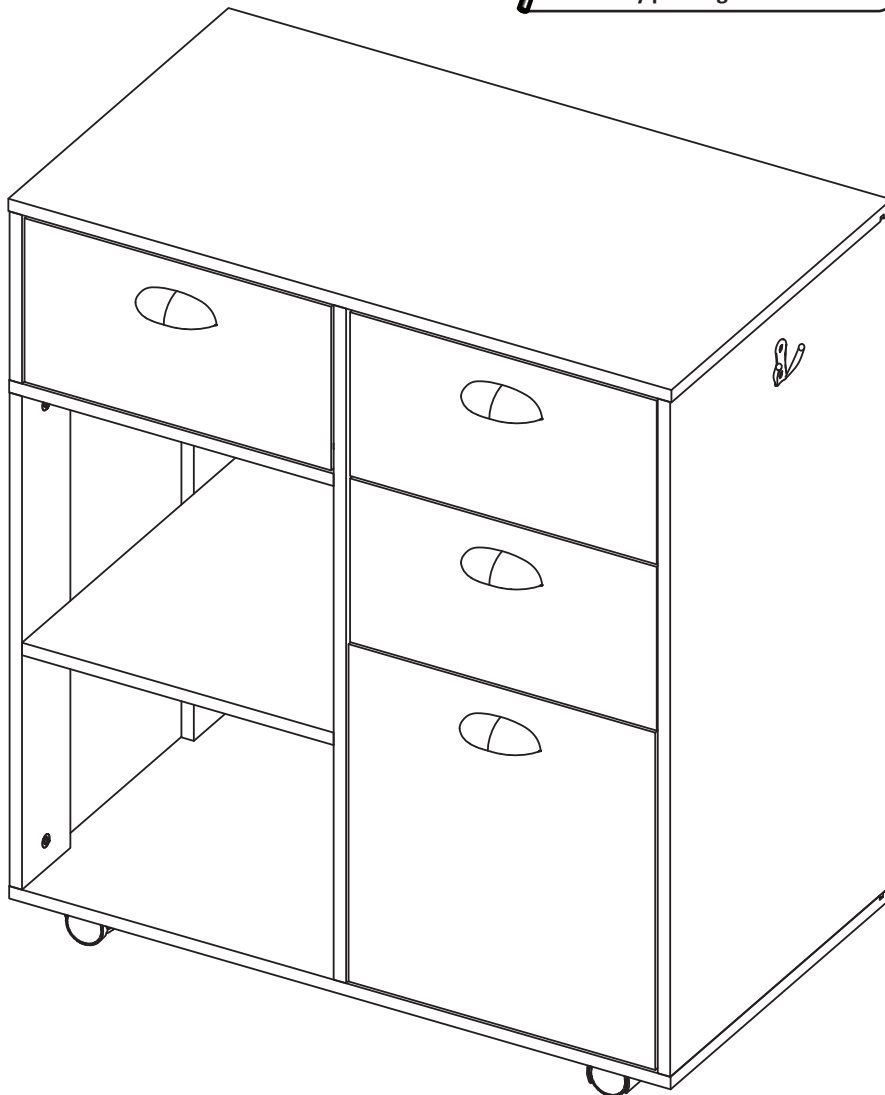


NO.	PARTS	QTY.
A	Bottom Panel	1
B	Top Panel	1
C	Right Panel	1
D	Left Panel	1
E	Back Support Brace	1
F	Bottom Shelf	1
G	Top Shelf	1
H	Middle Panel	1
I	Door	1
J	Drawer Front	3
K	Drawer Back	3
L	Drawer Right Side	3
M	Drawer Left Side	3
N	End Panel	2
O	Backing Board	2
P	Small Backing Board	1
Q	Drawer Bottom	3
R	Front Support Brace	1

NO.	HARDWARE	QTY.
1	Wood Dowel	30
2	Spreading Bolt	42
3	Cam Lock	42
4	Cover Cap	30
5	Cover Cap	12
6	Hinge + M8 x 1/2" Screws	2
7a	2-Piece Drawer Slides with 1/2" Screws	3
7b		SETS
8	Locking Caster	2
9	Caster	2
10	Drawer Pull	4
11	Robe Hook with M3 x 20mm Screws	1
12	Door Stop	1
13	M6 x 2" Screw	12
14	M6 x 1" Screw	18
15	M6 x 9/16" Screw	24
16	Mending Wedge	12
17	Corner Support	4
18	M6 x 3/4" Screw	12

### TOOLS REQUIRED (not included)



Phillips Screwdriver

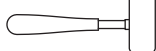

Rubber Mallet

### ! WARNING !


**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

# INTRODUCTION

***Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.***



Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.

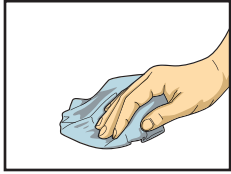

Regularly clean with a clean microfiber cloth to prevent dust accumulation.



Do not paint the unit.  
Do not use abrasive materials or cleaners to clean the furniture; only use a slightly moistened cloth.



Indoor use only.  
Do not expose the furniture to heat or humidity.



When cleaning nearby the furniture, do not allow contact with water or cleaners as they can deteriorate the furniture.



Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.




Never open more than one drawer at a time.  
Place heaviest items in the lowest drawers.



Assemble on a soft, flat, clean, and dry surface.

Use a soft, protective barrier when assembling the furniture.

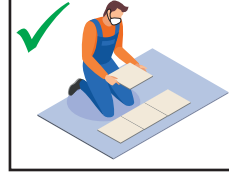

**TIP:** Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not push or drag furniture unless the locking casters are unlocked, doing so may damage the unit.




Always ask for help when moving furniture.



**Avoid Accidents** - Do not climb, sit or stand on the furniture.

Do not allow children to play on or inside the furniture.

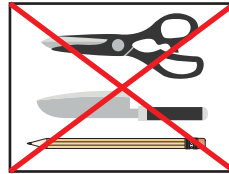

Use caution with sharp objects as they may scratch or damage the unit.  
Do not use the furniture as a writing surface without a padded barrier.




Never put a TV on this product.

# ⚠ IMPORTANT INSTALLATION INFORMATION ⚠


For the stability of the unit, it is important that furniture connectors are installed correctly.  
See drawings and tips below for proper installation.

## Wood Dowel

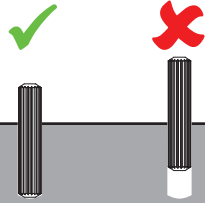


Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

## Spreading Bolt

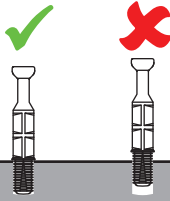

Install Spreading Bolt by firmly pressing it into the hole or gently tapping it with a rubber mallet until the shoulder is flush with the panel.

## Cam Lock


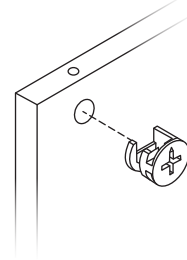


Align the cam lock opening (arrow) with the pre-drilled hole on the side of the panel. Use a screwdriver to adjust alignment as needed.


## Drawer Slide



*Before installation, the drawer slides must first be separated. Fully extend the slide and push down on the lock lever. Grab the runner and pull it out of the mount.*

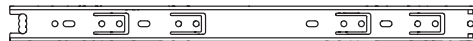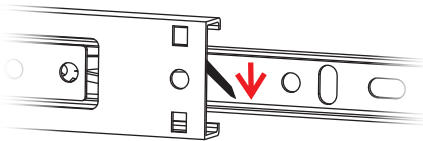

**7a** When installing, the plastic stop should be situated in the back.

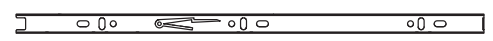

**7b** When installing, the metallic stop should be situated in the front.



# ASSEMBLY

*Review all steps carefully and understand assembly before beginning.*

### STEP 1

#### TOOLS REQUIRED

- D: 1
- 1: 4
- 2: 1
- 3: 4
- 7a: 1

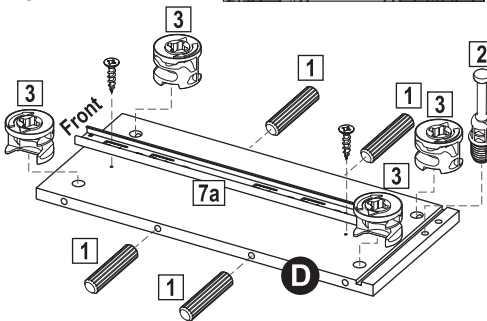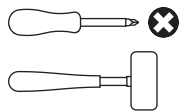


Install four Wood Dowels (1), one Spreading Bolt (2), and four Cam Locks (3) into Left Panel (D) as shown.

Ensuring the front of Drawer Slide (7a) is facing the front of the panel, securely fasten the slide as indicated in the drawings.


### STEP 2

#### TOOLS REQUIRED

- N: 2
- 1: 8
- 3: 8

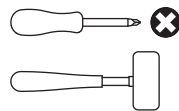


**x2**

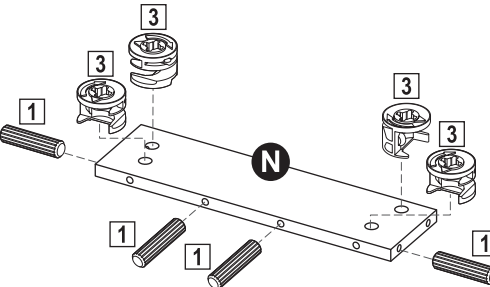

Install four Wood Dowels (1) and four Cam Locks (3) into End Panel (N).

### STEP 3

#### TOOLS REQUIRED

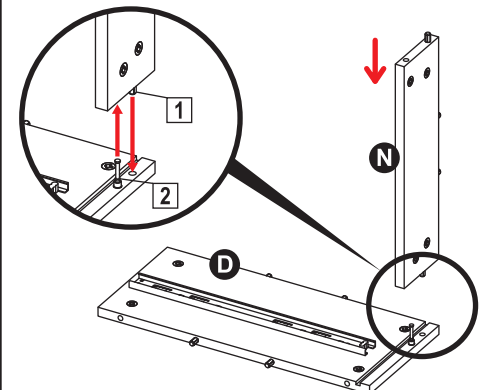


Ensuring the panels are installed facing the direction shown in the drawing, align End Panel (N) with Left Panel (D).

Use a screwdriver to turn the cam lock until it locks onto the head of the spreading bolt.

**STEP 4** TOOLS REQUIRED

G: 1  
2: 2  
3: 2


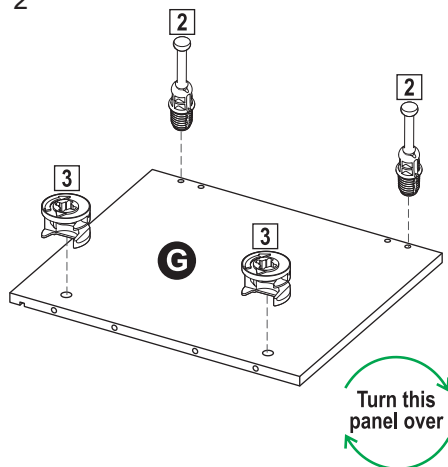


Install two Spreading Bolts (2) and two Cam Locks (3) into Top Shelf (G).



Turn the shelf over.

**STEP 5** TOOLS REQUIRED

1: 2  
2: 2

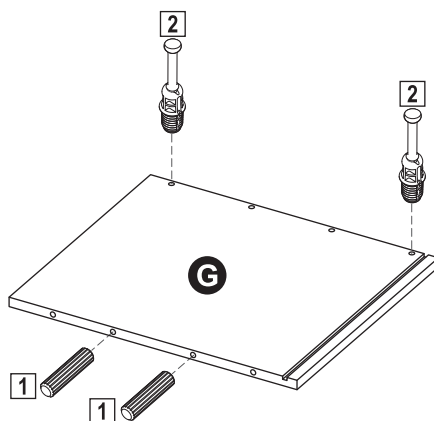

Install two Wood Dowels (1) and two Spreading Bolts (2) into Top Shelf (G) as shown.

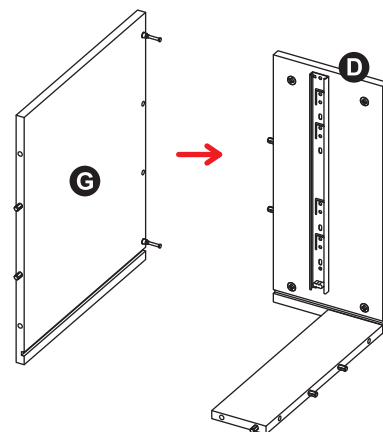

**STEP 6** TOOLS REQUIRED

Ensuring the panels are installed facing the direction shown in the drawing, align Top Shelf (G) with Left Panel (D).

Use a screwdriver to turn the cam lock until it locks onto the head of the spreading bolt.

**STEP 7** TOOLS REQUIRED



E: 1  
1: 2  
2: 1  
3: 2

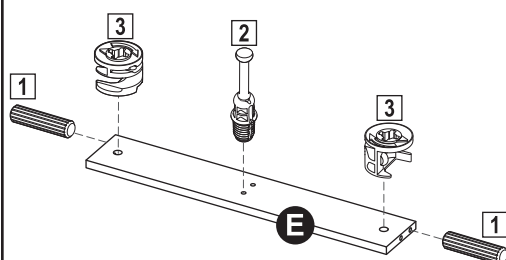

Install two Wood Dowels (1), one Spreading Bolt (2), and two Cam Locks (3) into Back Support Brace (E) as shown.

**STEP 8** TOOLS REQUIRED




R: 1  
1: 2  
2: 1  
3: 2

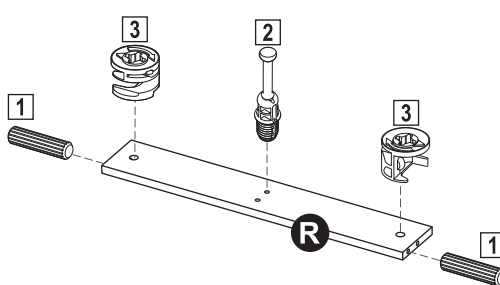

Install two Wood Dowels (1), one Spreading Bolt (2), and two Cam Locks (3) into Front Support Brace (R) as shown.



**STEP 9** TOOLS REQUIRED

F: 1  
1: 4  
3: 4

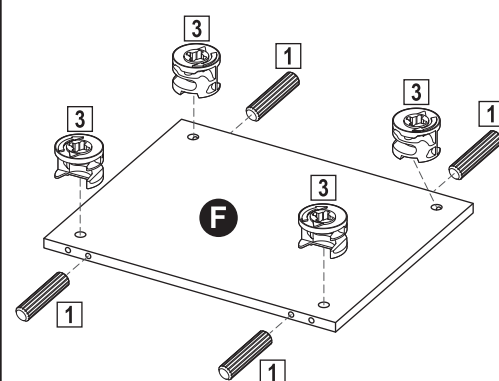


Install four Wood Dowels (1) and four Cam Locks (3) into Bottom Shelf (F) as shown.

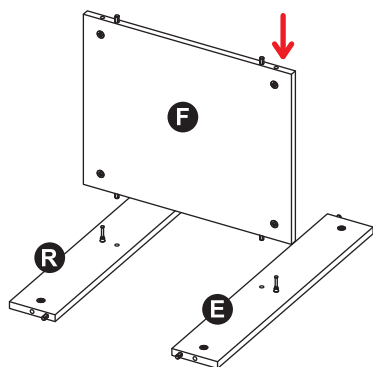

**STEP 10** TOOLS REQUIRED

Ensuring the panels are facing the direction as shown, align Bottom Shelf (F) with Front Support Brace (R) and Back Support Brace (E). Then, secure the cam locks.

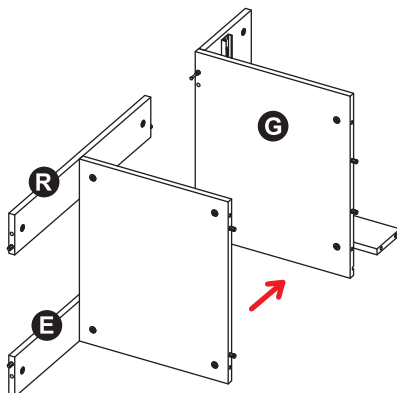**STEP 11** TOOLS REQUIRED

Ensuring the panels are facing the direction as shown, align Front Support Brace (R) and Back Support Brace (E) with the bottom of Shelf (G) and secure the cam locks.



**STEP 12** TOOLS REQUIRED

H: 1

2: 1

3: 4

7a: 2

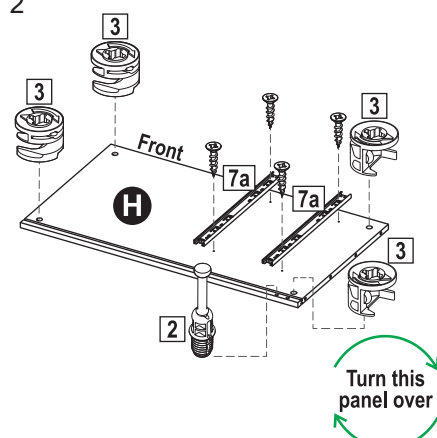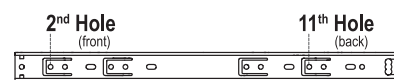

Install one Spreading Bolt (2) and four Cam Locks (3) into Middle Panel (H) as shown.

Ensuring the front of Drawer Slides (7a) are facing the front of the panel, securely fasten two slides as indicated in the drawings.



Turn the panel over.

**STEP 13** TOOLS REQUIRED

1: 4


2: 5

7a: 1

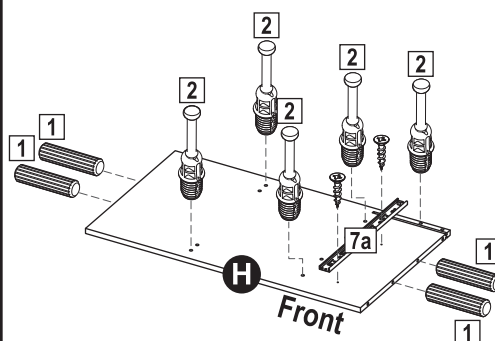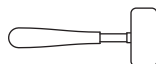


Install four Wood Dowels (1) and five Spreading Bolts (2) into Middle Panel (H) as shown.

Ensuring the front of Drawer Slide (7a) is facing the front of the panel, securely fasten the slide exactly as indicated in the top drawing.

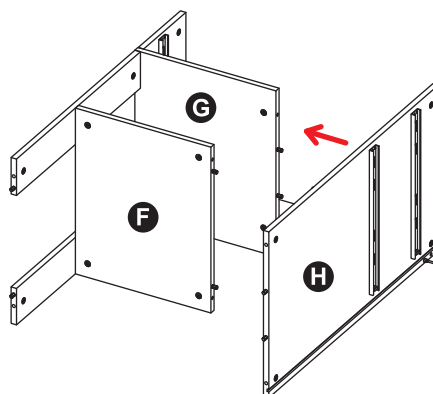**STEP 14** TOOLS REQUIRED


Identify the side of Middle Panel (H) that has only one drawer slide; align Middle Panel (H) with Top Shelf (G) and Bottom Shelf (F). Then, secure the cam locks.

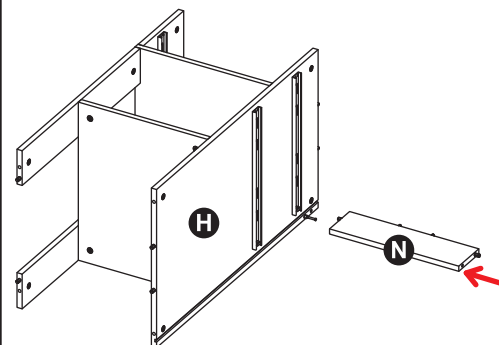**STEP 15** TOOLS REQUIRED

Align End Panel (N) with the top of Middle Panel (H) and secure the cam lock.

## STEP 16 TOOLS REQUIRED

- C: 1  
1: 4  
2: 1  
3: 4  
6: 2  
7a: 2


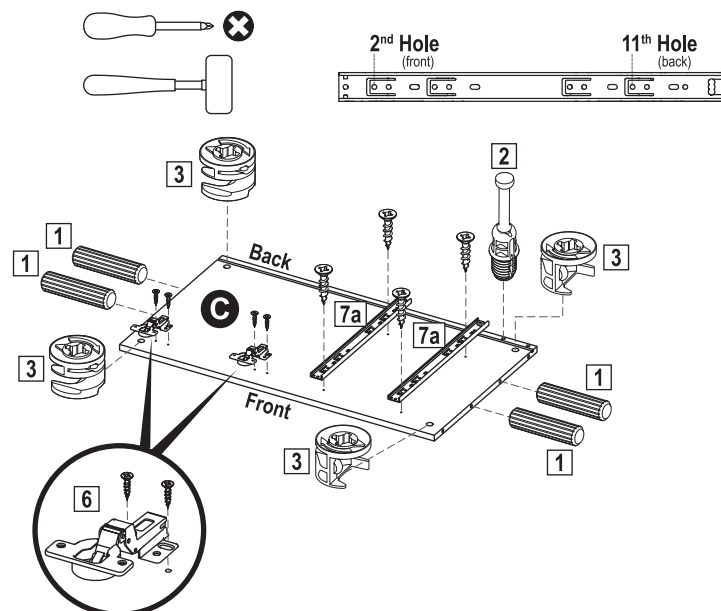


Install four Wood Dowels (1), one Spreading Bolt (2), and four Cam Locks (3) into Right Panel (C) as shown.

Ensuring the front of Drawer Slides (7a) are facing the front of the panel, securely fasten two slides as indicated.

Loosely secure two Hinges (6) to the front of the panel, as shown. **Do not fully tighten the hinge screws. Save the remaining screws for Step 32.**

## STEP 17 TOOLS REQUIRED

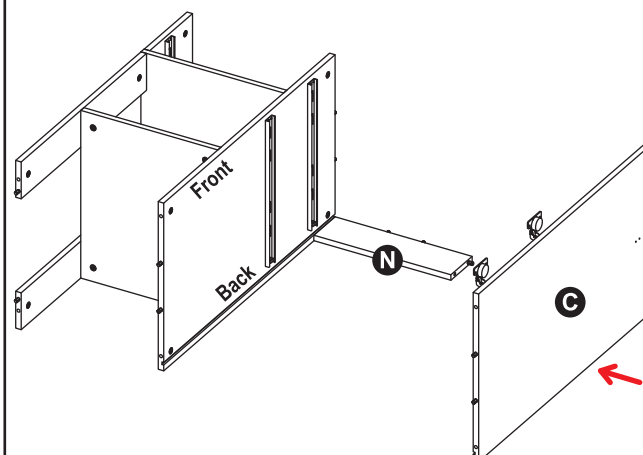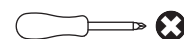

Ensuring the hinges are facing the front, align Right Panel (C) with End Panel (N) and secure the cam lock.


## STEP 18 TOOLS REQUIRED

- A: 1  
8: 2  
9: 2  
15: 16



### IMPORTANT:

Identify the back of the panel by checking the other side of the panel and noting the location of the groove for installing the backing board. (Refer to step 19 drawing)

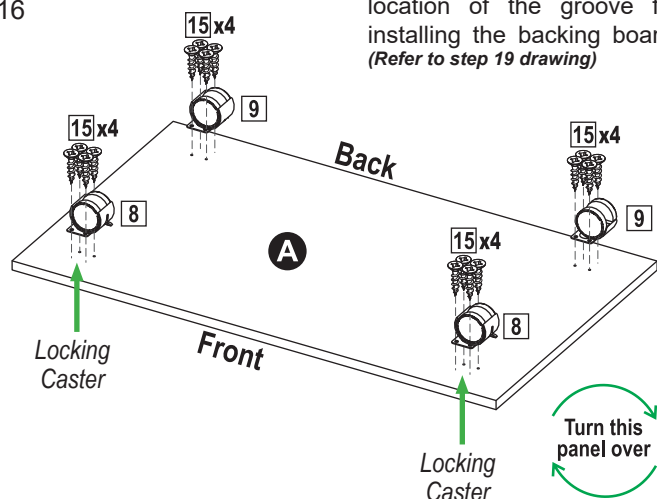


Secure two Locking Casters (8) onto the front side of the bottom panel using four M6 x 9/16" Screws (15) for each caster. Then, secure two Casters (9) to the back of the panel using the remaining 9/16" screws.

Turn the panel over.


## STEP 19

- 2: 6  
12: 1

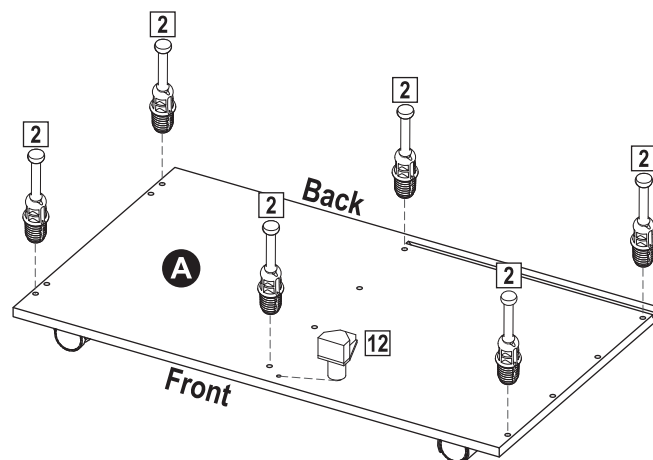

Install six Spreading Bolts (2) into Bottom Panel (A) as shown.

Insert one Door Stop (12) into the designated hole on the front side of Bottom Panel (A).

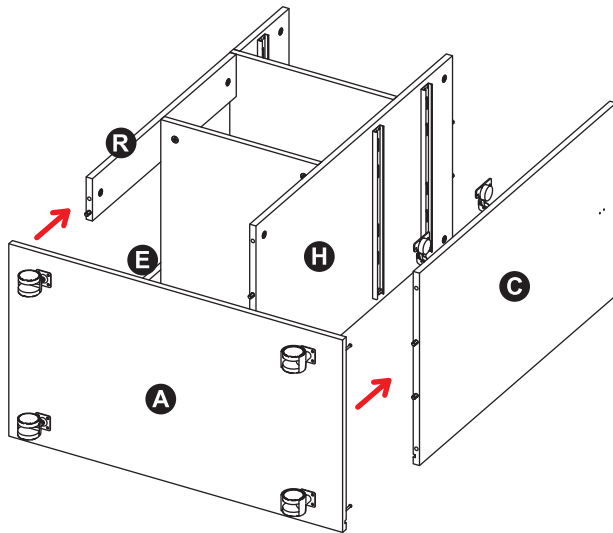**STEP 20****TOOLS REQUIRED**


Align Bottom Panel (A) with Front Support Brace (R), Back Support Brace (E), Middle Panel (H), and Right Panel (C). Then, secure the cam locks.

Turn the unit upright.

**STEP 21****TOOLS REQUIRED**

P: 1

O: 2

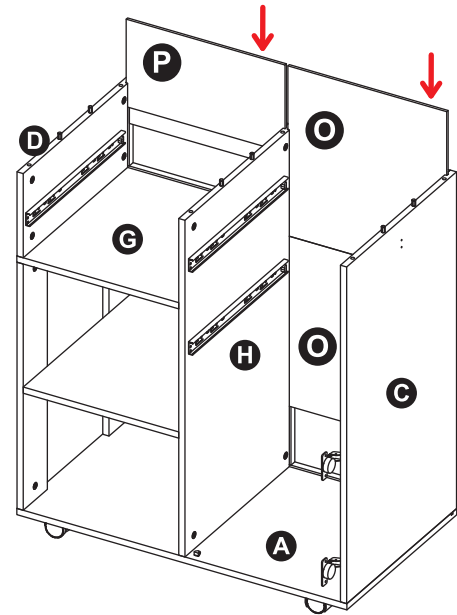


Slide one Small Backing Board (P) into the grooves in the back of Left Panel (D) and Middle Panel (H).

Slide two Backing Boards (O) into the grooves in the back of Middle Panel (H) and Right Panel (C).


**STEP 22**

B: 1

2: 10

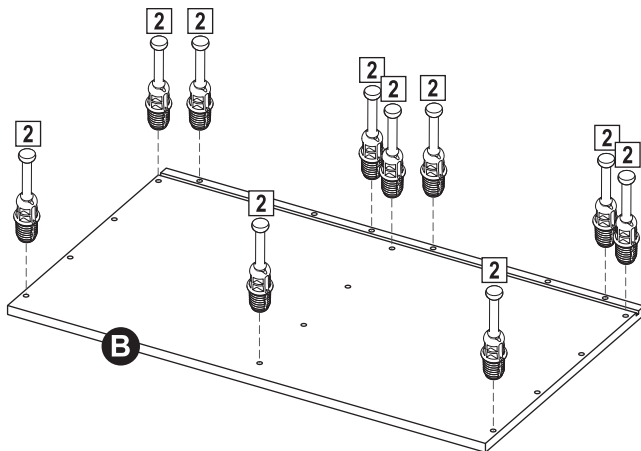

Install ten Spreading Bolts (2) into the underside of Top Panel (B) as shown.

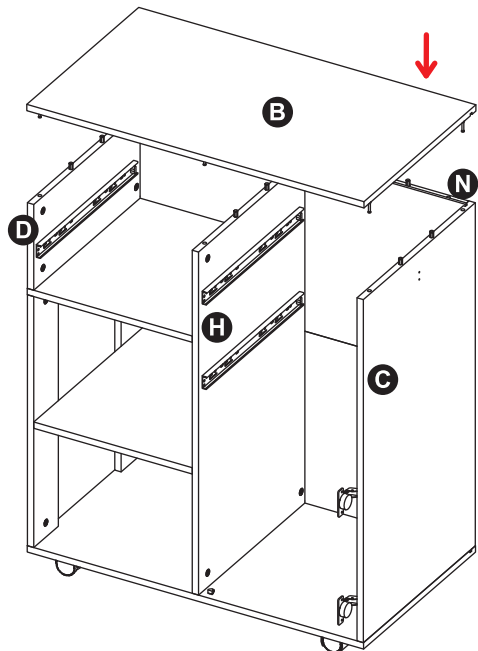**STEP 23****TOOLS REQUIRED**


Align Top Panel (B) with the top of the unit and secure the cam locks.

**STEP 24** TOOLS REQUIRED

L: 3  
3: 6  
7b: 3



**x3**

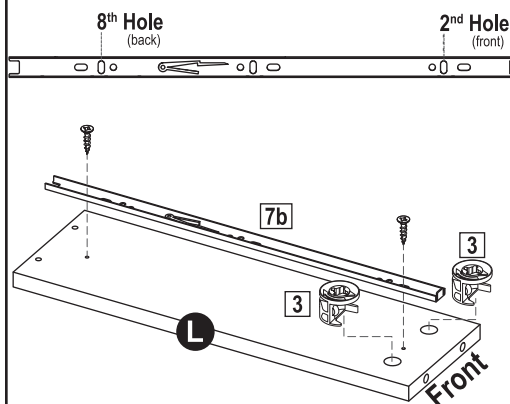

Install two Cam Locks (3) into Drawer Right Side (L).


Ensuring the front of Drawer Slide (7b) is facing the front of the drawer side, securely fasten the slide as indicated in the drawings.

**STEP 25** TOOLS REQUIRED

M: 3  
3: 6  
7b: 3



**x3**

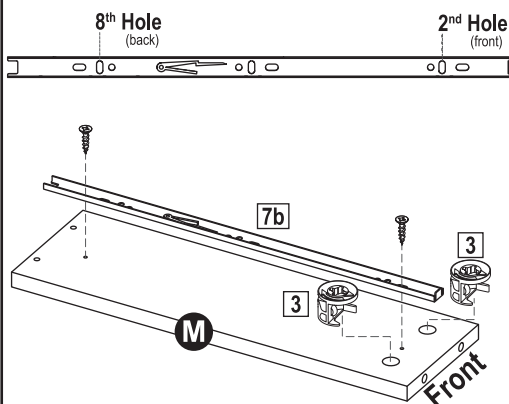

Install two Cam Locks (3) into Drawer Left Side (M).


Ensuring the front of Drawer Slide (7b) is facing the front of the drawer side, securely fasten the slide as indicated in the drawings.

**STEP 26** TOOLS REQUIRED

K: 3  
13: 12



**x3**

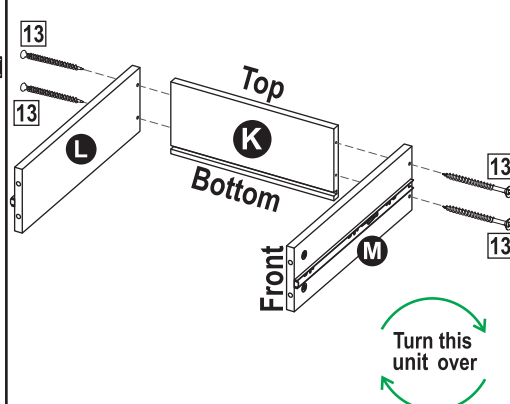


Ensuring the drawer slides are on the outside and the mounting holes on the narrow edge are facing the front, align the left and right drawer sides (L,M) with the top of Drawer Back (K). Then, secure each side panel using two M6 x 2" Screws (13) as shown.

**STEP 27** TOOLS REQUIRED

Q: 3  
14: 18



**x3**

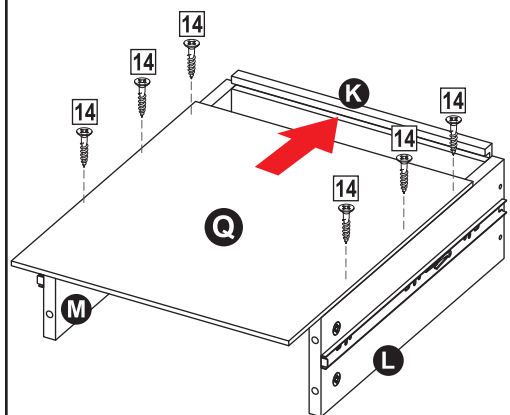

Place Drawer Bottom (Q) onto the bottom of the drawer, ensuring it is flush with the groove on the bottom of Drawer Back (K).


Secure the drawer bottom to the sides using six M6 x 1" Screws (14).

**STEP 28** TOOLS REQUIRED

J: 3  
2: 12  
10: 3



**x3**

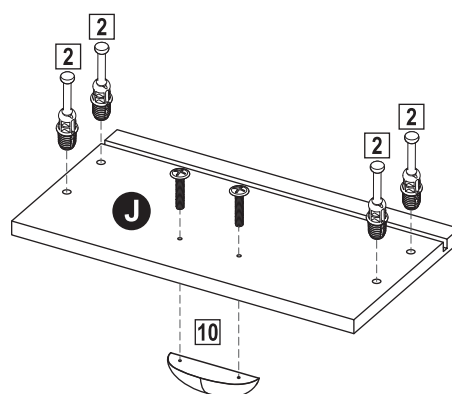


Install four Spreading Bolts (2) into the back side of Drawer Front (J). Secure Drawer Pull (10) to the Drawer Front (J) as shown.

**STEP 29** TOOLS REQUIRED

J: 3



**x3**

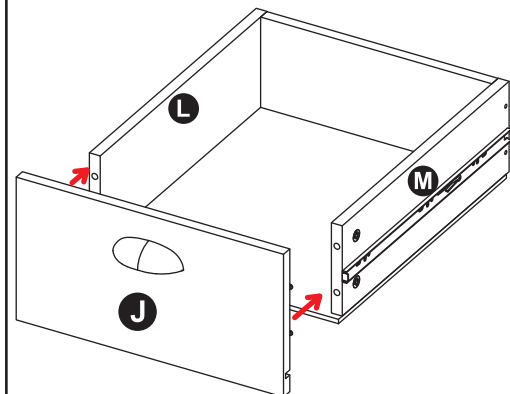

Align Drawer Front (J) with Drawer Sides (L,M) and secure the cam locks.


### STEP 30 TOOLS REQUIRED

15: 8

16: 12

17: 4


18: 12

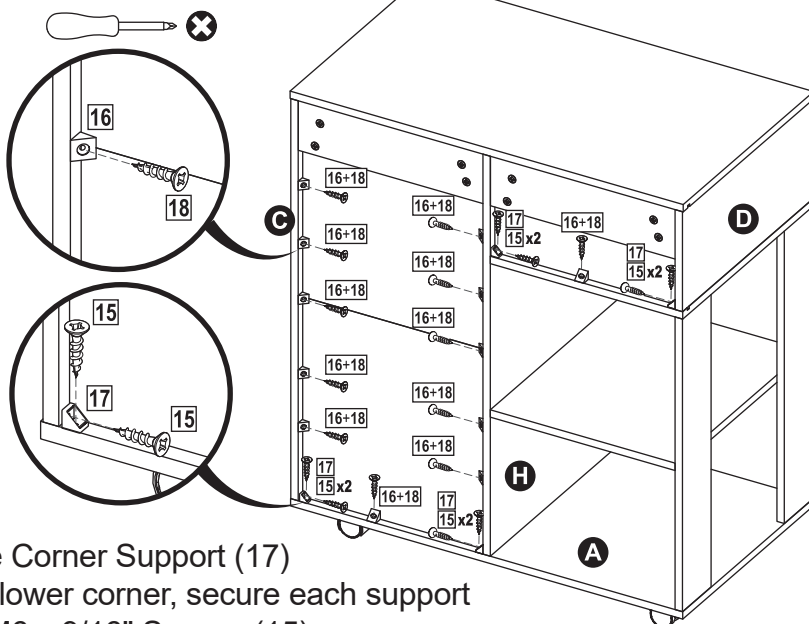

Place one Corner Support (17) into each lower corner, secure each support with two M6 x 9/16" Screws (15).

Evenly space and fasten twelve Mending Wedges (16) with twelve M6 x 3/4" Screws (18) as shown.

### STEP 31

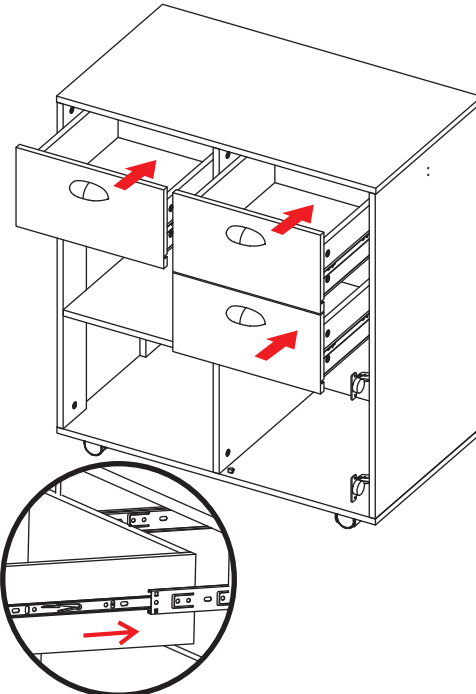

Slide the drawers into the cabinet.

### STEP 32 TOOLS REQUIRED

I: 1

4: 30

5: 12

10: 1

11: 1





Assistance is recommended for this step.



**Before beginning this step, review the Door Adjustment Procedure, below.**




With assistance, align Door (I) with Right Panel (C) and secure the hinges to the door using the 1/2" Screws that are left over from Step 16.

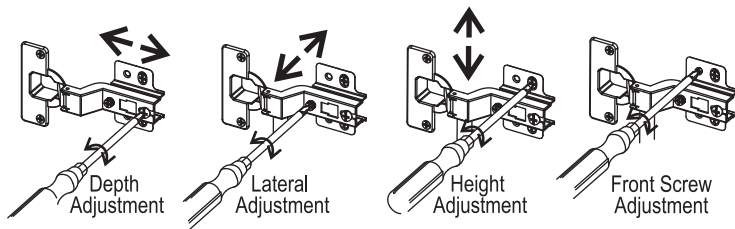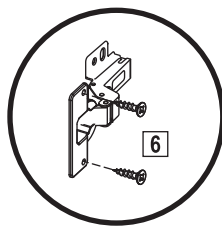

### Door Adjustment Procedure:

**Please note**, care must be taken during hinge adjustment to avoid damage.

Only a slight adjustment is required. Rotate the Door Adjustment screw 1/8 to 1/4 turns at a time, then check the door position. Rotate adjustment screws as necessary until doors are properly aligned.

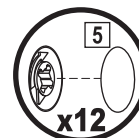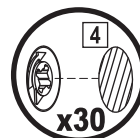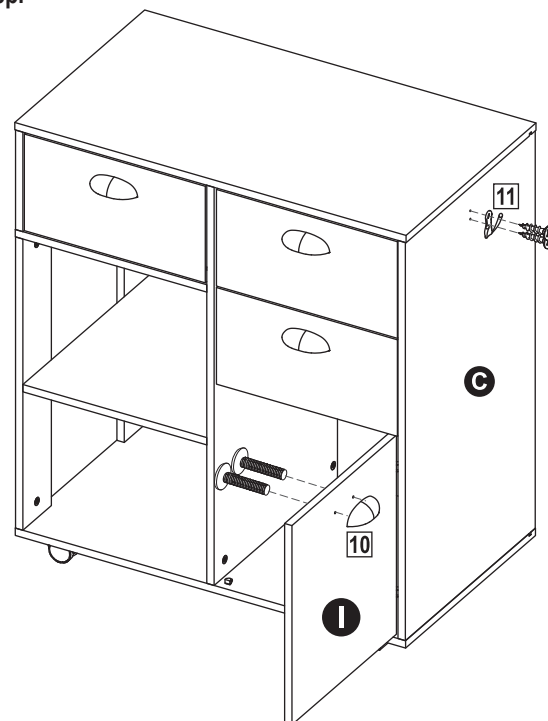

Ensuring they match the panel color, use Cover Caps (4,5) to cover all cam locks.



# Before Use...

Always ensure the locking casters are unlocked before attempting to move the unit.

Always lock the locking casters after moving the unit.

Only use on a clean, flat surface. Dirt, debris and uneven surfaces beneath the casters may damage the unit.

Move the unit by gently pushing it. If it is necessary to lift the unit, only lift from beneath the bottom panel.

Do not open more than one drawer at a time as doing so may cause the unit to tip.

## SAFETY STATEMENTS & WARNINGS

- For indoor use only.
- This product is for residential use only; institutional or commercial use will automatically void the warranty.
- Ensure all fittings are tight before use. Periodically check fittings to ensure they remain tight.
- Only use this unit on a clean, flat, and level surface.
- Never sit, stand or climb on the unit.
- Never allow children to stand, climb, or hang on doors, drawers, or shelves.
- Do not place hot items or liquids directly on the furniture.
- To prevent permanent damage to the unit, wipe up spills immediately.
- Never use chemical cleaning products or polishes as doing so may damage the finish.
- Do not exceed the weight capacity of the furniture.
- Do not overload the drawers as doing so may cause damage.
- Do not overload shelves as doing so may cause them to sag.
- Always place the heaviest items on the lowest shelves and/or in the lowest drawer.
- Never put a television on this item.
- Avoid long-term exposure to sunlight.
- Avoid placing the unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write or cut on furniture top without a barrier to protect the surface.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

*If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.*

## NOTICE:

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**