

COSCO®

SIMPLE


SMART

FUN

www.coscokids.com

©2017 Dorel Juvenile. All Rights Reserved.

COSCO®

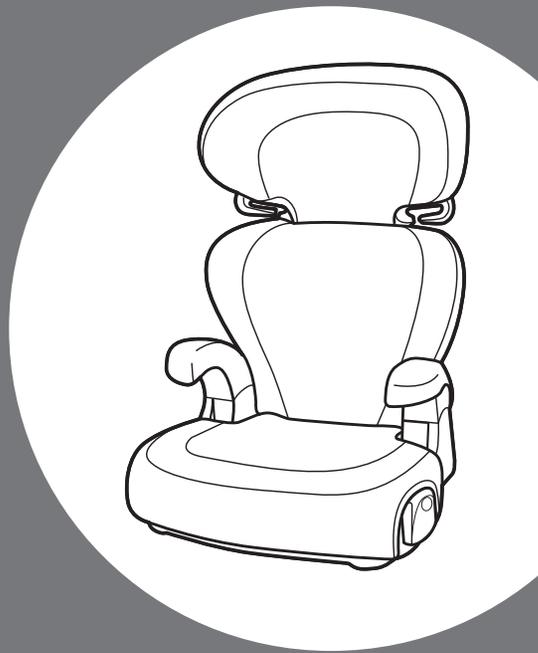

PRONTO BOOSTER CAR SEAT

40-100 lb and 43-57 in.
(18.1-45.4 kg and 110.1-144.8 cm)

KEEP INSTRUCTIONS FOR FUTURE USE.
Read all instructions before using this booster seat.

⚠ WARNING:

Failure to follow the warnings on the labels
and in the instruction manual can result in
serious injury or death to your child.




4358-7289
6.1.17

Table of Contents

●	Getting Started	1
	Parts of the Booster Seat	1
	Installing Seat Pad.....	2
	Installing Headrest Pad	3
	Attaching Headrest to Backrest.....	5
	Attaching Backrest to Base	6
	Adjusting and Removing Headrest.....	7
	Adjusting and Removing Backrest	8
	Cup Holder	9
	Removing Seat Pad for Cleaning.....	10
●	Safety Information	12
	Booster Seat Use.....	12
	Vehicle Seating Position	12
	Installation in Vehicle	13
●	Vehicle Information	14
	Understanding Your Vehicle	14
	Knowing Your Vehicle Belts.....	15
	Aircraft Information	15
●	Booster Seat with Backrest	16
	 Lap and Shoulder Belt Installation	17
●	Booster Seat without Backrest	19
	 Lap and Shoulder Belt Installation	20
●	Important Information	22
	Dorel Juvenile Group Information.....	22
	Troubleshooting.....	23
	Registration and Safety Notices	24
	Replacement Parts Order Form.....	25
	Warranty.....	27


Parts of the Booster Seat

Front View

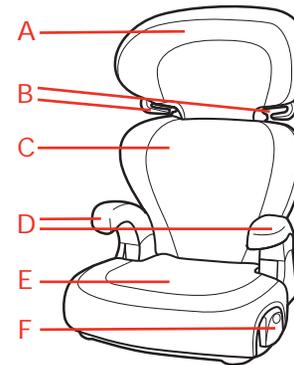


- A. Headrest
- B. Shoulder Belt-Positioning Guides
- C. Backrest
- D. Arm Rests
- E. Seat Base
- F. Cup Holder (see page 9)

Back View

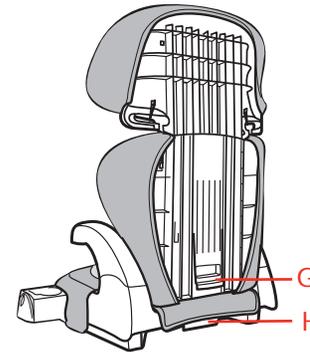

- G. Headrest Adjustment Tab
- H. Backrest Adjustment Tab

Bottom View

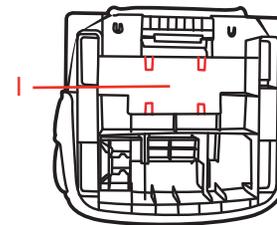

- I. Instruction Manual Storage (under seat base)


Installing Seat Pad

Depending on your model, you may need to install the seat pad.



1. Attach Seat Pad


Slide seat pad onto the front of the base. Slide the elastic strap over the armrest, one side at a time.

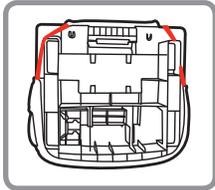

2. Wrap Elastic Straps Under Seat as Shown




3. Pull Pad Down and Around Cup Holder

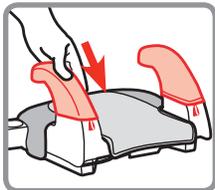

4. Attach Arm Covers (on select models)

Slide armrest covers over armrests and attach the armrest cover's elastic straps to bottom of seat as shown.

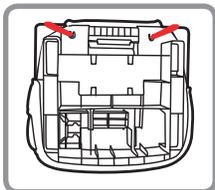


5. Attach Elastic To Tab


Attach the elastic on back of armrest cover to bottom of seat.

Installing Headrest Pad


Depending on your model, you may need to install the headrest pad. Your booster seat will have one of two headrest pad types.

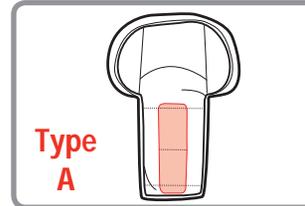

Type A headrest pad has sewn on plastic strip. See step 1a.

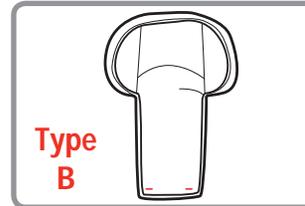


Type B headrest pad does not have the plastic strip. See step 1b.

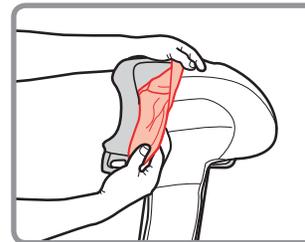

1a. Attach Headrest Pad Type A


Attach headrest pad to the headrest by sliding the pad over one side of the headrest, then the other.

Attaching Headrest to Backrest


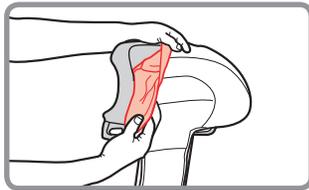


1b. Attach Headrest Pad Type B

Attach headrest pad to the headrest by sliding the pad over one side of the headrest, then the other.

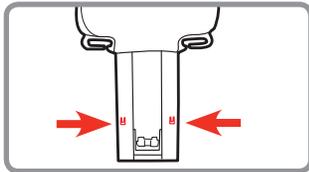


Attach bottom of headrest pad by attaching pad to tabs near the bottom of the headrest.

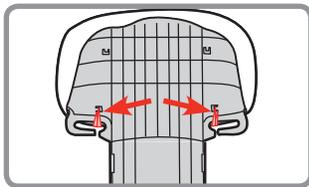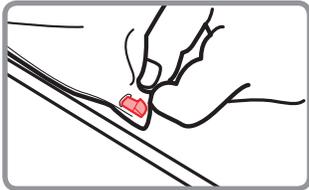

2. Attach Elastic Straps

From the back of headrest, attach the elastic straps to the hooks above the shoulder belt positioning guide.


Depending on your model you may need to install the headrest and backrest in order to use this seat as a backed booster.

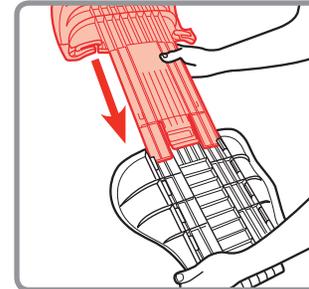


1. Attach Headrest to Backrest

Headrest pad **Type A** will slide behind the backrest with the headrest.

With the headrest and backrest facing down, slide the headrest into the track on the back of the headrest.

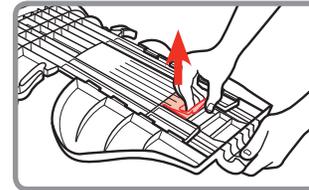

Lift headrest adjuster lock up and pull headrest down into a locked position.

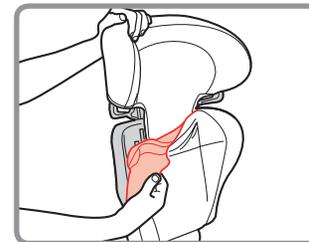

2. Attach Backrest Pad


Headrest pad **Type B** will go behind only the backrest pad as shown.

Slide backrest pad onto one side of the backrest.

Pull pad tight and slide the pad over the other side of the backrest.


Attaching Backrest to Base

NOTE: Headrest MUST always be used when using backrest. If headrest has been removed from backrest, see page 5 to attach headrest.

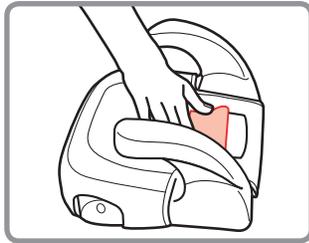

1. Locate the Backrest Connection Hole

Hold the rectangular shaped tab on the rear of the seat base pad back to expose the backrest connection hole.

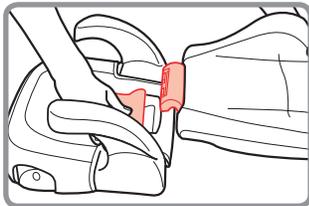

2. Attach Backrest to Base

Lay backrest flat (horizontal) and pull back the seat base fabric.

Insert the hook on the backrest into the large opening on back of seat base pad. Then insert the hook on the backrest into the large opening on the back of the seat base.

NOTE: Make sure seat pad does not get caught between the moving parts. The backrest may not connect properly if the pad is in the way.



3. Rotate Backrest Up Until It Clicks

Tuck backrest connection hole flap under the backrest pad.

⚠ WARNING: Do not use this booster seat without the seat pad. Failure to do this can result in serious injury.

Adjusting and Removing Headrest



To Adjust Headrest



This booster seat has multiple headrest positions.

Grasp top of headrest and push down with one hand while pulling out on the headrest adjustment lock with the other.

Raise and lower headrest into selected position. Release the headrest adjustment lock into one of the multiple headrest heights.

Make sure headrest is locked by pulling headrest up and down. Headrest may move slightly when it is locked.

The backrest/headrest are removable.

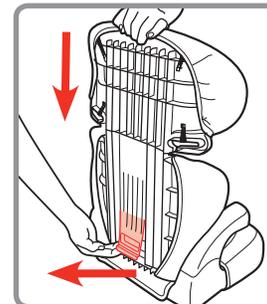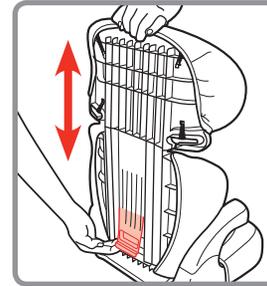


To Remove Headrest from Backrest

Move backrest to most upright position.


Grasp top of headrest and push down with one hand while pulling out on the headrest adjustment lock with the other.

Pull out and hold headrest adjustment lock and raise headrest up until it comes out of the backrest track completely.

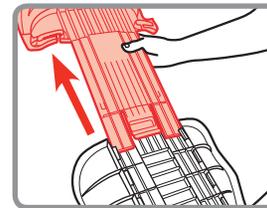



Adjusting and Removing Backrest

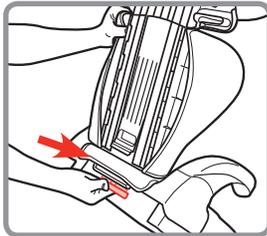

To Recline Backrest


Recline the backrest by pushing on the backrest release tab and rotate top of seat back about an inch.

The restraint is now in semi-reclined position.




The backrest has 2 positions, upright and semi-reclined.

The semi-recline position is to be used only to install the booster seat flush against the vehicle seat back, if needed.

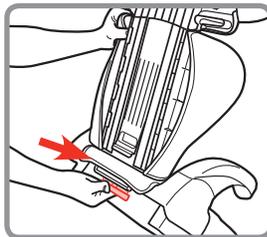


To Remove Backrest

Press in firmly on backrest release tab and rotate backrest back until it lays flat (horizontal).

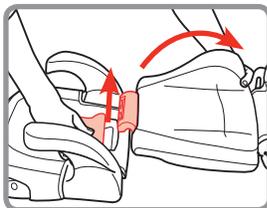


Lift backrest hook out of the opening in seat base. Store backrest for future use.

Cup Holder

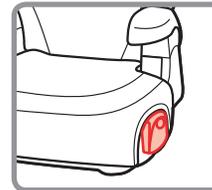

The cup holder is located on the side of the booster seat as shown.

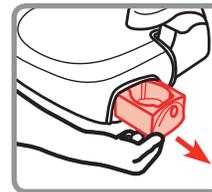


Pull out cup holder to use.

Push cup holder in when not needed.




Removing Seat Pad for Cleaning



NOTE: Headrest and backrest must be removed from seat bottom to remove complete seat pad set. See page 8 to remove headrest/backrest from base.

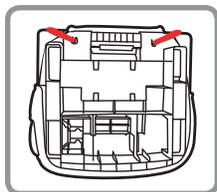


1. Undo Armrest Cover Elastic Straps from Bottom of Shell and Remove Armrest Cover (on select models)

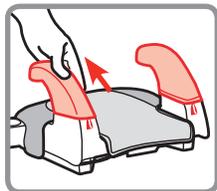

2. Undo Seat Pad Elastic Straps from Under Seat Bottom and Remove Seat Pad

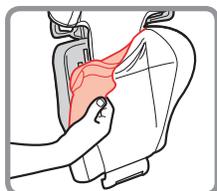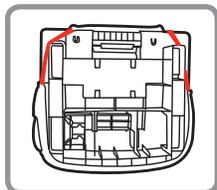


3. Remove Pad from Backrest

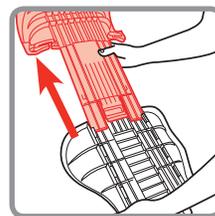

4. Remove Headrest from Backrest



Move backrest to most upright position. Pull out and hold headrest adjustment lock and raise headrest up until it comes out of the backrest track completely.

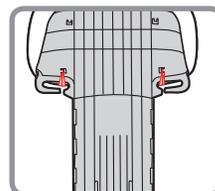

5. Remove Pad from Headrest

Undo the elastic straps.

If you have headrest pad Type B, remove pad from tabs at bottom of headrest, as shown.

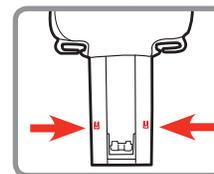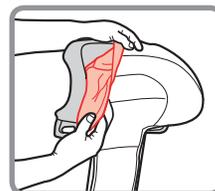


⚠ WARNINGS: Do not use booster seat without the seat pad. Failure to do this can result in serious injury or death.

Cleaning Pad

Machine wash separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

Cleaning Headrest Pad TYPE A

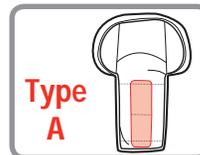

Hand wash and line dry only.

Replace Pad

See pages 2-5.



Booster Seat Use

- Never take your child out of the booster seat while the vehicle is moving. Never leave child unattended. Placing your child in a hot booster seat may result in burns.
- Do not use a booster seat with damaged or missing parts.
- Do not substitute parts or try to modify the booster seat in any way.
- Do not use any booster seat accessory except those approved by Dorel Juvenile Group.
- Never allow any child to play with this booster seat; it is not a toy.
- Do not remove or cover up any of the warning labels or other labels on the booster seat.
- Read all instructions for additional warnings.
- On the side of the booster seat there is a date of manufacture label. Do not use this booster seat more than 10 years after date of manufacture.

Juvenile Group Consumer Care Department, or visit your local Child Passenger Inspection Station. Go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to National Highway Traffic Safety Administration information, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

To avoid your child being seriously burned, take the following precautions:

1. Park in the shade or where sun does not directly hit the booster seat.
2. Always use the booster seat with the seat pad.



Vehicle Seating Position

Check the vehicle owner's manual for more information about air bag/child restraint use.

For vehicles without a back seat, refer to your vehicle owner's manual.



Use the booster seat only on vehicle seats that face forward.



Do not use on seats that face the sides or rear of the vehicle.

Some vehicles do not have a seating position that can be used safely with this booster seat.

If you are not sure where to place the booster seat in your vehicle, consult your vehicle owner's manual, contact Dorel

Installation in Vehicle




Check the vehicle belt before each use. Use only if the belt can be tightened properly and securely.

This booster seat should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured booster seat could injure occupants.

Do not use a booster seat that has been in a crash. You must get a new booster seat.



Understanding Your Vehicle

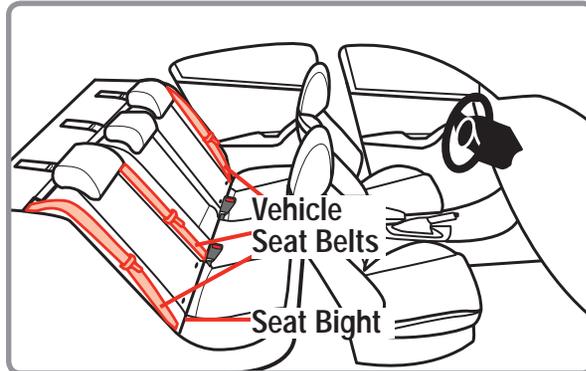

Your vehicle's features may be considerably different than those pictured here.

Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.

Knowing Your Vehicle Belts



Not all vehicle belts and seating positions will work with this booster seat. You must review your vehicle owner's manual for vehicle seat belt use with booster seats.

Never Use With This Booster Seat

Lap Belt Only



Inflatable Seat Belts



Aircraft Information



This restraint is not certified for aircraft use because aircraft seats do not have shoulder belts.



Booster Seat with Backrest



40-100 lb (18.1-45.4 kg)
43-57 in. (110.1-144.8 cm)




Lap/Shoulder Belt

The American Academy of Pediatrics recommends that children remain in a five-point harness until they outgrow their forward-facing harnessed child restraint.

This typically occurs around age 4, but some children outgrow them sooner and others not until later.

Please talk to your doctor about the best option for your child.

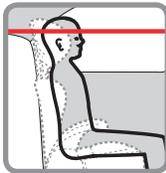

⚠ WARNINGS: Do not use this booster seat if the tops of your child's ears are above the top of the vehicle seat back or vehicle headrest.

Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



Do not use only the lap belt.


The shoulder belt must always be adjusted snugly across the child's chest. **NEVER** place the shoulder belt under the child's arms.

Failure to follow these warnings can result in serious injury or death.

Lap and Shoulder Belt Installation



To attach headrest to backrest, see pages 5-6.

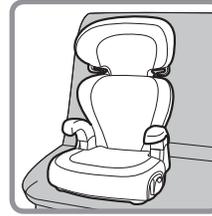

1. Place Booster Seat Forward-Facing Flush Against Vehicle Seat Back



2. Place Child in Booster Seat

Child should sit with their back flat against the vehicle seat and bottom flat against the seat.




3. Position Lap Belt on Child

Route lap portion of the lap/shoulder belt under both armrests.

The shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side.

The lap belt should lay snugly across the child's upper thighs and not on the stomach.

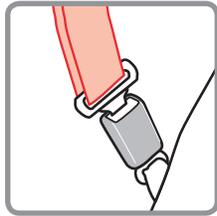

4. Buckle Vehicle Belt



5. Position Shoulder Belt on Child

Pull up on shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulders and across the chest and not on the face or neck.


To help position the shoulder belt, you may need to secure the shoulder belt in the shoulder belt-positioning guide.

NOTE: Use the shoulder belt positioning guide only if necessary to correctly position the shoulder belt on the child.

Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.



40-100 lb (18.1-45.4 kg)
43-57 in. (110.1-144.8 cm)



The American Academy of Pediatrics recommends that children remain in a five-point harness until they outgrow their forward-facing harnessed child restraint.

This typically occurs around age 4, but some children outgrow them sooner and others not until later.

Please talk to your doctor about the best option for your child.



⚠ WARNINGS: Do not use this booster seat if the tops of your child's ears are above the top of the vehicle seat back or vehicle headrest.

Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



Do not use only the lap belt.

The shoulder belt must always be adjusted snugly across the child's chest. **NEVER** place the shoulder belt under the child's arms.

Failure to follow these warnings can result in serious injury or death.

By the nature of the design, backless booster car seats do not have a back or headrest. These types of booster car seats help position the vehicle belt across the body.


Any additional protection of the body or head is dependent on the protection systems of your vehicle.

Please consider this when choosing where this booster will be used in your vehicle and always consult your vehicle owner's manual.



Lap and Shoulder Belt Installation

To remove backrest/headrest, see page 8.

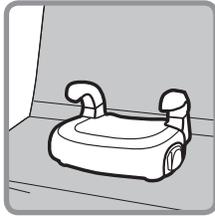

1. Place Booster Seat Forward-Facing Flush Against Vehicle Seat Back




2. Place Child in Booster Seat
Child should sit with their back flat against the vehicle seat and bottom flat against the seat.



3. Position Lap Belt on Child
Route lap portion of the lap/shoulder belt under both armrests.
The shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side.

The lap belt should lay snugly across the child's upper thighs and not on the stomach.

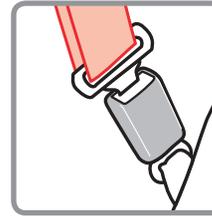

4. Buckle Vehicle Belt



5. Position Shoulder Belt on Child

Pull up on the shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulders and across the chest and not on the face or neck.

Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.

Thank you for choosing this booster seat. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a booster seat can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this booster seat, please contact our Consumer Care Department at:

Website: www.coscokids.com

Telephone: 1-800-544-1108

M-TH from 8 A.M. to 6 P.M. EST

FRI from 8 A.M. to 4:30 P.M. EST

Mailing Address:

Dorel Juvenile Group, Inc.
Consumer Care Department
P.O. Box 2609
Columbus, IN 47202-2609

1. Locate a Child Safety Seat Inspection Station for hands on training on how to use your booster seat:

Visit your local Child Passenger Inspection Station or go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.

 **WARNING:** NEVER place the shoulder belt behind the child's back.

Registration and Safety Notices

Please complete the postage-paid registration card that came with your booster seat, and send it to us. Booster seats could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group, Inc.
Consumer Care Department
 PO Box 2609
 Columbus, IN 47202-2609

or call 1-800-544-1108 or register online at www.djgusa.com/registration/carseat/us. For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.NHTSA.gov>.

Consumer: Just fill in your name, address and email. Please print (use dark ink).

Your Name _____

Your Street Address _____

City _____ State _____

Model Number (optional) _____

Line Code _____

Manufacture Date _____

Model Number: AB123CDE


Line Code: COSCO CARSEAT

Manufacture Date: 01/22/2015

Barcode: [Barcode]

Line Code: L#11 B265035

Example of model number, manufacture date, and line code.

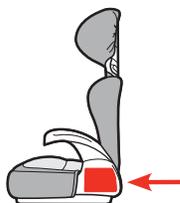

If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on side of shell.

Replacement Parts Order Form

Complete the form. Your model number with color code and manufacturer date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page.

Return the form with payment to:

Dorel Juvenile Group, Inc.
Consumer Care Department
 P.O. Box 2609
 Columbus, IN 47202-2609

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or MasterCard **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Ship To: (Please Print)

Name: _____

Address: _____

City: _____

State/Province: _____ **Zip Code:** _____

Telephone: _____

Email Address: _____

We **MUST** have this information:

Model Number (8 to 9 characters): _____

Manufacture Date (mm/dd/yyyy): _____

Replacement Parts List

NOTE: If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost	Qty	Total Cost
Seat Pad Set.....	\$18.00	\$.....
Instructions.....	\$0.00	\$.....
Merchandise Total:			\$.....

Shipping and handling:			\$.....
Up to \$25.00.....	\$5.95	\$150.01 to \$200.00.....	\$11.95
\$25.01 to \$50.00.....	\$6.95	\$200.01 and up.....	\$13.95
\$50.01 to \$75.00.....	\$8.95	Outside Continental USA.....	\$10.00
\$75.01 to \$100.00.....	\$9.95		
\$100.01 to \$150.00.....	\$10.95		

Sales Tax:..... \$.....
(Arizona, California, Georgia, Indiana, Missouri, South Carolina, and Texas residents add applicable sales tax.)

Grand Total:..... \$.....
No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling.

Fill Out For Credit Card
 Visa MasterCard

Card Exp. Date: _____

Cardholder's Name: _____

Card Number: _____

Signature: _____

Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for **one year** from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may contact us at www.djgusa.com, write to:

DJG Consumer Care Department
P. O. Box 2609
Columbus, IN 47202-2609

or call 1-800-544-1108 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how

CUT ON DOTTED LINE

long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.