


2DSL 56" - 60"

Shower Enclosure Installation Guide

Polaris Square Double Slider
Shower Enclosure

GLASSWAREHOUSE

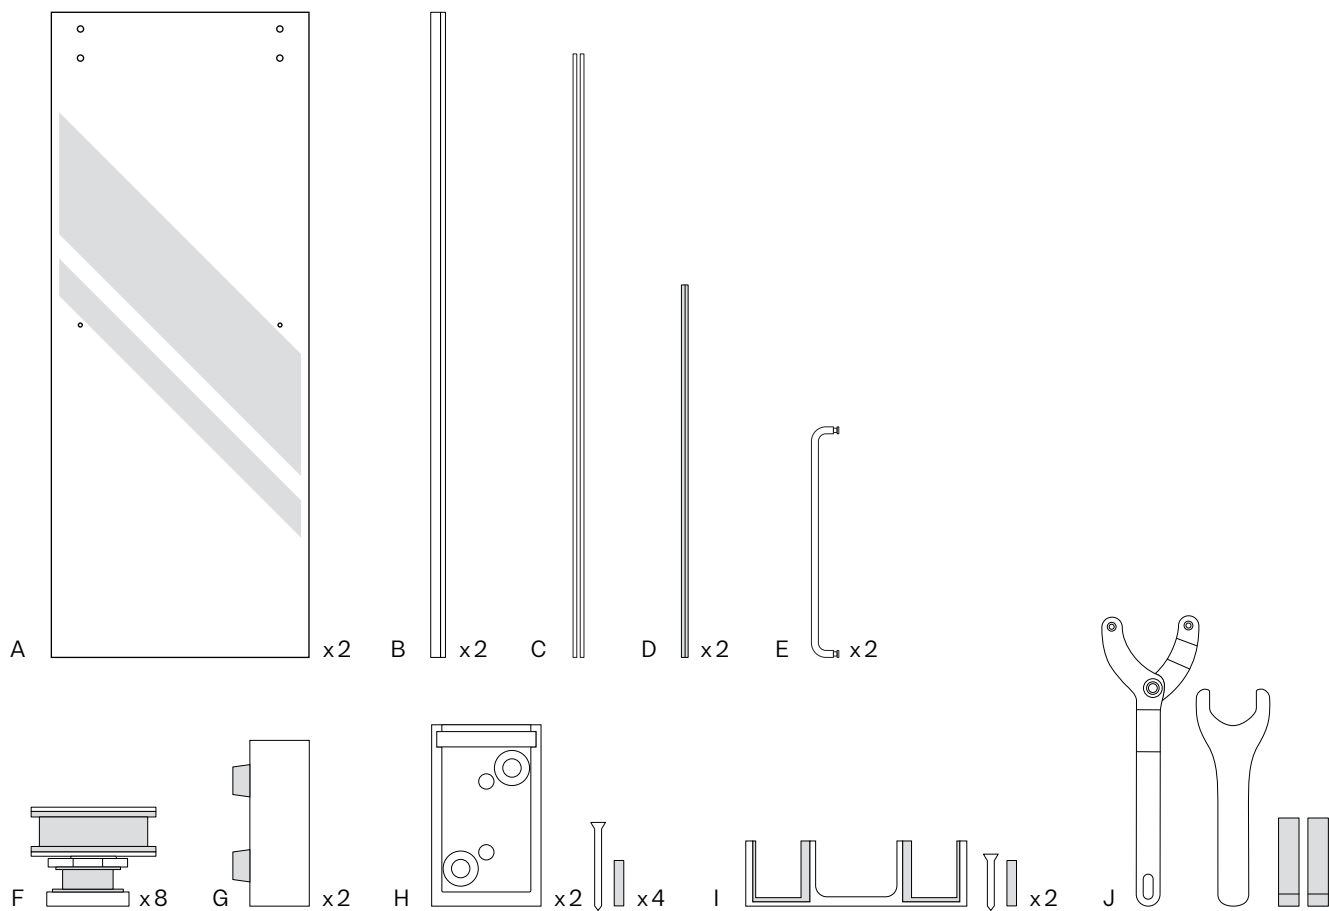

Included in your purchase (Shipped in 3 separate boxes)

- | | | |
|--|----------------------------------|-----------------------------------|
| A Sliding Door Panels | E Single Sided Towel Bars | H Shower Rod Brackets |
| B L-Shaped Jamb Seals | F Slider Panel Rollers | I Bottom Bracket |
| C Shower Rod | G Sliding Panel Stoppers | J Tool Kit & Rubber Blocks |
| D Bottom Sweeps with Drip Rails | | |


Thank you for your purchase.

If for any reason you are having trouble with installation please contact Glass Warehouse directly. Glass Warehouse takes pride in providing quality products and customer service. We want to ensure your happiness with your purchase for years to come.

If you have any questions, please do not hesitate to reach out to us. Thank you again for choosing Glass Warehouse!

Best Regards,

The Team at Glass Warehouse
Glass Warehouse, LLC
(760) 536 3640
inquiries@glasswarehouse.us

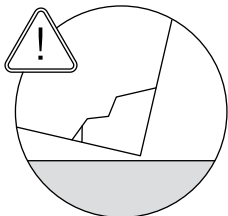


Caution: The most fragile parts of tempered glass panels are the corners. Therefore, it is critical you have the rubber blocks in place so the glass never touches the tile surface you are installing onto. Please make sure the glass is always on cardboard packaging or rubber blocks while out of the packaging prior/during install. Rubber block is provided in your hardware pack however you can use wood, cardboard or other rubber products to protect against breakage.



Attention installer: A light haze or smudging may be present on the coated glass panels upon delivery. This is easily removed with denatured or isopropyl alcohol and a good quality microfiber cloth, followed by a rinse of water. This can be done before or after installation.

Installation Guide

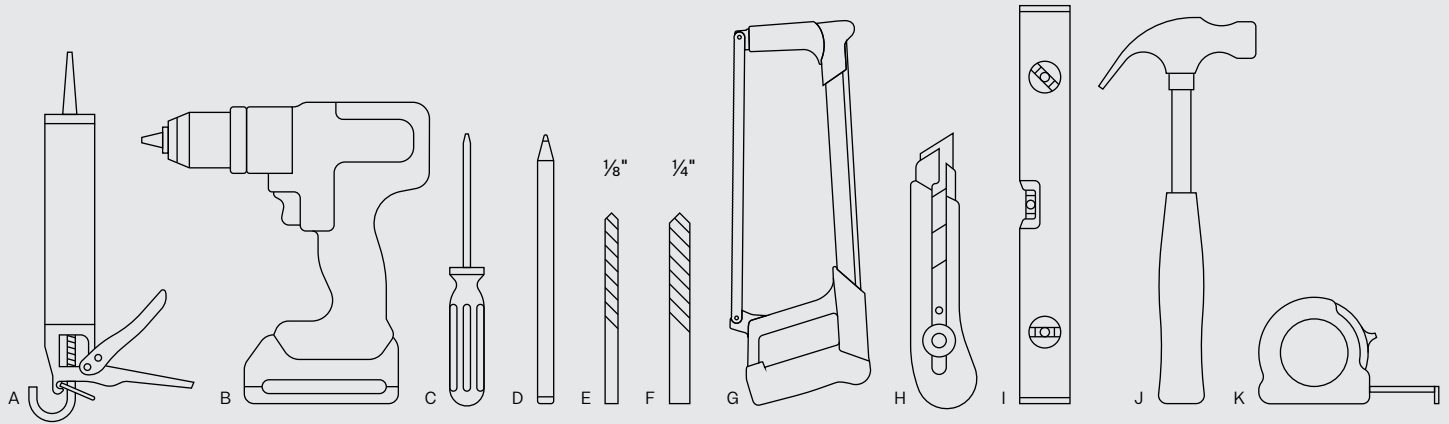

Tools required for install.

- | | |
|------------------------------------|------------------------|
| A Silicone and caulking gun | G Hacksaw |
| B Power drill | H Utility knife |
| C Phillips head screwdriver | I Level |
| D Pencil | J Hammer |
| E 1/8" tile drill bit | K Tape measure |
| F 1/4" tile drill bit | |

Note: Silicone is not provided and will need to be purchased separately. We recommend using a clear, mold resistant silicone which can be purchased at your local hardware store.

Before You Start




- Measure if your walls are out of plumb. It is essential your shower enclosure is tiled before measuring as your measurements WILL change once tiling and grout are in place.

Take 3 Tile to Tile Measurements:

- 1. TOP:** From threshold (78")
- 2. MIDDLE:** From threshold (39")
- 3. BOTTOM:** at threshold

If your walls are $\frac{3}{8}$ " or more out of plumb, please contact Glass Warehouse before installing.

- Measure threshold to ensure that this model will fit. Threshold must be a minimum of 3" wide to install this model.
- Choose which side of your shower should have the Inside Panel (while both doors are closed). Glass Warehouse highly recommends installing the Interior Panel on the same side as your shower head. This will help to prevent water leaking from the gap between the two glass panels.
- If installing an enclosure with fiberglass walls, a stud must be directly behind where the Rod Holders and Shower Rod will be installed.

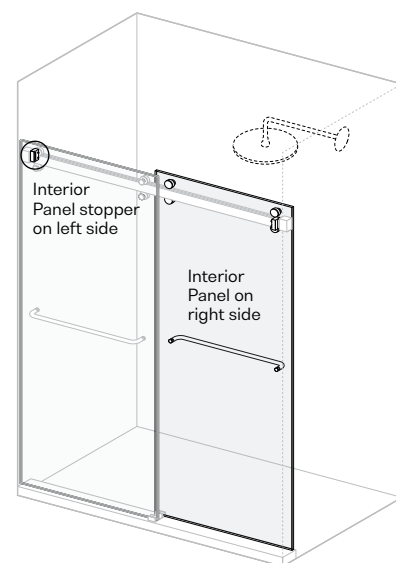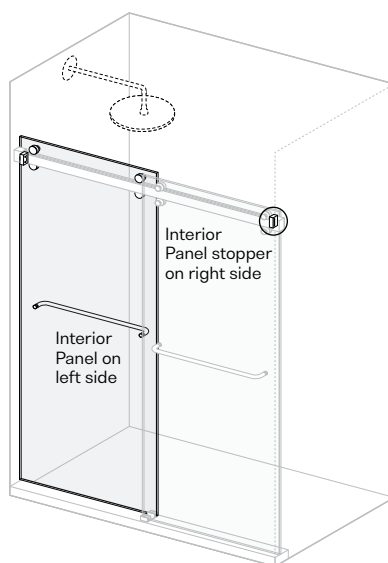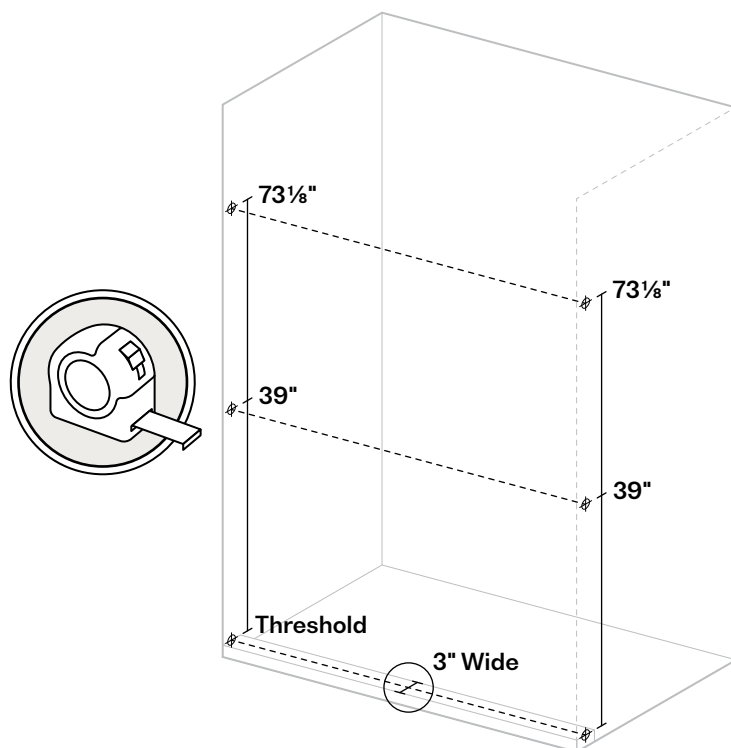


Confirm you have the correct model size for your opening.

Model number and corresponding size range:

2DSL-60 = 56" - 60"

If your shower head is on the left, the Inside Panel should be installed on the left side and the Stopper will go on the right side (and on the inside track) of the Shower Rod.

If your shower head is on the right, the Inside Panel should be installed on the right side and the Stopper will go on the left side (and on the inside track) of the Shower Rod.

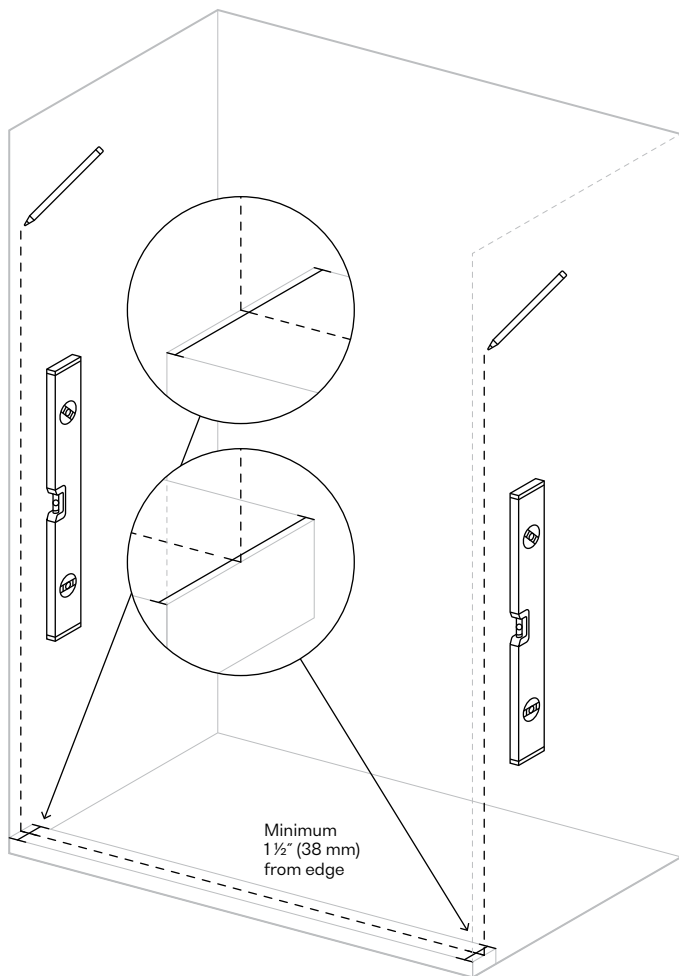


01

Mark threshold and walls for Shower Rod position

Measure the width of threshold tile where shower door is to be installed, this needs to be a minimum of 3" to install this model shower enclosure. Measure to center of threshold and mark a line down the center. Check that line is at least 1½" from the front and back of threshold. Using a level, draw a line up both walls from this point.

Important: Check the threshold with a level before measuring for the Shower Rod Brackets. If the threshold is more than ¼" out of level, measure and mark from the side of the threshold that is higher. For the lower side, measure and add the out of level difference and mark so that your Shower Rod Brackets are installed level.

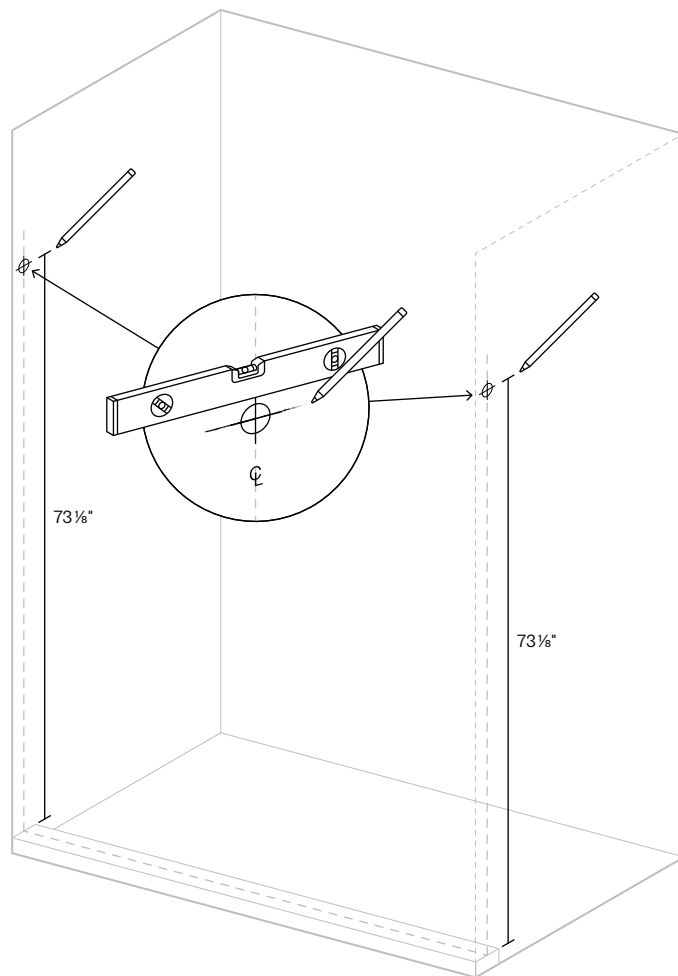


02

Mark location of Shower Rod Brackets

Along the drawn level lines on each wall, measure 73⅞" from floor. Mark this point and draw a perfectly level horizontal line. This is where the bottom of the Shower Rod Bracket will sit.

Tip: We recommend using a pencil so this can be easily removed.



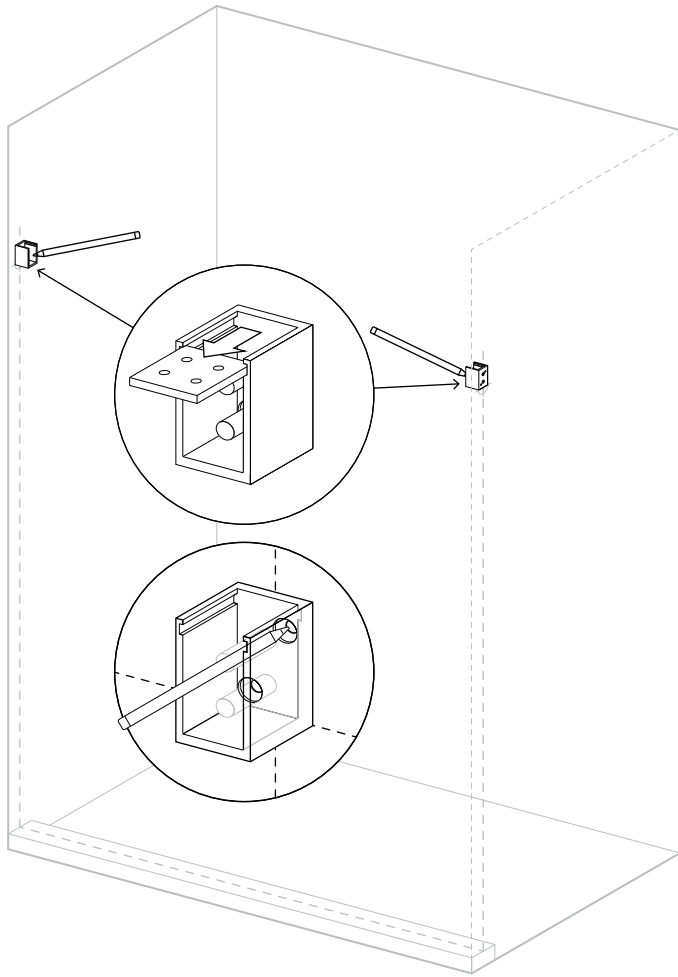


03

Mark drill holes for Shower Rod Brackets

Center the Shower Rod Bracket along the vertical line with the bottom of the Bracket lined up with your horizontal line at 73 $\frac{1}{8}$ ". Use a pencil and mark the wall through both holes in Shower Rod Bracket. Repeat this process on the opposite wall.

Important: If installing an enclosure with fiberglass walls, a stud must be directly behind where the Shower Rod Brackets will be installed.

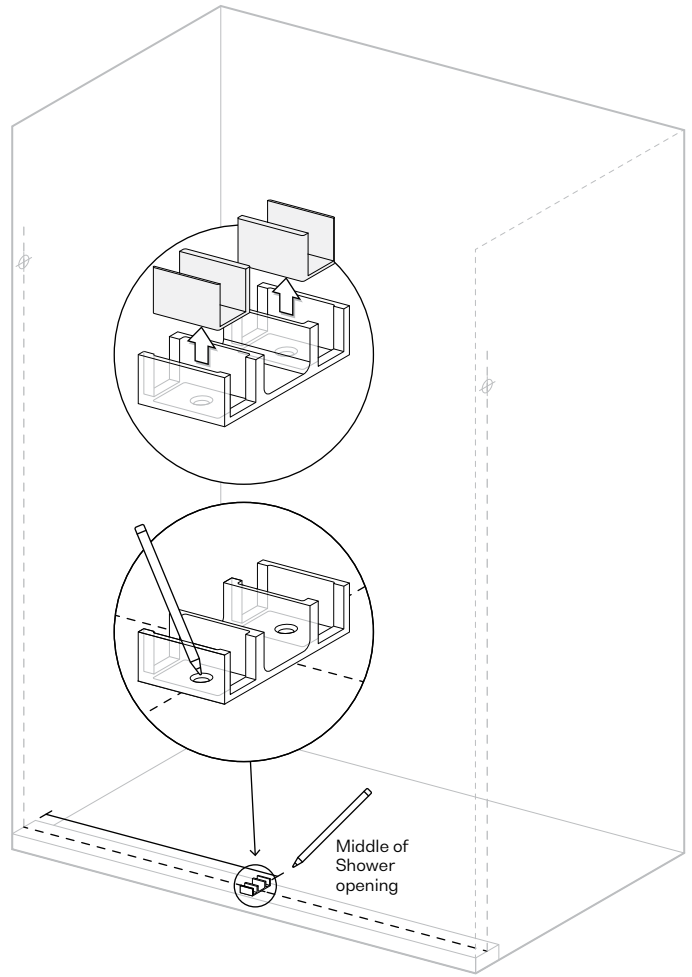


04

Mark drill holes for Bottom Bracket

Measure to the middle of your shower opening and mark the exact middle point on the threshold for where to position the Bottom Bracket.

Example: If your opening is 58", you would mark a line at 29". This will be the exact middle of your Bottom Bracket for installation.

Using this line, center the Bottom Bracket on the threshold and use a pencil to mark the drill holes. Remove the plastic gaskets from the Bottom Bracket to mark the holes.

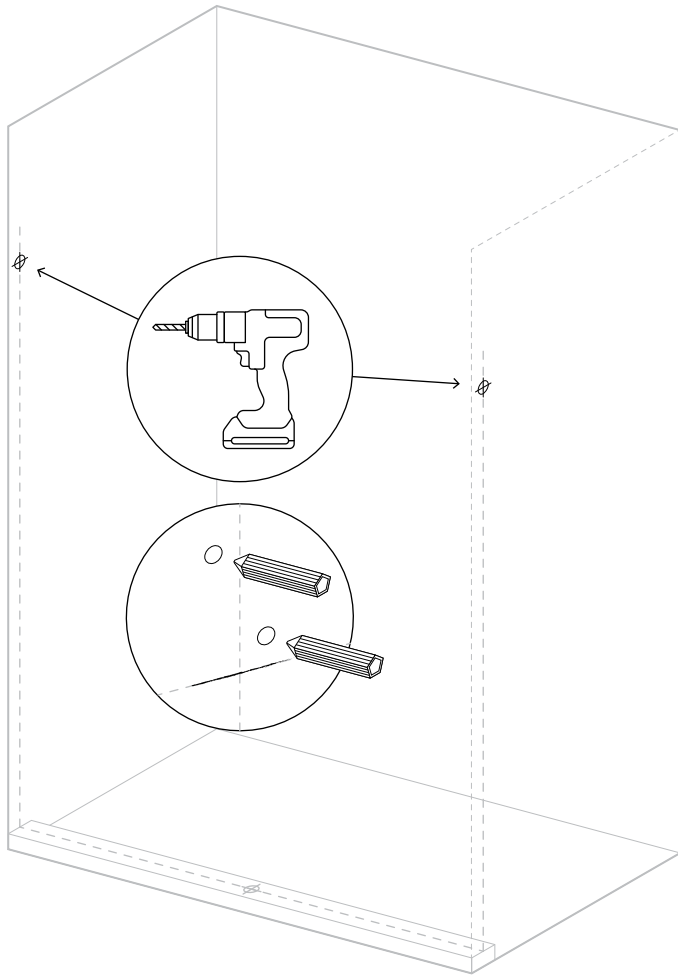


05

Drill Holes for Shower Rod Brackets

Using a 1/4" drill bit, drill holes and install the wall anchors. Trim excess from the wall anchors hanging out of hole with utility knife so Shower Rod Brackets sit flush to the wall.

If the shower wall is fiberglass, use a 1/8" drill bit for the wall holes. You will not use the green anchor but rather screw the Shower Rod Brackets directly into the fiberglass shower wall.

Important: If installing an enclosure with fiberglass walls, a stud must be directly behind where the Shower Rod Brackets will be installed. An 1/8" tile drill bit can be used to create pilot holes for a tiled enclosure, but this is optional.

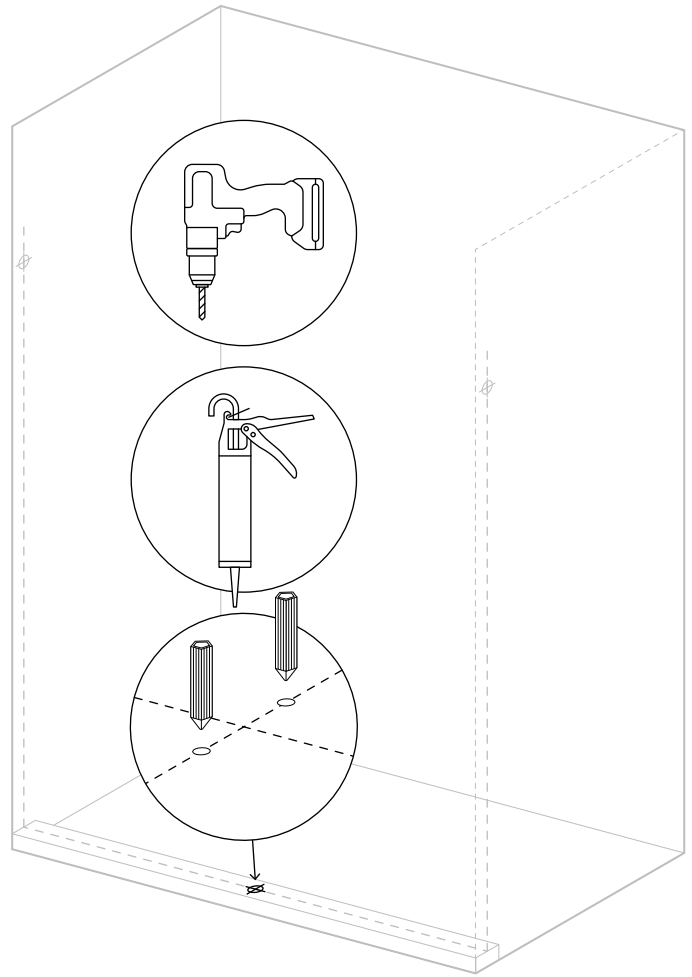


06

Drill holes for Bottom Bracket

Using a 1/4" drill bit, drill 2 holes and install anchor (if necessary). Trim excess from the anchor with utility knife. Fill the holes with silicone to waterproof.

Important: When fixing Bottom Bracket to fiberglass shower base use a 1/8" drill bit to predrill the hole and screw directly into shower base. You will not use the green anchor on shower base.




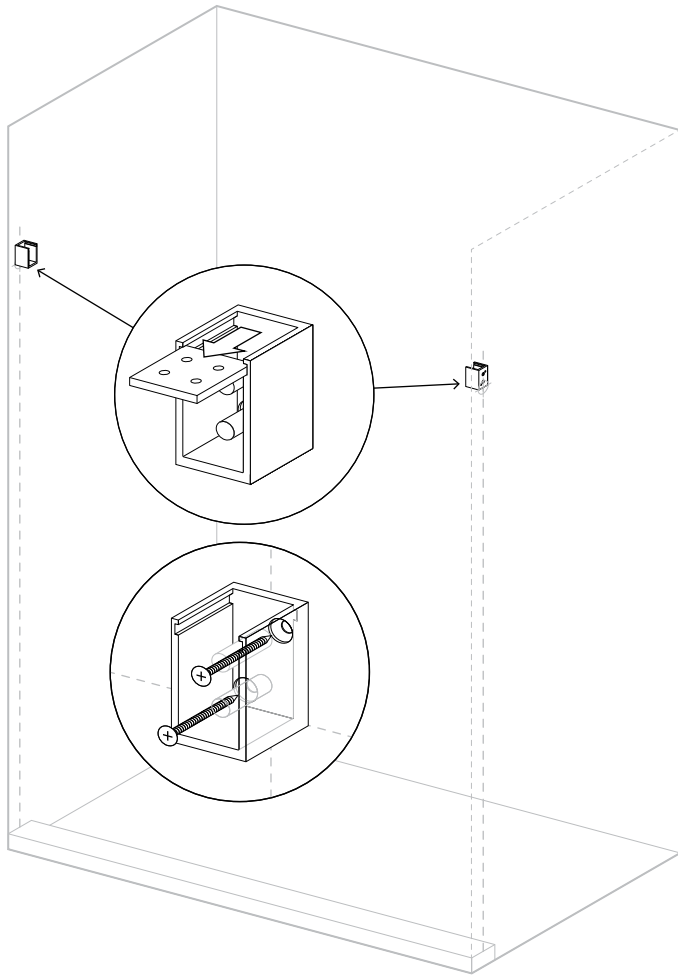

07

Install Shower Rod Brackets



Install the Shower Rod Brackets. Be sure to remove the Shower Rod Bracket Top Covers prior to installation. Wall mount screws and plastic plug anchors are included with kit.

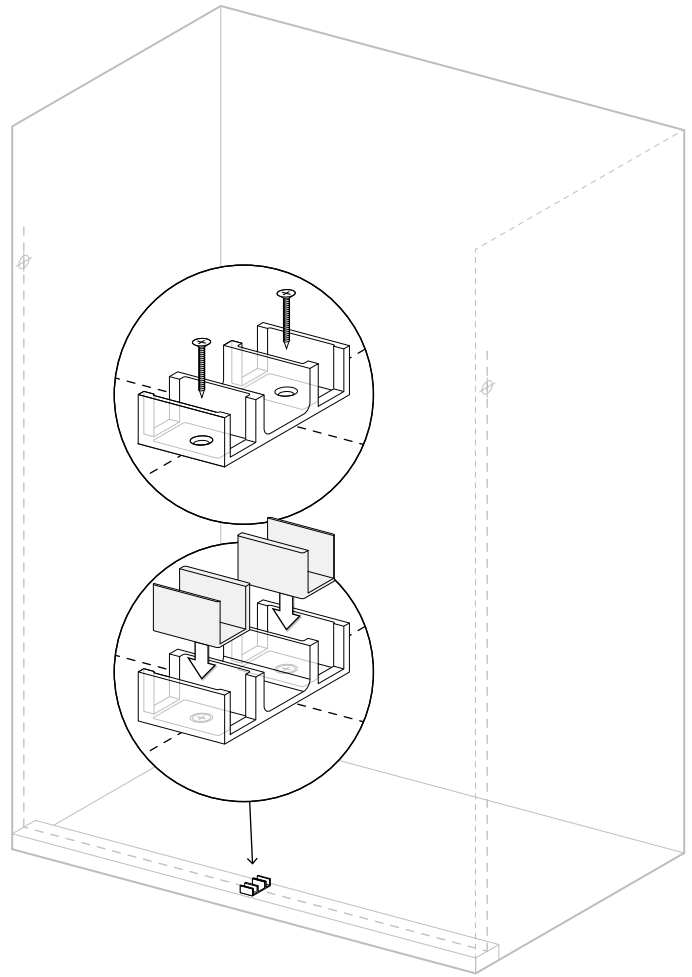

08

Install Bottom Bracket

Remove the plastic inserts from inside Bottom Bracket. Screw Bottom Bracket down to secure. Once Bottom Bracket is installed, replace plastic inserts.

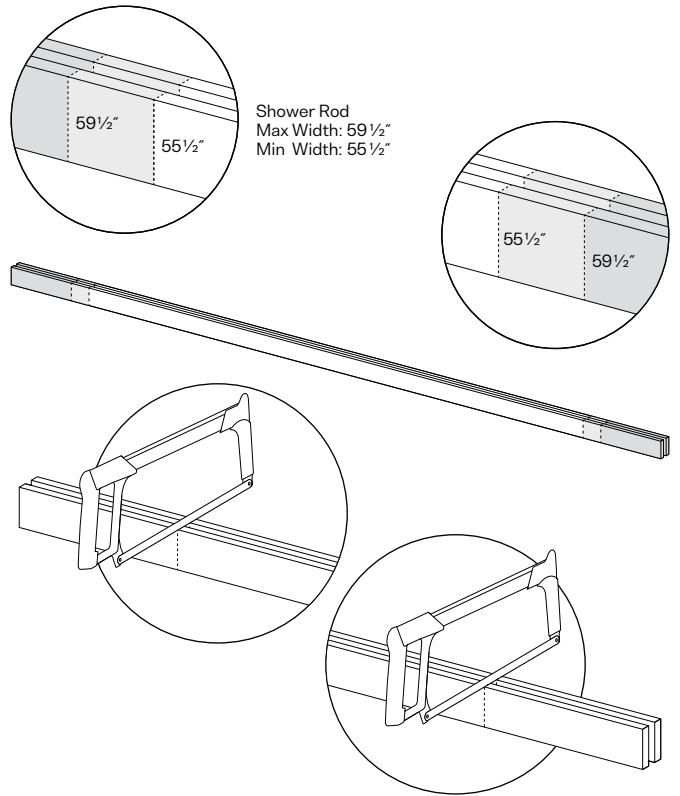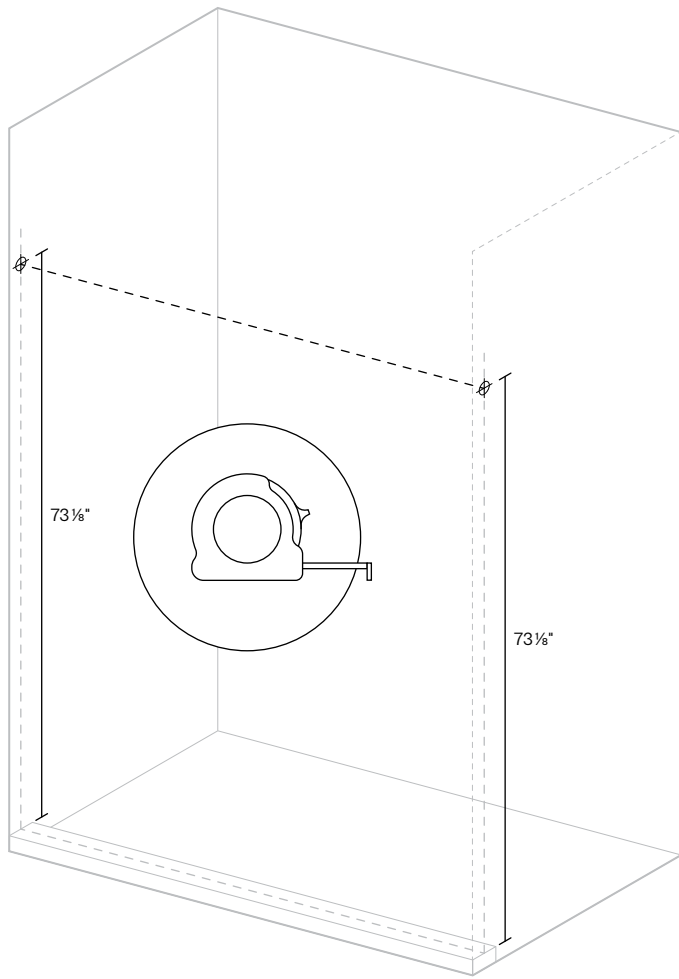

09

Measure Shower Rod for cutting

Measure your opening wall to wall at $73\frac{1}{8}$ " up from the threshold. Subtract $\frac{1}{2}$ " from this measurement. This is your **Final Shower Rod Length**.

Subtract your **Final Shower Rod Length** from 73" (73" is the initial length of the uncut Rod.) Divide this number by two to get your final measurement.

Example: Your opening measures 58".

Final Shower Rod Length = $57\frac{1}{2}$ ".

73 minus $57\frac{1}{2}$ " = $15\frac{1}{2}$ "

$15\frac{1}{2}$ " divided by 2 = $7\frac{3}{4}$ "

You will remove $7\frac{3}{4}$ " from each end of the Shower Rod.

10


Cut Shower Rod at both ends

Important: It is necessary to cut the Shower Rod at both ends because you will need $2\frac{1}{2}$ " clearance between the end of the Rod and the weld (on the inside) once the Rod has been cut. For this reason, you will need to cut both ends.



Wear safety goggles when using a grinder or hacksaw as a precautionary measure.


Using your measurement from Step 09, use a hacksaw or a special saw/grinder and remove the correct amount from each end of the Shower Rod. The Shower Rod is now ready for installation.

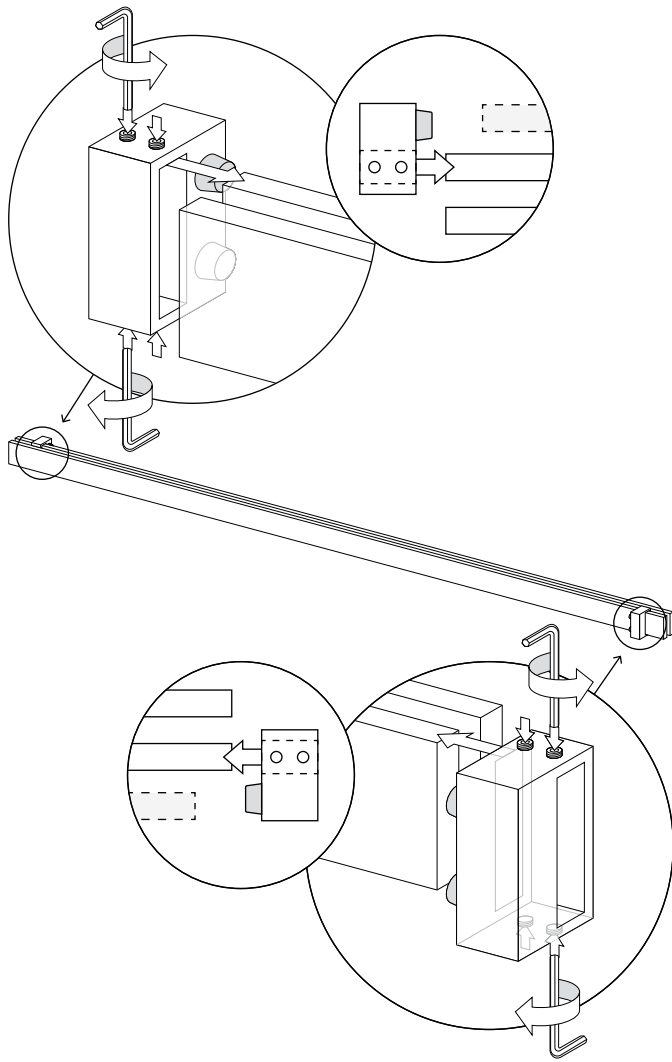

11

Install Sliding Panel Stoppers

Prior to Shower Rod installation, position Sliding Panel Stoppers on each end of Shower Rod with rubber bumpers facing back edge of sliding glass door panels in open position. Secure in place after Shower Rod is installed.

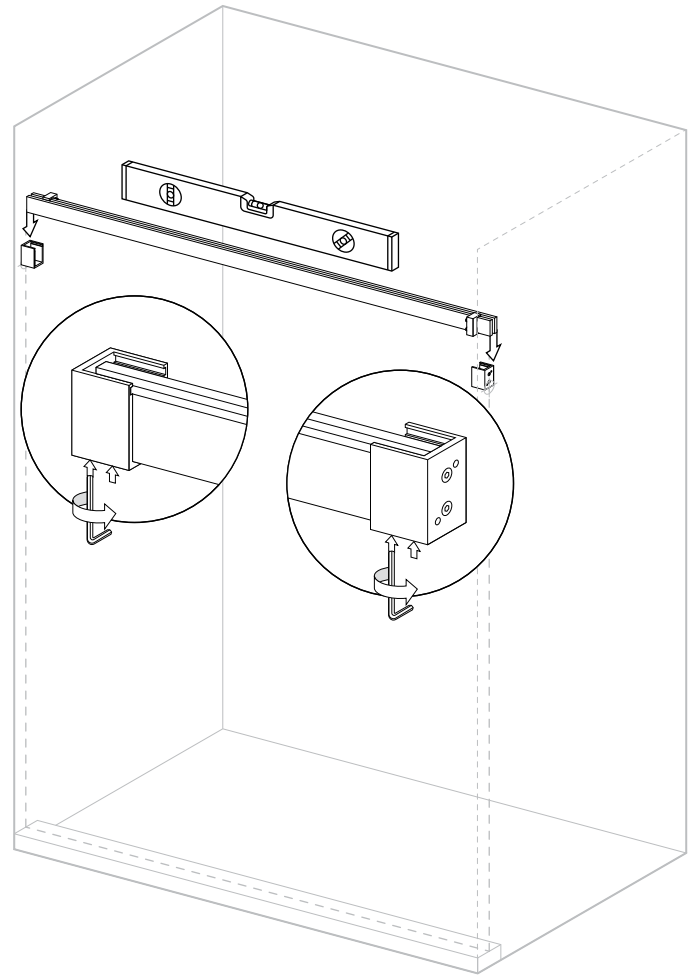


12

Install Shower Rod into Shower Rod Brackets

Remove Shower Rod Bracket Top Covers prior to installing Shower Rod. Install Shower Rod into the Shower Rod Brackets with Stoppers in correct position for final glass panel positioning.


Check Shower Rod with level. If Shower Rod is not level, use set screws in bottom of Shower Rod Brackets to level Shower Rod completely.

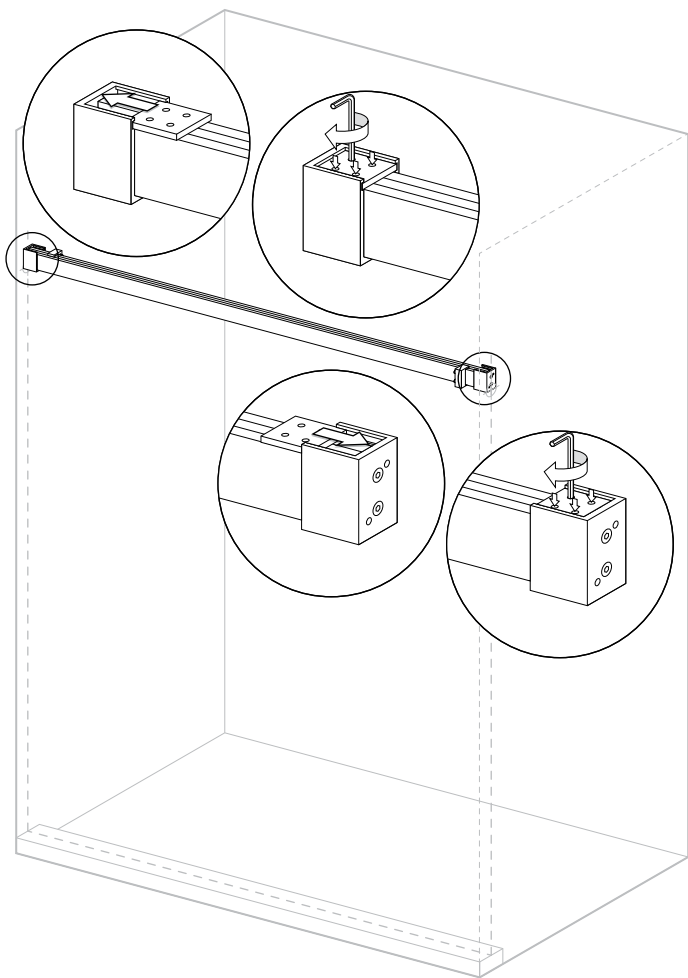

13

Install Shower Rod Bracket Top Covers

Once Shower Rod is perfectly level, insert Top Covers back into the Shower Rod Brackets and use the set screws to tighten them completely. Once Top Covers are installed, use level to confirm that Shower Rod is completely level before installing glass.

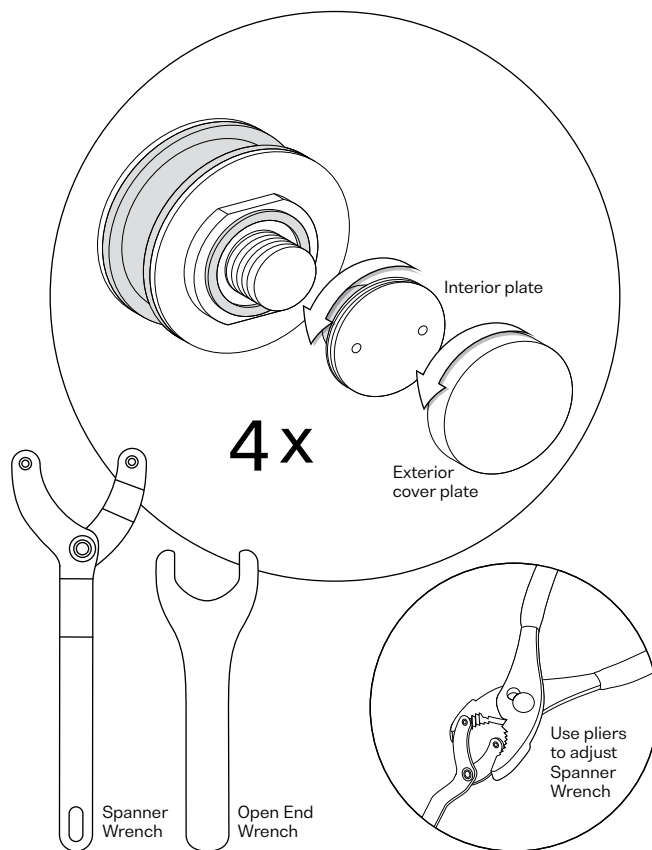


14

Unpack and disassemble 4 sets of Rollers

The Rollers are shipped assembled and will need to be taken apart for installation into the glass panels. First, unscrew the exterior cover plate to access the interior plate. Next, unscrew the interior plate by hand. If needed, use open wrench and spanner wrench to loosen.

Important: Use a pair of pliers to adjust Spanner Wrench to fit inserts on interior cover plate.




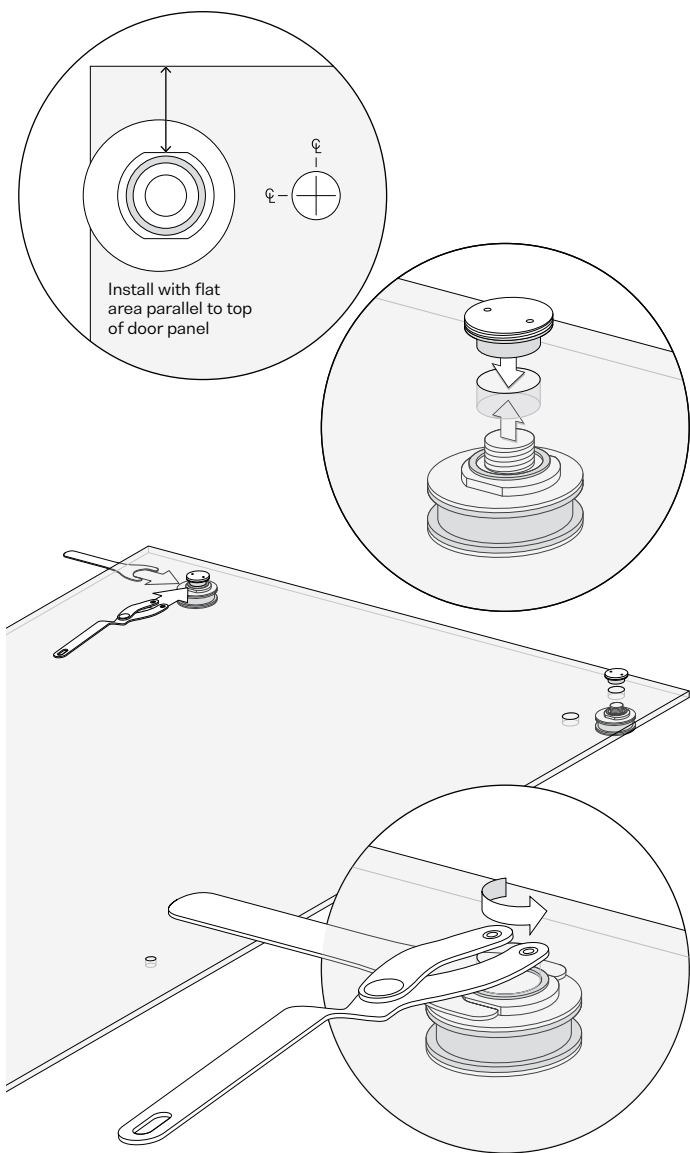

15

Install Top Rollers on both sliding doors


Install top 2 Rollers with flat area on wheel parallel to top of Door Panel. (Lower Rollers are installed after Door Panel is hung.) Repeat this process on the other Door Panel.

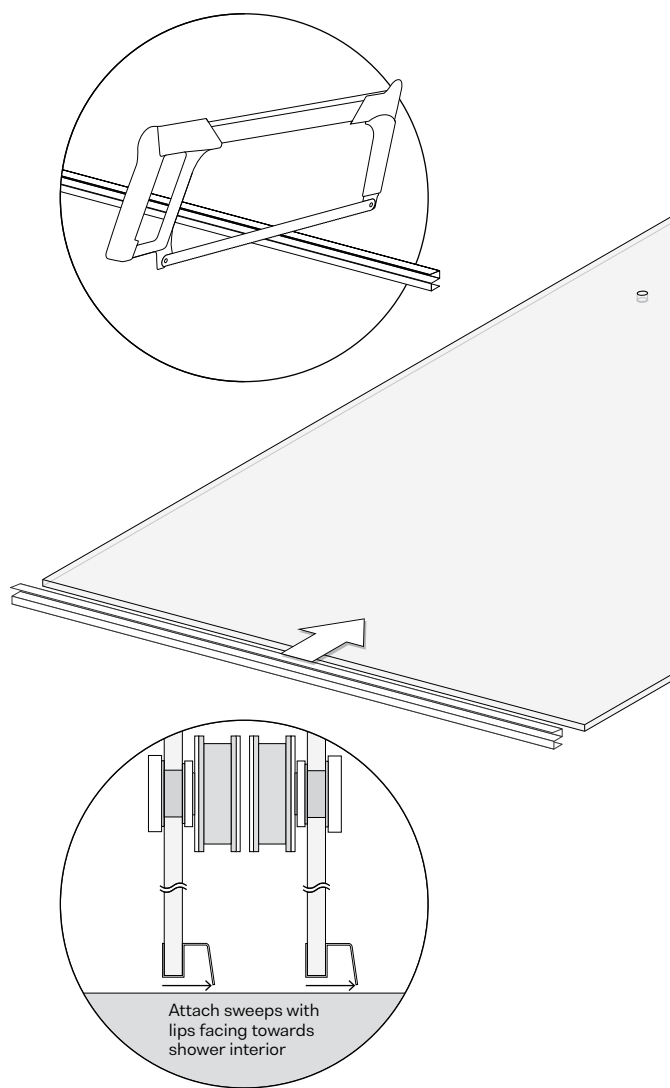

16

Install Bottom Sweeps on both sliding doors

Measure and cut Bottom Sweeps with hacksaw to fit exactly across the bottom of the Door Panel. Position Sweeps so that the lip faces the interior of the Shower when both Door Panels are installed.

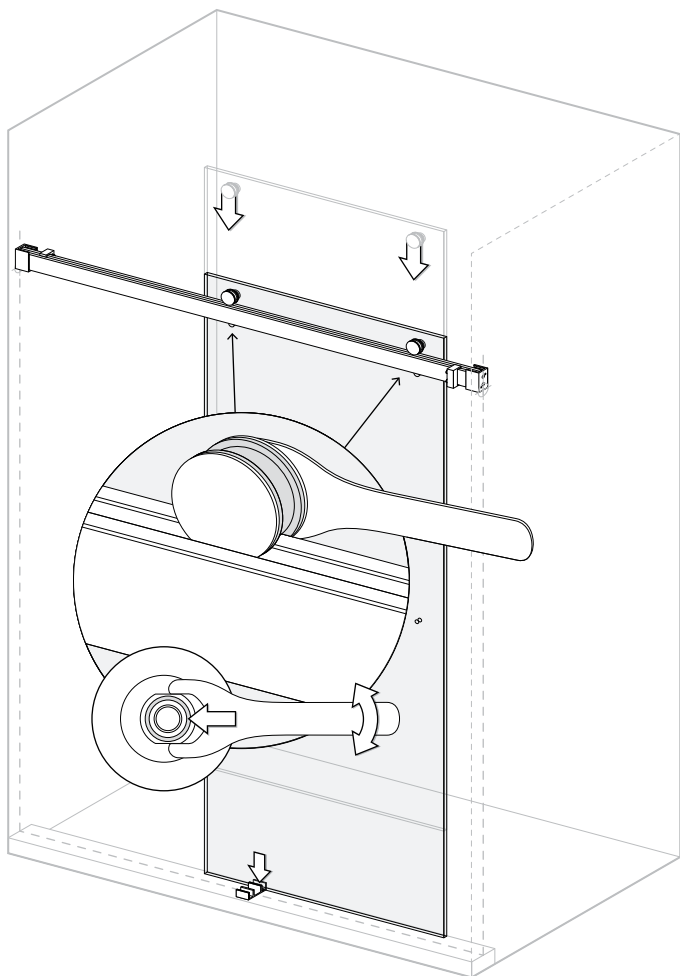


17

Hang Interior Door Panel

Lift the Interior Door Panel and slowly lower the rollers onto the Shower Rod. When lowering the Door Panel, be sure the bottom of Door Panel slides into the Bottom Bracket and the Sweep faces the interior of the shower. Gently slide Door Panel from side to side making sure it is not binding anywhere along the bottom.

Check the Interior Door Panel is level and lines up evenly with the wall. If Door Panel does not line up with the wall, use the Open Wrench to adjust top rollers and align Door Panel vertically with wall.

Important: Be sure the glass does not touch the tile surface as you are lowering the panel into place.

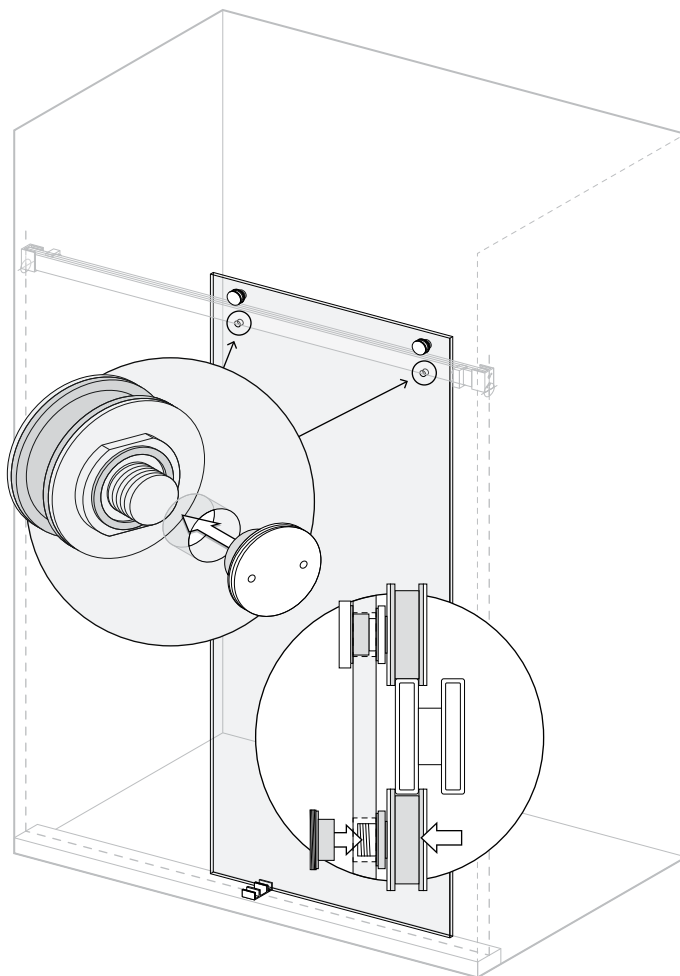


18

Install Bottom Rollers on Interior Panel

Prepare 2 Bottom Rollers by removing Interior Plate.

Begin with roller aligned with flat area parallel to top of Door Panel. Insert Roller into bottom holes in Interior Panel and reattach Interior Plate.


If you need to lower the Door Panel to access the holes to install the bottom rollers, use the Spanner Wrench to loosen the top rollers and the Open Wrench to adjust and lower the Door Panel for better access.

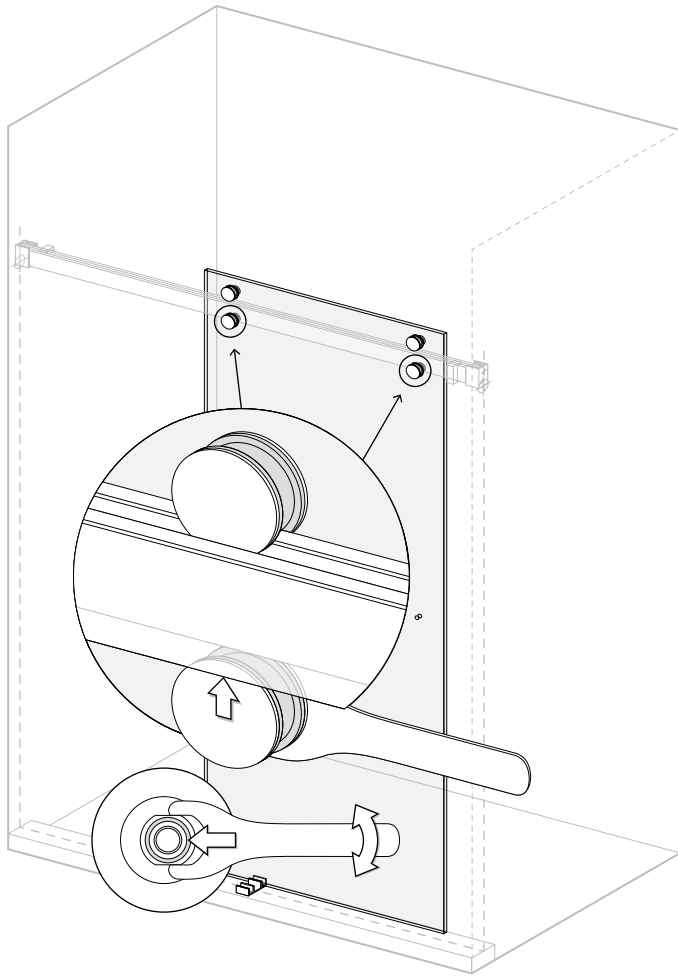

19

Adjust Wheel Positions snug to Shower Rod

Using Spanner Wrench and Open Ended Wrench, adjust wheel position to make Bottom Roller snug to Shower Rod. Reinstall Exterior Cover Plates to all 4 Rollers.

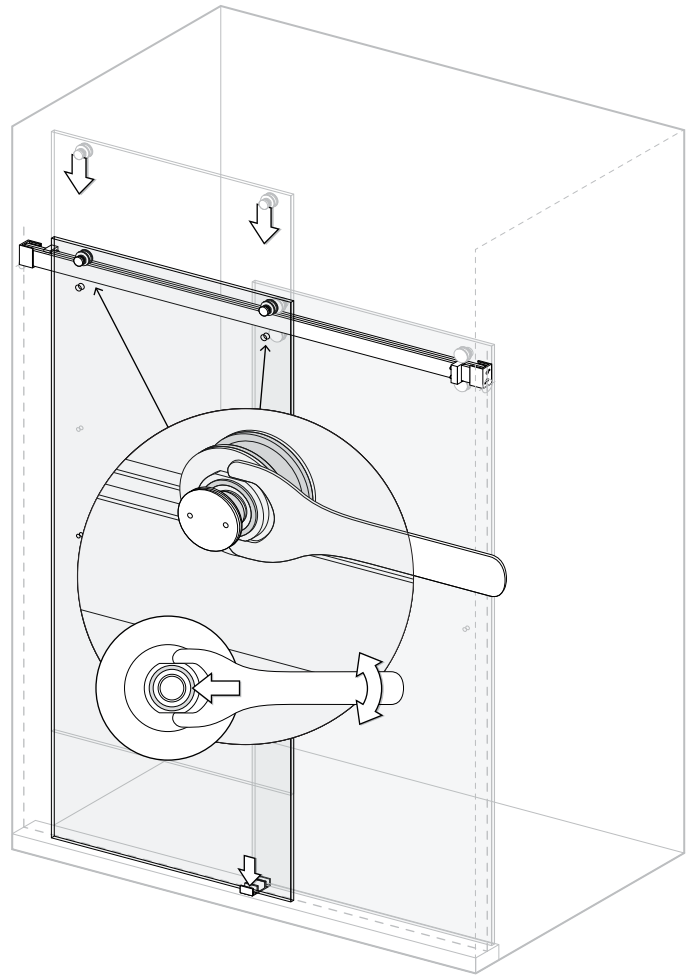

20


Hang Exterior Door Panel

Lift the Exterior Door Panel and slowly lower the rollers onto the Shower Rod. When lowering the Door Panel, be sure the bottom of Door Panel slides into the Bottom Bracket and the Sweep faces the interior of the shower. Gently slide Door Panel from side to side making sure it is not binding anywhere along the bottom.

Check the Exterior Door Panel is level and lines up evenly with the wall. If Door Panel does not line up with the wall, use the Open Wrench to adjust top rollers and align Door Panel vertically with wall.

Important: Be sure the glass does not touch the tile surface as you are lowering the panel into place.



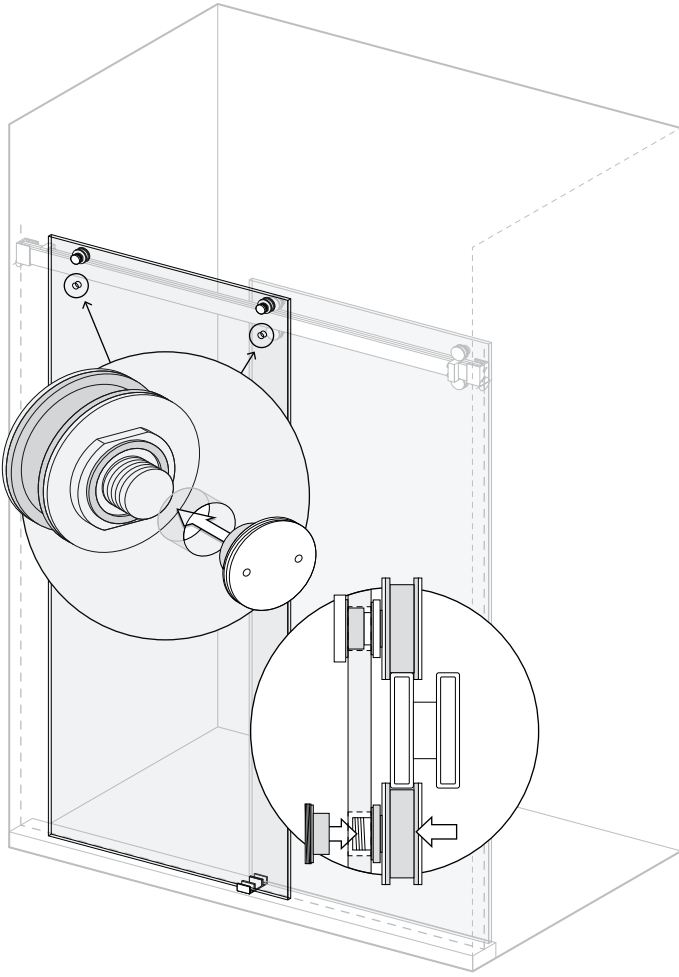


21

Install Bottom Rollers on Exterior Panel

Prepare 2 Bottom Rollers by removing Exterior Plate.

Begin with roller aligned with flat area parallel to top of Door Panel. Insert Roller into bottom holes in Exterior Panel and reattach Interior Plate.


If you need to lower the Door Panel to access the holes to install the bottom rollers, use the Spanner Wrench to loosen the top rollers and the Open Wrench to adjust and lower the Door Panel for better access.

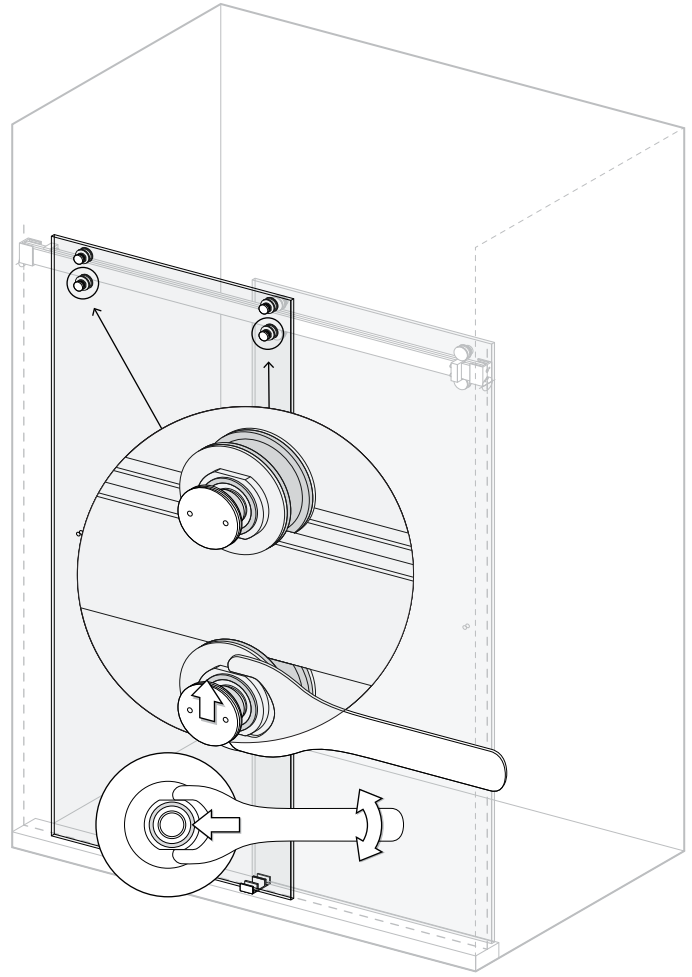

22

Adjust Wheel Position snug to Shower Rod


Using Spanner Wrench and Open Ended Wrench, adjust wheel position to make Bottom Roller snug to Shower Rod. Reinstall Exterior Cover Plates to all 4 Rollers.

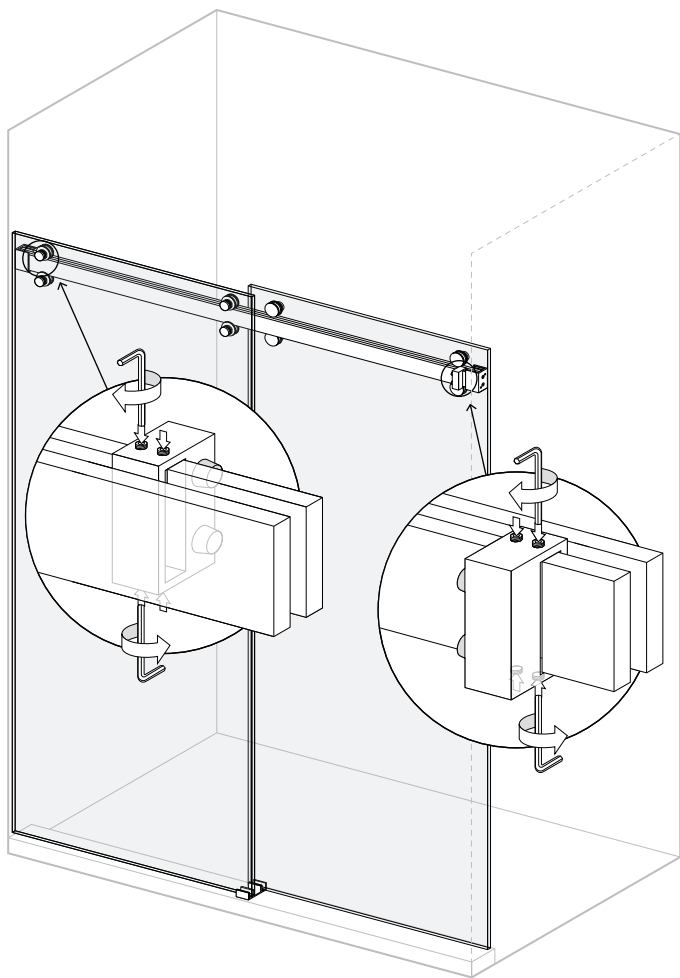

23

Position and secure Stoppers


Open each Door Panel to maximum open position. Once in maximum open position, tighten each Stopper in place.

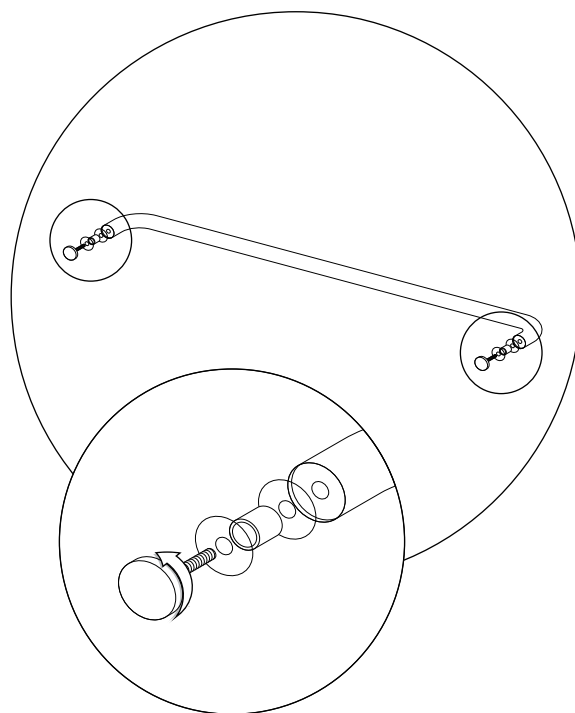

24

Prepare Towel Bar Handles for installation


Unpack Towel Bars and unscrew mounting hardware from each end of Towel Bar keeping all pieces conveniently nearby.

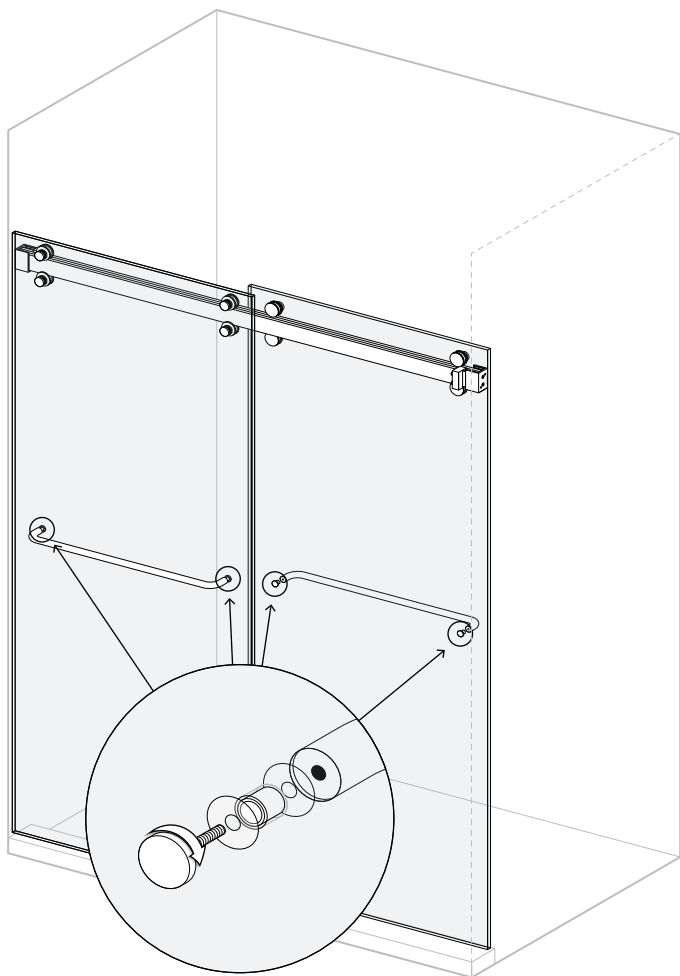

25

Install Towel Bar Handles on Glass Panels


Reinstall hardware on to Door Panels as shown above. Interior Door Panel will have Towel Bar on the inside of the shower. Exterior Door Panel will have Towel Bar on the exterior of shower. Tighten completely using allen wrench in the hole on mounting post.

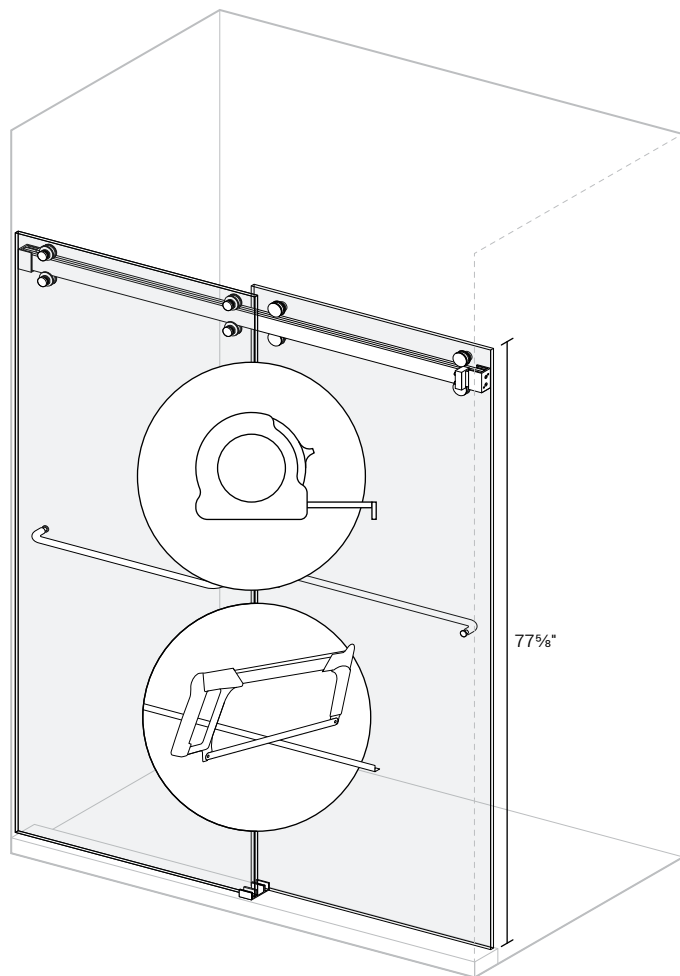

26

Trim the L-shaped Seals


Measure and cut L Seals to match the 77 $\frac{5}{8}$ " height of the Door Panels.

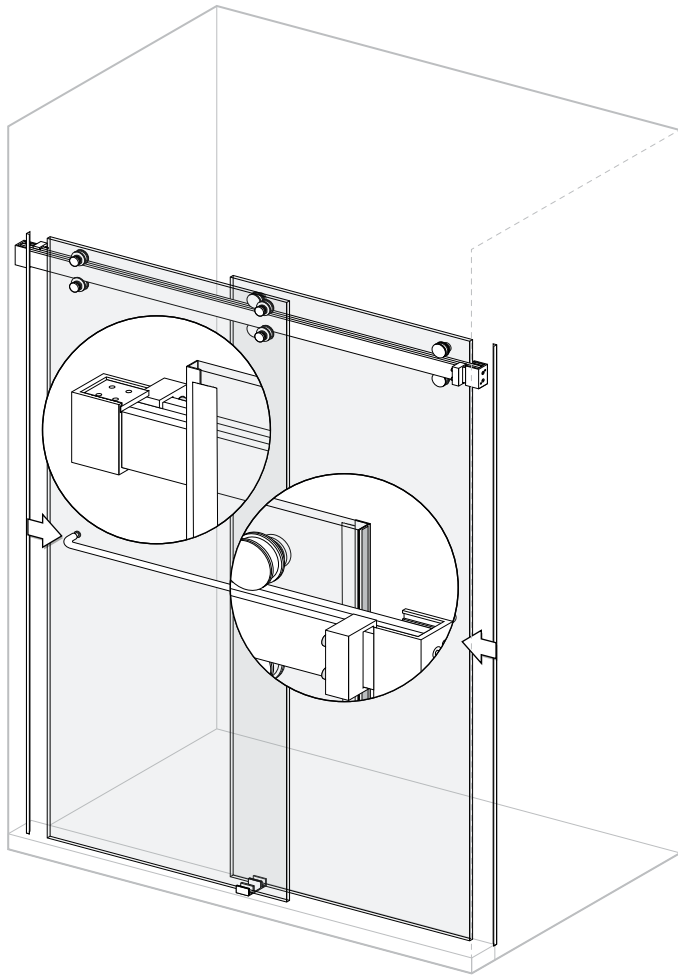

27

Attach L Seals on wall side of each Door Panel


Align L Seal to top of the Door Panel and temporarily attach using painter's tape.

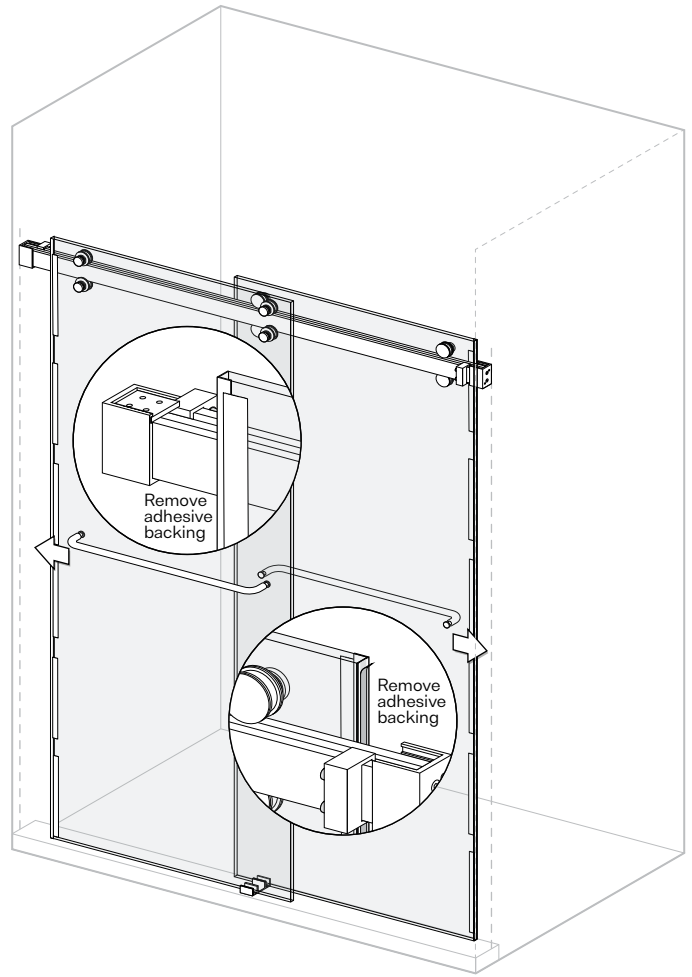

28

Install the L-shaped Seals


Remove protective liner from L Seal and close Door Panel so L Seal adheres to wall. Remove Painter's tape from the Door Panel and L Seal. Open the Door Panel and push the L Seal firmly into place to secure.

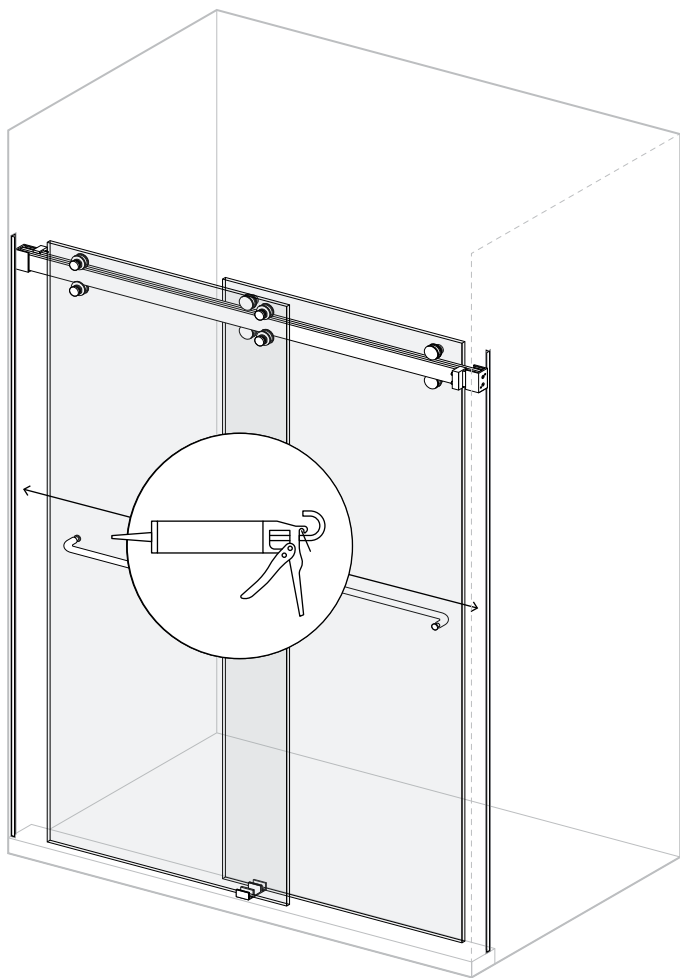

29

Finish L Seals with silicone

Finish L Seal edges with silicone. Allow to dry for 24 to 36 hours.

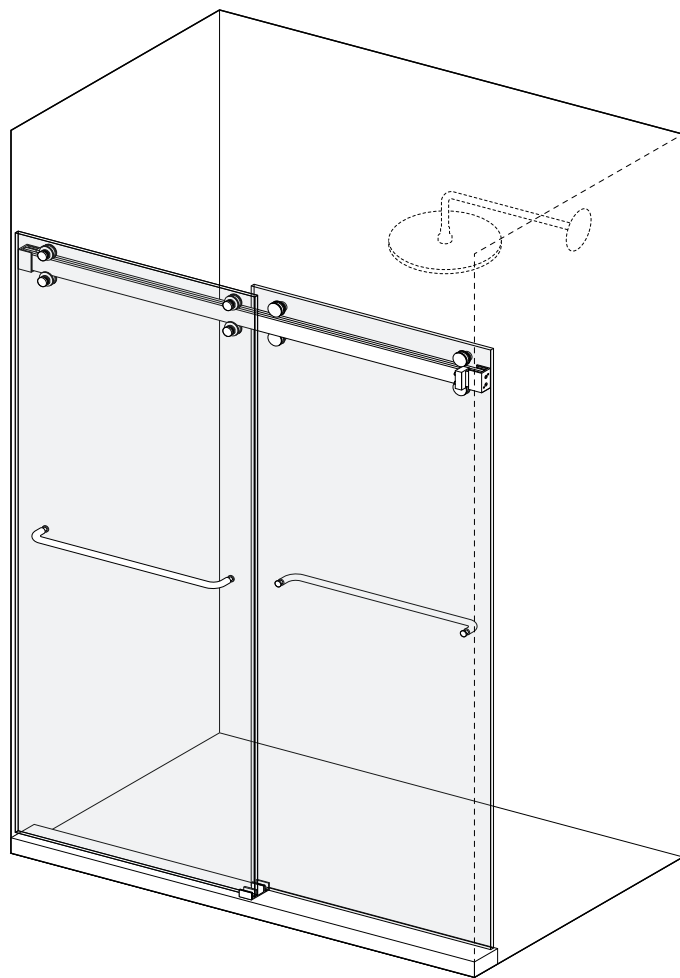

30

Once silicone has cured, you're done!

Please register your warranty using the instructions on the back cover of this document.

Care & Maintenance



EnduroShield makes cleaning easier and less frequent; however it is recommended that you continue to clean the surfaces regularly.

Maintaining the Treated Surface

For best results simply drying the glass with a squeegee or towel after each use will help keep the glass clean and reduce mineral spots forming. The glass needs to be cleaned every few weeks using a damp microfiber cloth and a mild detergent to break down soaps, oils, and conditioners on the glass. General glass cleaners are also suitable, however most of these are finishing agents rather than cleaners, and are an added expense that is not required.

Hard Water Maintenance

In hard water areas, or areas where water drops dry and leave a noticeable dust mark, a build of minerals may occur on the protective treatment. While these may not be removed as easily with the mild detergent, mild acids will often remove the marks quickly. As needed white vinegar should be used to wipe down the glass. Keep in mind the vinegar may be diluted with water, however dilution reduces the effectiveness.

Spray vinegar onto the glass and allow to soak for several minutes. This should dissolve any mineral deposits that have built up on the glass surface. A damp microfiber cloth should then be used to wipe over the surface. For extreme hard water areas we recommended using undiluted vinegar every week or so as a cleaning option to reduce this build up on the surface, rather than allowing the build up to continue over a long period of time.

Caution: Prohibited Products *Note these may damage the treatment and void any warranty

- Avoid the use of any abrasives or polishes including water spot removers, toothpaste, polishes, rough, or gritty substances
- Avoid the use of acids or alkalis that you would not want in contact with your skin for an extended period of time
- Avoid products such as Comet, Ajax, Jiff or Cerium Oxide which polish back the actual substrate
- Avoid the use of any harsh or chemical cleaners, with correct maintenance these are never required

Approved Cleaning Products

The below products have been tested for compatibility with EnduroShield, however there are no specific products that must be used. We feel you should not be required to purchase extra products in order to keep your glass clean. With correct maintenance, all you need for clean glass beyond 10 years is a squeegee, a mild liquid dish soap, and white vinegar.

Any product that does not fall into the prohibited categories listed above will be fine, and below is a short list of acceptable products:

- Windex
- SprayWay (or other alcohol based foaming cleaners)
- Scrubbing Bubbles (or other automatic leave-to-dry daily shower cleaners)
- 7th Generation, Dawn (or other mild eco friendly cleaners)
- CLR (Calcium Lime Rust)
- Mr. Clean Magic Eraser (when damp)

It should be noted that with any cleaner used on the EnduroShield surface a thorough rinse with clean water should follow immediately. Although these cleaners can be used, EnduroShield is designed to be an 'easy clean coating' that does not require harsh or toxic cleaning chemicals to maintain the surface effectively.

If for any reason the recommended maintenance has not been followed for some time, just as it took time for the build up to occur, it will take time to remove the debris from the protected glass surface. This can most commonly be achieved using undiluted white vinegar dampened on a Magic Eraser, or CLR on a Magic Eraser. Depending on the severity of the build up this may take multiple attempts, but once the glass is clean again it will perform like new. Should you have any queries regarding the cleaning of your treated surfaces please contact EnduroShield.

tel: 805 617 4609
email: salesusa@enduroshield.com
www.enduroshield.com

Exclusive Limited Warranty Terms & Conditions.

This Limited Lifetime Warranty ("Warranty") is effective as of DECEMBER 6, 2024

PLEASE READ THE WARRANTY TERMS AND CONDITIONS BEFORE PURCHASING AND BEFORE INSTALLING OR RESELLING YOUR GLASS WAREHOUSE PRODUCT. BY PURCHASE, INSTALLING, AND OR RESELLING THE GLASS WAREHOUSE PRODUCT, YOU ARE CONSENTING TO BE BOUND BY THE FOLLOWING TERMS AND CONDITIONS.

Glass Warehouse, LLC ("Seller") provides this Warranty to the business or individual ("Buyer") who purchases a Glass Warehouse product ("Product") directly from Seller or from an authorized reseller, including without limitation, shower kits, railing hardware, medicine cabinets, and mirrors. If Buyer is a licensed and fully insured professional and Buyer installs the Product in the residence of one of Buyer's customers ("Customer"), Buyer may pass this Warranty through to such Customer. In each case, this Warranty shall extend only to the original Buyer or Customer at the time of installation and shall expire if the original Buyer or Customer no longer owns or occupies the residence at which the Product is first installed. This Warranty will not apply to any subsequent owners or occupants of the residence. "Products" do not include, and this Warranty specifically excludes: (i) any products sold by Glass Warehouse under brand names other than Glass Warehouse; (ii) any third-party products distributed or sold by Glass Warehouse that are not incorporated into a Glass Warehouse Product.

Limited Lifetime Warranty for Glass

With respect to any glass components of the Product, Seller warrants to Buyer that for the lifetime of the Product ("Glass Warranty Period"), that such components (excluding seals) will materially conform to Seller's published specifications and will be free from material defects in material and workmanship. With respect to any Product used in commercial, industrial, or non-residential uses, including without limitation hotels, casinos, and apartments, the Glass Warranty Period is one (1) year. For mirrors, including medicine cabinets with mirrors, the Glass Warranty Period is one (1) year. For glass railings, the Glass Warranty Period is three (3) years. The Glass Warranty Period with respect to the outer coating of any glass component, such as an Enduroshield coating, is five (5) years.

Limited 5-Year Warranty for Hardware

With respect to any hardware components of the Product, Seller warrants to Buyer that for a period of five (5) years from the date of Buyer's purchase of the Product ("Hardware Warranty Period"), that such components (excluding seals) will materially conform to Seller's published specifications and will be free from material defects in material and workmanship. With respect to any

Product used in commercial, industrial, or non-residential uses, including without limitation hotels, casinos, and apartments, the Hardware Warranty Period is one (1) year. For mirrors, including medicine cabinets with mirrors, the Hardware Warranty Period is one (1) year. For railings, the Hardware Warranty Period is one (1) year. The Glass Warranty Period and Hardware Warranty Period are referred to together as the "Warranty Period."

While stainless steel is resistant to corrosion, it is not corrosion or rust-proof. Environmental conditions including, but not limited to, exposure to chemicals, salt air, pollution, and high humidity may cause surface discoloration or rust. Regular cleaning and maintenance is required to maintain the appearance and integrity of stainless steel products. Seller makes no warranty against and shall not be liable for any claims related to surface rust, discoloration, or corrosion of stainless steel components.

Warranty Terms and Conditions

This Warranty shall be voided if the Product (i) has been subjected to abuse, misuse, neglect, negligence, accident, improper testing, improper installation, improper cleaning (such as use of abrasive cleaners), improper storage, improper handling, abnormal physical stress, abnormal environmental conditions, or use or installation contrary to any instructions or guidelines issued by Seller; (ii) has been altered, repaired, or reconstructed by anyone other than Seller; (iii) was installed by anyone other than a fully insured and licensed professional; (iv) was not installed according to Glass Warehouse's published installation instructions or guidelines; (v) is installed or used outside of the US or Canada; or (vi) has been used with any third-party hardware or product that has not been previously approved in writing by Seller. This Warranty shall not apply to normal wear and tear. With respect to Products advertised by Glass Warehouse for outdoor use, this Warranty specifically excludes damage caused by extreme weather events.

WARNING: INSTALLATION OF GLASS PRODUCTS (I.E., SHOWER AND TUB DOORS) BY AN UNLICENSED OR INEXPERIENCED INSTALLER MAY RESULT IN GLASS BREAKAGE, DAMAGE TO PROPERTY, SERIOUS INJURY OR DEATH.

Neither Buyer, nor any other person is permitted to make any affirmation, representation, or warranty other than those contained in this Warranty. Any affirmation, representation, or warranty other than those contained in this Warranty shall not be enforceable against Seller or any other person. Seller reserves the right to modify this Warranty at any time, it being understood that such modifications will not alter the terms and conditions applicable at the time of sale of the products in question.

Please register your information to activate your warranty.
<https://www.glasswarehouse.us/warranty/>

Claims Process and Remedies:

All Warranty claims are subject to review and confirmation by Seller, and Seller reserves the right to inspect the installation to confirm the validity of the Warranty claim. To submit a Warranty claim, Buyer must:

1. Contact Seller's customer service department within 30 days of discovering the defect. Contact information:

Phone: +1 (760) 536-3640
Email: inquiries@glasswarehouse.us
<https://www.glasswarehouse.us/warranty/>.
2. Provide the following required documentation: (a) proof of purchase; (b) detailed description of the defect, including photographs; (c) item part number.
3. A customer service representative will review the claim and may request additional information or schedule an inspection of the Product and/or installation. Buyer must cooperate fully with any requests for information or inspection.

Seller shall have no obligation to honor any Warranty claim that does not comply with the above claims process. If a Warranty claim is approved, Seller shall, in its sole discretion, either: (i) repair or replace such Product (or the defective part), in which case Seller shall cover shipping of the repair parts or replacement product; or (ii) refund the price paid by Buyer to Seller for such Product. Replacement parts and products will be covered by this Warranty for the remainder of the Warranty Period of the original Product. Seller may require that the Product be returned to Seller, at Seller's expense. Except for any repairs made by Seller or its representatives as set forth above, Seller shall not pay for labor related to the Warranty claim, such as removal of the defective Product or installation of a replacement product. Seller's warranty obligation shall be discharged upon tender of parts, replacement or repair of the Product. Buyer's refusal to accept the tender terminates all warranty obligations and **VOIDS THIS WARRANTY.**

THE REMEDIES SET FORTH ABOVE SHALL BE BUYER'S SOLE AND EXCLUSIVE REMEDY AND SELLER'S ENTIRE LIABILITY FOR ANY BREACH OF THIS WARRANTY.

Disclaimer and Limitation of Liability:

EXCEPT FOR THE PRECEDING WARRANTY, SELLER MAKES NO WARRANTY TO BUYER WHATSOEVER WITH RESPECT TO THE PRODUCTS AND HEREBY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING ANY (I) WARRANTY

OF MERCHANTABILITY; (II) WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE; OR (III) WARRANTY AGAINST INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY; WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE.

SELLER DISCLAIMS AND SHALL NOT BE LIABLE FOR ANY PERSONAL INJURIES OR DEATH TO ANY PERSON, INCIDENTAL DAMAGES, CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, LOSS OF USE, LABOR OR MATERIAL CHARGES, OR ANY OTHER COSTS RELATING TO THE USE OR INABILITY TO USE THE PRODUCT OR REPLACEMENT PRODUCT OR RELATING TO THE APPLICATION OF THIS WARRANTY. IN NO EVENT SHALL SELLER'S AGGREGATE LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT.

SOME STATES LIMIT A MANUFACTURER'S ABILITY TO DISCLAIM CERTAIN WARRANTIES OR LIABILITIES AND THEREFORE SOME OF THE ABOVE DISCLAIMERS OR LIMITATIONS OF LIABILITY MAY NOT APPLY TO YOU.

Warranty Service

To activate your limited lifetime warranty, please visit:
<https://www.glasswarehouse.us/warranty/>



Please register your information within 30 days of purchase to complete the activation of your warranty.

Contact Technical Support:

Monday – Friday 8am – 5pm PST
Technical Support: +1 (760) 536-3640

GLASSWAREHOUSE

Register Your Warranty Today!

To activate your limited lifetime warranty, please visit:
<https://www.glasswarehouse.us/warranty/>



We will require this information within 30 days of purchase to complete the activation of your warranty.