




# BABY DREAM

MACHINE™


USER MANUAL

The Baby Dream Machine™ uses a combination of sound, light, ultrasonic, cool-mist humidifier and aromatherapy to help your child sleep soundly. Humidity is created by ultrasonic waves to instantly vaporize the water.

# GETTING TO KNOW YOUR BABY DREAM MACHINE™





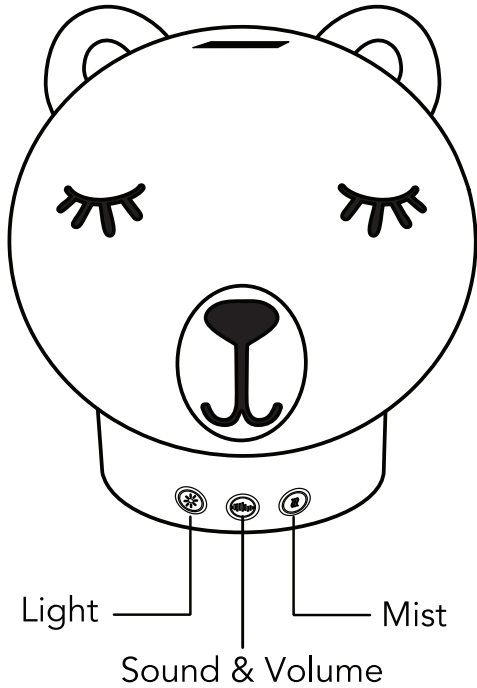


FRONT

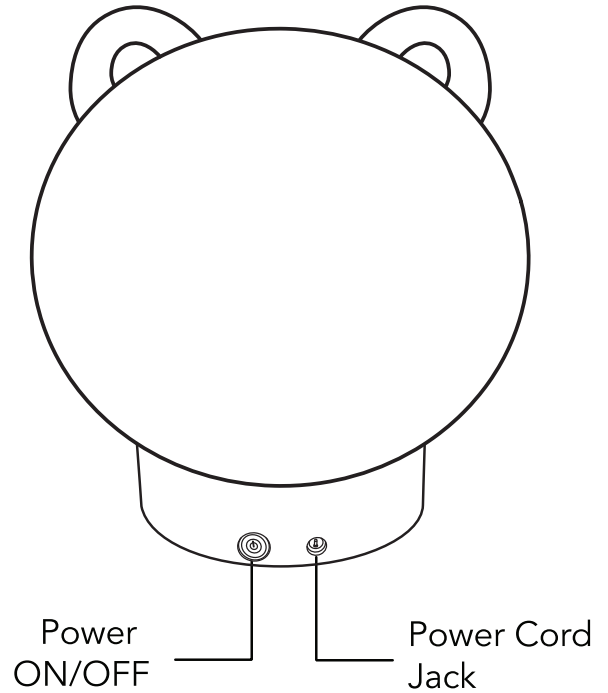

BACK

# KEY PARTS

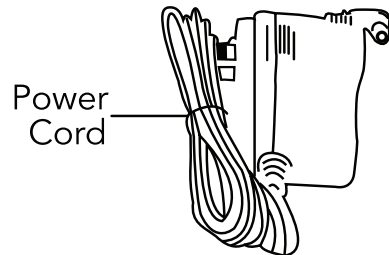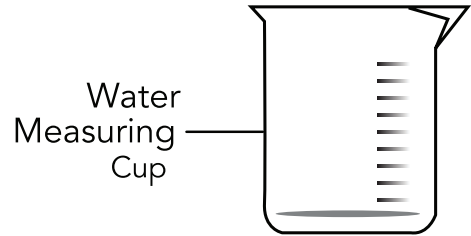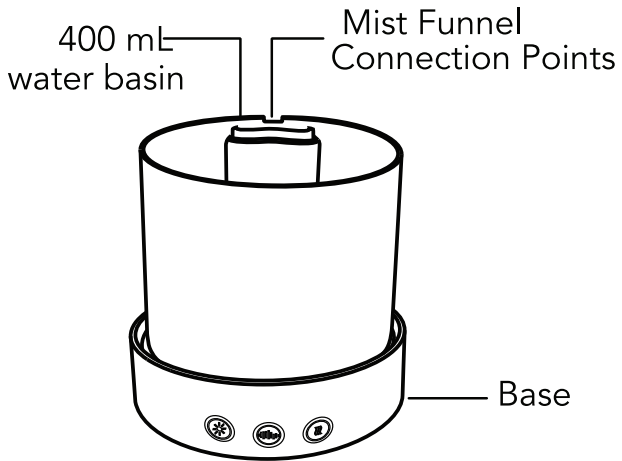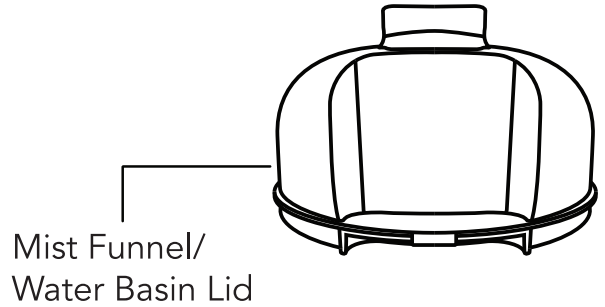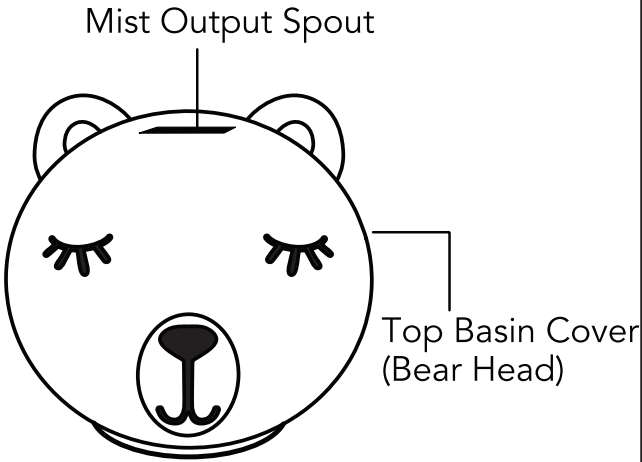

## SETUP

### IMPORTANT

Baby Dream Machine™ has been designed to work exclusively with The Baby Dream Company 100% Organic Essential Oils. If you choose to use the Baby Dream Company Essential Oils, please ensure you fully empty water after use to keep the unit clean and free from residue. Never place anything underneath your Baby Dream Machine™ device (ie. a towel, blanket etc.) as this can cause the unit to malfunction.


## Setup Instructions:

- Place your Baby Dream Machine™ on a flat surface, ideally 4 - 8 ft + away from children
- Connect the Power Cord into the Baby Dream Machine™ and then into the wall outlet
- Remove top cover (Bear Head) of Baby Dream Machine™ and then remove water basin cover (Mist Funnel)
- Use the included Fill Cup to measure desired amount of water (max 400mL)
- Pour water into the Water Basin
- OPTIONAL: Add 'Baby Dream Company 100% Organic Essential Oil' in accordance with our Age Recommended Oil Guide found on Page 10
- Connect Mist Funnel back into place of the Water Basin (make sure notch and groove are aligned properly)
- Carefully secure top cover (Bear Head) back onto machine, ensuring it is centered

## IMPORTANT: Always carefully secure Top Cover (Bear Head) before you power on device

- Turn on Power on your Baby Dream Machine™ by pressing the Power button on the back of machine, located next to the power cord.
- To turn on LED lights, press the Light button. Continue pressing the Light button to adjust color and brightness. Full Light button settings can be found on following page. To turn the Light OFF, continue to cycle through the color/brightness options until LED is OFF.
- To turn on Pink Noise, press the Sound button. Sound will turn on to low volume. To increase/adjust volume, continue to press Sound button. Pink Noise volume has 3 levels, low, medium and high. Full Sound button settings can be found on following page. To turn the Sound OFF, continue to cycle through the volume levels until Sound is OFF.
- To turn on Mist or Aromatherapy, press the Mist button. To increase/adjust the intensity of the mist flow, continue to press Mist button. Full Mist button settings can be found on following page. To turn the Mist OFF, continue to cycle through the mist flow levels until mist turns OFF. Alternatively, mist will automatically stop when water tank is empty. This will have no effect on other functions (Light & Pink Noise).
- Be sure to follow cleaning and care instructions when Baby Dream Machine™ is not in use

# BUTTON SETTINGS GUIDE

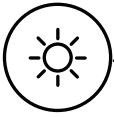

LIGHT

- 1st Press: White Light on Low
- 2nd Press: White Light on Medium
- 3rd Press: White Light on High
- 4th Press: Red Light on Low
- 5th Press: Red Light on Medium
- 6th Press: Red Light on High
- 7th Press: Light OFF




SOUND

- 1st Press: Sound on Low
- 2nd Press: Sound on Medium
- 3rd Press: Sound on High
- 4th Press: Sound OFF



MIST

- 1st Press: Mist on Low
- 2nd Press: Mist on Medium
- 3rd Press: Mist on High
- 4th Press: Mist OFF



POWER

- 1st Press: Power ON
- 2nd Press: Power OFF



# HUMIDIFIER TIMER GUIDE

Water Level (mL)	Mist Output Time
150 mL	1-3 Hours
250mL	3-6 Hours
400mL (max)	7-10 Hours

Note: The Humidifier Timer Guide ranges are dependent on the Mist Output settings used. For example, 150mL of water on LOW Mist Output setting would run for 3 hours.

# AROMATHERAPY GUIDE

It is recommended that your Baby Dream Machine™ is used exclusively with The Baby Dream Company Essential Oils, as these are 100% Certified Organic and custom blended to work with our device.

Child Age	Drops Recommended
< 3+ Months	NA
3-5 Months	1-2 drops
6-12 Months	2-3 drops
1-2 Years	2-4 drops
2-4 Years	4-5 drops
4-6 Years	5 drops
6+ Years	5-6 drops

# CLEANING INSTRUCTIONS

## How to clean your Baby Dream Machine™

If you are using the ultrasonic cool mist humidifier or aromatherapy features of your Baby Dream Machine™, we recommend cleaning at least 1x per week to keep it clean and functioning properly.

Cleaning your Baby Dream Machine™ is important, since water & oil residue can build up on the inside, effecting how well it will work.

To Clean:

- Turn off and unplug your Baby Dream Machine™.
- Empty any remaining liquid out of Water Basin.
- In a separate bowl or cup, make a cleaning mixture of 1 cup of water and 1 tbsp of white vinegar.
- Dip a cotton cloth into cleaning mixture and wipe out the Water Basin
- Dip a cotton swab into cleaning mixture and clean the ultrasonic plate to remove any extra buildup.
- Rinse the reservoir with water; then wipe it clean and dry up excess water with a soft cloth.
- Allow all parts to dry before using again.



**WARNING:** Never Use Solvents, Chemicals, Detergents or Abrasives when cleaning machine. They will damage the components and may cause it to emit harmful gases in the mist.



**TIP:** To avoid oil buildup, rise and wipe out your Baby Dream Machine™ water reservoir after each use.

## SPECIFICATIONS

Size.....	850g
Weight.....	W 202mm x H 210mm
Power Supply.....	DC 24V / 0.65A
Ultrasonic Frequency.....	AC100-240V, 50/60HZ
Water Capacity.....	400mL Max
Main Material.....	ABS & PP
LED Colors.....	White & Red
Button type.....	Push Buttons

# TROUBLESHOOTING GUIDE

If your Baby Dream Machine™ is not working properly...

- Read this User Manual and Getting Started Guide enclosed with your Baby Dream Machine™
- Visit our website: [www.thebabydreammachine.com](http://www.thebabydreammachine.com)
- Contact Customer Support via links on website

ISSUE	LIKELY CAUSE	SOLUTION
Mist will not turn ON or very little mist	Water levels in water basin are too low Mist button setting set to LOW	Add more water to basin Increase mist output levels by pressing MIST icon button to increase mist intensity
Unit will not turn ON / OFF	Power button not engaged after plugging machine in Power cord disconnected from wall/unit	Press POWER button (on back of machine) to turn unit ON/OFF Ensure power cord is properly connected to wall outlet and to back of machine.

For issues not covered here,  
please visit our website and file a ticket [www.thebabydreammachine.com](http://www.thebabydreammachine.com)

# WARRANTY

Thank you for purchasing this Baby Dream Company, Baby Dream Machine™

Your Baby Dream Machine™ comes with a 1 year manufacturers warranty. This warranty covers any defects or mechanical issues that have not been caused by user error. We may ask for the unit to be returned for testing before your new unit is sent out. We also will ask for original packaging.

## What Does this Warranty Cover?

Subject to the exclusions contained below, our manufacturer warrants that this product ("Product") is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

## Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

## What will the Baby Dream Company do?

Upon receipt and inspection of the defective item, if Baby Dream Company or its authorized distributor determines that the unit is defective, at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

**Products Covered** Length of Coverage Consumer Products One (1) year from the date of the Products, original purchase by the first consumer purchaser of the product. We may ask for proof of purchase in order to verify your warranty. So please keep proof of purchase.

## Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage. Batteries. Abuse & Misuse. Defects or damage that result from:

- (a) improper operation or care, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse;
- (b) contact with liquid (outside of humidifier/aromatheapy use), water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; Or as a result of improper use by not securing water basin in accordance with our instructions
- (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or
- (d) other acts which are not the fault of Baby Dream Company, are excluded from coverage. Use of Non-Baby Dream Company branded Products and Accessories. Defects or damage that result from the use of Non-Baby Dream Company branded or certified Products or Accessories or other peripheral equipment are excluded from coverage. Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than The Baby Dream Company or its authorized service centers, are excluded from coverage.

## Altered Products. Products or Accessories with

- (a) serial numbers or date tags that have been removed, altered or obliterated;
- (b) broken seals or that show evidence of tampering;
- (c) mismatched board serial numbers; or
- (d) nonconforming or non-Baby Dream Company branded housings, or parts, are excluded from coverage.

## How to Obtain Warranty Service or Other Information?

Please email [hello@thebabydreammachine.com](mailto:hello@thebabydreammachine.com)

NOTE: Devices that are repaired or replaced under warranty claims are not covered by any warranty.



## WARNING



This product is compliant with all relevant electromagnetic field standards and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- The machine is intended for indoor use only. Do not operate the machine outdoors.
- Always ensure that there is water in the water tank before operating the humidifier.
- Use only clean, cool water to fill the water tank.
- Place the humidifier on a smooth, level, waterproof surface that is elevated off the ground.
- Do not install the humidifier near children, walls, furniture and electrical appliances.
- Always handle the humidifier with dry hands to avoid electric shock.
- Do not operate the humidifier with a damaged cord or plug.
- Unplug the humidifier when not in use.
- Do not cover the mist outlet on the humidifier or insert objects into the mist outlet.
- Do not leave the humidifier in a closed room as the air could become saturated and leave condensation on walls or furniture.
- Leave room door partially open when the humidifier is being operated.
- Always insure water basin lid and top are secured properly in accordance with our instructions to avoid water leakage.
- This product is not a toy. Do not allow children to play with it.
- Keep this User's Guide for future reference.
- Baby Dream Company does not give medical advice nor claims to give medical advice. Always consult with your child's physician prior to using any sleep training devices or methods, including the Baby Dream Machine™. The information and recommendations provided are not medical advice, nor intended to be medical advice. Reliance of the advice is solely at your own risk. This device is intended for use for common sleep issues that are unrelated to medical conditions. Always seek advice from your child's physician regarding any medical conditions, or the health and welfare of your child and before using any of the techniques & equipment that aid in sleep. This includes use of The Baby Dream Machine™. It is always best to follow sleep recommendations according to the SIDS campaign. In no event, will the Baby Dream Company be liable for any claims, losses, injury or damages as a result of reliance on this information or product misuse.



# BABY DREAM MACHINE™

COPYRIGHT © ALL RIGHTS RESERVED

BABY DREAM COMPANY  
99 YORKVILLE AVE #200 | TORONTO, ONTARIO | CANADA

[www.thebabydreammachine.com](http://www.thebabydreammachine.com)