



## INSTALLATION INSTRUCTIONS

### CPT-1001 Shower Valve Trim

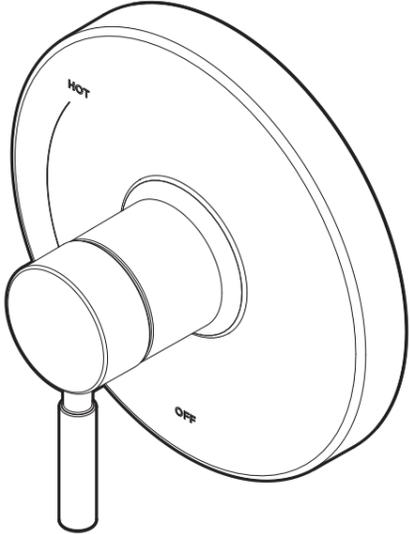

92-CPT-1001-03

## TOOLS & SUPPLIES NEEDED

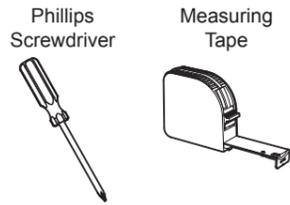

## IMPORTANT

### SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.

## CAUTION

Risk of personal injury. Do NOT use the Valve without properly adjusting the Temperature Limit Stop (TLS) as outlined in the Shower Valve installation manual.

## MAINTENANCE

Your new product is designed for years of trouble-free performance.

### FINISH MAINTENANCE:

Keep the surface finish looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

**NEED HELP?**  
For additional assistance or service please contact:




800-537-2107



www.speakman.com

## INSTALL MOUNTING PLATE


- 1 Clean wall surface. Place Mounting Base onto the valve, align mounting holes, and secure with supplied screws.

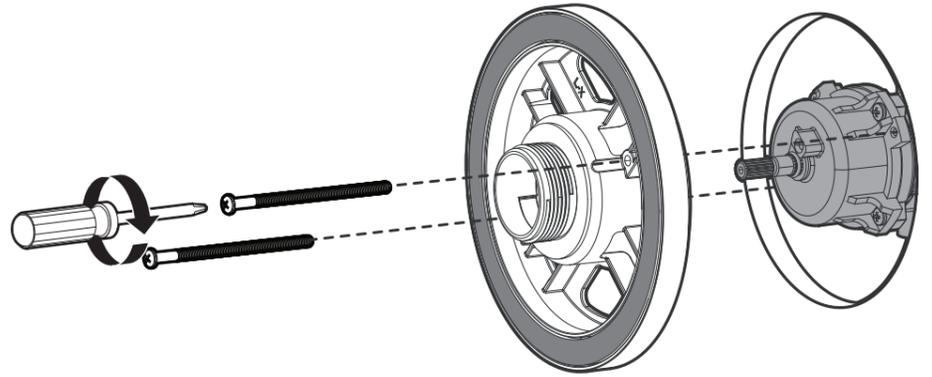


## DETERMINE CORRECT SPINDLE ADAPTER

- 2 Verify the position of the Spindle within the Mounting Plate, as shown below. If the end of the Spindle extends beyond the Mounting Plate, then use the Shallow Mount Adapter. If the end of the Spindle is flush to, or is within the Mounting Plate, then use the Deep Mount Adapter.

### FOR SHALLOW MOUNT APPLICATION

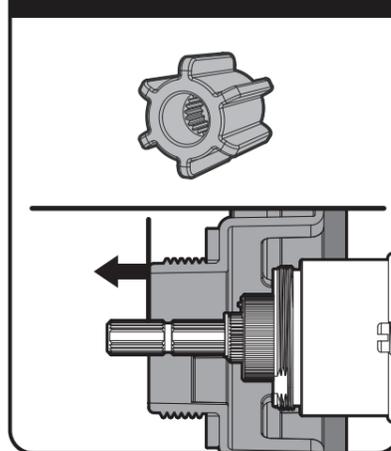


### FOR DEEP MOUNT APPLICATION

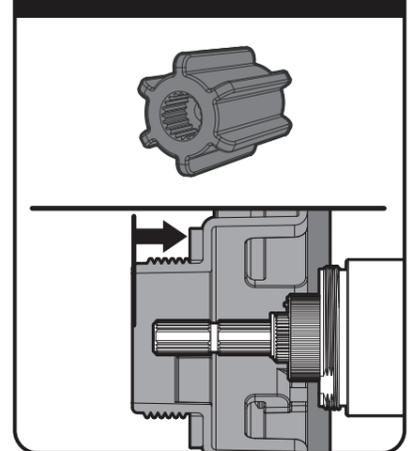


## INSTALL CORRECT SPINDLE ADAPTER

- 3 Confirm that Valve is in the "Off" position. Orient the Spindle Adapter so that one set of Splines are perfectly vertical. Place appropriate Spindle Adapter onto the Spindle of the Valve. Secure Spindle Adapter with 8-32 screw provided.

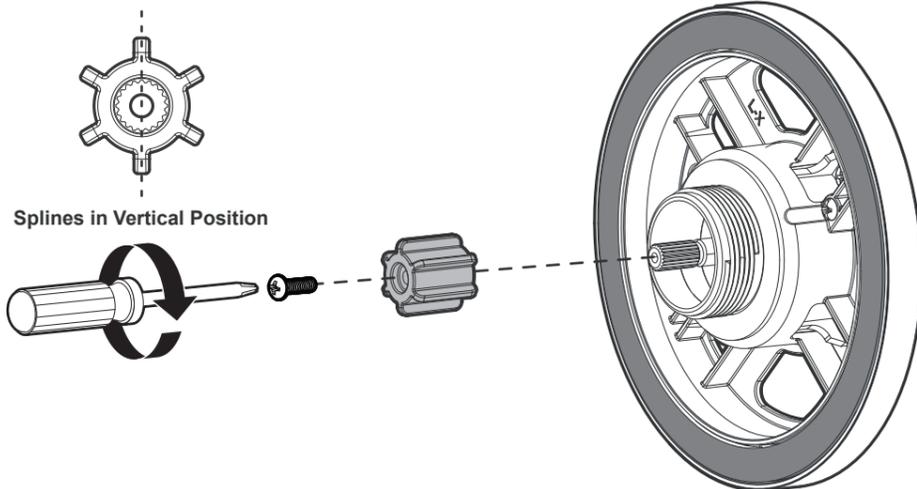


## POSITION WALL PLATE

- 4 Place Wall Plate on Mounting Base. Take care to orient the Wall Plate as shown below.

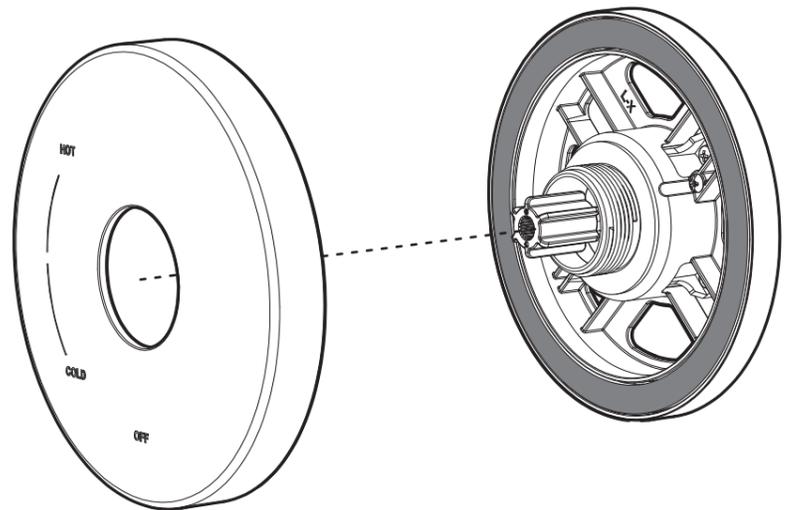


## ASSEMBLE HANDLE TO MOUNTING PLATE

- 5 Align Handle Assembly with Spindle Adapter (A) and Wall Plate as shown below. Keep Handle Stem (B) in a stationary vertical position and place over Spindle Adapter (A) to engage the Splines of the Spindle Adapter with the Handle Assembly. Keep Handle Stem (B) in the vertical position as you thread Handle Hub (C) on to Mounting Base. Hand tighten until snug.

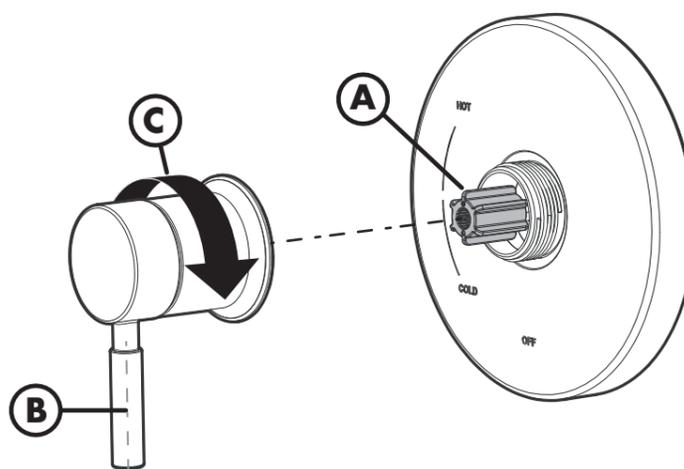

Handle Stem in Vertical Position

## REPAIR PARTS

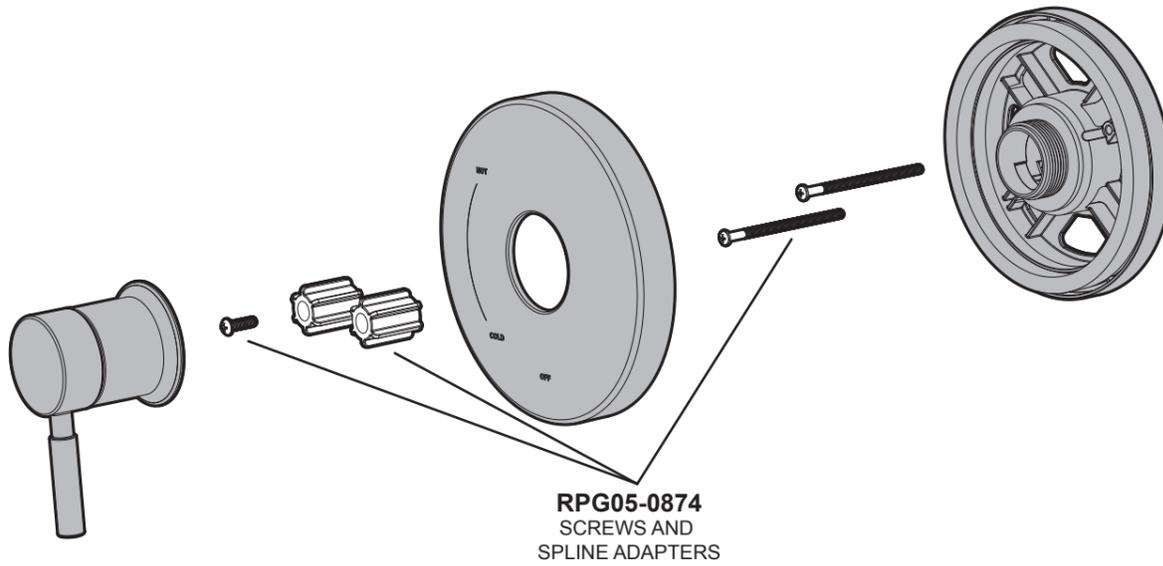

**RPG05-0874**  
SCREWS AND  
SPLINE ADAPTERS

ADA Compliant

## PRODUCT WARRANTY

This product is warranted to be free of defects in material and workmanship for the period listed below from the date of installation.

**Consumer/Residential: Limited Lifetime Warranty**  
**Commercial Use: 5 Year Limited Warranty**

Speakman warrants to its purchasers only ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. For additional information please go to [www.speakman.com](http://www.speakman.com).

## CALIFORNIA PROPOSITION 65




### CALIFORNIA PROPOSITION 65:


**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

Wash hands after installation, repair, or removal of this product.

## ROUGH-IN DIAGRAM

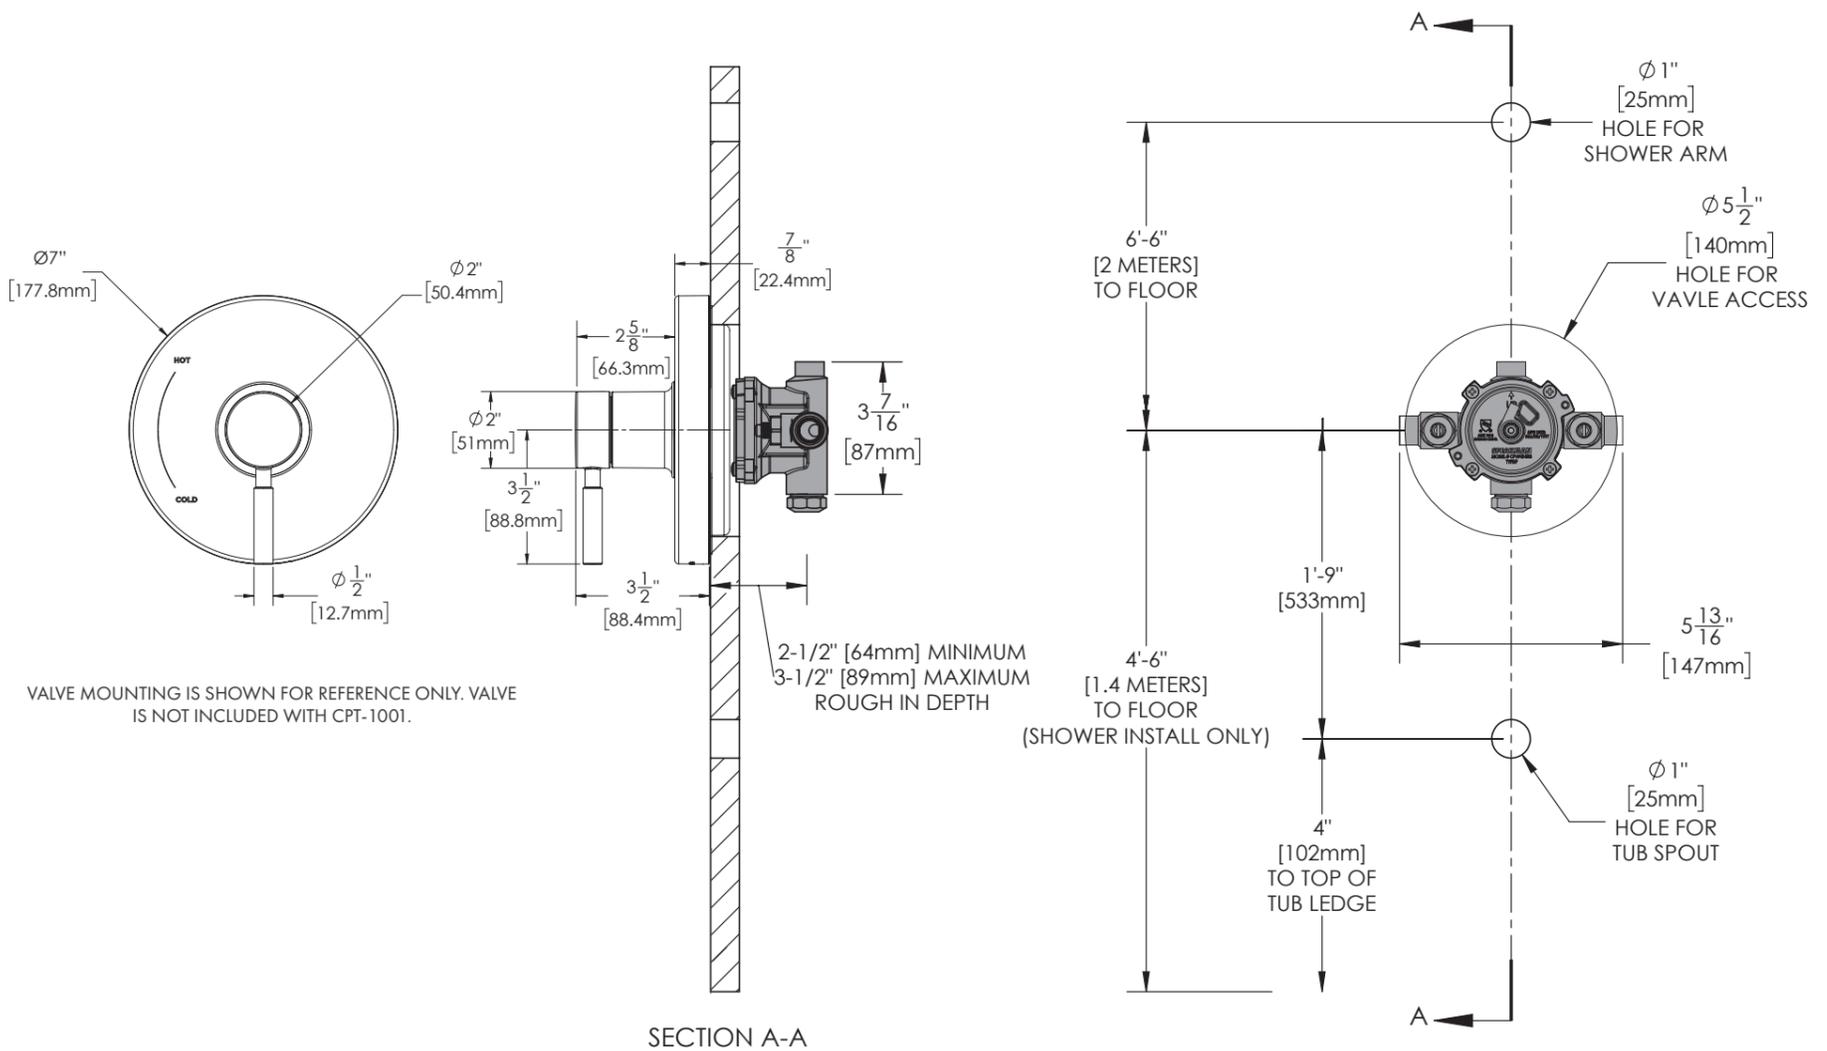

**NOTE:** TRIM FITS DIFFERENT VALVES. ROUGH-IN DIMENSIONS PROVIDED FOR REFERENCE ONLY.

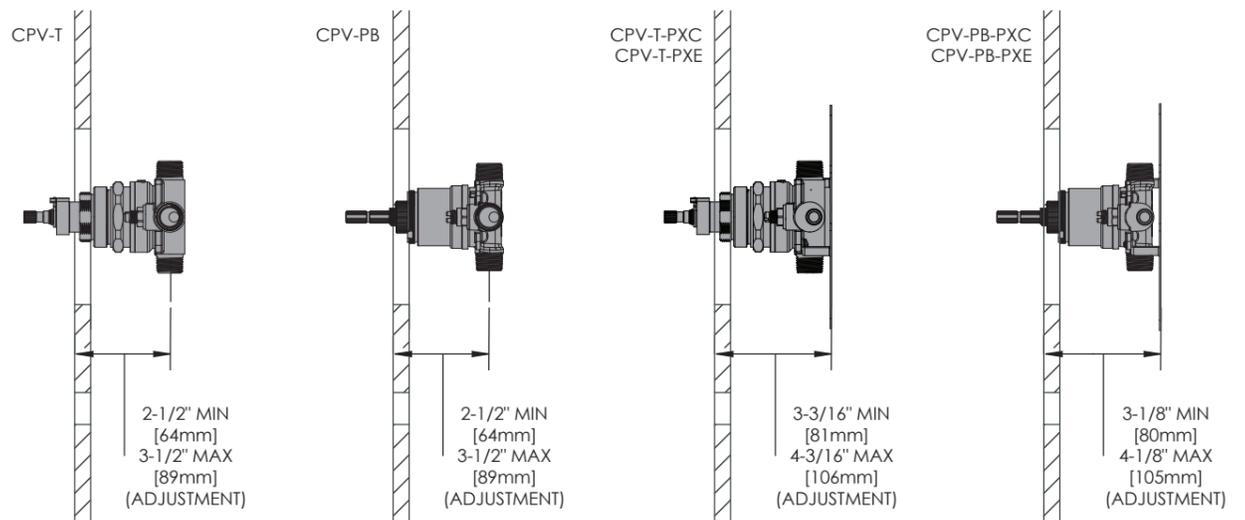

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.