

Wiring and Connections

WyreStorm recommends that all wiring for the installation is run and terminated prior to making connections to the switcher. Read through this section in its entirety before running or terminating the wires to ensure proper operation and to avoid damaging equipment.

⚠️ IMPORTANT! Wiring Guidelines

- The use of patch panels, wall plates, cable extenders, kinks in cables, and electrical or environmental interference will have an adverse effect on signal transmission which may limit performance. Steps should be taken to minimize or remove these factors completely during installation for best results.
- WyreStorm recommends the use of shielded category cable to minimize signal noise and interference.
- WyreStorm recommends using pre-terminated HDMI cables due to the complexity of these connector types. Using pre-terminated cables will ensure that these connections are accurate and will not interfere with the performance of the product.


IR TX/RX Guidelines

- Using WyreStorm infrared emitters and receivers is the best way to ensure that most IR coding formats are transmitted and received by the system. Other 3rd party emitters and receivers can be used; however, these devices must operate in the same manner as the WyreStorm devices.
- Due to differences in IR across 3rd party control systems their IR ports should never be connected directly to a NetworkHD system as an incompatibility may exist. WyreStorm offers a cable that compensates for voltage differences as well adjusts for differences in the pins used within the port. Refer to the [CAB-IR-LINK](#) product page for more information.

RS-232 Wiring

Most control systems and computers are DTE where pin 2 is RX, this can vary from device to device. Refer to the documentation for the connected device for pin functionality to ensure that the correct connections can be made.

Matrix RS-232 Port




WyreStorm Connector		3rd Party Device
Pin 2	TX (Transmit)	---> To ---> RX (Receive)
Pin 3	RX (Receive)	---> To ---> TX (Transmit)
Pin 5	G (Ground)	---> To ---> G (Ground)

Note: Pins not shown in table have no connection.

Audio Wiring

S/PDIF Port

This matrix contains audio connections for S/PDIF digital.




Devices that use a S/PDIF connection include:

MX-0404-KIT

Warranty Information

WyreStorm Technologies ProAV Corporation warrants that its products to be free from defects in material and workmanship under normal use for a period of five (5) years from the date of purchase. Refer to the Product Warranty page on [wyrestorm.com](#) for more details on our limited product warranty.


Cat6 Cable Performance Guide



WyreStorm recommends the use of shielded cable to minimize signal noise and interference


IR TX Port Pinout

Connection for IR TX (transmit) uses a 3.5mm (1/8in) mono plug.



IR TX Port Pinout

Connection for IR RX (receive) uses a 3.5mm (1/8in) stereo jack that outputs +5V DC to power the included IR receiver.

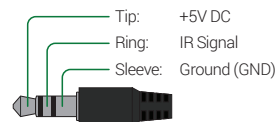

Receiver (RX) RS-232 Port

WyreStorm Connector		3rd Party Device
Pin 1	TX (Transmit)	---> To ---> RX (Receive)
Pin 2	RX (Receive)	---> To ---> TX (Transmit)
Pin 3	G (Ground)	---> To ---> G (Ground)

Receiver (RX) RS-232 Port

WyreStorm Connector		3rd Party Device
Pin 1	Left Positive (L+)	---> To ---> Left Positive (L+)
Pin 2	Left Negative (L-)	---> To ---> Left Negative (L-)
Pin 3	Ground (G)	---> To ---> Ground (G)
Pin 4	Right Negative (R-)	---> To ---> Right Negative (R-)
Pin 5	Right Positive (R+)	---> To ---> Right Positive (R+)

Devices that use a Balanced Audio connection include:

MX-0808-KIT



EDID Settings (MX-0404-KIT)

EDIDs can be configured to resolve issues with video output on displays that may not accept the maximum resolution available from the source.

- When set to Smart EDID (default) the matrix will scan all selected displays for the lowest resolution to dynamically adjust the source content to allow output on 2K and 4K displays sharing the same source.
- When EDID Copy or a direct EDID is being used, SmartEDID is turned Off.
- Ensure that a display is connected and powered On to the selected output before copying EDIDs or the copy will fail. When this occurs, EDID will be set to 4K@30Hz 2ch.
- Power to the matrix must be cycled (Off/On) after changing dip switches in order for the setting to take effect.



Copying EDIDs

- Set the EDID dipswitch to the **Front Panel, Web UI or API EDID Control** (all switches up).
- Reboot the matrix.
- Using the front navigation buttons, select the input port for the output. Example: Input 2 for Output 2
- Once the output port indicator blinks, press and hold **Enter** for 5 seconds. **OK** indicates that the copy was successful, **FAIL** indicates that the copy failed.
- Reboot the matrix

SmartEDID/Front Panel/Web UI	4K UHD	1080p
SmartEDID - Dynamic EDID Based on Display - 2ch only (default)	4K @30Hz (8bit only) 2ch with HDR (SmartEDID OFF, HDCP 2.2 Support)	1080P @60Hz 2.0ch audio (SmartEDID OFF, HDCP 1.4 Support)
Front Panel, Web UI, or API Control	4K @30Hz 2ch with HDR (SmartEDID OFF, HDCP 2.2 Support)	
	4K@30Hz 5.1ch with HDR (SmartEDID OFF, HDCP 2.2 Support)	
	4K@30Hz 7.1ch with HDR (SmartEDID OFF, HDCP 2.2 Support)	
	4K @60Hz 2ch (MX-0404-HDBT-H2A-KIT)	

Accessing the Web UI

This matrix is set to a default static IP Address (192.168.11.143). In order to communicate with it initially the PC must be set to a 192.168.11.xxx address with a subnet of 255.255.0.0. This can be changed back once a static IP is set within a different range.

- Connect the matrix to the same network as a PC.
- Open a web browser and enter the IP Address of the matrix
Default: 192.168.11.143 | Password: admin

IP Address Notes

- When to set to DHCP the IP address of the unit can be displayed by pressing and holding the front panel Up and Down buttons for 3 seconds. The IP address will be displayed on the front panel.
- The installer password and general password are the same by default. WyreStorm recommends changing the password for installer login to avoid any unwanted changes being made to the matrix configuration.

Troubleshooting

- No or Poor Quality Picture (snow or noisy image)
- Verify that power is being supplied to the transmitter and receiving device
- Verify that all HDMI and HDBaseT connections are not loose and are functioning properly
- Verify that the HDBaseT cable is properly terminated following EIA568B standard
- Verify that the output resolution of the source and display is supported by this matrix and receiver.
- If transmitting 3D or 4K, verify that the HDMI cables used are 3D or 4K rated.

No or Intermittent 3rd party Device Control

Verify that the IR and RS-232 cables are properly terminated following the [Wiring and Connections](#) section.

Troubleshooting Tips:

WyreStorm recommends using a cable tester or connecting the cable to other devices to verify functionality.

Specifications

	MX-0404-KIT	MX-0808-KIT v2
Audio and Video		
Inputs	4x HDMI In: 19-pin type A	8x HDMI In: 19-pin type A
Outputs	4x S/PDIF Out: RCA 3x HDBT Out: 8-pin RJ-45 1x HDMI Out: 19-pin type A	4x HDMI Out: 19-pin type A 8x HDBT Out: 8-pin RJ-45 4x 5-pin Balanced Analog Audio
Output Video Encoding	HDBaseT Class B	
Encoding Data Rate	9.2Gbps	
End to End Latency (Max)	10µs (micro seconds)	
Audio Formats	HDMI/HDBaseT: 2ch LPCM Multichannel up to Dolby Atmos and DTS-X Analog Output: 2ch PCM	
Supported Standards	DCI RGB HDR10 HLG BT.2020	
Video Resolution (Max)	Video Resolution	
	1920x1080p @60Hz 16bit	
	3840x2160p @24Hz 10bit 4:2:0 HDR	
	3840x2160p @30Hz 8bit 4:4:4	
	3840x2160p @60Hz 8bit 4:2:0	
	Note: WyreStorm recommends the use of shielded category cable to minimize signal noise and interference	
Maximum Pixel Clock	HDBaseT: 340MHz	
Communication and Control		
HDMI	HDMI HDCP 2.2 EDID CEC	
HDBaseT	HDMI HDCP 2.2 EDID CEC 1-way PoH Bidirectional IR	
Consumer Electronics Control (CEC)	CEC power triggering for connected screens – Requires CEC compatibility	
IR	3x IR RX: 3.5mm (1/8in) 4x IR TX: 3.5mm (1/8in)	8x IR RX: 3.5mm (1/8in) 8x IR TX: 3.5mm (1/8in)
RS-232	1x RS-232: 9-pin DB9 (matrix control only)	1x RS-232: 9-pin DB9 (matrix control only)
Ethernet	1x LAN: 8-pin RJ-45	1x LAN: 8-pin RJ-45
Power		
Power Supply	100~240V AC 50/60Hz	100~240V AC 50/60Hz
PoH	1-way Matrix to Receiver	
Max Power Consumption	48.2W	105.4W
Environmental		
Operating Temperature	0 to + 45°C (32 to + 113 °F), 10% to 90%, non-condensing	
Storage Temperature	-20 to +70°C (-4 to + 158 °F), 10% to 90%, non-condensing	
Maximum BTU	164 BTU/hr	374 BTU/hr
Dimensions and Weight		
Rack Units/Wall Box	1U	1U
Height	43.5mm/1.72in	43.5mm/1.72in
Width	440mm/17.33in	440mm/17.33in
Depth	300mm/11.82in	300mm/11.82in
Weight	4.06kg/8.93lbs	4.06kg/8.93lbs
Regulatory		
Safety and Emission	CE FCC RoHS RCM EAC	

Note: WyreStorm reserves the right to change product specification, appearance or dimensions of this product at any time without prior notice.

4K UHD HDBaseT™ Matrix Switchers with Included Receivers & Audio Breakout

WyreStorm

Quickstart Guide

MX-0404-KIT | MX-0808-KIT v2

! WyreStorm recommends reading through this document in its entirety to become familiar with the product's features prior to starting the installation process.



! IMPORTANT! Installation Requirements

- Visit the product pages to download the latest firmware, document version, additional documentation, and configuration tools.
- Read through the [Wiring and Connections](#) section for important wiring guidelines before creating or choosing premade cables.
- While these products support CEC for the HDMI outputs, WyreStorm cannot guarantee compatibility with all forms of CEC communication.

In the Box (MX-0404-KIT)

1x MX-0404-KIT Matrix
3x MX-KIT-RX Receivers
1x AC Power Cord (US/UK/EU/AU)
1x IR Remote (Battery not Included)

4x IR Emitters
3x IR Receivers
2x Matrix Mounting Brackets
6x Receiver Mounting Brackets (2 per RX)
1x Quickstart Guide (this document)

In the Box (MX-0808-KIT v2)

1x MX-0x0x-KIT Matrix
8x MX-KIT-RX Receivers
1x AC Power Cord (US/UK/EU/AU)
1x IR Remote (Battery not Included)
8x 3-pin Phoenix Connectors

8x IR Emitters
8x IR Receivers
4x 5-pin Terminal Blocks
2x Matrix Mounting Brackets
16x Receiver Mounting Brackets (2 per RX)
1x Quickstart Guide (this document)

! **IMPORTANT!** The MX-0404-KIT and MX-0808-KIT had the previous model number of EXP-MX-0404-KIT and EXP-MX-0808-KIT. If you would like to access previous documentation for these models, visit wyrestorm.com

Identifying Product Versions

Some of these products have been released under multiple versions which contain either different chassis designs and/or feature sets. Content within this QSG is for the version 2 or newer of these products. Information on other versions can be found within the matching QSG. Each product version is identified by a v# after the product number on the product and outer packaging. Note that a version of these products may not contain this identifier while all versions above v1 will have the version indicated.

Basic Wiring Diagram

