


# WOLVERINE BRASS, INC.

## ESSENCE SINGLE CONTROL LAVATORY FAUCETS WITH POP-UP ASSEMBLIES




85260 - CHROME  
85263 - BRUSH NICKEL

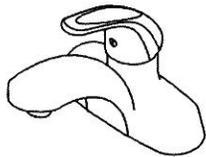

### INSTALLATION INSTRUCTIONS:

- 1.) Apply plumbers putty to bottom side of faucet.
- 2.) Mount unit on basin with holes 4" on centers.
- 3.) Assemble mount washers and nuts to studs and tighten. (DO NOT OVER TIGHTEN MOUNT NUTS).
- 4.) Connect supply lines to supply adapters and tighten. CAUTION: A wrench or pliers MUST be used to hold hex on each supply adapter while tightening supply lines to prevent damaging the brazed joints or tubing.
- 5.) Remove aerator and flush unit to remove any line trash.
- 6.) Check for leaks at all joints.

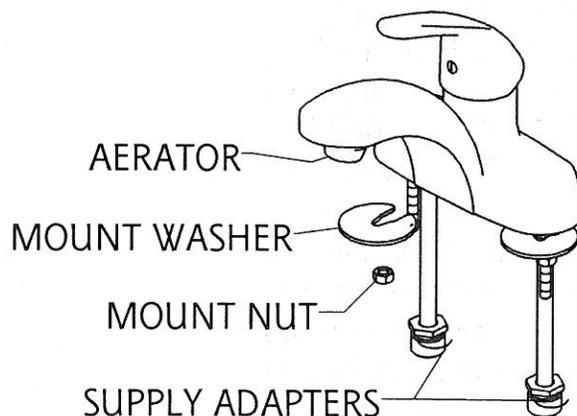

CAUTION: Must hold each adapter with wrench while tightening supply nuts.

### HOT LIMIT STOP ADJUSTMENTS:

The hot limit stop is a device that is used to limit the cartridge travel to the extreme hot position.

- 1.) Remove handle using 3/32" hex wrench.
- 2.) Remove (gray) hot limit adjustment ring from valve cartridge.
- 3.) Turn valve on and adjust to maximum desired water temperature.
- 4.) Reposition gray hot limit ring so that the ring stop touches the cartridge stop. This will prevent the valve stem from rotating any further towards the full hot position.
- 5.) Re-assemble handle.

