
Pria Sport Convertible Car Seat

Your model may look different than one shown on cover.

Read all instructions BEFORE USING this car seat. KEEP INSTRUCTIONS FOR FUTURE USE.

A Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child.




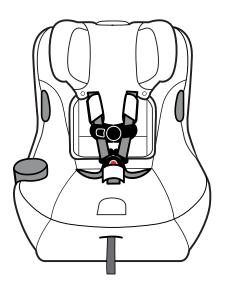


Welcome to the Maxi-Cosi Family!

Thank you for choosing this car seat, also known as a child restraint!

To help you get started using your child's new car seat, here are the 4 main tasks you'll need to complete.

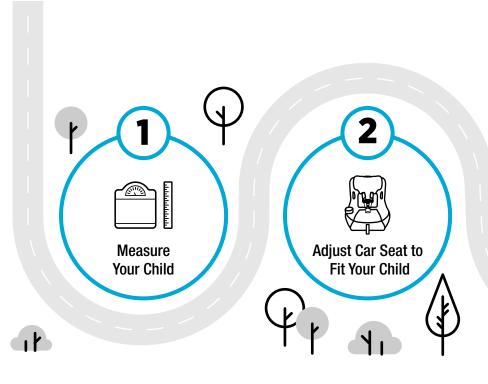

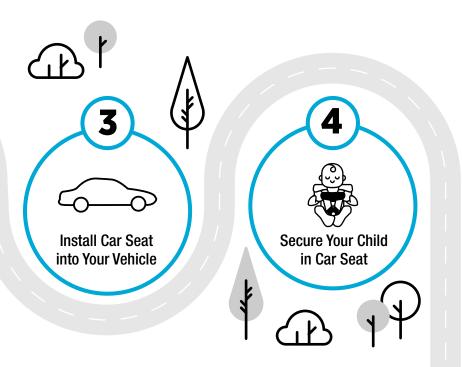

Your child's safety is worth the time it will take to read and follow these instructions.

Ready? Let's go!

Pages 1-4 will introduce you to the parts of the car seat.

The Back Cover of this Manual and page 66 has our contact information.

If at any point you would like assistance, please feel free to reach out to us.


Contents

1	Getting Started	34 Securing Child in Car Seat
	1 Parts of Car Seat3 Accessory Use5 Choosing Car Seat Mode	38 Making Adjustments to Car Seat
7	Rear-Facing Section	38 Changing Headrest/Harness Height39 Changing Buckle Position
	9 Rear-Facing Child Fit	42 Reclining Car Seat
	11 Rear-Facing Vehicle Install	44 Wash & Care
21	Forward-Facing Section	44 Removing Seat Pad & Harness System
	Forward-Facing Child FitForward-Facing Vehicle Install	47 Cleaning Parts of Car Seat 48 Installing Seat Pad & Harness System

51	LATCH & Vehicle Belt Information		60 Installation in Vehicle
	51 LATCH: Lower Anchor Belt53 Vehicle Belts57 Top Tether		Replacement & ExpirationRegistration & Safety NoticesAircraft Information
		64	Warranty
58	Safety Information		<u>-</u>
	58 Child Restraint Use	66	Replacement Parts List
	59 Vehicle Seating Position		


©2022 Dorel Juvenile Group, Inc. (800) 951-4113 www.maxicosi.com. Styles and colors may vary. Los estilos y los colores pueden variar. Made in USA from American and imported parts (including seat pad). Hecho en EE.UU. a partir de piezas americanas e importadas (incluyendo la almohadilla del asiento). Distributed by (distribuido por) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2233 Argentia Road, Suite 110, Mississauga, ON L5N 2X7. Importado y Distribuido en Chile por: Comercial e Industrial Silfa S.A. - San Ignacio 0201 / Parque Industrial Portezuelo Quilicura, Santiago Chile. Fono (562) 2339 9000. En Perú por: Comexa S.A. - Los Libertadores 455 – San Isidro, Lima – Perú. Fono (511) 4469014. En Centro América, Caribe y Ecuador por: Best Brands Group S.A. – Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por: Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No. 1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9 Tel. (55) 67199202

Parts of Car Seat

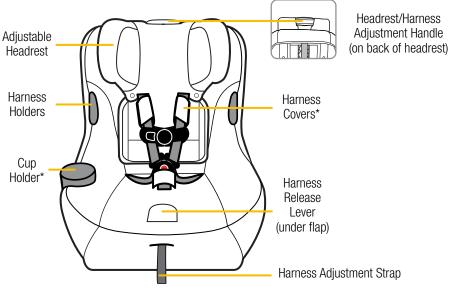


Your model may look different than one shown.

*See pages 3-4 for Accessory Use.

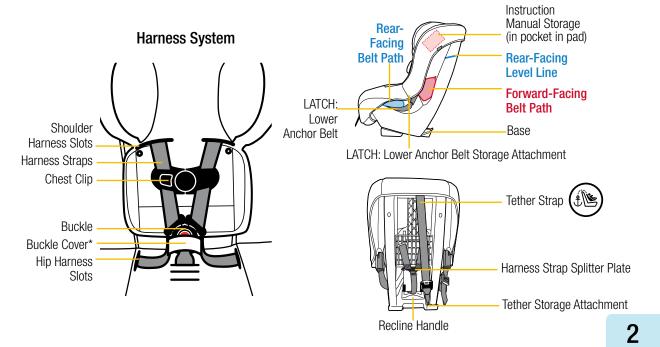

Accessory Use

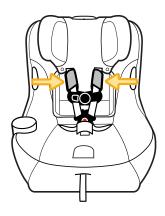

Harness Covers


(on select models)

For Use in Rear-Facing Mode or Forward-Facing Mode

If the harness covers will not allow proper positioning of the chest clip or interfere with getting a tight enough harness fit for a smaller baby, remove them and **DO NOT** use.


Store them until your child is large enough to use the harness covers while maintaining a properly fitting harness.

To remove, pull the fastening strips apart and pull the harness covers off of the harness straps.

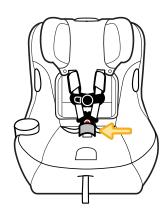

Buckle Cover (on select models)

To remove, unbuckle the harness system and slide the buckle cover off of the buckle.

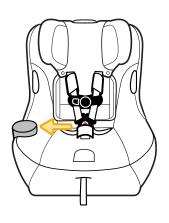

Removable Cup Holder (on select models)

The cup holder is top-rack dishwasher safe.



To remove cup holder, twist the cup holder counterclockwise. Pull it out of the slot in the car seat.

To install cup holder, align tabs on bottom of cup holder with the slots in the car seat. Twist clockwise to lock in place.

Choosing Car Seat Mode

WARNING:

Measure your child's weight and height (**DO NOT** guess) before choosing this car seat's mode.

Your child's height, weight, and age determine how the car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—please consult your doctor before switching between any modes within the limits and fit requirements of the car seat.

State Laws

Please be certain to follow your state's laws regarding car seat use.

American Academy of Pediatrics Recommendations

Infants and Toddlers

Should ride in a rear-facing car seat as long as possible, until they reach the highest weight or height allowed by their car seat.

Toddlers and Preschoolers

Once they are facing forward, children should use a forwardfacing car seat with a harness for as long as possible, until they reach the height and weight limits for their car seats.

School-Aged Children

Once they have outgrown their forward facing car seat, children should use a belt-positioning booster seat until the vehicle's lap and shoulder seat belt fits properly. This is often when they have reached at least 4 feet 9 inches in height and are 8 to 12 years old.

Older Children

All children younger than 13 years should be restrained in the rear seats of vehicles for optimal protection.



Rear-Facing Mode

14-40 lb (6.4-18 kg) **and 40 in.** (101.6 cm) or less

Rear-Facing Section PAGE 7

Rear-Facing Child Fit PAGE 9

Rear-Facing Vehicle Install PAGE 11



Forward-Facing Mode

22-65 lb (10.1-29 kg) **and 29-49 in.** (73.6-125 cm) **and at least 1 year old**

Forward-Facing Section PAGE 21

Forward-Facing Child Fit PAGE 23

Forward-Facing Vehicle Install PAGE 25

Rear-Facing Section



14-40 lb (6.4-18 kg) **and 40 in.** (101.6 cm) or less

Children under 1 year of age **MUST** ride **Rear-Facing**.

In this car seat, your child can remain Rear-Facing until they outgrow any one of the following:

Weight Limit: 40 lb (18 kg); OR

Height Limit: 40 in. (101.6 cm); OR

• Rear-Facing Child Fit requirements, see page 9.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Rear-Facing Child Fit: Page 9

Rear-Facing Vehicle Install: Page 11

WARNING:



NEVER install a rearfacing child restraint in the front seat of a vehicle equipped with an active frontal airbag.

DO NOT use the tether for rearfacing mode. Secure the tether strap hook to its storage attachment.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

DO NOT fasten multiple lower anchor connectors on the same lower anchor bar in the vehicle.

Check the vehicle belt or the lower anchor belt before each use. Use **ONLY** if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

This child restraint **MUST ALWAYS** face the rear of the vehicle until the child is at least 1 year old and weighs 22 lb (10 kg).

Rear-Facing Child Fit

1 _____ 2 ____ 3 ____ 4



Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.





Undo Chest Clip & Buckle

It may be easier to undo the buckle by pressing in towards the top of the button.



Place Child in Car Seat

On select models: You can slide the harness straps behind the harness holders.

Your child's bottom and back should be flat against the car seat.




Check Head Position

The top of your child's head **MUST be at least 1 in.** (2.5 cm) **below** the top of the car seat's headrest.



Check Harness Strap Position

The harness strap **MUST be at or slightly below** the shoulders; never above.

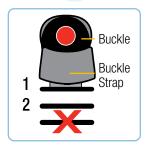

6

Check Buckle Position

- Use the slot closest to your child.
- The buckle **should not be underneath or behind** your child.

DO NOT use the 3rd buckle slot in **Rear-Facing Mode**.



To change the harness strap height, see pages 38.

To change the buckle position, see page 39-41.

To learn how to check harness tightness, see pages 34-37.

Rear-Facing Vehicle Install



Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position for your child. **See page 9 for child fit.**

Once the car seat is installed, you will not be able to adjust the buckle position.

Review Vehicle Owner's Manual

Determine what kind of vehicle belts your car has and how to use them to lock a car seat in place **OR** where LATCH: lower anchor seating positions are located in your vehicle.

There are 2 different methods for install. **Use only one:**







Vehicle Belt

LATCH: Lower Anchor Belt

1 _____ 2

WARNING:

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.



Place Car Seat Rear-Facing in Back Seat




Fully Recline Car Seat



Check Rear-Facing Level Line

The Rear-Facing Level Line on the car seat MUST be parallel with the ground.


Only use **Position 2** if necessary to get the correct recline angle.

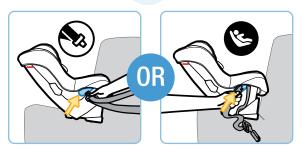

Locate Rear-Facing Belt Path & Route Vehicle Belt or Lower Anchor Belt Through It

For the LATCH belt: You may need to fully lengthen the belt before routing it into the belt path. Squeeze the adjuster button and pull the belt out as shown.

The connector without the adjuster closest to it goes through the Rear-Facing Belt Path opening as shown.

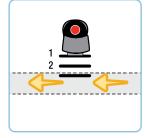

Vehicle Belt or Lower Anchor Belt Goes:

- under the car seat pad; AND
- across the car seat; AND
- in front of the buckle; **AND**
- out the other Rear-Facing Belt Path opening.

DO NOT twist the belt.





Finished Lower Anchor Belt Routing

The lower anchor belt adjuster **MUST** be on the child's right.





Thread Belt into Positioning Guides

The lap portion of the vehicle belt or the lower anchor belt **MUST** go through the belt-positioning guides on both sides of the car seat as shown.

DO NOT thread the shoulder portion of the lap/shoulder belt into the belt positioning guides.





If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 55 of this manual or your vehicle owner's manual.






Attach Lower Anchor Belt Connectors to Vehicle's Lower Anchors

On select models: Make sure the arrows on the connectors are facing up.

Fasten one lower anchor belt connector to the anchor located in the vehicle seat.

Repeat for other side of car seat.

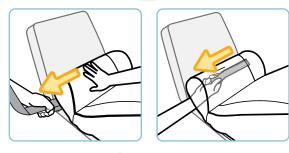

Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

For the LATCH belt or Lap Only Vehicle Belt: it may be easier to tighten if you route the free end of the belt back into the Rear-Facing Belt Path, reach into the Rear-Facing Belt Path, and pull the free end of the belt towards you.



10



Check Belt Tightness

Hold the **Rear-Facing Belt Path** with your non-dominant hand. Push and pull the car seat from side to side.

The car seat should not move more than **1 in.** (2.5 cm).

If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; OR
- Reinstalling the car seat; **OR**
- Changing to a different seating location; **OR**
- Switching to a different install method (LATCH or vehicle belt).



Secure Child in Car Seat

See pages 34-37.



Recheck Rear-Facing Level Line

Redo the installation if the **Rear-Facing Level Line** is not parallel with the ground.

See info box on this page.





Only if necessary, you may place a tightly rolled towel(s) or foam pool noodle(s) under the front of the car seat to help make the **Rear-Facing Level Line** parallel with the ground.


Check often to make sure padding is still in place and the belt is tight.

FINISHED!





Lap/Shoulder Belt










Lap Belt







LATCH: Lower Anchor Belt Is the Rear-Facing Level Line parallel with the ground? See steps 2, 10, 11, and info box on page 19.

Forward-Facing Section



22-65 lb (10.1-29 kg) and **29-49** in. (73.6-125 cm) and at least 1 year old

Children **MUST** be at least 1 year of age to ride **Forward-Facing**.

In this car seat, your child can remain harnessed Forward-Facing until they outgrow any one of the following:

• Weight Limit: 65 lb (29 kg); OR

• **Height Limit:** 49 in. (125 cm); **OR**

• Forward-Facing Child Fit requirements, see page 23.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Forward-Facing Child Fit: Page 23

Forward-Facing Vehicle Install: Page 25

WARNING:

You **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

DO NOT fasten multiple lower anchor connectors on the same lower anchor bar in the vehicle.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

In this child restraint your child **MUST** be at least 1 year old and weigh 22 lb (10 kg) before they sit forward-facing.

Forward-Facing Child Fit

1

2

3

4



Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.





Undo Chest Clip & Buckle

It may be easier to undo the buckle by pressing in towards the top of the button.



Place Child in Car Seat

On select models: You can slide the harness straps behind the harness holders.

Your child's bottom and back should be flat against the car seat.



Head Position

The tops of your child's ears **MUST be below** the top of the car seat's headrest.








Harness Strap Position

The harness strap **MUST** be at or slightly above the shoulders; never below.

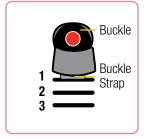

Buckle Position

- Use the slot closest to your child.
- The buckle should not be underneath or behind your child.

The buckle can be used in **any** buckle slot.

To change the harness strap height, see pages 38.

To change the buckle position, see page 39-41.

To learn how to check harness tightness, see pages 34-37.

Forward-Facing Vehicle Install



Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position. **See page 23 for child fit.**

Once the car seat is installed, you will not be able to adjust the buckle position.

Review Vehicle Owner's Manual

Determine what kind of vehicle belts your car has and how to use them to lock a car seat in place **OR** where LATCH: lower anchor seating positions are located in your vehicle.

There are 2 different methods for install. **Use only one:**

0R



Vehicle Belt up to 65 lb (29 kg)



LATCH: Lower Anchor Belt up to 40 lb (29 kg)

▲ WARNING:

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.

You **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.

1





Place Car Seat into Correct Position

For children **22-40 lb** (10.1-18 kg) and **29-43 in.** (73.6-110 cm), you **must** use **Position 2**.

For children **40-65 lb** (18.1-29 kg) and **43-49 in**. (110-125 cm), you **must** use **Position 1**.



3



Place Car Seat Forward-Facing in Back Seat

The vehicle seat back **MUST** be upright.



If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.



Locate Vehicle Top Tether Anchors

Review your vehicle owner's manual for top tether anchor locations and how to route the tether strap when there are vehicle headrests.



Lift Tether Adjuster to Loosen Tether Strap



Loosely Attach Tether Hook to Vehicle's Top Tether Anchor


7



Locate Forward-Facing Belt Path & Route Vehicle Belt or Lower Anchor Belt Through It

For the LATCH belt: You may need to fully lengthen the belt before routing it into the belt path. Squeeze the adjuster button and pull the belt out as shown.

The connector with the adjuster closest to it goes through the Forward-Facing Belt Path opening as shown.

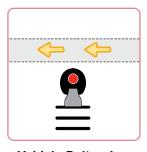

Vehicle Belt or Lower Anchor Belt Goes:

- under the car seat pad; AND
- across the car seat; **AND**
- out the other Forward-Facing Belt Path opening.

DO NOT twist the belt.





Finished Lower Anchor Belt Routing

The lower anchor belt adjuster **MUST** be on the child's left.



Buckle Vehicle Belt

If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 55 of this manual or your vehicle owner's manual.





Attach Lower Anchor Belt Connectors to Vehicle's Lower Anchors

On select models: Make sure the arrows on the connectors are facing up.

Fasten one lower anchor belt connector to the anchor located in the vehicle seat.

Repeat for other side of car seat.

continued on next page





Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

For the LATCH belt or Lap Only Vehicle Belt: it may be easier to tighten if you route the free end of the belt back into the Forward-Facing Belt Path, reach into the Forward-Facing Belt Path, and pull the free end of the belt towards you.



Tighten Tether

Push firmly on the back of the car seat and pull the free end of the tether strap to remove all of the slack. 11



Check Belt Tightness

Hold the Forward-Facing
Belt Path with your nondominant hand. Push and pull
from side to side.

The car seat should not move more than **1 in.** (2.5 cm).



If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat; **OR**
- Changing to a different seating location; OR
- Switching to a different install method (LATCH or vehicle belt).

FINISHED!





Lap/Shoulder Belt +









Lap Belt + Tether









- **Vehicle Belt Install:** Is the vehicle belt locked? See step 8.
- **LATCH: Lower Anchor Belt Install:** Are the connectors securely attached to the vehicle's lower anchors? See step 8.
- Is the belt tightened enough so the car seat does not move more than 1 in (2.5 cm) from side to side? Check the tightness of the install often to make sure it has not loosened. See steps 9 and 11.
- Has the tether been installed and tightened? See steps 5 and 10.

Securing Child in Car Seat

1



Place Child in Car Seat

Your child's bottom and back should be flat against the car seat.

2



Buckle Harness

Pull the harness straps up to make sure the buckle is locked.

3 4 5



Fasten Chest Clip

Insert right half of the chest clip into the left half and snap together.



Tighten Harness

Pull the harness adjustment strap straight out to snugly tighten the harness.



Position Chest Clip

Slide the chest clip up the harness straps and position it at mid-chest (even with armpits) and away from your child's neck.

6





Check Harness Tightness

Unfasten the harness covers.

Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

If you can pinch the harness strap, tighten more.

Fasten the harness covers.

A snug strap should not allow any slack.

It lies in a relatively straight line without sagging.

It does not press on the child's flesh or push the child's body into an unnatural position.

FINISHED!



Your child is now secured in the car seat.

Check your child's fit often and make any needed adjustments to the car seat as they grow.

To Remove Child from Car Seat:

- 1. Loosen Harness Strap
- 2. Unbuckle Harness
- 3. Release Chest Clip
- 4. Remove Child

Troubleshooting

1. If the buckle or harness release lever sticks: DO NOT lubricate. Check for dropped food, sticky spilled drinks, dirt, leaves, etc.

Clean with warm water and/or remove the object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, **DO NOT** use this car seat.

2. If your harness twists:

Straighten the harness each time you put your child in the car seat. Lock the buckle and tighten the harness so it will be ready for next use.

WARNING:

Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death.

DO NOT mistake comfort for safety. The harness system must be snugly adjusted.



DO NOT put snowsuits or bulky garments on your child when placing them in the child restraint.

Bulky clothing can prevent the harness straps from being tightened properly.

Changing Headrest/Harness Height

1

2

▲ WARNING:

The harness system

MUST be installed
correctly. DO NOT use
a child restraint with
damaged harness straps.



Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.



Changing Headrest/Harness Height

Squeeze the button on the headrest/harness adjustment handle.

Move the headrest up or down to the proper height for your child.

Make sure it locks securely.

38

Changing Buckle Position



Failure to place buckle's metal retainer completely through pad and child restraint can result in serious injury or death.

1



Unbuckle Harness


It may be easier to undo the buckle by pressing in towards the top of the button. 2



Fully Recline Car Seat

Pull the recline handle out and push the top of the car seat back.







From Top of Car Seat, Pull Buckle Out of Car Seat & Pad

For Rear-Facing Child Fit, see page 9.

For Forward-Facing Child Fit, see page 23.

continued on next page

Locate Buckle's **Metal Retainer**

Reach under the car seat between the base and car seat to reach the buckle's metal retainer.

6

7

8



Insert Buckle's Metal Retainer into Slot Closest to Child

The buckle **MUST** face out.



Pull Buckle's Metal Retainer Completely Through Pad & Car Seat




Pull the buckle up to make sure it is secured.

The buckle **MUST NOT** pull out.



To learn how to check harness tightness, see pages 34-37.

Reclining Car Seat

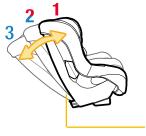

To Recline: Pull the recline handle out and push the top of the car seat back.

The recline handle is at the back of the car seat.




For More Upright: Pull the recline handle out and pull the top of the car seat forward.

This car seat has 3 positions.

Rear-Facing Mode

The level line on the side of car seat **MUST** be level with the ground using either **Position 3 or 2**.

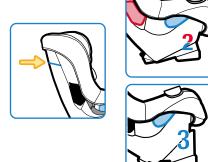

Forward-Facing Mode



For Children 22-40 lb (10.1-18 kg) and 29-43 in. (73.6-110 cm). You MUST use Position 2.



For Children 40-65 lb (18.1-29 kg) and 43-49 in. (110.1-125 cm). You MUST use Position 1.

Removing Seat Pad & Harness System



Only remove the harness system to clean the seat pad

To remove accessories, see pages 3-4.

WARNING:

The harness straps on this car seat are not replaceable.

DO NOT fully remove the harness straps from the car seat.

1



Unbuckle Harness

It may be easier to undo the buckle by pressing in towards the top of the button. 2



Fully Loosen Harness Straps


Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.

continued on next page

3 4 5



Adjust Headrest to Highest Position

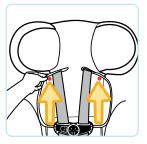

Undo Fasteners on Headrest Pad



Gently Pull Headrest Pad Off Bottom of Headrest As Shown

Remove the headrest pad from the headrest.



Undo Fasteners on Seat Pad



Lower Headrest to Lowest Position



8

Remove Seat Pad

Gently pull the pad off the outside edges of the car seat then around the headrest and on select models: the harness holders.

Pull the buckle through the slot in the seat pad.

Cleaning Parts of Car Seat

Cleaning Pad & Accessories

Machine wash separately with cold water on a gentle cycle. On select models: Make sure the harness covers are closed so the fastening strips are not exposed. **DO NOT** use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

Cleaning Harness Strap

Check the harness straps often for any wear or damage. Spot clean using warm sudsy water and damp cloth. Spilled food and liquids on the car seat may result in mold or bacterial growth over time. These spills could also attract insects or rodents.

Cleaning Buckle & Car Seat

Spot clean using warm sudsy water and damp cloth. **DO NOT** submerge into water.

A WARNING:

DO NOT use the child restraint without the seat pad or with damaged harness straps.

Installing Seat Pad & Harness System

1 2 3




Lay the pad in the car seat and slip it over and behind the headrest.

On select models: Gently slide the harness holders through the slots in the pad. Pull the buckle through the slot in the pad.






Pull Pad Over Outside Edges of Car Seat

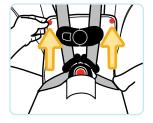


Attach Fasteners on Seat Pad

5

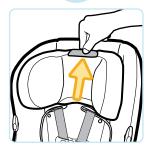

Adjust Headrest to Highest Position


6

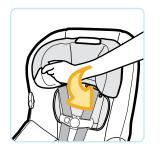

Starting At Bottom of Headrest, Pull Headrest Pad onto Headrest

Then pull the headrest pad gently over the airbags and around the top of the headrest.

7

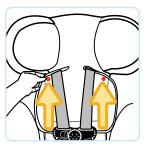

Attach Fasteners on Headrest Pad



If the harness straps have been removed from the splitter plate, and if the buckle tongues and chest clip have been unthreaded, follow the steps below to rethread them.



1. Rethread Buckle & Chest Clip


The harness strap ends go through the **back** of the buckle tongues & through the chest clip **front to back**.



2. Thread Harness Straps into Shoulder Harness Slots in Seat Pad & Car Seat



3. Attach Harness Strap Loops to Splitter Plate



The sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist the harness strap or the harness adjustment strap.

Make sure the harness strap loops are fitted completely on both sides of the splitter plate.


LATCH: Lower Anchor Belt




Your vehicle's features may be considerably different than those pictured here.

The lower anchors of **LATCH** (Lower Anchors and **T**ethers for **CH**ildren) is a universal system for installing car seats without using vehicle seat belts. The LATCH: lower anchor belt can **ONLY** be used in vehicles that have the lower anchor bars installed in designated seating positions. Most vehicles manufactured after September 2002 are equipped with LATCH: lower anchor bars. Check your vehicle owner's manual to see which seating positions may be equipped with LATCH: lower anchor bars.








Lower Anchor Belt Parts

To Remove Lower Anchor Belt from Storage Location on Car Seat

Press the red release button on each connector, then pull the connectors off of the storage attachments.



To Remove Lower Anchor Belt from Vehicle's Lower Anchor Bars

- **1.** Remove the tension from the belt by pushing down on the side of the car seat with the adjuster.
- **2.** Then press the adjuster's button to loosen the belt.
- **3.** Press the red release button on each connector, then pull the connectors out of the vehicle seat.



To Store Lower Anchor Belt

The lower anchor belt **MUST** be properly stored in its storage location when:

- using the vehicle belts to install the car seat; **OR**
- the car seat is not installed in a vehicle.

Thread the lower anchor belt through the **Rear-Facing Belt Path.**


Then attach the connectors to the storage attachments as shown.

Gently pull the free end of the belt to remove slack.

AWARNING:

DO NOT use both the lower anchor belt and vehicle belt at the same time.

Vehicle Belts

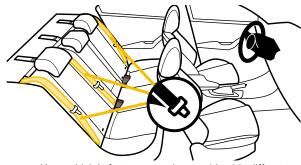

Your vehicle's features may be considerably different than those pictured here.

If LATCH: lower anchors are not an option or if your child weighs more than **40 lb** (18 kg), you must use the vehicle seat belt system to install the car seat.

Not all vehicle belts and seating positions will work with car seats. Please go through the following steps to understand how to lock a car seat in Rear-Facing Mode or Forward-Facing Mode with a vehicle belt.





You MUST Review Your Vehicle Owner's Manual

Your vehicle owner's manual will let you know which vehicle belts and seating positions car seats can be installed in.





The vehicle belt **MUST NOT** loosen after tightening.

This means there needs to be a way to lock the vehicle belt.

The ways this can be done are:

- By using the seat belt's retractor (see step 3); OR
- By using the seat belt's latch plate (see step 4).



Check Retractor

Retractors pull seat belts into stored positions and lock the belt to hold passengers in place.

See the next page for some common types of vehicle belt retractors that will work with this car seat.

Types of Retractors







Switchable Retractor

(most vehicles have this type)

This retractor can be switched to a locking mode.

You **MUST have the retractor in the locking mode** to use the seat belt with this car seat.

Switching to locking mode: Slowly pull the shoulder belt all the way out, then let it go back in **1-2 in.** (2.5-5 cm).

As it goes back in, you will most likely hear a ratcheting sound.

Gently pull the belt to see if it has locked. You will not be able to pull any more belt out if the lock has engaged.

Automatic Locking Retractor

This retractor always locks.

It will automatically lock after slowly pulling the seat belt out at least halfway and letting the belt go back into the retractor **1-2 in.** (2.5-5 cm).


Emergency Locking Retractor See Step 4 "Check Latch Plates"

If the retractor does not lock, it is most likely an Emergency Locking Retractor. These retractors only lock during a sudden stop or collision.

You will need to determine if your seat belt's latch plate can lock the belt. See step 4, "Check the Latch Plates".

4







Emergency Locking Retractor with a Sliding Latch Plate

Check Latch Plates

Latch plates are the part of the seat belt that goes into the buckle.

To see if the latch plate locks:

- 1. Buckle Vehicle Belt
- **2.** Firmly Tug Lap Portion of Seat Belt While Pulling It Up

If the vehicle belt does not slide through the latch plate, it's locked.

If the latch plate slides up and down the vehicle belt, it is a **sliding latch plate**.

Sliding latch plates easily slip between the lap and shoulder portions of the helt.

If you have an Emergency Locking Retractor with a Sliding Latch Plate, you must use a locking clip.

Please contact us for one, see the back cover of the manual or page 66.

Never Use the Following With This Car Seat:

- Emergency Locking Retractor Lap Only Belt
- Inflatable Seat Belts

Top Tether



Your vehicle's features may be considerably different than those pictured here.

You MUST always attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness. Tethers improve the installation and stability of car seats and reduce the risk of injury. Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information. If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed.

WARNING:

Using this child restraint without the tether strap anchored as required by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could result in serious injury or death.

DO NOT fasten multiple tether hooks on the same tether anchor in the vehicle.



Storing Top Tether Strap

The tether strap **MUST** be properly stored in its storage location when:

- installing in Rear-Facing Mode; OR
- the car seat is not installed in a vehicle.

Attach the tether hook to its storage location as shown. Gently tighten to remove slack.

Child Restraint Use

WARNING:

NEVER take your child out of the child restraint while the vehicle is moving.

NEVER leave your child unattended. Placing your child in a hot child restraint may result in burns.

DO NOT use a child restraint with damaged or missing parts.

DO NOT use a child restraint with cut, frayed, or damaged harnesses.

DO NOT substitute parts or try to modify the child restraint in any way. **DO NOT** lubricate buckles and fasteners.

DO NOT use any child restraint accessory except those approved by Dorel Juvenile Group.

NEVER allow any child to play with this child restraint; it is not a toy.

DO NOT remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. **DO NOT** use in a boat, on a motorcycle or in a cargo van or bus where there are no seat belts or tether anchors.

Read all instructions for additional warnings.

Vehicle Seating Position

AWARNING:



NEVER place a child rear-facing in a seating position with an active frontal air bag.

Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the child restraint only on vehicle seats that face forward.



DO NOT use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to accident statistics, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the car seat in your vehicle:

- Consult your vehicle owner's manual; **OR**
- Contact Dorel Juvenile Group Consumer Care Department; OR
- Visit your local Child Passenger Inspection Station. Go to https://www.nhtsa.gov/equipment/car-seats-andbooster-seats to find your closest station.

Installation in Vehicle

To avoid your child being seriously burned, take the following precautions:

- Park in the shade or where the sun does not directly hit the car seat.
- Cover the car seat with a sheet or blanket when not in use.
- Check for hot seat and buckles before placing child in car seat.

To help protect your vehicle seat's upholstery from damage: you may use an accessory approved by Dorel Juvenile Group or a single layer towel underneath and behind car seat.

WARNING:

Check the vehicle belt or lower anchor belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

In a crash or sudden stop, an unsecured child restraint could injure occupants.

Replacement & Expiration

DO NOT risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash; even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL of the following MUST be true:**

- Vehicle able to drive away from the crash site; AND
- Vehicle door nearest the car seat was not damaged;
 AND
- No passengers were injured; AND
- Airbags did not deploy; AND
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets ALL the

criteria, you may not need to replace the car seat. If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **MUST** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat **MUST** be replaced immediately.

Expiration



On the side of the car seat there is a date of manufacture label as shown.

DO NOT use this car seat more than 10 years after the date of manufacture.

Registration & Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us.

Child restraints could be recalled for safety reasons.

You must register this restraint to be reached in a recall.

Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group

2525 State Street Columbus, IN 47201

or call 1-800-951-4113 or register online at https://www.maxicosi.com/us-en/registration/.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to www.NHTSA.gov.



Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the car seat

Aircraft Information

This restraint is certified for aircraft use.



Rear-Facing Aircraft Installation

Follow the steps on pages 11-17.



Forward-Facing Aircraft Installation

Follow the steps on pages 25-33, skipping the tether strap steps.

Install the car seat in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward-facing aircraft seats. Contact the airline for their specific policies.



Some airlines may ask to see a label stating that this car seat is certified for aircraft use.

There is an airplane certification label located on the side of this car seat as shown.

WARNING:

You **MUST** store the lower anchor belt and tether strap when installing with aircraft belts.

Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase.

An original receipt is required to validate your warranty.

DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-951-4113 or text: 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights: Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty.

Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

64

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

Please note: Our product warranty only applies when purchased from an authorized Maxi-Cosi retailer. The origin of products not purchased through these authorized retailers is unknown and could be counterfeit.

We cannot support products from an unknown origin as we cannot verify the handling or condition of such merchandise. We maintain a strong network of authorized retailers to ensure you are purchasing safe and complete products.

Fulfillment by a third party does not guarantee you are purchasing from one of these authorized retailers. Pricing which is inconsistent with the majority of retailers

is a strong indication that the retailer is not authorized, as we have a consistent price offering across all authorized retailers.

If you are unsure of the authorization status of a retailer you are considering purchasing from, or have purchased from, you can check www.maxicosi.com/us-en/find-a-retailer; or call our Consumer Care Department at 1-800-951-4113; or text us at 1-812-652-2525.

Replacement Parts List

(on select models)

- Buckle Assembly
- Removable Cup Holder (on select models)
- Chest Clip
- Harness Strap



Send Us a Text:

1-812-652-2525 (US and Canada Only Carrier Fees May Apply) Seat Pad Set

- Lower Anchor Belt
- Top Tether
- Locking Clip
- Instructions

Find Us Online:

www.maxicosi.com

Email Us:

support@djgusa.com

For parts availability and questions, call, text, or chat.

If requested color is not available, similar color will be substituted.

Applicable tax and shipping & handling will also be added.

Give Us a Call:

1-800-951-4113

(Toll Free US and Canada Only)





Send Us a Text: 1-812-652-2525 (US and Canada Only. Carrier Fees May Apply)



Find Us Online: www.maxicosi.com Email Us: support@djgusa.com



Give Us a Call: 1-800-951-4113 (Toll Free, US and Canada Only)