




RA-650

HEPA AIR SCRUBBER

Unit Assembly

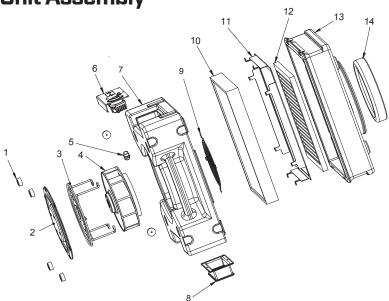

	Description	Part Number	Ougatitu
1	Description		Quantity
1	Rubber Feet	RP-01	
2	Motor Cover	RP-02	
3	Motor Mounting Bracket	RP-03	
4	Motor 115V/60Hz	RP-04	1
4-1	Motor 220V/50Hz	RP-04-1	1
5	Cord Lock	RP-05	1
6	Switch Cover	RP-06	1
6-1	Variable Speed Switch	RP-07	1
6-2	GFCI	GFI-02	1
6-3	Circuit Breaker	RP-08	1
6-4	Timer	CM-30	1
7	Main Housing	RP-9-C	1
8	Exhaust Flange	RP-10	1
9	Intake Grill	RP-11	1
10	HEPA Filter	AR-1-HP	1
11	Filter Securement Bracket	RP-12	1
12	Pre-Filter	AR-2-FP	1
13	Housing Lid	RP-13-C	1
14	Intake Plug	RP-14	1
15	Optional Carbon Filter	AR-C-FP	1

LIMITED MANUFACTURER'S WARRANTY

Intertex, LLC warrants that this product sold to the original user (the "User") shall be free from defects in material and workmanship as follows:

This limited warranty shall extend for deux (2) year for the entire Product and five (5) years on the Product housing. At the sole discretion of the manufacturer, the limited warranty may include replacement parts, labor for repair or replacement of the Product.

The User shall provide proof of purchase to establish coverage under this limited warranty.

This limited warranty shall not cover:

- 1. Useful filter life and replacement filters.
- 2. Damage due to failure to perform normal maintenance as outlined in the Instruction Manual.
- 3. Failures of the Product due to voltage conditions, blown fuses, open circuit breakers, or any other damages due to the inadequacy or interruption of electrical services.
 - 4. Damage due to consumer misuse or failure to follow instructions or warnings, including but not limited to unauthorized alteration, improper servicing or operation outside the voltage and frequency limitations as stated
 - 5. Damage due to flooding, fires, lightning, freezing of residual water, corrosive environment, or other conditions.
 - 6. Damage due to use of replacement parts not supplied by the manufacturer.
 - 7. Shipping damage.

Further, the manufacturer does not warrant that the Product is merchantable or fit for any particular purpose. All other warranties, guaranties, or representations, express or implied, by operation of law or otherwise, are expressly disclaimed.

Returned Product for limited warranty service which is found by the manufacturer to be free from defect and to conform to specifications shall be held for a reasonable period of time (as determined in the sole discretion of the manufacturer) for the User's shipping instructions and payment.

The manufacturer shall not be liable under any circumstances for special, contingent, incidental or consequential damages, losses, damages, or expenses directly or indirectly arising from the use of the Product, including without limitation, warehousing, labor, handling and service charges, die, equipment, or machine breakage, lost profits or loss of good will.

Any replacement parts supplied under this limited warranty will be warranted for the balance of the Product's limited warranty.

For warranty information and assistance contact customer service at 877.800.2247 or email support@b-air.com





550 S. Ayon Avenue Azusa, California 91702

Local: 626.385.3300 Fax: 626.385.3307


877.800.BAIR **WATER DAMAGE RESTORATION DIVISION**



HEPA AIR SCRUBBER

(



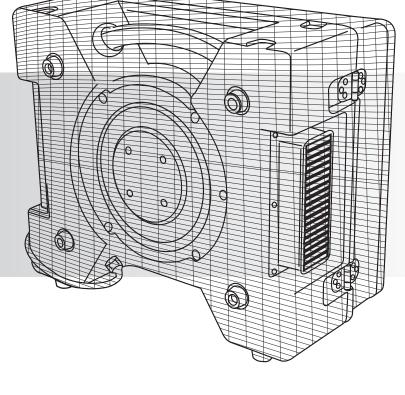

















RA-650 **HEPA AIR SCRUBBER**

Read all warnings and instructions before using this unit.

The B-Air® Ra- 650 HEPA Air Scrubber is a portable filtration system that removes airborne particles including mold, pet dander, dust, pollen, drywall dust, and other miscellaneous debris as small as 0.3 microns. The Ra-650 utilizes up to 3 stages of filtration including a pre-filter, optional 2nd stage, and a HEPA filter. The Ra-650 will create cleaner air in any environment. The pre-filter and second stage filter capture larger particles and the HEPA filter captures smaller particles.

Warnings! /

- Do not move or carry the Ra-650 while it is operating. When the Ra-650 is operating, the powerful airflow can cause unpredictable movement.
- NEVER allow children to play with or around the Ra-650.
- Do not alter or modify your Ra-650 in any way. Use only replacement parts authorized by BlueDri®. Modifications or use of unauthorized parts could create a hazard and will void
- Store the Ra-650 in a clean, dry environment. Do not store outdoors or allow water inside the unit's motor. If the motor becomes wet, allow it to thoroughly dry before use.
- The Ra-650 should never be operated near water as it will create a risk of serious injury from electrical shock. Handle unit with care to avoid causing damage or injury.
- The Ra-650 s hould always be operated on a flat surface. Do not operate where unit could fall, or on slippery surfaces, as this could increase the chance of injury, fire, or electrical
- Keep all liquids from being drawn into the Ra-650 and never operate unit without factory installed safety inlet and outlet
- Do not use the Ra-650 near combustible gas, or hot air as unit could melt and cause a fire or electrical hazard.
- Do not take the Ra-650 apart or repair it unless you are qualified to do so. Never repair or service unit while Ra- 650 is plugged in.
- Make sure the air intake and outlet are free from all materials and away from obstructions, as any restrictions may cause the Ra-650 to overheat and cause a shock or fire hazard.
- Unplug the Ra-650 before performing any service or changing filters.
- Do not stack more than 2 units high in order to avoid a tipping hazard - falling equipment can cause bodily harm.
- To reduce the risk of fire or electric shock, Do not use this fan with any solid-state speed control device.

WARNING!

To reduce the risk of fire, electric shock, or injury to persons, do Specifications are subject to change without notice. not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

Operation

- 1) Place the Ra-650 upright on a level and stable surface with the handle up.
- 2) Remove the dust cover.
- 3) Plug the Ra-650 into a grounded 115 volt grounded outlet with the correct voltage and amperage. For maximum protection against electrical shock, ALWAYS use a circuit that is protected by a ground fault circuit interrupter. If you are unsure about the outlet, check with a qualified electrician or service person. Do not use an adapter or extension cord.
- 4) To switch the unit on, locate the control panel and turn the variable speed switch clockwise to the desired speed setting.
- 5) Operate unit until area is clear of unwanted contaminates or until filters need to be changed. The control panel has a filter change light which illuminates when the HEPA filter needs to be changed. See section on changing filters for instructions.

Auxiliary/GFCI Outlet/Daisy Chain

You can interconnect ("daisy-chain") up to three Ra-650's to customize your air filtration needs. The GFCI will "trip" if it detects a sudden "ground fault," or overload and interrupt the electric current. When the GFCI "trips," unplug the unit and look for potential hazards such as standing water, frayed cords, or anything that would cause a dangerous electrical problem. If such a situation exists, plug the Ra-650 into a different outlet and then push the "reset" button which is located between the 2 outlets on the GFCI. If the unit will not operate check the circuit breaker section below.

Unit Specifications

Certifications	C-ETL-US
Motor Rating	.33 hp
Power	115 Volts, 60 Hz
Current	2.5 amps
CFM	250-500
Pre-Filter	G4
Prime-Filter	H13 (Made in Germany)

Circuit Breaker Switch

The Ra-650 is equipped with a circuit breaker switch to protect the Ra-650. The switch is located directly above the GFCI outlet and cuts off power to the unit when it detects an unsafe amount of electricity passing through the unit. If the switch "trips," unplug the unit and look for potential hazards or anything that may be creating an overload situation. "Reset" breaker by pushing button in and continue normal operation.

Changing Filters

Warning! Contaminated Hazard



Always wear NIOSH compliant protective gear when changing filters and dispose of used filters according to your local regulations.

Filters should be changed after every remediation job and whenever the filter change indicator light comes on. The unit should also be cleaned after each job to prevent cross-contamination.

Make sure the unit is dry before installing clean filters.

To change filters:


- 1) Unplug the Ra-650
- 2) Open door by releasing sliding latches outward, away from the
- 3) Remove used filters and install new filters.
- 4) Latch door closed and plug the unit in a grounded outlet before operating.

Warning! /!

For the safe operation of this machine follow the instructions given in this booklet and the training provided. Failure to do so can result in personal injury and/or damage to machine and property!

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

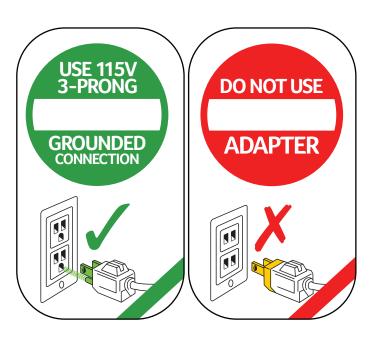

Troubleshooting

Problem	Possible Cause/Solution
Ra-650 does not turn on	 Switch not turned on-turn Circuit breaker or GFCI has tripped-push rest button No power to scrubber-make sure unit is plugged in; check power supply Faulty switch-replace
Ra-650 starts and then shuts off	Obstructed inlet/outlet – remove obstruction Faulty motor - replace
Ra-650 vibrates	 Motor shaft is bent – replace motor Fan blade is bent – replace Excessive dirt built up on fan blade – clean by wiping with a slightly damp cloth.
Ra-650 change light illuminated	HEPA filter needs replacement - replace Air intake restricted – remove restriction or bends/kinks in ducting
Motor makes noises, but Ra-650 won't turn on	 Damaged/faulty motor or motor shaft – replace Broken/loose wire to capacitor – tighten Damaged/faulty capacitor – replace Damaged housing/fan so fan will not spin – replace housing or fan wheel Motor shaft set screw holding fan wheel is loose - tighten

B-AIR.COM | 877.800.BAIR | WATER DAMAGE RESTORATION DIVISION









