



WARNING: Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child.

Overview

Welcome to the Maxi-Cosi family and thank you for choosing this car seat, also known as a child restraint! To help you get started using your child's new car seat, here are the 3 main tasks you'll need to complete.



Measure Your Child



Place Booster Seat into Your Vehicle



Buckle Up!

Your child's safety is worth the time it will take to read and follow these instructions.

Ready? Let's go!

Pages 1-2 will introduce you to the parts of the car seat.

Page 27 has our contact information. If at any point you would like assistance, please feel free to reach out to us.

Quick Navigation


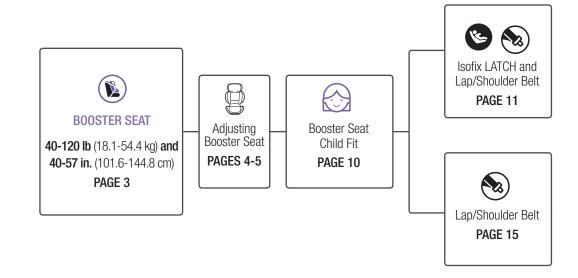


Table of Contents

Getting Started	Car Seat Pad Use and Care
Parts of the Booster Seat	Removing Seat Pad Set for Cleaning18
Booster Seat Requirements2	Safety Information
Making Adjustments to Booster Seat	Replacement and Expiration of Car Seat 20
Adjusting Headrest Height and Side Wings4	Aircraft Information21
Reclining the Booster Seat5	Child Restraint Use21
Vehicle Belts and Isofix LATCH 6	Installation in Vehicle21
	Vehicle Seating Position22
Installation in Vehicle	Registration and Safety Notices23
Booster Seat 8	Additional Information
Booster Seat Child Fit10	Warranty24
Isofix LATCH and Lap/Shoulder Belt Use11	Replacement Parts List
Lap/Shoulder Belt Use15	Dorel Juvenile Group Information27

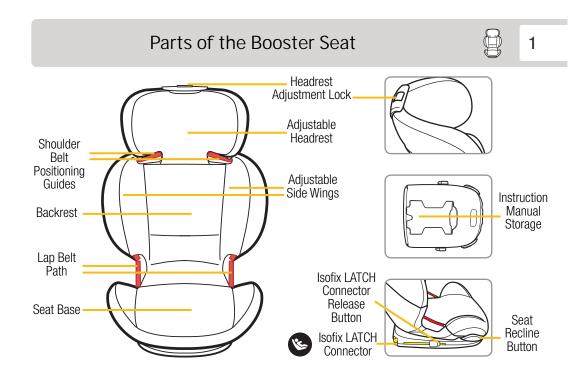

Booster Seat Requirements

⚠ WARNING

Measure your child's weight and height (do not guess) before using this booster seat.

Your child's height, weight, and age determine how a car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—please consult your doctor before switching between any types or modes of a car seat within the limits and fit requirements of the seat.

State Laws

Please be certain to follow your state's laws regarding car seat use.

American Academy of Pediatrics Recommendations

Infants and Toddlers

Should ride in a rear-facing car seat as long as possible, until they reach the highest weight or height allowed by their seat.

Toddlers and Preschoolers

Once they are facing-forward, children should use a forward-facing car seat with a harness for as long as possible, until they reach the height and weight limits for their seats.

School-Aged Children

Once they have outgrown their forward-facing car seat, children should use a belt-positioning booster seat until the vehicle's lap and shoulder seat belt fits properly. This is often when they have reached at least 4 feet 9 inches in height and are 8 to 12 years old.

Older Children

All children younger than 13 years should be restrained in the rear seats of vehicles for optimal protection.



BOOSTER SEAT

40-120 lb (18.1-54.4 kg) **and 40-57 in.** (101.6-144.8 cm)

Your child can remain in this Booster Seat until they outgrow any one of the following:

■ Weight Limit: 120 lb (54.4 kg); **OR**

■ **Height Limit:** 57 in. (144.8 cm); **OR**

■ Booster Seat child fit requirements. See page 10.

Adjusting Headrest Height and Side Wings

The headrest and side wings have multiple positions.

Adjusting Headrest



Press Headrest Adjustment Button to Raise or Lower Headrest.

Adjusting Side Wings



Hold Side Wings and Push Them Out into Another Position.

You Will Hear a "Click" When They are Locked into Place.

Reclining the Booster Seat



5

The reclined positions are to be used only to install the booster seat flush against the vehicle seat back. Vehicle seat back must be upright.



To Recline Entire Seat:

Squeeze the recline buttons and pull out on the booster seat.




Squeeze the recline buttons and push the seat upright.




To Recline Only the Seat Back:

Grab the top of the seat back and pull back.

You will hear a "click" when you change positions.



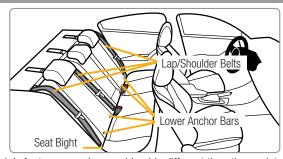

Your vehicle's features may be considerably different than those pictured here.

Not all vehicle belts and seating positions will work with child restraints.

Most vehicles manufactured after September 2002 are equipped with LATCH.

The lower anchors of LATCH (Lower Anchors and Tethers for CHildren) is a universal system for installing child restraints. This Isofix LATCH system can only be used in vehicles that have the LATCH anchor bars installed and designated LATCH seating positions. This Isofix LATCH system cannot be used with raised LATCH anchors in the vehicle seat back.

WARNING: When used correctly the Isofix LATCH or vehicle belts are equally safe.









You must review your vehicle owner's manual.

It will let you know which vehicle belts and seating positions child restraints can be installed in and which seating positions may be equipped with LATCH: lower anchor bars.



40-120 lb (18.1-54.4 kg) and **40-57 in.** (101.6-144.8 cm)



Isofix LATCH + Lap/Shoulder Belt





Keep booster seat secured with the Isofix LATCH or vehicle belt when not in use.

WARNINGS:







Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

Do not use only the lap belt when using this booster seat.

The shoulder belt must always be adjusted snugly across the child's chest. NEVER place shoulder belt under the child's arms or behind their back.



9

MARNINGS:



Do not use this booster seat if the tops of your child's ears are above the top of the booster seat's headrest.

Do not use this booster seat if the tops of your child's ears are above the top of the vehicle's seat back or vehicle's headrest.



Do not use the LATCH system if the seat belt or seat belt buckle is not easily accessible with the booster seat secured to the anchors.

Do not use the LATCH system if the seat belt or seat belt buckle is between the LATCH anchors.





Failure to follow these warnings can result in serious injury or death.





Head Position

Tops of the child's ears should never be above the top of the booster seat's headrest.




Tops of child's ears below the top of your vehicle's seat back or vehicle's headrest.

Adjust headrest if needed, see page 4.



Shoulder Belt Position

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck.




Lap Belt Position

The lap belt should lay snugly across the child's hips and not on their stomach.

Extend Isofix LATCH Connectors



Isofix LATCH and Lap/Shoulder Belt Use






Place Booster Seat Forward Facing in Vehicle

Vehicle seat back must be upright.

The back of the booster seat should be flat against the vehicle seat back.



your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations.





Align the Isofix LATCH Connectors with the Vehicle's **Anchor Bars**

Attach the connectors to the anchor bars. You may need to push down on the seat to align.




Push the Booster Seat Back Against the Vehicle Šeat

Make sure the seat is connected to the anchor bars.



Have Child Sit in **Booster Seat**

Child should sit with their back flat against the vehicle seat and their bottom flat against the seat base.



Position Lap Belt on Child

Route the lap belt portion of vehicle belt through the lap belt path as shown.

The lap belt should lay snugly across the child's upper thighs and not on the stomach.





Buckle the Vehicle Belt

Pull up on lap belt to tighten.



Only use the shoulder belt-positioning guide in the headrest if necessary to help position the shoulder belt correctly on the child.



Position Shoulder Belt on Child


Pull up on shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's

shoulder and across the chest and not on their face or neck.


Finished!

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.

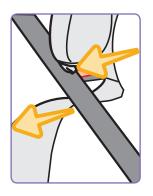

To Remove Shoulder Belt From Shoulder Belt Guide

Push the silver belt guide lock up and pull the vehicle shoulder belt out.

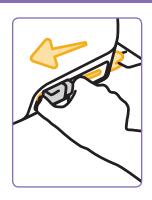


To Remove Isofix LATCH **Connector From Vehicle** Anchor

Press the button in and slide the Isofix LATCH connector back into the shell.

Lap/Shoulder Belt Use






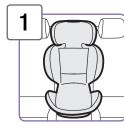

Place Booster Seat Forward Facing in Vehicle

Vehicle seat back must be upright.

The back of the booster seat should be flat against the vehicle seat




adjusted, or if there are other possible seating locations.



Have Child Sit in **Booster Seat**

Child should sit with their back flat against the vehicle seat and their bottom flat against the seat base.



Position Lap Belt on Child

Route the lap belt portion of vehicle belt through the lap belt path as shown.

The lap belt should lay snugly across the child's upper thighs and not on the stomach.





Buckle the Vehicle Belt

Pull up on lap belt to tighten.



Only use the shoulder belt-positioning guide in the headrest if necessary to help position the shoulder belt correctly on the child.



Position Shoulder Belt on Child

Pull up on shoulder belt to tighten.


The shoulder belt should lay snugly across the center of the child's

shoulder and across the chest and not on their face or neck.



Finished!

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.

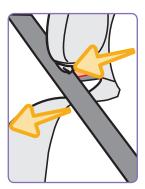

To Remove Shoulder Belt From Shoulder Belt Guide

Push the silver belt guide lock up and pull the vehicle shoulder belt out.

Removing Seat Pad Set for Cleaning




From the Back of the Seat, Undo the Fastening Strip



Pull Backrest Pad Off of the Backrest




Unhook the Elastic Strap

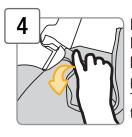

Pull Seat Pad Out From Behind Tab at Lap Belt Path

Repeat for other side. Then pull the pad off of the seat.



Gently Pull Headrest Pad Off of the Headrest

WARNINGS: Do not use booster seat without the seat pad. Failure to do this can result in serious injury or death.

Cleaning Pad

Machine wash all pieces separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

Replacing Pad

Replace pad by reversing order.

Starting with the headrest, slip pad over the headrest. Slip the pad over the bottom base and tuck it behind the tabs at lap belt path. Slip the pad onto the backrest. Tuck outer edge of pad behind the shell. On the back of the backrest, attach the elastic strap and refasten the fastening strip.

Do not risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash; even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL of the following must be true:**

- Vehicle able to drive away from the crash site; AND
- Vehicle door nearest the car seat was not damaged; AND
- No passengers were injured; AND
- Airbags did not deploy; AND
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **must** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat must be replaced immediately.

Expiration



On the side of the child restraint there is a date of manufacture label as shown.

Do not use this child restraint more than 10 years after the date of manufacture.

Aircraft Information



21



This restraint is not certified for aircraft use because aircraft seats do not have shoulder belts.

Child Restraint Use

Never take your child out of the child restraint while the vehicle is moving.

Never leave child unattended. Placing your child in a hot child restraint may result in burns.

Do not use a child restraint with damaged or missing parts.

Do not substitute parts or try to modify the child restraint in any way.

Do not use any child restraint accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this child restraint; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. Do not use in a boat, on a motorcycle or in a cargo van or bus where there are no seat belts.

Read all instructions for additional warnings.

Installation in Vehicle

Check the vehicle belt before each use. Use only if the belt can be tightened properly and securely.

This child restraint should be secured in the vehicle by the Isofix LATCH or with the vehicle belt even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

! Vehicle Seating Position

Check the vehicle owner's manual for more information about air bag/child restraint use.

Use the child restraint only on vehicle seats that face forward.



Do not use on seats that face the sides or rear of the vehicle.



For vehicles without a back seat, refer to your vehicle owner's manual.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to accident statistics, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the child restraint in your vehicle: consult your vehicle owner's manual, contact Dorel Juvenile Group Consumer Care Department or visit your local Child Passenger Inspection Station. Go to http://www.safercar.gov/cpsApp/cps/index. htm to find your closest station.

To avoid your child being seriously burned, take the following precautions:

- 1. Park in the shade or where sun does not directly hit the child restraint.
- 2. Cover the child restraint with a sheet or blanket when not in use.
- 3. Check for hot seat and buckles before placing child in child restraint.

To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind child restraint.

Registration and Safety Notices



Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address. email address if available, the restraint's model number, and manufacturing date to:


Dorel Juvenile Group, Inc. **Consumer Care Department**

PO Box 2609

Columbus, IN 47202-2609

or call 1-800-951-4113 or register online at www. digusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1–888–327–4236 (TTY: 1-800-424-9153), or go to http://www.NHTSA. gov.

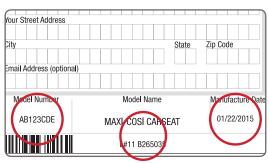

Example of model number, line code, and manufacture date.



If you don't have the card or if vour address changes, vou will find the model number, manufacture date, and line code on the label located on side of seat.

Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. An original receipt is required to validate your warranty. DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-951-4113 or text: 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a

particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

Please note: Our product warranty only applies when purchased from an authorized Maxi-Cosi retailer. The origin of products not purchased through these authorized retailers is unknown and could be counterfeit. We cannot support products from an unknown origin as we cannot verify the

handling or condition of such merchandise. We maintain a strong network of authorized retailers to ensure you are purchasing safe and complete products. Fulfillment by a third party does not guarantee you are purchasing from one of these authorized retailers. Pricing which is inconsistent with the majority of retailers is a strong indication that the retailer is not authorized, as we have a consistent price offering across all authorized retailers. If you are unsure of the authorization status of a retailer you are considering purchasing from, or have purchased from, you can check maxi-cosi.com or call our Consumer Relations department at 1-800-951-4113.

26

Replacement Parts List

If requested color is not available, similar color will be substituted. Prices are subject to change. Applicable tax and shipping & handling will also be added.

<u>Part</u>	Cost
Seat Pad Set	\$45.00
Instructions	\$0.00

For parts availability and questions, please call: 1-800-951-4113 or text: 1-812-652-2525.

Hours of Operation:

M-TH from 8:00 AM to 6:00 PM EST FRI from 8:00 AM to 4:30 PM EST

If you already know which parts you need, you may complete your order with a credit card by calling us at 1-800-951-4113. See list above for available parts. We accept Visa or MasterCard.

Dorel Juvenile Group Information

27

Thank you for choosing this child restraint. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

If you still have questions or have any concerns with this child restraint, please contact our Consumer Care Department:

Call: 1-800-951-4113

Text: 1-812-652-2525

Website: www.maxi-cosi.com

Hours of Operation:

M-TH from 8:00 AM to 6:00 PM EST FRI from 8:00 AM to 4:30 PM EST