


WOODPLAY®

Playsets

S U P E R S L I D E

Assembly Instructions

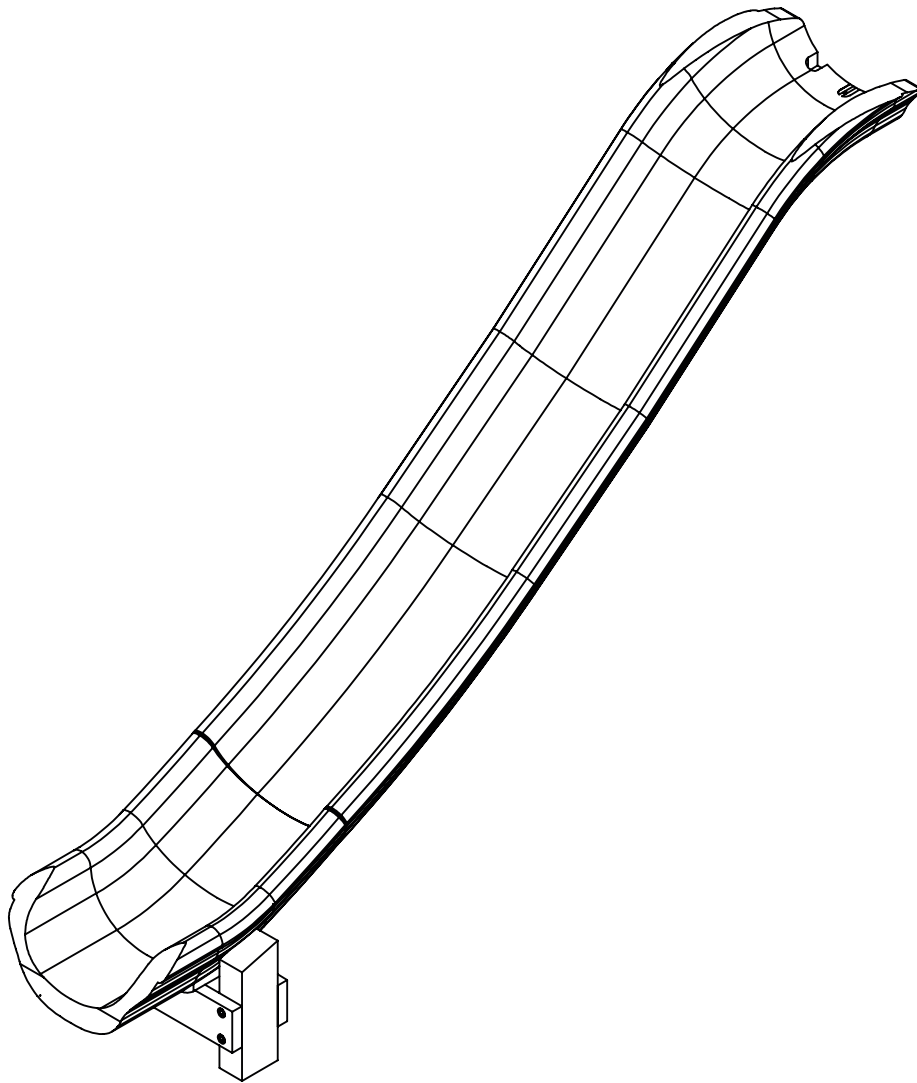


PA-MAN-SPR-03


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
01	RW-2X6-026-SB	25 1/2" SLIDE CROSSBRACE	2
02	RW-4X6-016-SB	16" SUPER SLIDE BASE UPRIGHT	2
03	HW-WSH-3/8-STD	3/8" FLAT WASHER	16
04	HW-HLS-3/8-3	3/8" X 3" LAG SCREW	8
05	SEE TABLE	SUPER SLIDE	1
06	FOOT PLATE-KT-SLG-SPR-12	FOOT PLATE	1
07	HW-FPH-10-2_1_2	#10X2-1/2 PH FLAT HD WDSCR	10
08	HW-MB-3/8-1	3/8-16 X 1" MACHINE BOLT	4
09	RW-4X6-006-FIL	4 5/8" SUPER SLIDE FILLER	2
10	HW-HLS-3/8-5-1/2	3/8" X 5-1/2" LAG SCREW	2
11	HW-HLS-3/8-4	3/8" X 4" LAG SCREW	2
12	RW-4X4-025-FIL-B	25" LADDER FILLER - OFFSET HOLES	1

SUPER SLIDE TABLE	
ITEM	DESCRIPTION
PL-SLG-10-SPR	10' GREEN SUPER SLIDE
PL-SLY-10-SPR	10' YELLOW SUPER SLIDE
PL-SLG-12-SPR	12' GREEN SUPER SLIDE
PL-SLY-12-SPR	12' YELLOW SUPER SLIDE
PL-SLG-14-SPR	14' GREEN SUPER SLIDE
PL-SLY-14-SPR	14' YELLOW SUPER SLIDE


Slide size / color varies depending on options chosen.

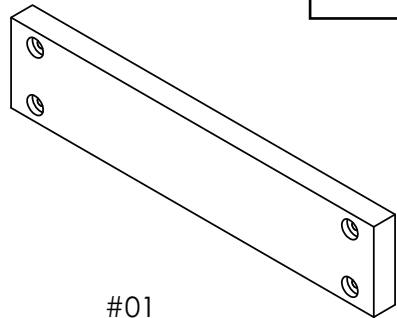


#01
25 1/2" SLIDE CROSSBRACE
RW-2X6-026-SB
(2)

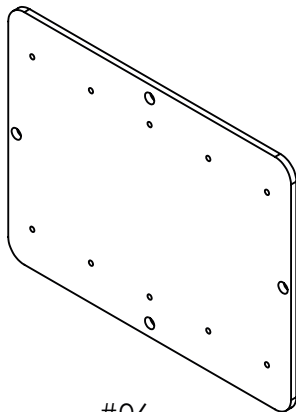


#06
FOOT PLATE
FOOT PLATE-KT-SLG-SPR-12
(1)

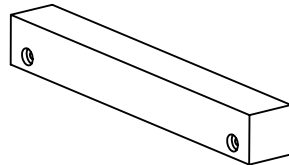

#12
25" LADDER FILLER - OFFSET HOLES
RW-4X4-025-FIL-B
(1)




#02
16" SUPER SLIDE BASE UPRIGHT
RW-4X6-016-SB
(2)

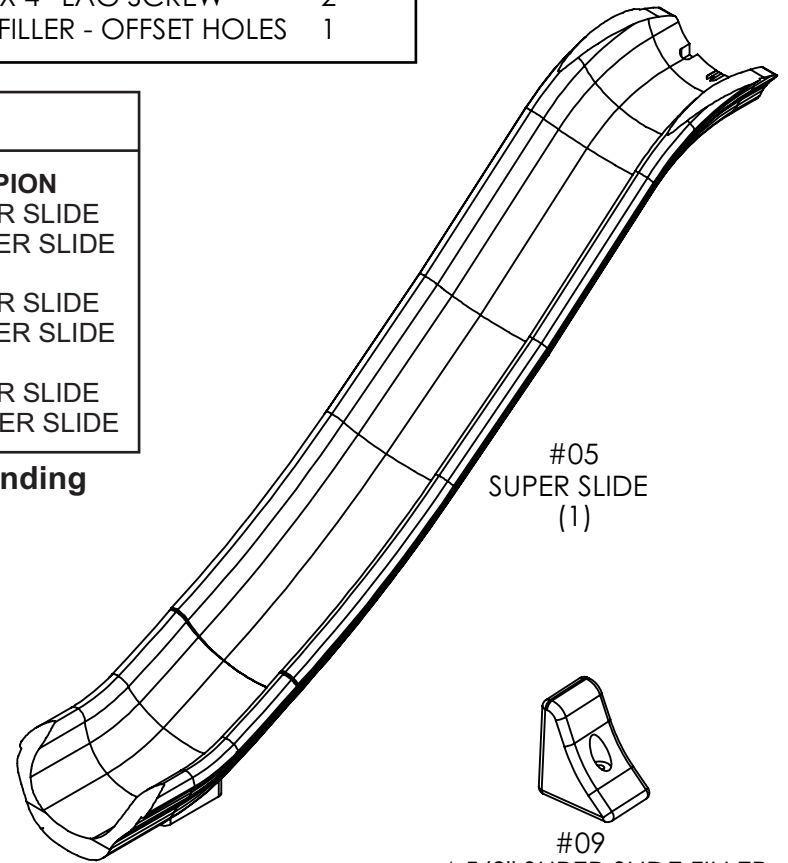

#05
SUPER SLIDE
(1)



#09
4 5/8" SUPER SLIDE FILLER
RW-4X6-006-FIL
(2)

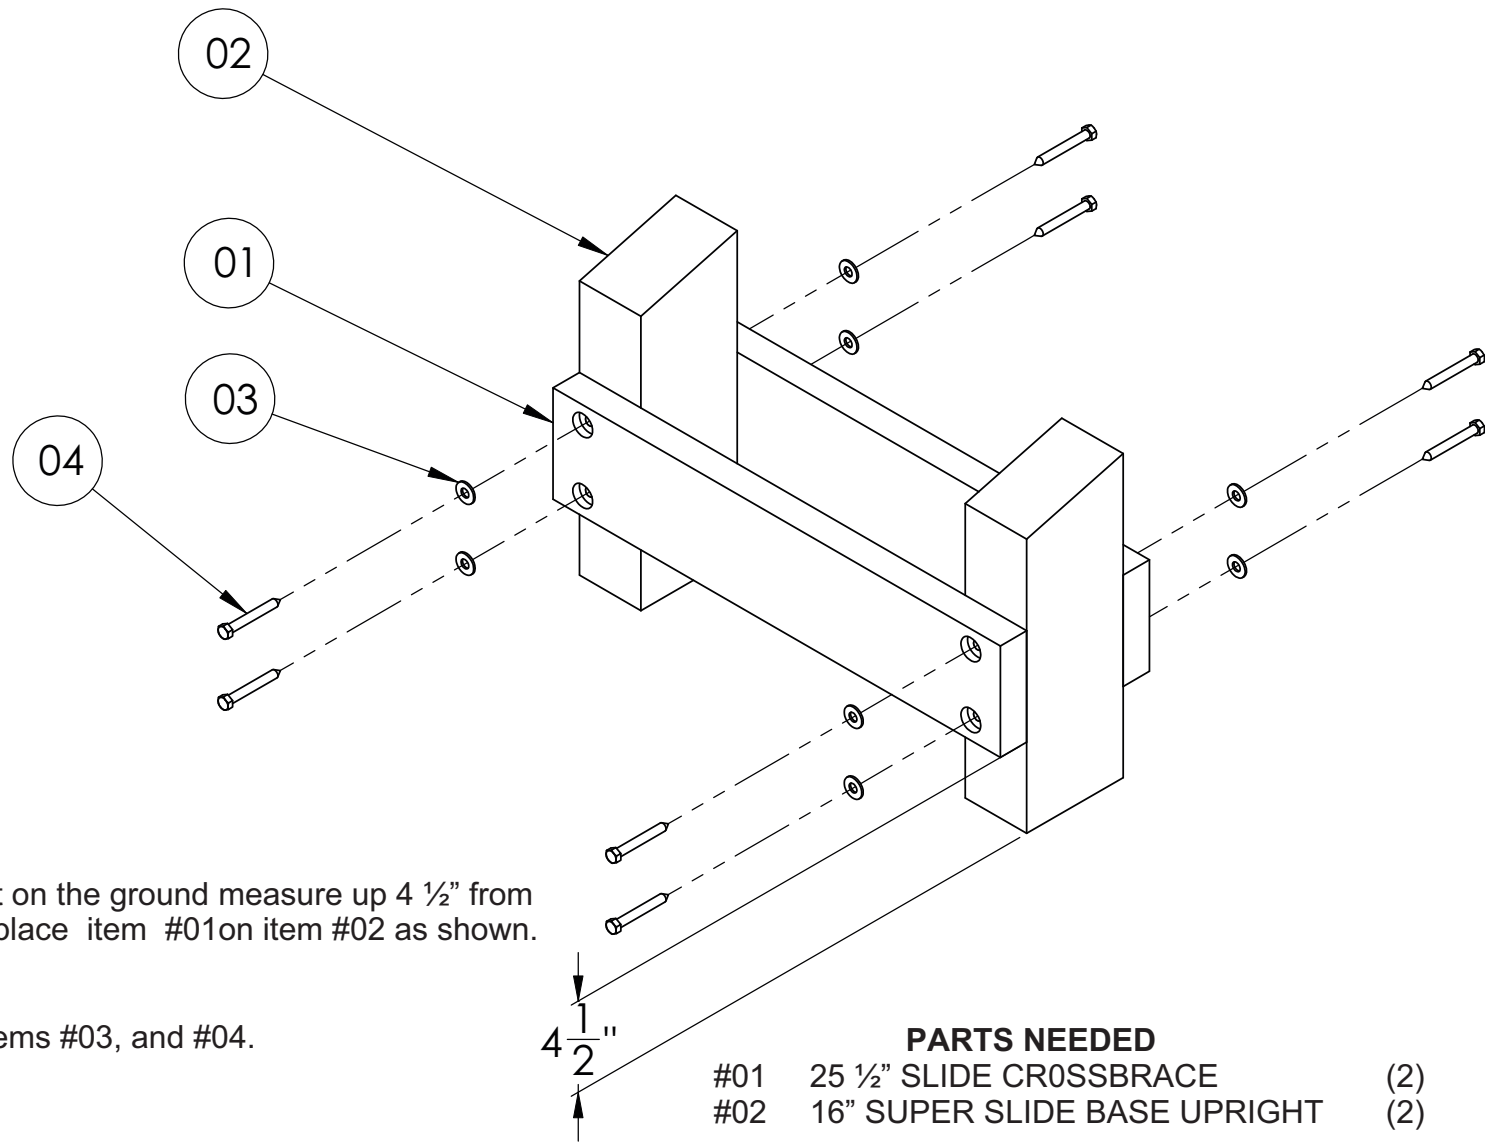

1. With items #02 laying flat on the ground measure up 4 ½" from the bottom of item #02, place item #01 on item #02 as shown. **(BOTH SIDES)**

2. Attach using hardware items #03, and #04.

PARTS NEEDED

#01	25 ½" SLIDE CROSSBRACE	(2)
#02	16" SUPER SLIDE BASE UPRIGHT	(2)

HARDWARE NEEDED


#03	3/8" FLAT WASHER	
(8)		
#04	3/8" X 3" LAG SCREW	(8)

PARTS NEEDED

#06 FOOT PLATE (1)

HARDWARE NEEDED


#07 #10 X 2-1/2" PH FLAT HD WDSCR (10)

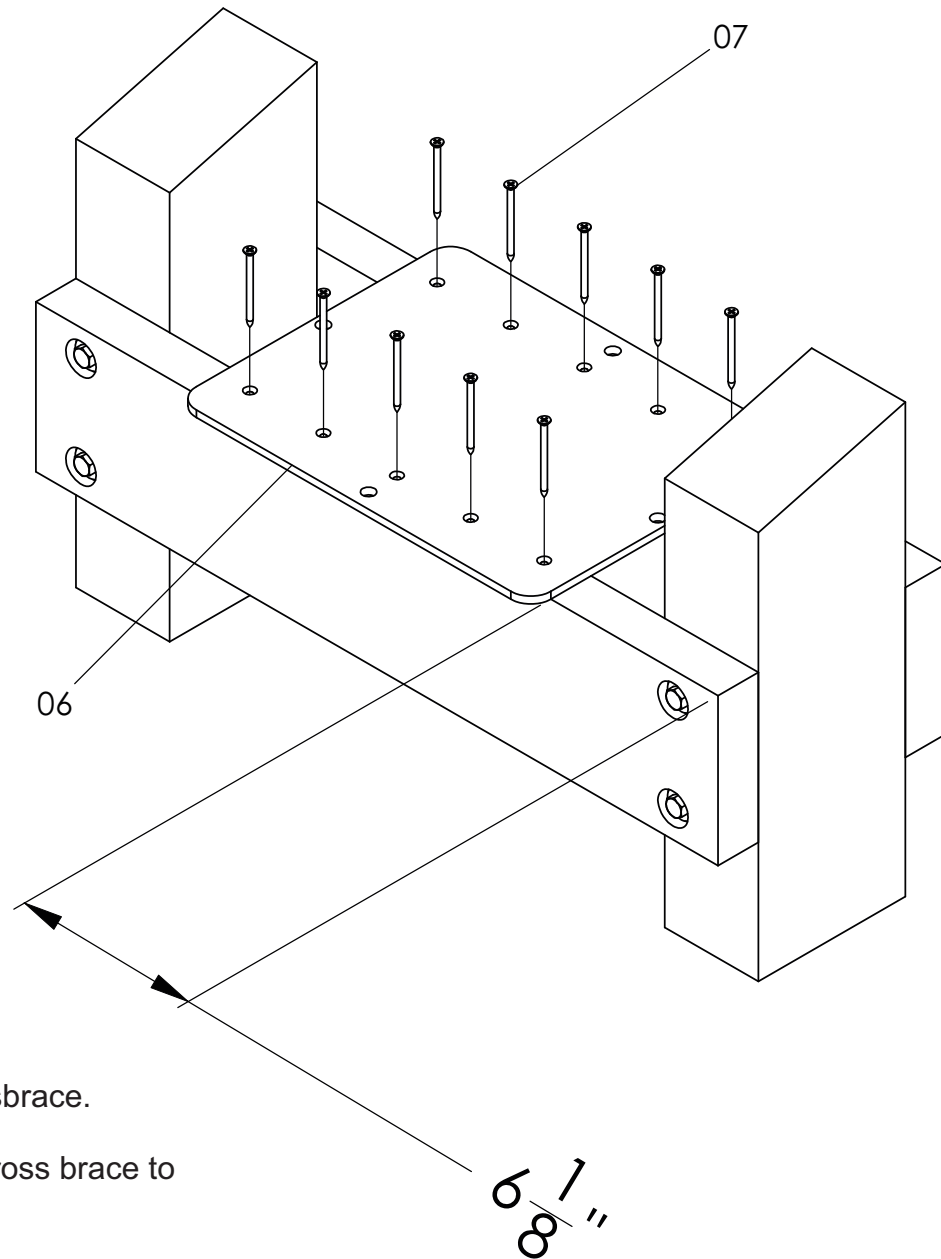


1. Center thru holes for item #07 on Slide Base Crossbrace.

2. Measure 6 1/8" from outside edge of Slide Base Cross brace to edge of item #06 as shown.

3. Attach using hardware item #07.

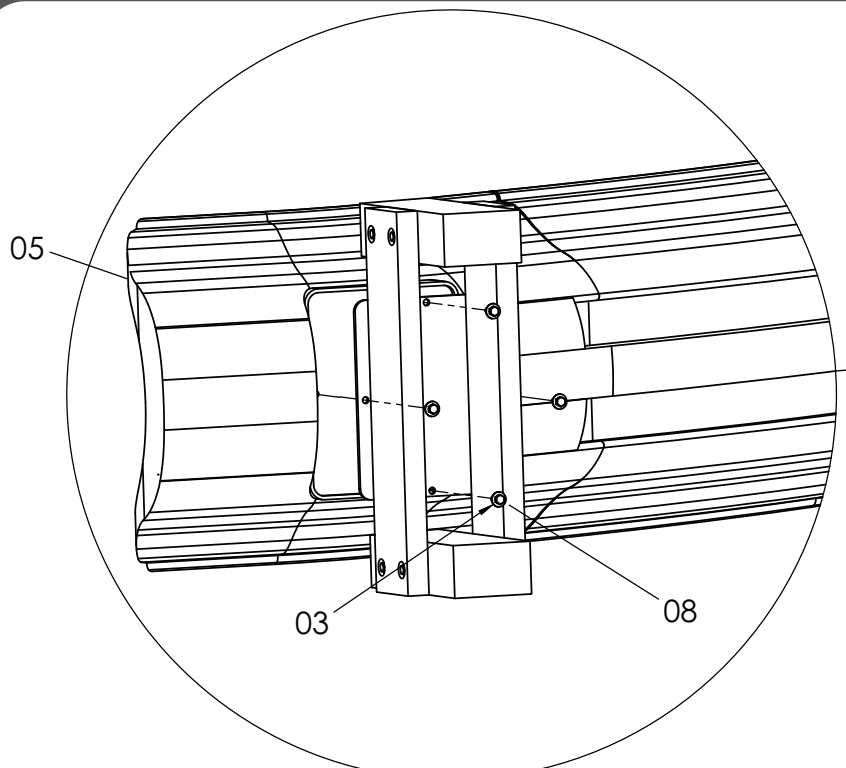

1. Lay item #05 on its side and align mounting holes in Foot Plate with mounting holes in slide as shown.
2. Attach using hardware items #03, and #08.

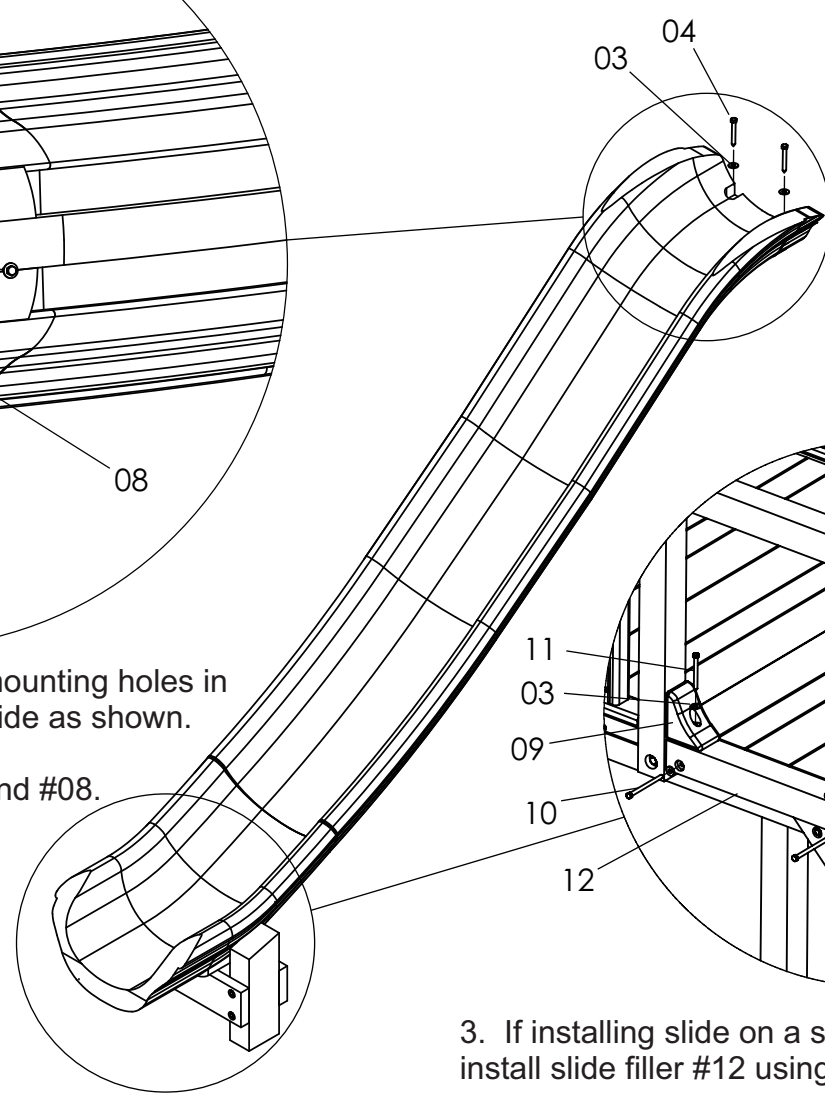


PARTS NEEDED

	BASE ASSEMBLY	(1)
#05	12' SUPER SLIDE GREEN	(1)
#09	4 5/8" SUPER SLIDE FILLER	(2)
#12	25" LADDER FILLER	(1)

HARDWARE NEEDED

#03	3/8" FLAT WASHER	(10)
#04	3/8" X 4" LAG SCREW	(2)
#08	3/8"-16 X 1" HEX BOLT	(4)
#10	3/8" X 5 1/2" LAG SCREW	(2)
#11	3/8" X 4" LAG SCREW	(2)

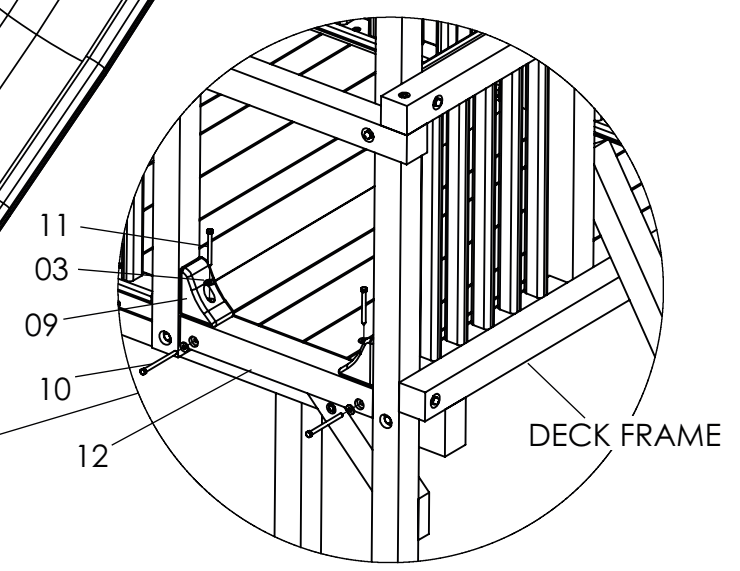

3. If installing slide on a side of playset without deckframe install slide filler #12 using items #10 and #03.
4. Fill gaps between playset and slide item #09, #11 and #03.
5. Center mounting holes in Slide in Slide Filler or Deck Frame and attach using items #03 and #04.

WOODPLAY®

2016 WARRANTY

5 Year Warranty

Subject to proper installation and normal residential use, Woodplay warrants, subject to the limitations stated below, to the original retail purchaser, all chain, seats, swing hangers, hardware, metal braces, ropes and accessories to be free from defects in material and workmanship for a period of **five years** from date of purchase. Cracks in non-functional plastic components are not considered defects in materials and workmanship if they do not affect the functionality of the playset. Merchandise covered under this limited **five-year** warranty will, at our option, be repaired or replaced, excluding any freight or labor fees.

15 Year warranty

In addition, for **Fifteen years** after the original purchase date of our **Cedar** playsets, Woodplay warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. Seasonal checks, surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty. And will not affect the integrity of your playset.

Limited Lifetime Warranty

In addition, for the **lifetime** of our **Redwood** playsets, Woodplay warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. Seasonal checks, surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty. And will not affect the integrity of your playset. Woodplay warrants to the original retail customer that we will replace any swing hangers, swing chains, metal braces, metal rungs or hardware that fail due to rust or breakage (excludes surface rust). This limited lifetime warranty also applies to our exclusive Super Slide, Hurricane Slide and Alpine Slide.

Timber is a natural material which can absorb and release moisture. Although this product is designed to minimize this effect, in certain circumstances some movement or distortion is unavoidable. During dry hot weather timber may shrink and check - this is a normal process of weathering. After the first year of service it is advisable to clean and apply a non-toxic stain or sealant to the wood, safe for children's use.

Components covered under this **5 year, 15 year** and limited **lifetime warranty** will be replaced free of charge excluding freight and labor fees.

Non-residential use of the playset is prohibited and voids the warranty as the playsets are designed for residential use only.

Escalade Sports reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to disposition of warranty claims. Merchandise returned to our factory for examination or recovery must be shipped freight prepaid, unless a Return Authorization Number is issued.

This warranty program does not cover normal wear and tear, color fading, or damages resulting from misuse, abuse, vandalism, alteration, acts of God, or assembly and maintenance contrary to our instructions. Escalade Sports assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our equipment. Please supervise your children's play activity and maintain your play equipment periodically.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Woodplay does not assume or authorize any person to assume for us, any other liability in connection with the sale of our products.

Special Note: Woodplay reserves the right to make changes in materials, design, and pricing without notice. See your instruction manual for maintenance requirements. Your child's safety is your responsibility; therefore, you should inspect this equipment regularly for wear and safety.

For warranty service, contact:

**Woodplay Playsets
Escalade Sports
P.O. Box 889
Evansville, IN 47706
1-800-GO-SWING**

Or E-Mail us at: playgroundcs@escaladesports.com

Revised 2015