




Gia XP

3-Wheel Stroller
65 lb (29 kg)

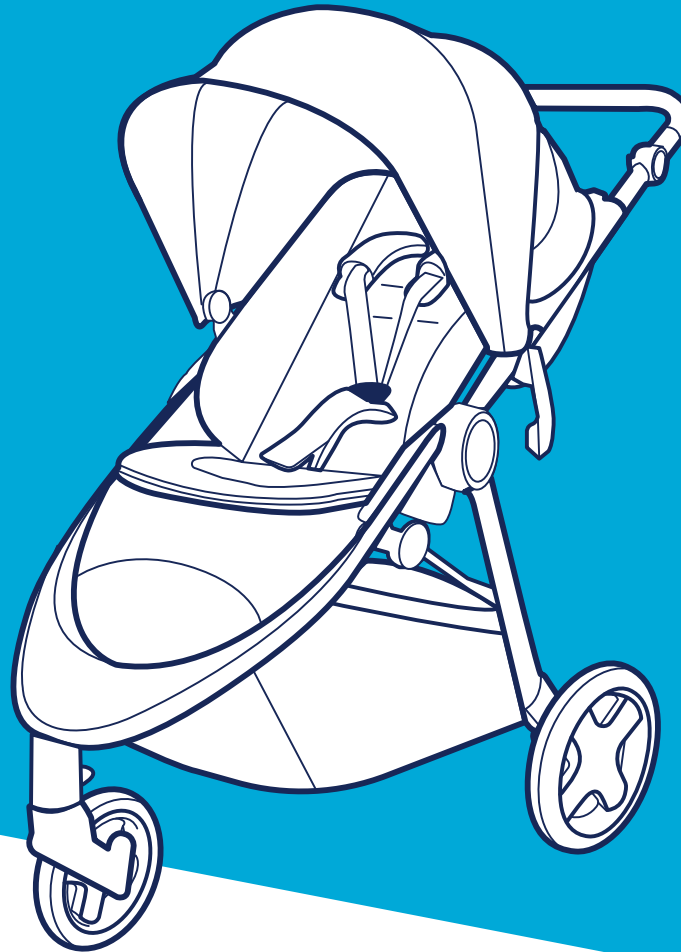

MAXI-COSI® 4358-8148 3.2.21

We carry the future

KEEP INSTRUCTIONS FOR FUTURE USE.
Read all instructions before using this stroller.

Safety Information

WARNING:

FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.


- Adult assembly required.
- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use the harness system. Check frequently to make sure it is secure.
- **ALWAYS** keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- **ALWAYS** make sure stroller is fully open and locked before using.
- **ALWAYS** use the brakes when stroller is stopped.
- **ALWAYS** remove protective material and poly bags and dispose before assembly.
- **NEVER** put hot liquids in the cup holder.
- **NEVER** use stroller on stairs or escalators.
- **NEVER** rollerblade with stroller.
- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.

- **NEVER** place or hang parcels, bags, or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- **DO NOT** carry additional children, goods, or accessories in or on this product except as recommended in the manufacturer's instructions.
- **NEVER** place more than 2 lb (.9 kg) in cup holder.
- **NEVER** place more than 10 lb (4.5 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- **NEVER** place more than 1 lb (.5 kg) in the storage pocket.
- **STROLLER** is only for use with children up to 65 lb (29 kg), **AND WHEN SEATED**, the midpoint of your child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is for use with children who can sit up unassisted and is **NOT** recommended for newborns.
- Failure to follow the steps and warnings on the labels and in the instruction manual can result in serious injury or death to your child.

Contents

Parts of Stroller	1	Adjusting Stroller Seat Harness Straps.....	11
Installing & Removing Wheels	2	Securing Child in Stroller Seat.....	13
Unfolding Stroller Frame	3	Folding Stroller	14
Adjusting Handle	4	Removing Stroller Seat Pad Insert	15
Using Parking Brake and Locking Swivel Wheel.....	5	Installing Stroller Seat Pad Insert.....	16
Attaching Car Seat to Stroller Frame	6	Cup Holder Use & Care.....	17
Removing Car Seat from Stroller Frame.....	7	Wash & Care of Stroller Parts.....	18
Reclining Stroller Seat	8	Dorel Juvenile Group Information	19
Canopy Use & Storage Basket Access Panel ..	9	Replacement Parts.....	19
Storage Basket & Pocket Use.....	10	Warranty	19

Parts of Stroller

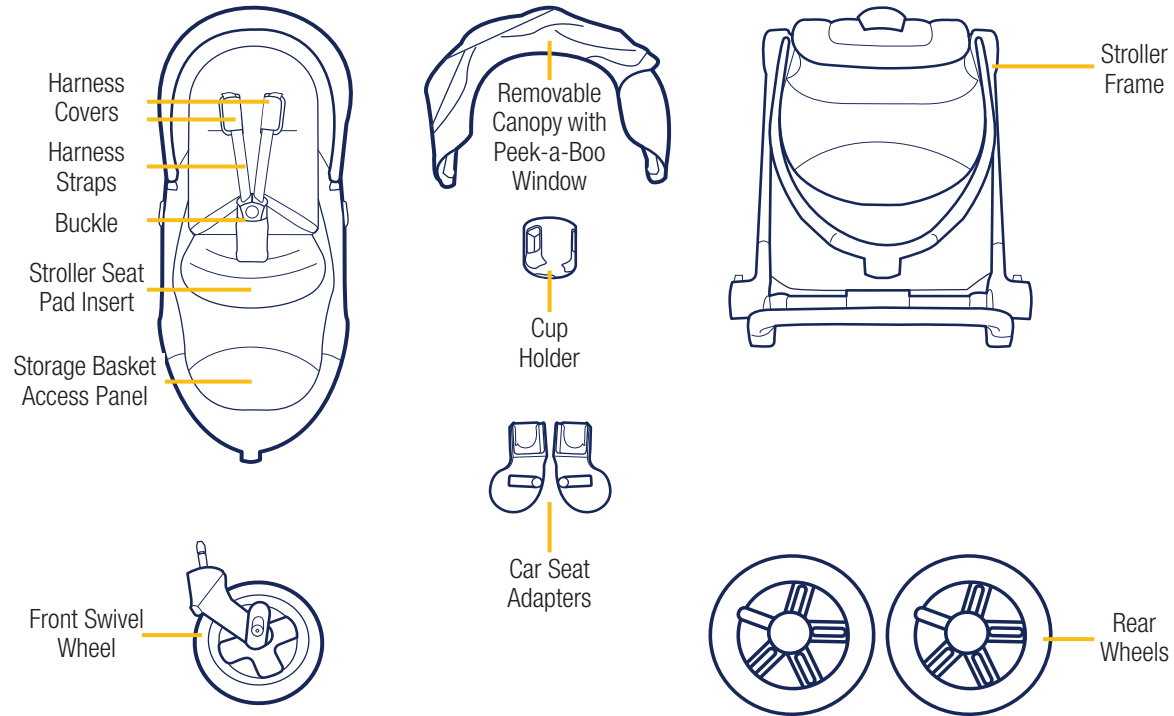

Lay out and identify all of the parts.


If any parts are missing, **do not return this product to the place of purchase.**

Please contact Consumer Care via:

- Phone: 1-800-951-4113
- Text: 1-812-652-2525
- Chat: www.maxicosi.com

You will need to know the model number and manufacture date.


It is located on a label on the stroller frame.

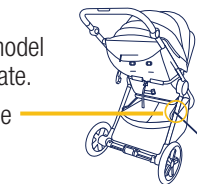

Installing & Removing Wheels




Front Swivel Wheel

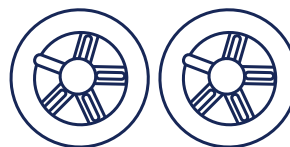

Rear Wheels


Installing Wheels

1

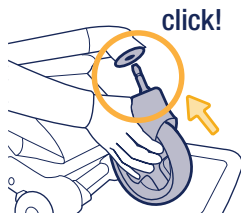


Attach the front swivel wheel.

2

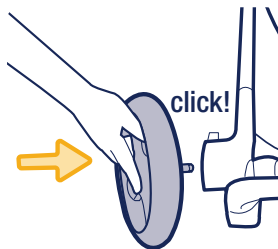

Attach the rear wheels.


3

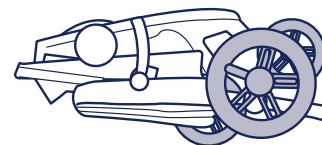


Finished!

NOTE: Pull out on the wheels to make sure they are secured.

Removing Front Swivel Wheel

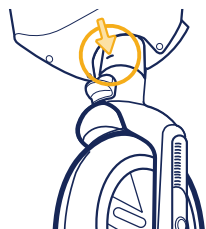


Locate and press the release button on the stroller frame.

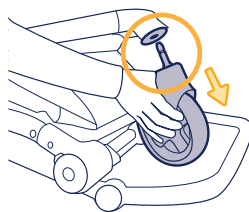

Remove the front swivel wheel.

Removing Rear Wheels

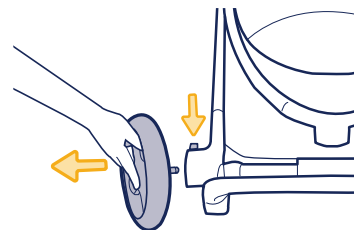


Locate and press the release button on the stroller frame. Remove the rear wheel.

Unfolding Stroller Frame

Stroller Frame Latch




1

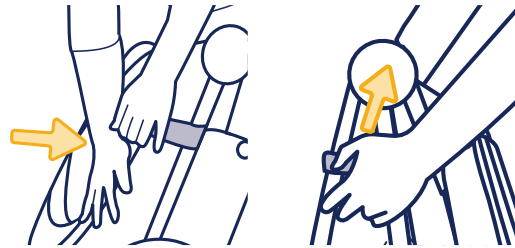


- Push in on the stroller frame to release the latch.
- Pull the stroller frame latch away from the stroller.


2

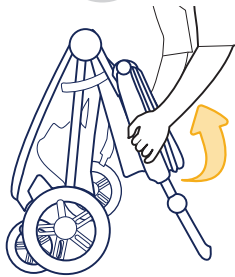

- Hold the stroller frame as shown and lift up.
- Continue to lift up until the stroller locks into place.

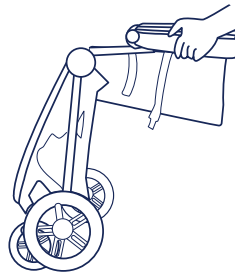

3

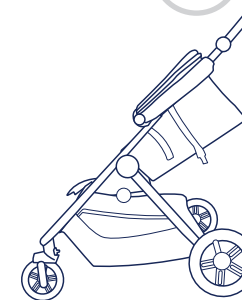

Finished!

⚠ WARNING:

ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.

Adjusting Handle

This stroller's handle is adjustable and has 4 positions.
Adjust to a position that is comfortable for you.

Handle Height Adjustment Buttons
(1 on each side of handle)







1



Press the handle adjustment buttons and hold them in.


2

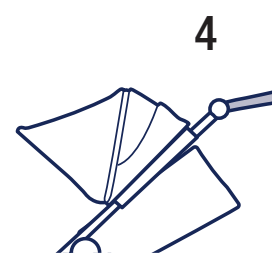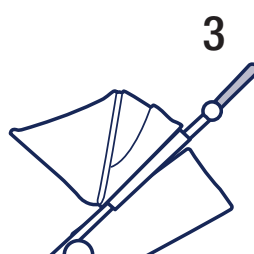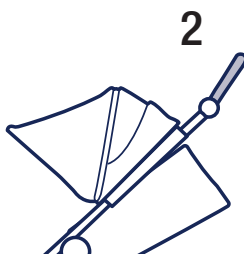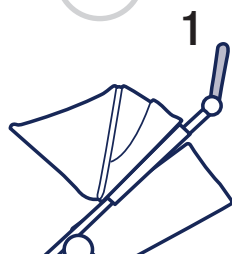


Then rotate the handle to the desired position.

Using Parking Brake & Locking Swivel Wheel


Rear Wheels

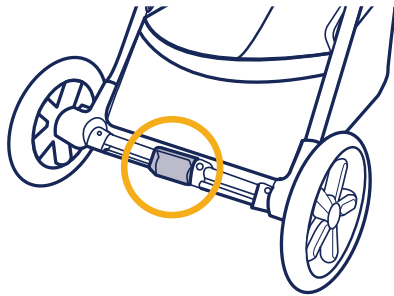


To Lock Parking Brake

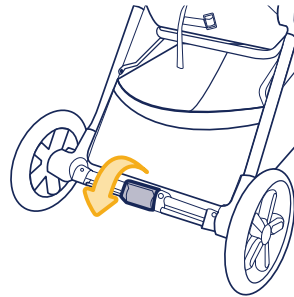

To Release Parking Brake

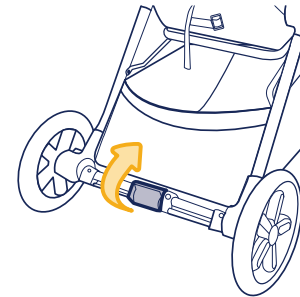

Front Swivel Wheel

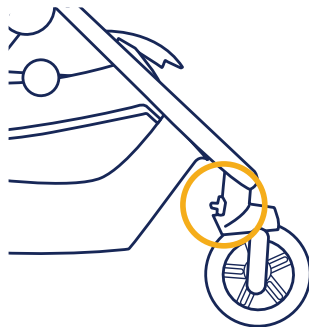

To Lock Swivel Wheel



- The wheel must face forward as shown.
- Firmly pull the lock tab up.
- A locked swivel wheel is best for traveling over rocky or uneven surfaces.

To Unlock Swivel Wheel




- Firmly push the lock tab down.
- An unlocked swivel wheel is best for everyday strolling.

Attaching Car Seat to Stroller Frame


Illustrations show a generic car seat icon.

1

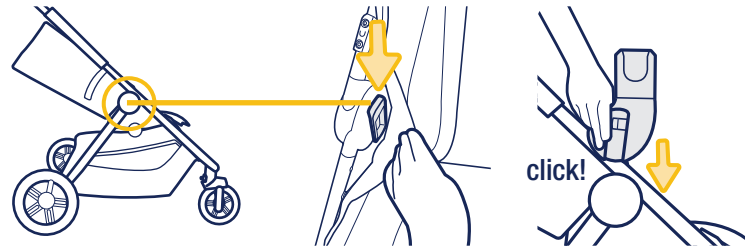


Match the colored dots on the adapters with the colored dots on the attachments located on the stroller frame. Install the car seat adapters to the attachments on the stroller frame.

2

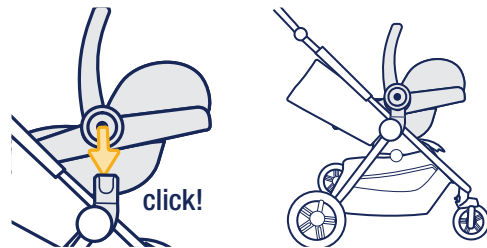


Attach the car seat to the car seat adapters. **ONLY** install the car seat rear-facing.

3

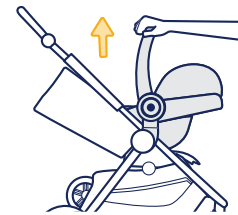

Pull up on the car seat either at the carry handle or handle hubs to check if it is securely attached.

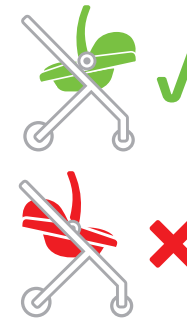

Removing Car Seat from Stroller Frame

Illustrations show a generic car seat icon.




Mico Models' Stroller Release Buttons



Coral Models' Stroller Release Lever


1

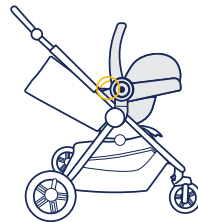

Car seat stroller release mechanisms & locations vary by car seat model.

Review your car seat's instruction manual to locate the stroller release mechanism on your car seat.

2

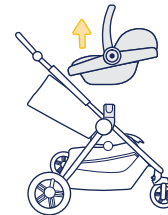


While engaging your car seat's stroller release mechanism, lift the car seat off the stroller frame.


Removing Car Seat Adapters

You can fold and store the stroller with the adapters still attached. You **must** remove the adapters before placing your child in the stroller seat.


1

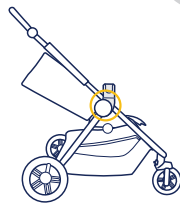

Press the release button on the car seat adapters.

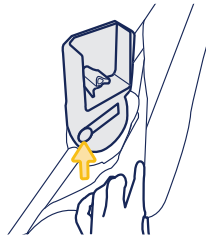

2

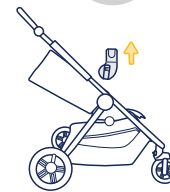


Remove the car seat adapters.

Reclining Stroller Seat


This stroller seat has multiple recline positions.
Adjust to a position that is comfortable for your child.

To Recline


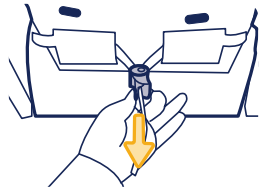


At the back of the stroller seat, squeeze the tab together and pull it towards you.

To Make Upright

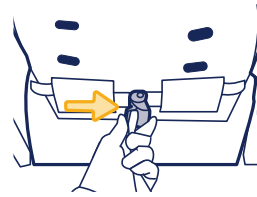


Squeeze the tab together. Push the stroller seat forward while sliding the tab up the straps.

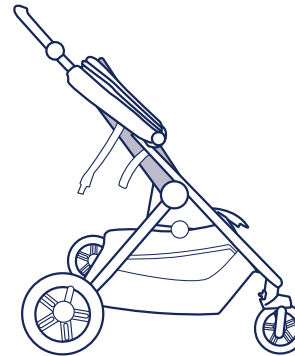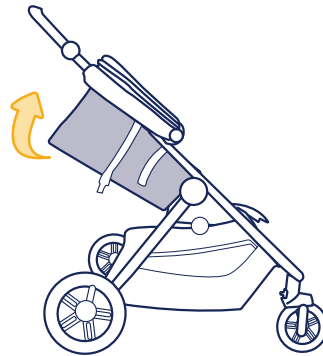


Illustrations show the stroller seat reclined and upright. However there are multiple recline positions.

Canopy Use & Storage Basket Access Panel


Removing & Attaching Canopy

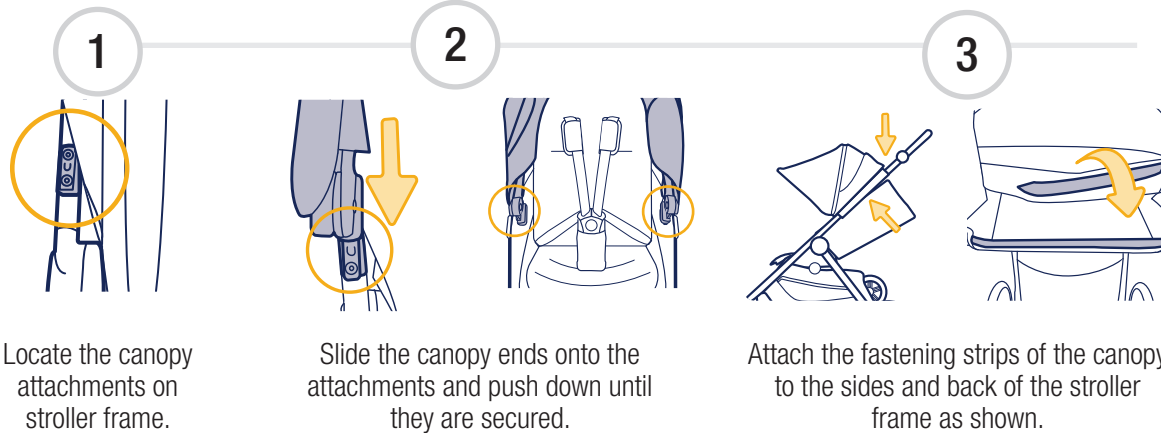


Adjusting Canopy

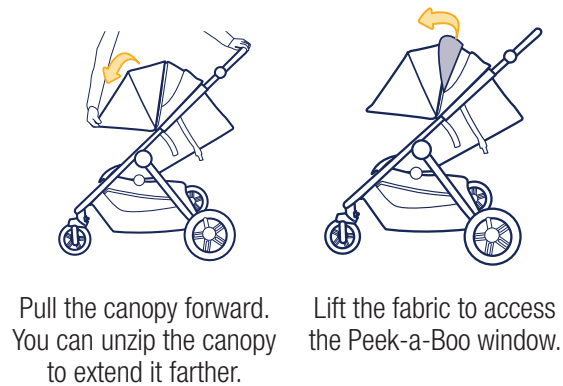

Storage Basket Access Panel

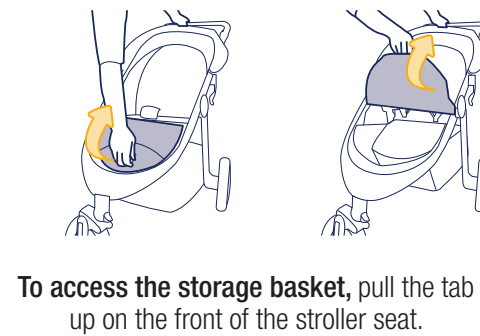

Storage Basket & Pocket Use

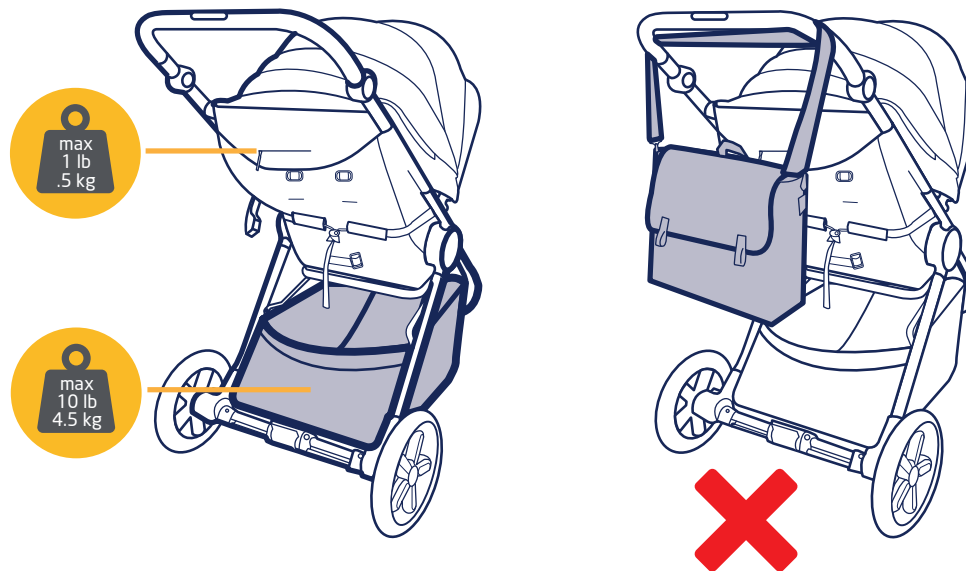


⚠ WARNING:

- **NEVER** place more than 10 lb (4.5 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- **NEVER** place more than 1 lb (.5 kg) in the storage pocket.


Adjusting Stroller Seat Harness Straps

As your child grows, you will need to adjust the harness strap height.

Harness System

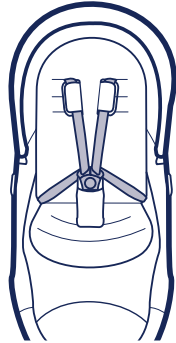

1

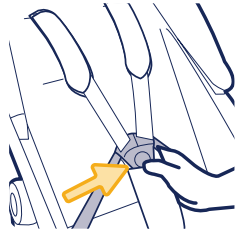


Unbuckle.

2




From the back of the seat, push the harness retainers through the harness slots.

3

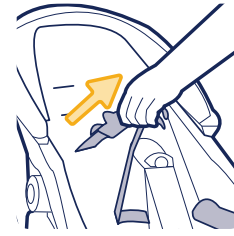


Pull the harness strap out of the harness slot.

4

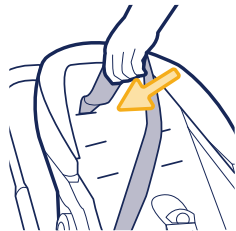

Push the harness retainers into the harness slot closest to your child's shoulders.

5

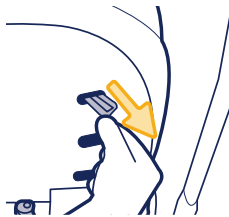


From the back of the seat, pull the harness retainers through the harness slots.


⚠ WARNING:

- Belts must be threaded exactly as shown.
- Failure to follow these instructions could result in serious injury or death of your child.

To Shorten Harness Strap

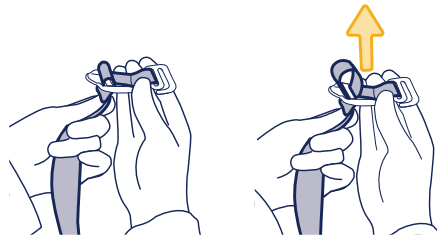


Hold the **long end** of the strap and then push it up.

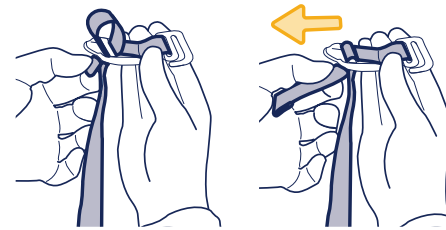


Hold the **short end** of the strap and then pull it out to tighten.

To Lengthen Harness Strap

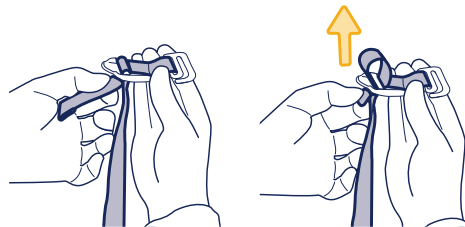


Hold the **short end** of the strap and then push it up.

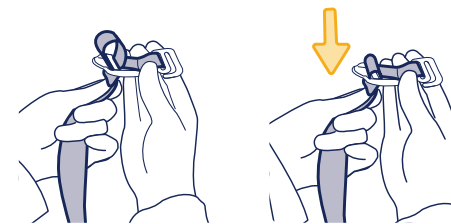

Hold the **long end** of the strap and then pull it down.


Securing Child in Stroller Seat

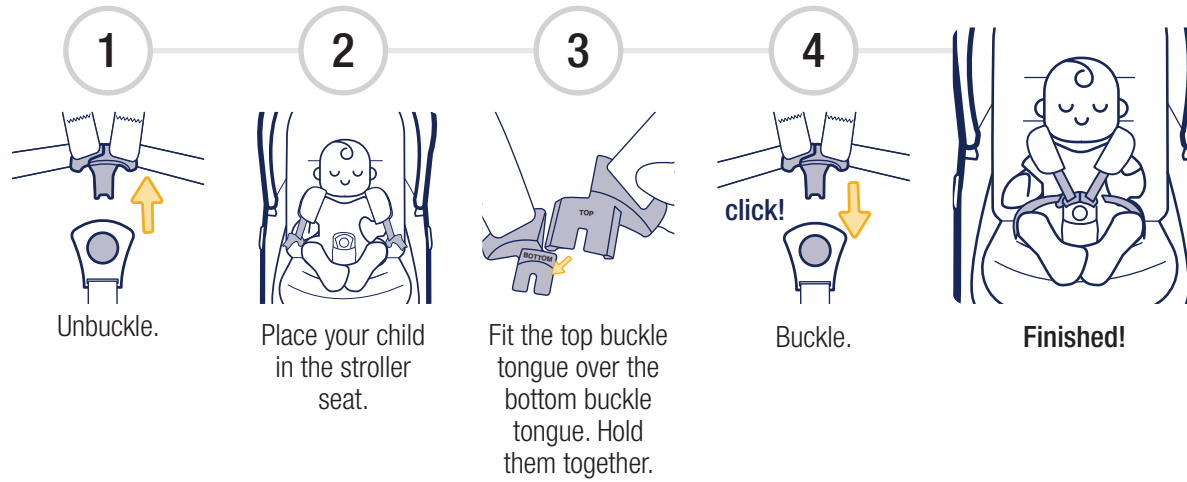

⚠ WARNING:


- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use the harness system. Check frequently to make sure it is secure.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is only for use with children up to 65 lb (29 kg), and **WHEN SEATED**, the midpoint of your child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is for use with children who can sit up unassisted and is **NOT** recommended for newborns.
- Failure to follow these instructions could result in serious injury or death of your child.

Folding Stroller

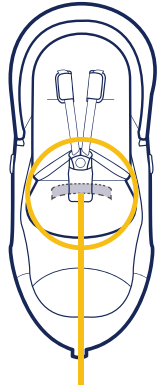

Release Handle

1

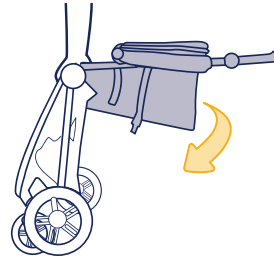


Pull the release handle up until the stroller starts to fold.

2



- Lift the rear wheels off the ground and tilt the stroller forward until the handle touches the ground.
- Push the stroller frame latch in.
- Push in on the frame latch to lock the frame. Make sure it is secure.

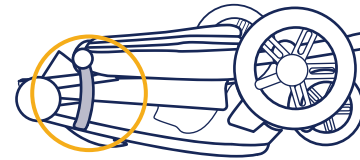


Finished!

WARNING:

ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.

Removing Stroller Seat Pad Insert

1

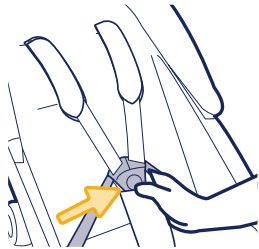

Unbuckle.

2




From the back of the seat, push the harness retainers through the harness slots.

3



Pull the harness strap out of the harness slot.

4

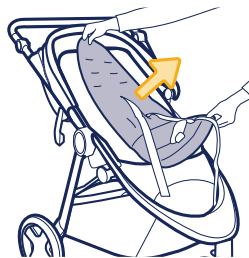

Pull the seat pad out of the stroller seat.


Installing Stroller Seat Pad Insert

1




Put the seat pad in the stroller seat.

2

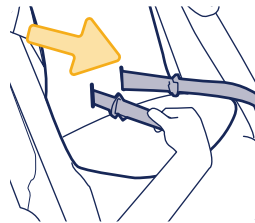


Thread the harness straps through the slots in the seat pad.

3

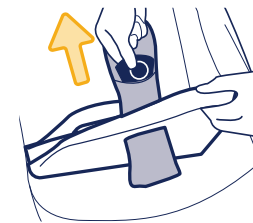

Pull the buckle through the slot in the seat pad.

4

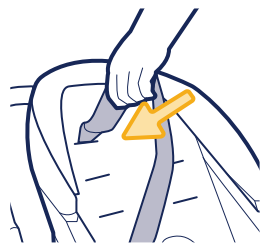

Push the harness retainers into the harness slot closest to your child's shoulders.

5



From the back of the seat, pull the harness retainers through the harness slots.




⚠ WARNING:

- Belts must be threaded exactly as shown.
- Failure to follow these instructions could result in serious injury or death of your child.

Cup Holder Use & Care

Cup Holder



Secure the cup holder to the attachment on either side of the stroller as shown.
The cup holder is top-rack dishwasher safe.

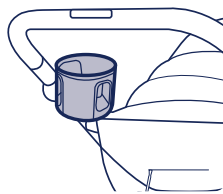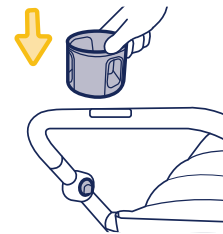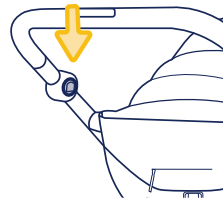

⚠ WARNING:

NEVER place more than 2 lb (.9 kg) in the cup holder.

Wash & Care of Stroller Parts

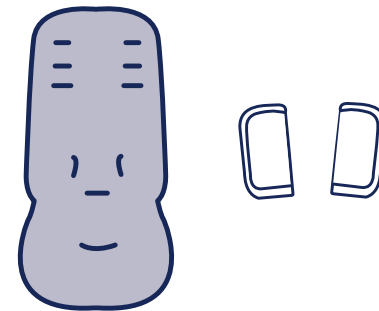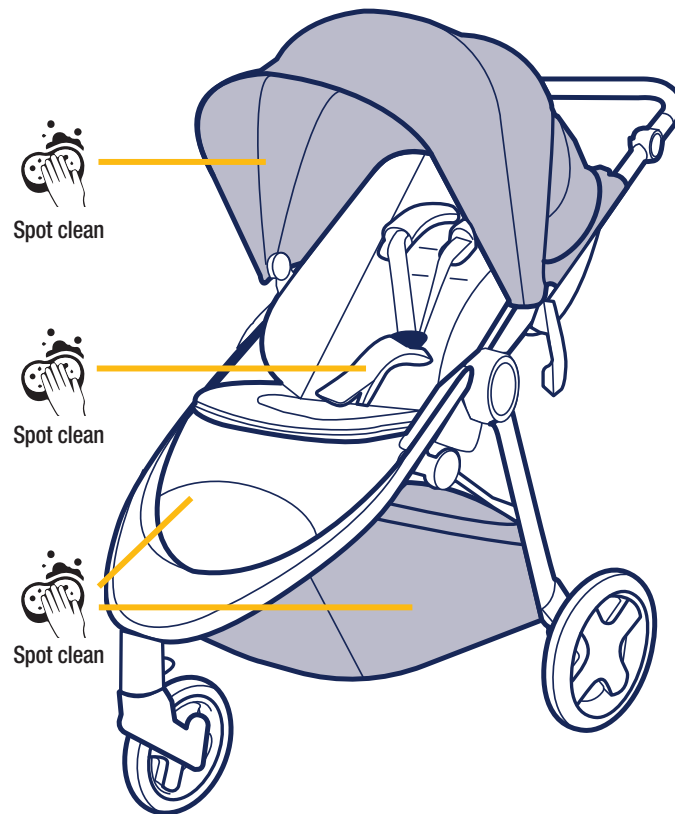

Cleaning Stroller Seat Pad Insert & Harness Covers

- Machine wash separately with cold water on a gentle cycle.
- Make sure the harness covers are closed so the fastening strips are not exposed.
- Do not use bleach.
- Tumble dry separately for 10-12 minutes on low heat.
- Remove immediately.

Dorel Juvenile Group Information

Thank you for choosing this stroller.

The DJG family is committed to creating strollers with the most comfort and convenience available today.

If you have questions or any concerns with this stroller, please contact our Consumer Care Department.

For parts availability and questions, please contact us via phone, text, or chat.

Include the model number and manufacture date (found on a sticker on the stroller frame) and a brief description of the part.

- Rear Wheels (2)
- Front Swivel Wheel (1)
- Harness Covers (2)
- Cup Holder
- Stroller Seat Pad Insert
- Car Seat Adapters



Call: 1-800-951-4113



Text: 1-812-652-2525




Chat: www.maxicosi.com

Hours of Operation:

M-TH: 8:00 AM - 6:00 PM EST

FRI: 8:00 AM - 4:30 PM EST

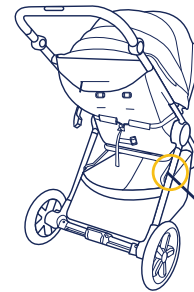

**Date of
Manufacture Label**

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Gia XP 3-Wheel Stroller), is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Care Department at the address noted on the back of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or consequential damages. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.



Gia XP

3-Wheel Stroller

65 lb (29 kg)



©2021 Dorel Juvenile Group, Inc. (800) 951-4113 www.maxicosi.com. Styles and colors may vary. Les styles et les couleurs peuvent varier. Made in China
Fabriqué en Chine. Distributed by (distribué par) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2855 Argenta
Road, Unit 4, Mississauga, ON L5N 8G6. Importado y Distribuido en Chile por: Comercial e Industrial Silfa S.A. - San Ignacio 0201 / Parque Industrial Portezuelo
Quilicura, Santiago Chile. Fono (562) 2339 9000. En Perú por: Comexa S.A. - Los Libertadores 455 - San Isidro, Lima - Perú. Fono (511) 4469014. En Centro
América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por:
Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No.
1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9 Tel. (55) 67199202



www.maxicosi.com