




OWNER'S MANUAL

**USE THIS MANUAL ONLY!
A DIFFERENT MANUAL IS IN THE BOX,
DISCARD THE OTHER.**

**TABLE TENNIS TABLE
MODEL NO.
PT2010**

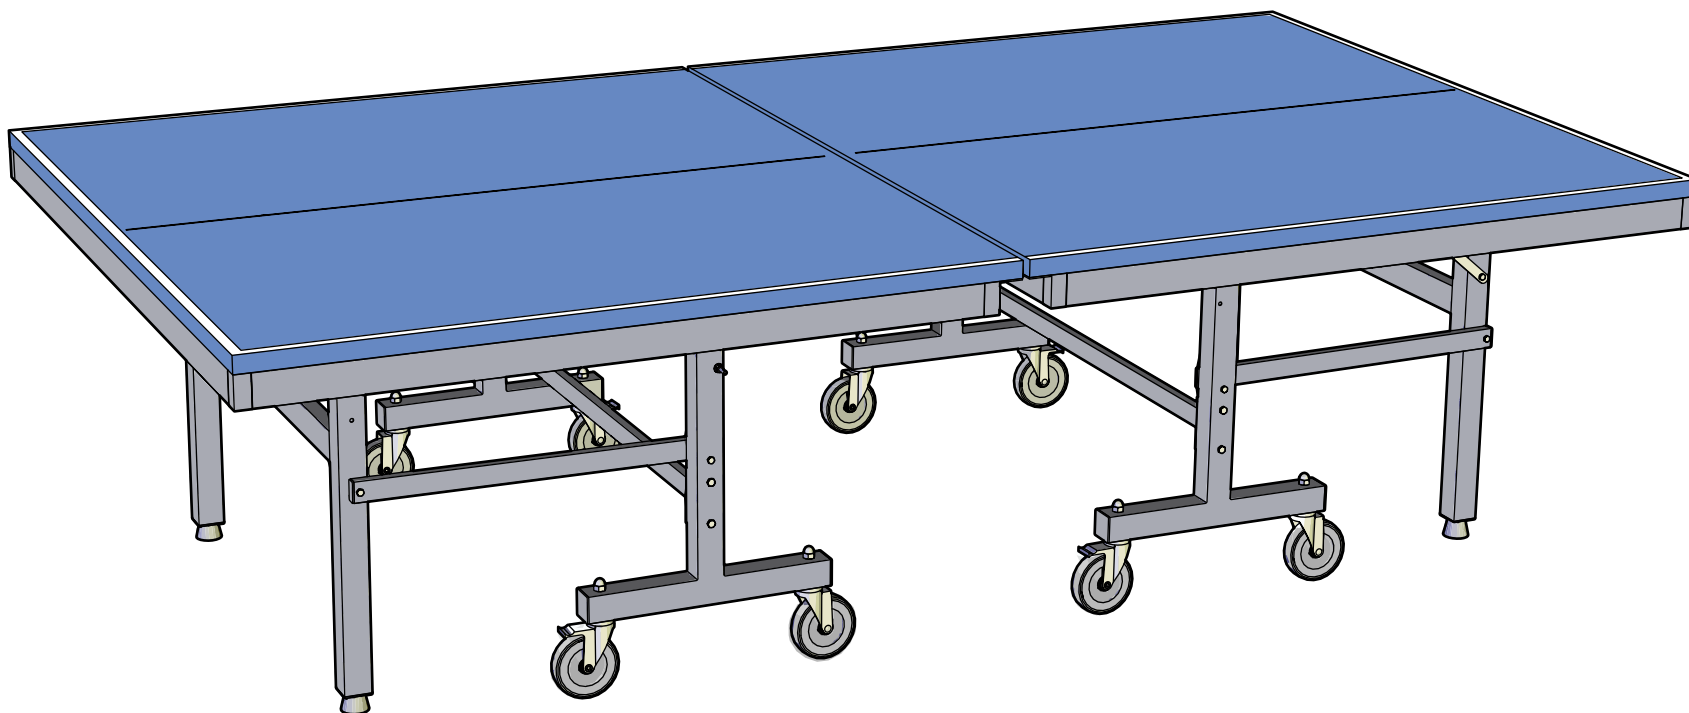

PRE-ASSEMBLY TIPS

1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.**
3. **To make assembly easier, use the Hardware Identifier on page 11 to identify and sort all fasteners. Check all cartons for kits. All hardware may not be located in one kit.**
4. **Do not tighten hardware until instructed to do so. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together. Leave locknuts slightly loose until you are instructed to tighten them.**
5. **Tools required for assembly:** Two 10mm Wrenches, Two 12mm" Wrenches, Two 13mm Wrenches, Crescent Wrench and Channel Lock Plyers.
Note: Adjustable wrenches can be substituted for open end wrenches.
6. **Save these instructions and your proof of purchase (receipt) in the event that the manufacturer has to be contacted for replacement parts.**

POST-ASSEMBLY TIPS

1. **If table does not seem level, it is probably due to uneven or un-level floors.** Set the table in its PLAYING POSITION and move table several inches in different directions to find the best location for the table. If the floor is extremely un-level, table may not play or operate properly. If table is high in the center use adjustable Leg levelers on the outer legs to level the table by turning counter clockwise to raise the table and clockwise to lower.
2. **This is an indoor table only!** This table must be stored **INDOORS** to prevent damage to the playing surface. Dampness and extreme temperature changes can cause the wood to warp, swell, crack or blister. When your table is not in use, it should be folded up in a dry area.
3. **Use the locks on wheels to lock table in place.** Press down on the wheel lock with your foot to lock, and press on the release to unlock.

Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

Phone: 1-800-467-1245 Toll – Free !

Fax: 1-866-873-3533 Toll – Free !

E-mail: tabletennis@escaladesports.com

Mailing Address (correspondence only):

Escalade Sports

PO Box 889

Evansville, IN 47706

Please visit our Website at:
www.escaladesports.com

ON-LINE TROUBLE SHOOTING TECHNICAL ASSISTANCE
ON-LINE PARTS REQUESTS FREQUENTLY ASKED QUESTIONS
ADDITIONAL ESCALADE® SPORTS PRODUCT INFORMATION


1. Attach Caster Wheels (P4 & P5) to T-Legs (P2). Slide a Caster Wheel with Lock (P4) through upright (P2) and secure it with Cap Nut (H3) as shown. Tighten Cap Nut with a Crescent Wrench and use channel locks to hold the Casters in place. On the other end of the T-Leg attach a Caster Wheel Without Lock (P5). Make sure you have one Caster Wheel **with Lock** and one Caster Wheel **without Lock** for each T-Leg. Repeat step for second T-Leg.

PARTS REQUIRED:

- 2 - (P2) T-Leg
- 2 - (P4) Caster with lock
- 2 - (P5) Caster without lock
- 4 - (H3) Cap Nut

TOOLS REQUIRED:

- 1 - Crescent Wrench
- 1 - Channel Lock Pliers

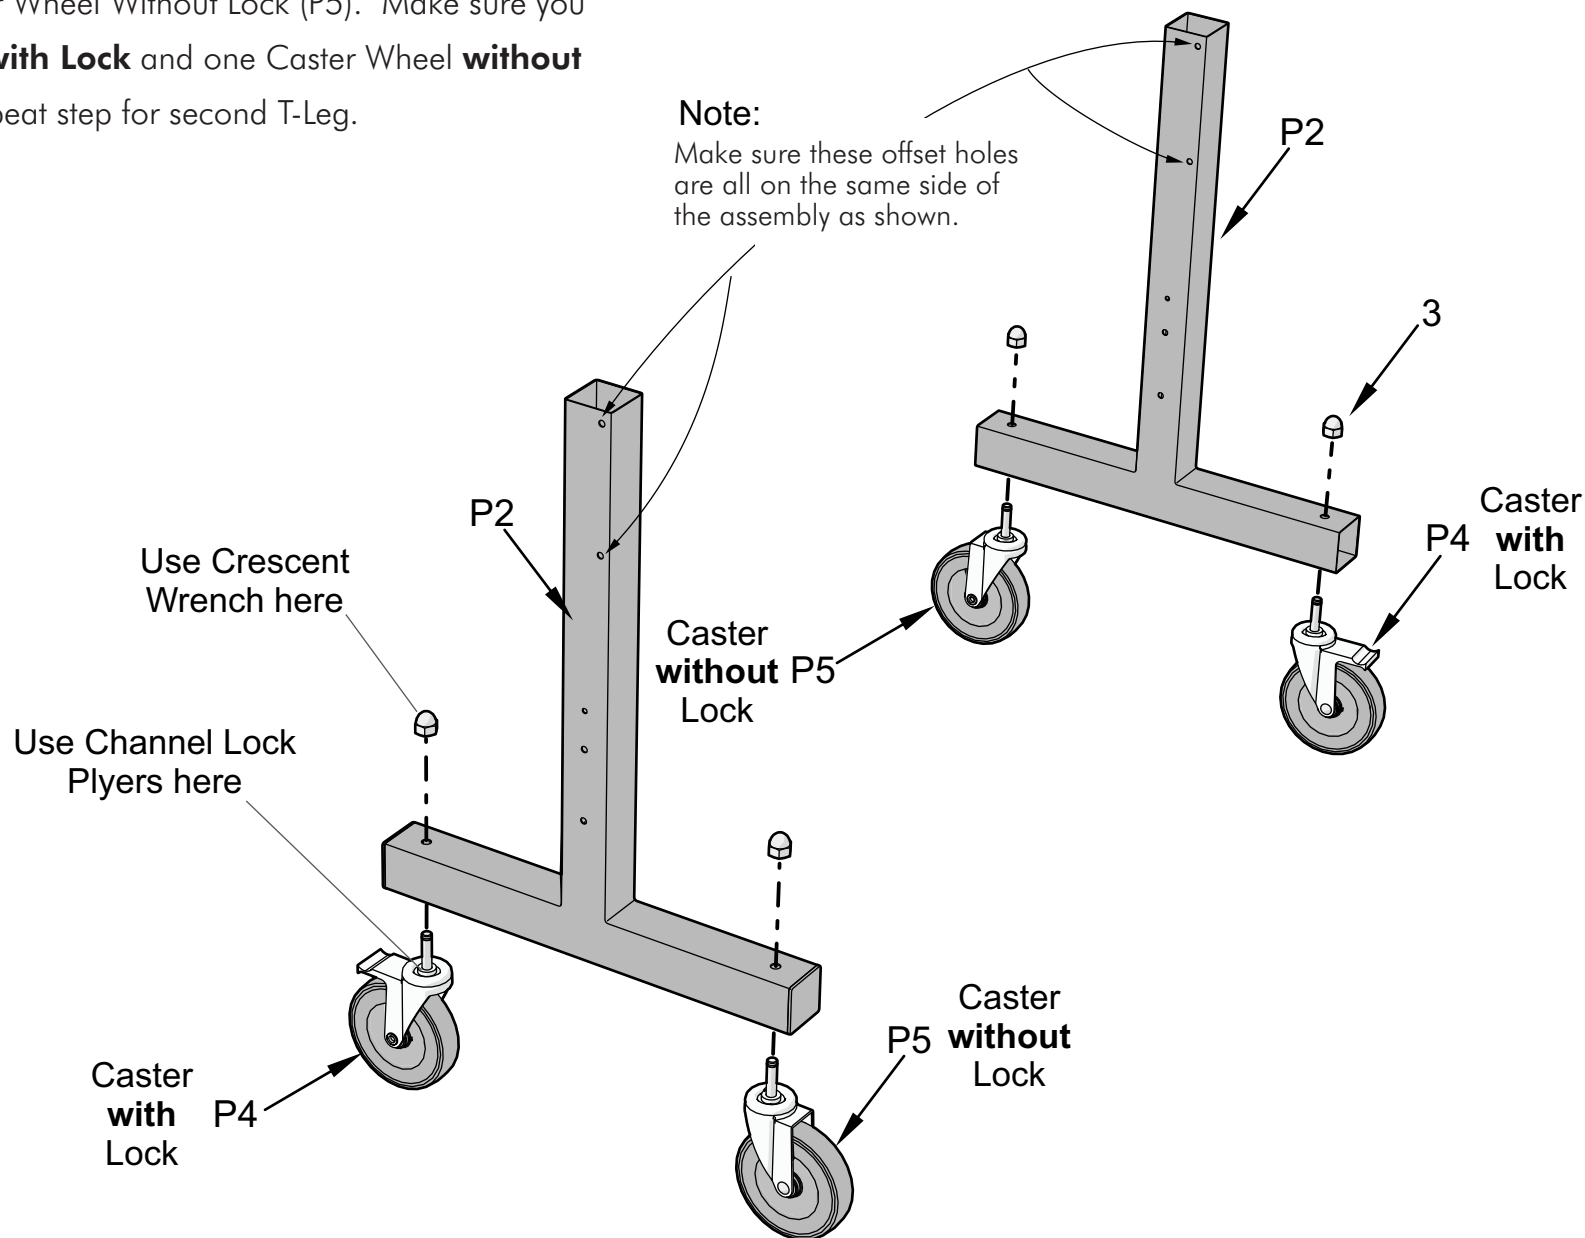

2. Assemble Cross Tube (P6) to T-Leg assemblies from previous step.

Use Bolts (H7), Washers (H8) and Nuts (H9) but **only finger tighten**, these parts will be tightened in the next step. Be sure that the offset holes in T-Legs match each other and that the Cross tube (P6) is attached in the two bottom holes of T-Legs.

PARTS REQUIRED:

- 1 - (P6) Cross Brace
- 4 - (H7) M8 X 70mm Bolt
- 4 - (H8) Flat Washer
- 4 - (H9) M8 Nut

TOOLS REQUIRED:

None

Note:


Make sure these offset holes are all on the same side of the assembly as shown.

NOTE:

Be sure to attach the Cross Tube (P6) to the two bottom holes in both T-Legs.

Note:

Finger tighten only. Hardware will be tightened in a later step.



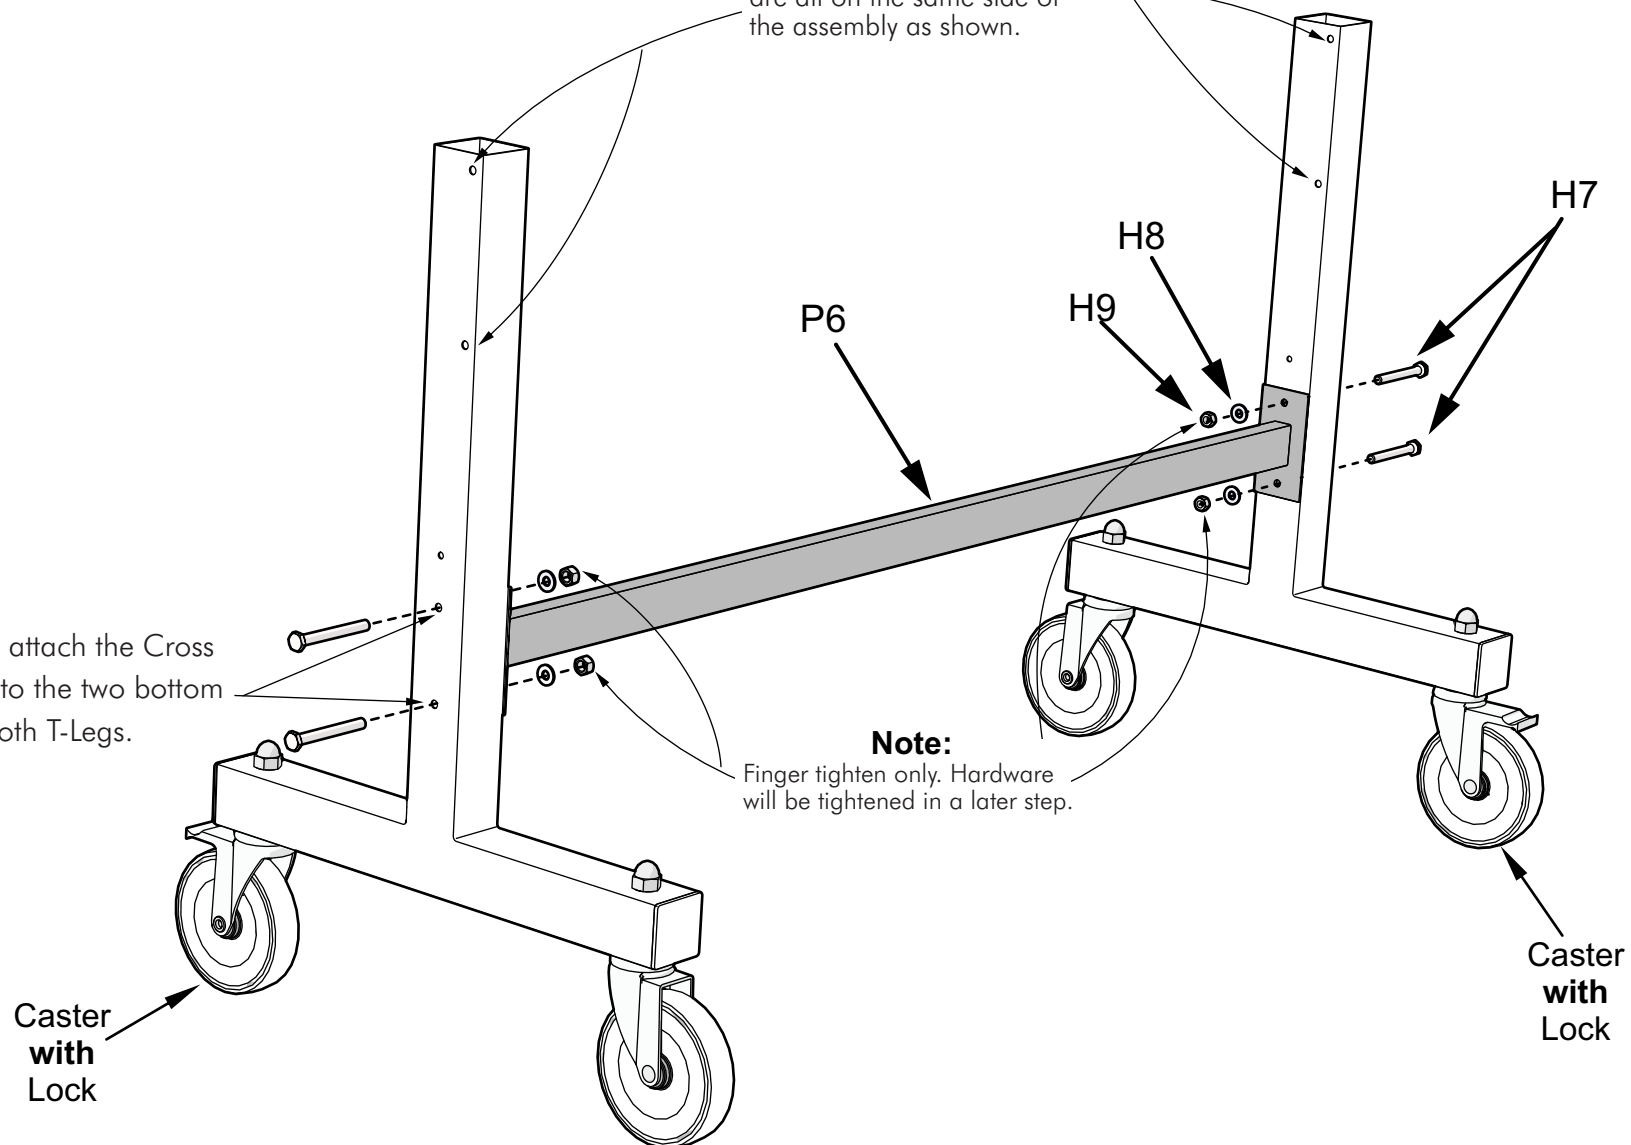


PARTS REQUIRED:


- 1 - (P1) Table Top Assembly
- 2 - (H10) M6 X 65mm Bolt
- 2 - (H11) M6 Nut

TOOLS REQUIRED:

- 2- 10mm Wrench
- 1- 12mm Wrench
- 1- 13mm Wrench

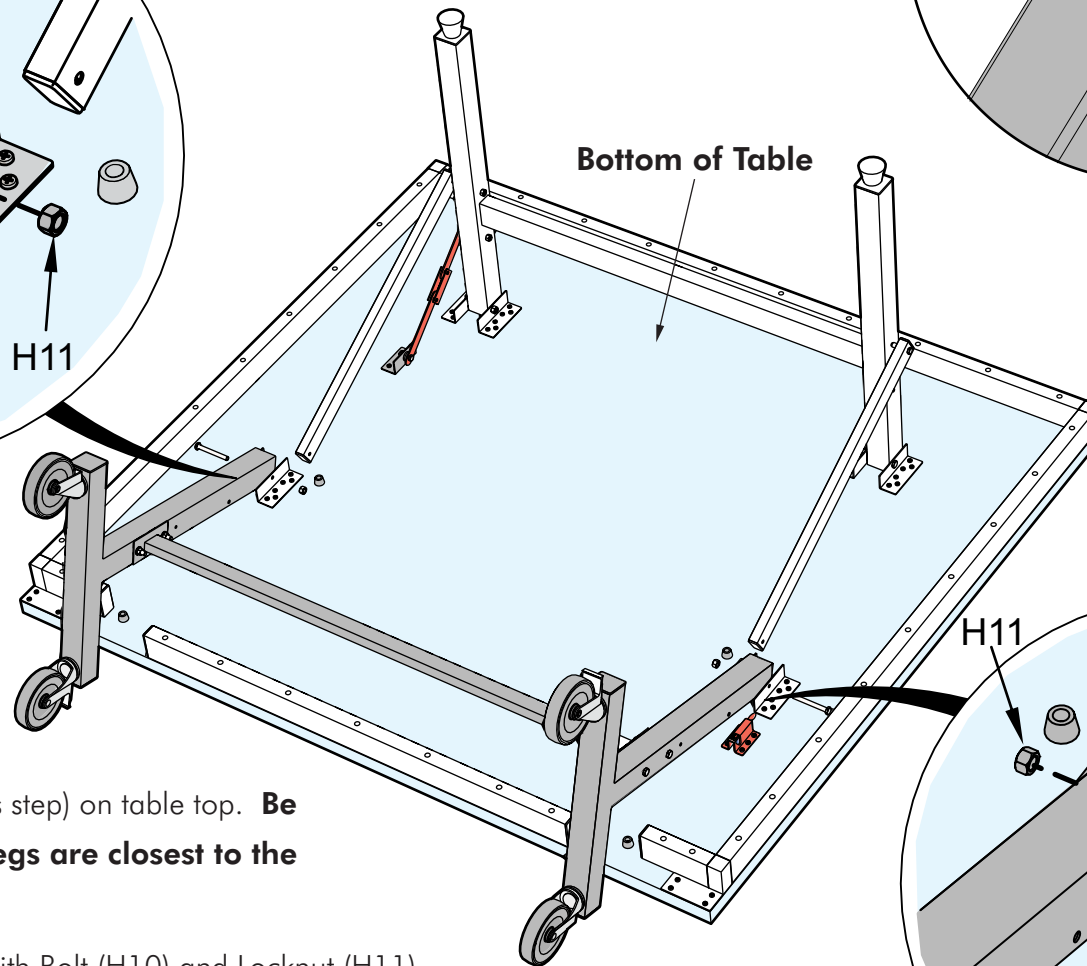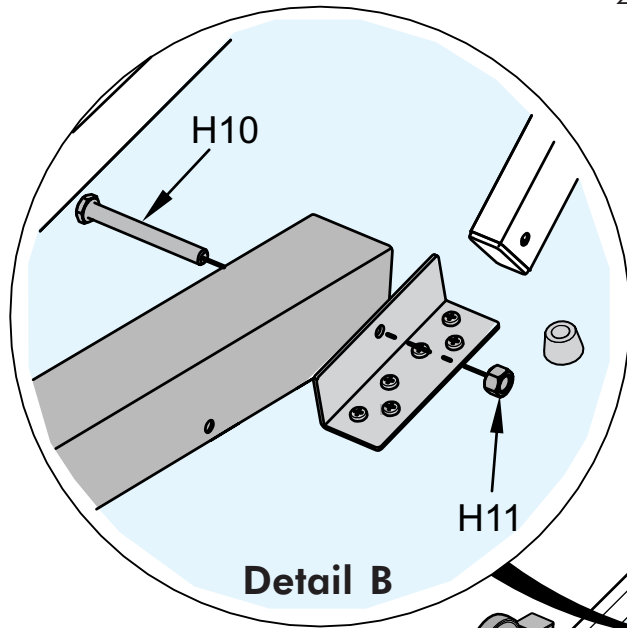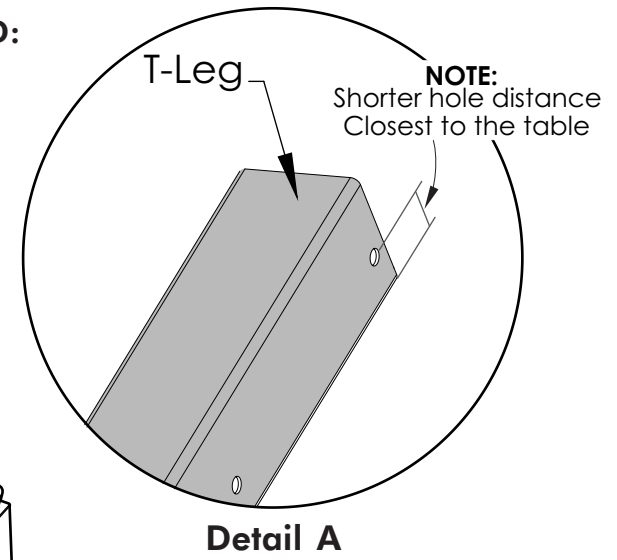

- Place T-Leg Assembly (from previous step) on table top. **Be sure that the offset holes in T-Legs are closest to the table.** See **Detail A**.
- Attach T-Leg Assembly to Brackets with Bolt (H10) and Locknut (H11) as shown in **Detail B & Detail C**. Tighten the Locknuts (H11) all the way but **be careful not to over tighten** as this is a pivot point.
- Tighten Cross Tube Nuts and Bolts from previous page at this time.

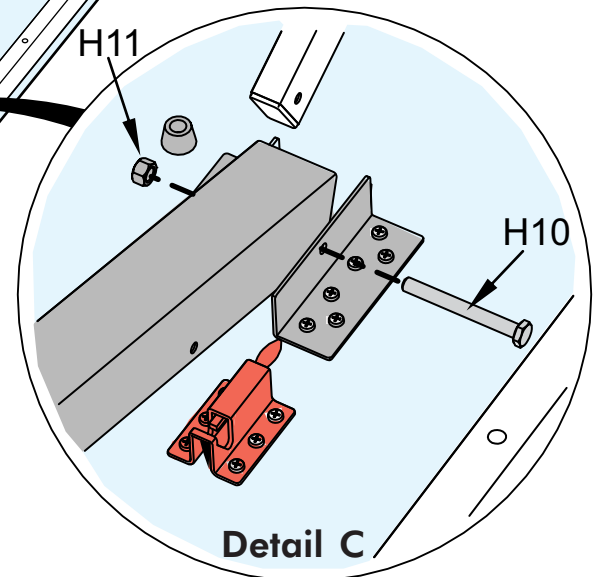


PARTS REQUIRED:


1 - (H12) M8 X 80mm Bolt
1 - (H8) M8 Flat Washer
1 - (H9) M8 Nut

TOOLS REQUIRED:


1 - 12mm Wrench
1 - 13mm Wrench

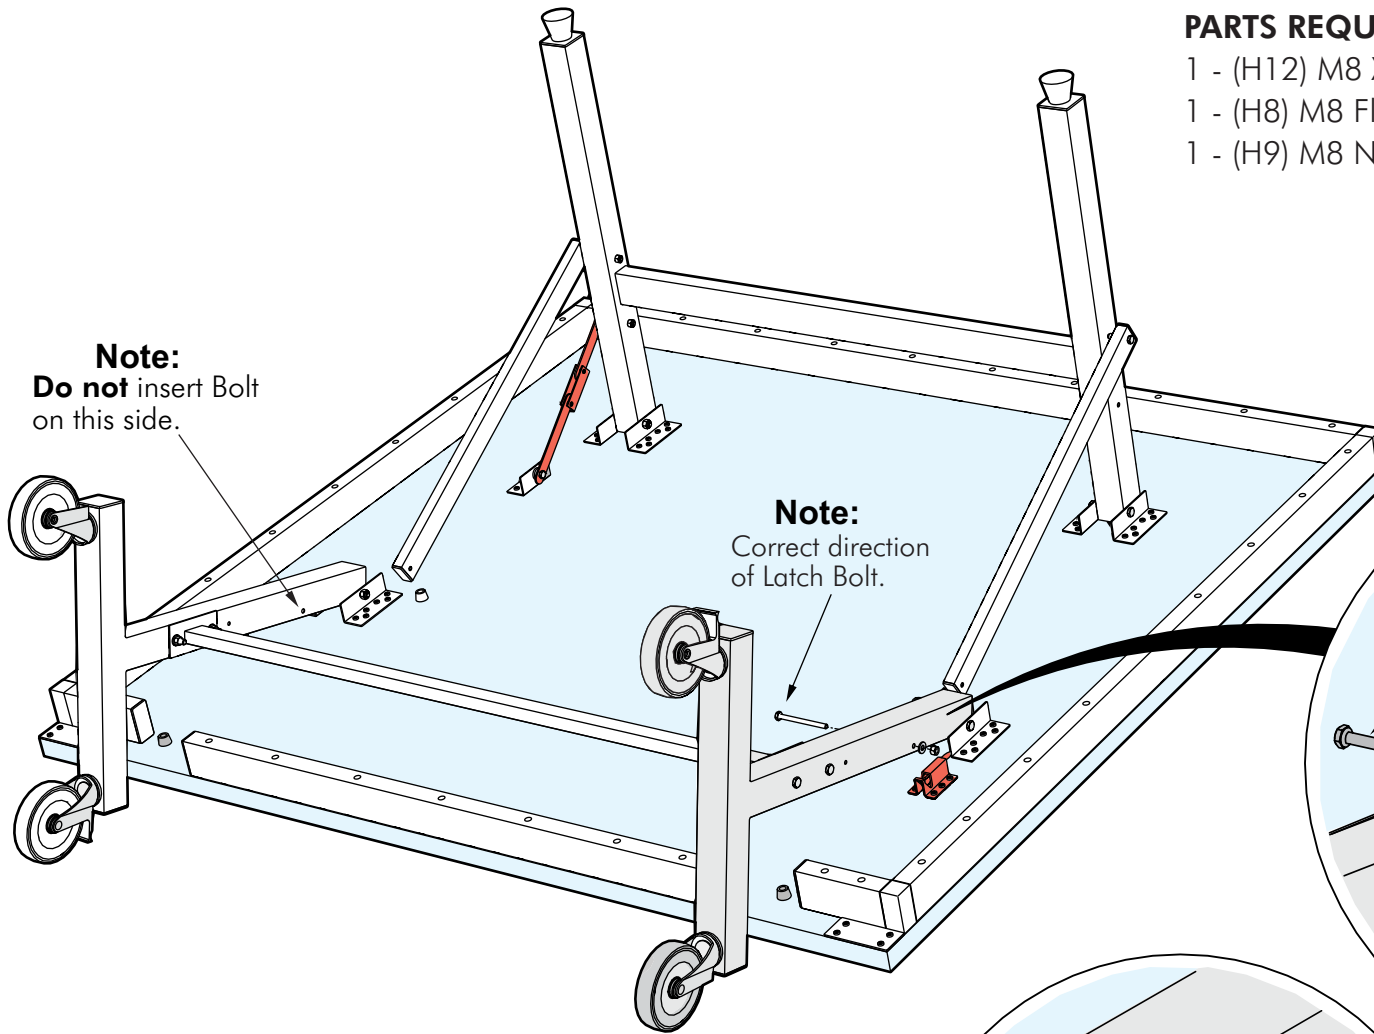

Note:
Install Bolt exactly as shown below, with the washer and nut on the side of the Safety Latch.

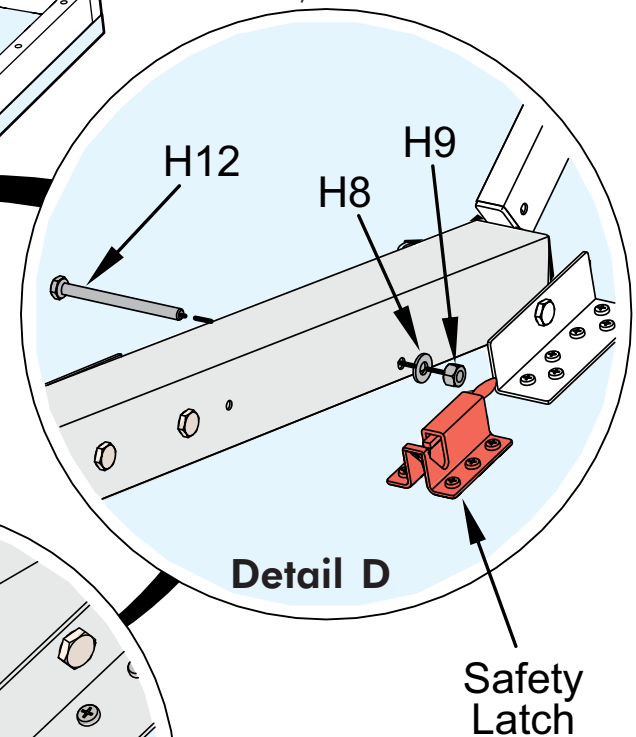

6. Insert (H12) Bolt on the T-leg that has the **Safety latch** beside it. Bolt must be inserted in the hole closest to the safety latch, secure bolt with a (H8) Washer and (H9) Nut.
See Detail D & Detail E.

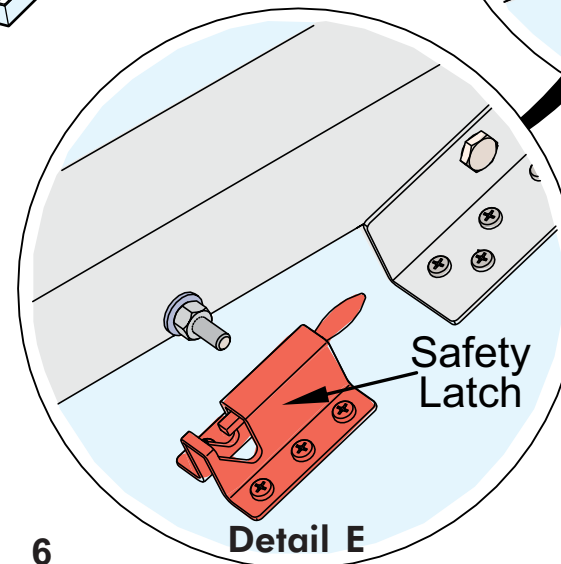


Note:
Bolt should be sticking out enough to engage in safety latch (in later steps).

PARTS REQUIRED:


2 - (P15) Linkage
 2 - (H14) Bushing
 2 - (H13) M6 X 90mm Bolt
 2 - (H11) M6 Nut

TOOLS REQUIRED:

2- 10mm Wrench

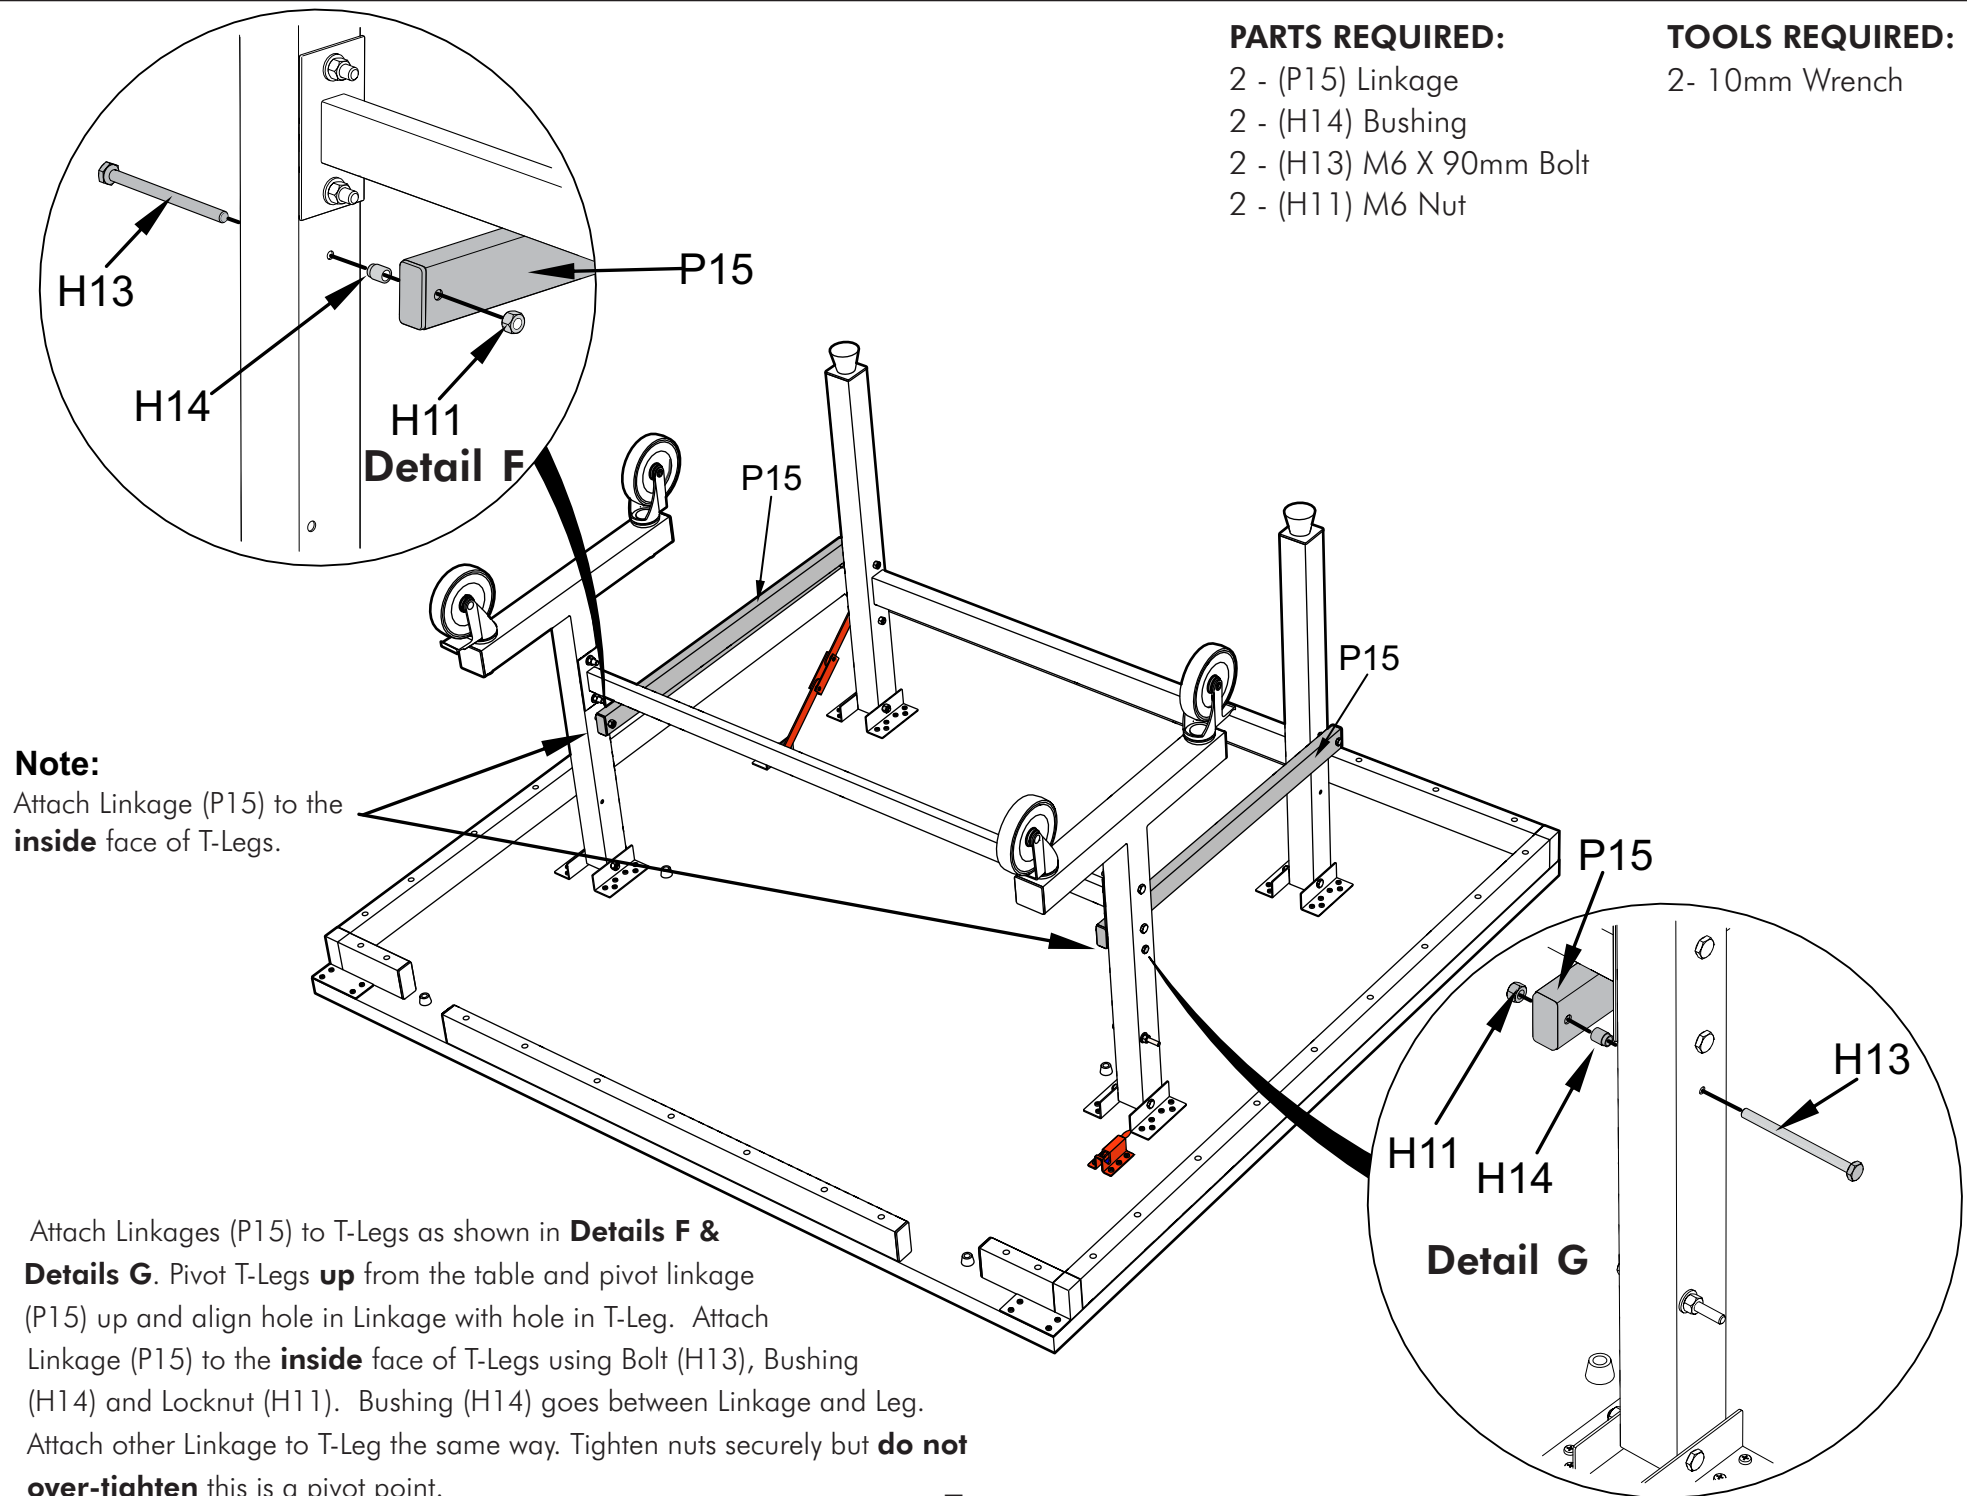


8. Unlock the hinge by pushing down as shown and hold the T-leg in between the two casters. Fold the assembly down **carefully** until it rests on the floor.

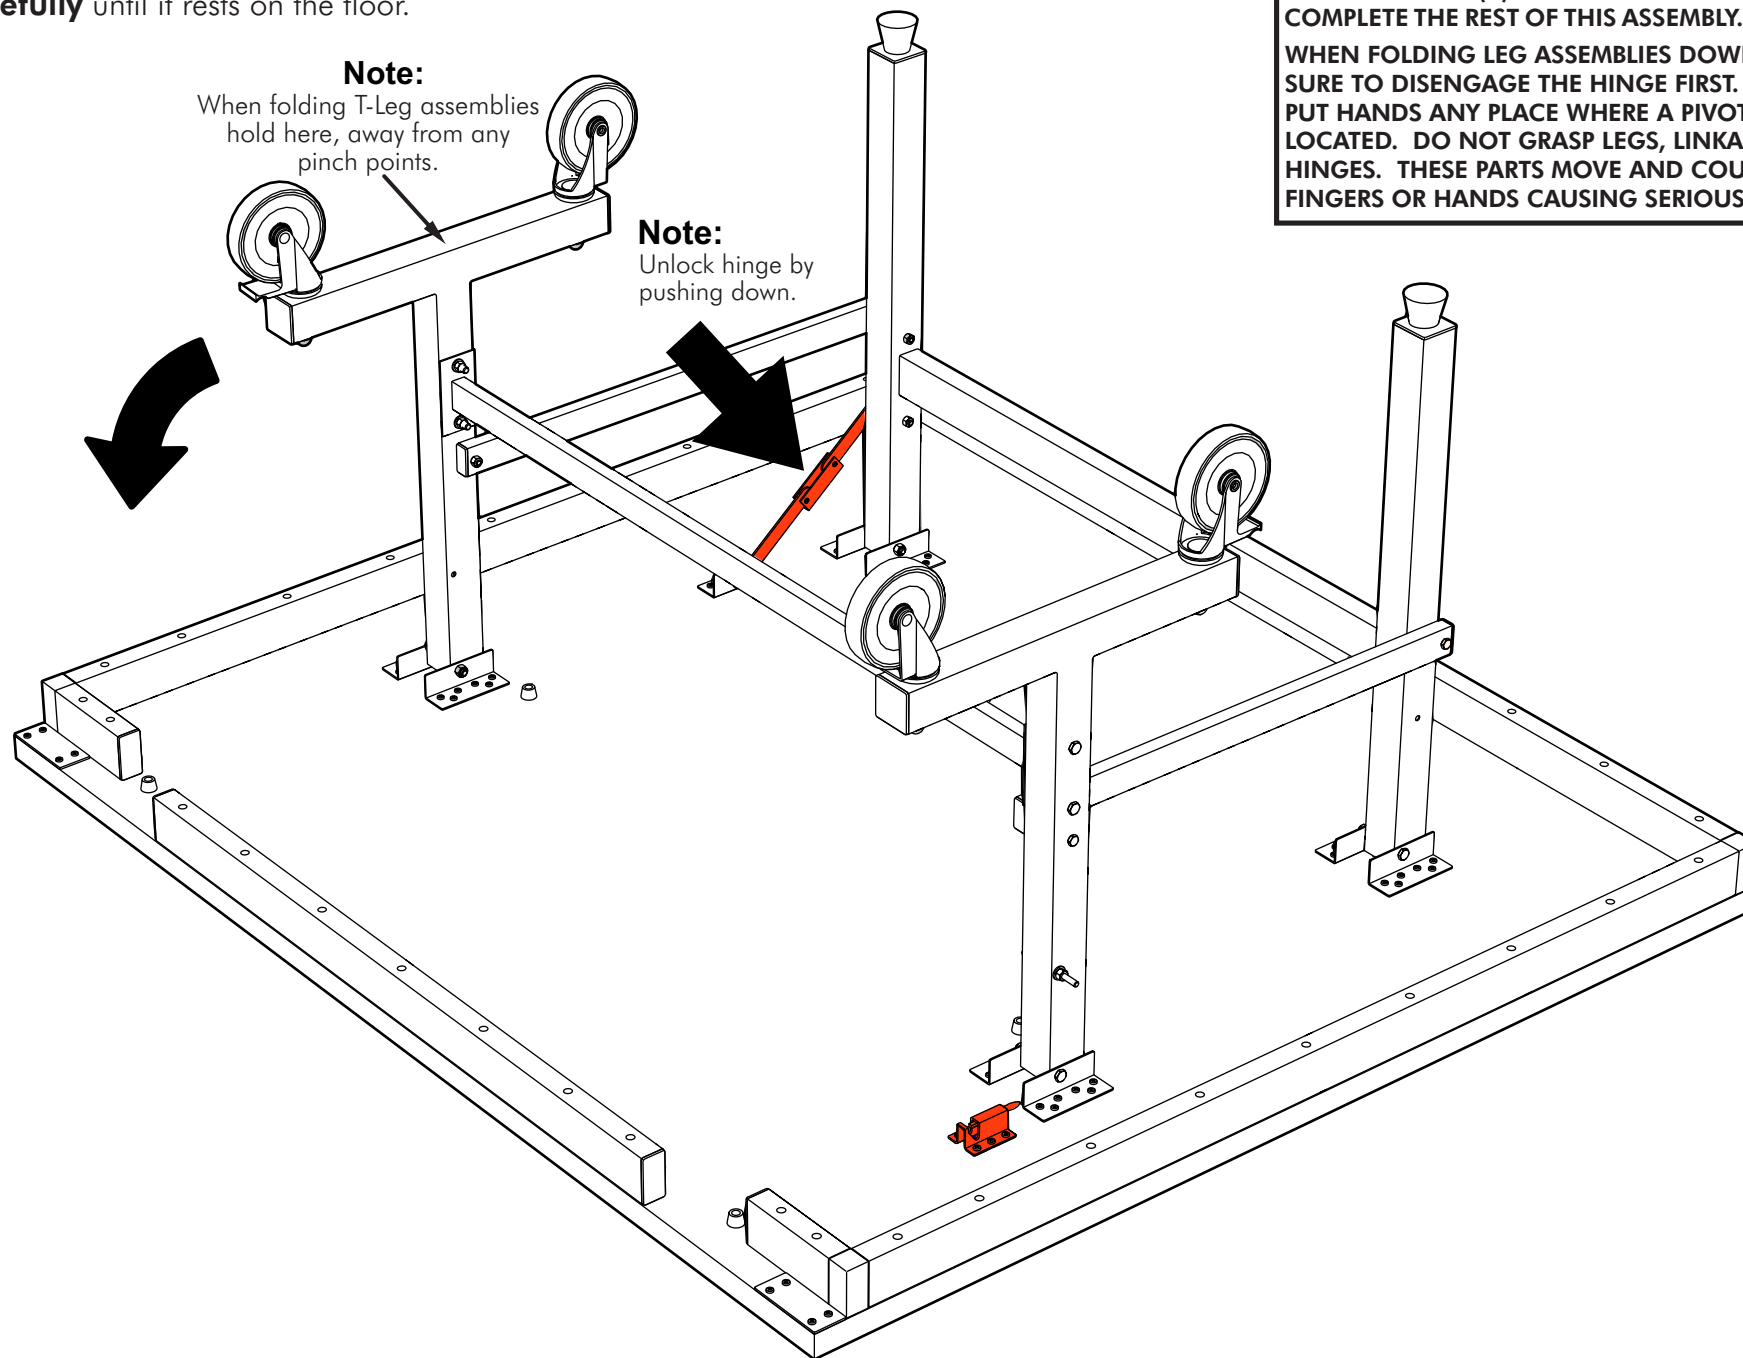


⚠ WARNING:

AT LEAST TWO (2) ADULTS ARE NEEDED TO SET THE TABLE ASSEMBLIES UPRIGHT! WHEN LIFTING AND ROTATING TABLE, HANDLE TOP ASSEMBLIES BY GRASPING ONLY THE TOPS THEMSELVES. DO NOT GRASP METAL LEGS, T-LEGS, LINKAGE, OR HINGES. THESE PARTS CAN MOVE AND COULD PINCH FINGERS OR HANDS CAUSING SERIOUS INJURY! ROTATE WITH T-LEGS FULLY LATCHED.

DO NOT LIFT OR ROTATE TABLE ASSEMBLIES WITH T-LEGS UNLATCHED. TABLE TOPS ARE **HEAVY!** DO NOT ATTEMPT TO ASSEMBLE ALONE!

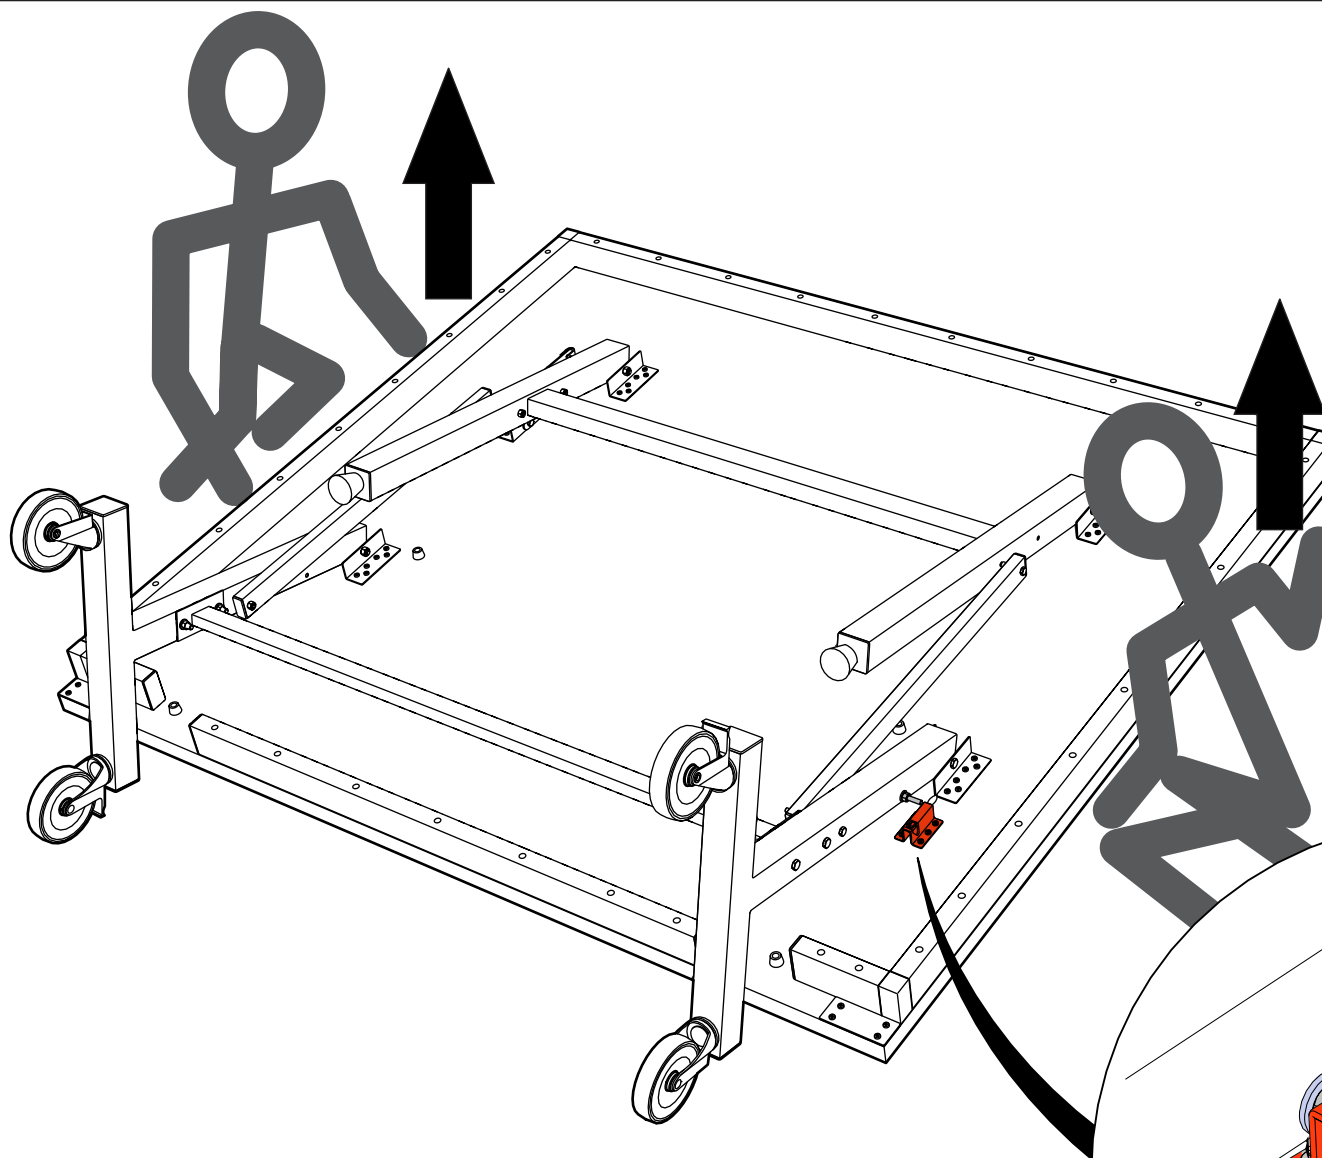

Detail H

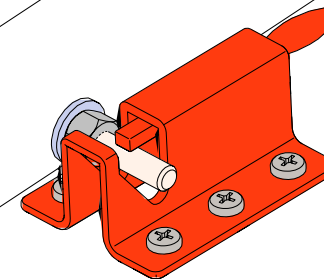

Note:

You will hear a “click” when Bolt is engaged in Safety Latch.


9. With **two people** raise the table up, until you hear the Bolt in T-leg engage into Safety Latch. You will hear a “click” when engaged. See **Detail H**.

10. With **two people** and the **Latch engaged** carefully rotate the table into the upright position as shown. Pay close attention and **do not** grasp any moving parts (Legs, Hinges, Linkages) only grasp the sides of the table as shown. Repeat Steps 1-10 to assemble second table half.

⚠ WARNING:

AT LEAST TWO (2) ADULTS ARE NEEDED TO SET THE TABLE ASSEMBLIES UPRIGHT! WHEN LIFTING AND ROTATING TABLE, HANDLE TOP ASSEMBLIES BY GRASPING ONLY THE TOPS THEMSELVES. DO NOT GRASP METAL LEGS, T-LEGS, LINKAGE, OR HINGES. THESE PARTS CAN MOVE AND COULD PINCH FINGERS OR HANDS CAUSING SERIOUS INJURY! ROTATE WITH "T" LEGS FULLY LATCHED.

DO NOT LIFT OR ROTATE TABLE ASSEMBLIES WITH T-LEGS UNLATCHED. TABLE TOPS ARE HEAVY! DO NOT ATTEMPT TO ASSEMBLE ALONE!

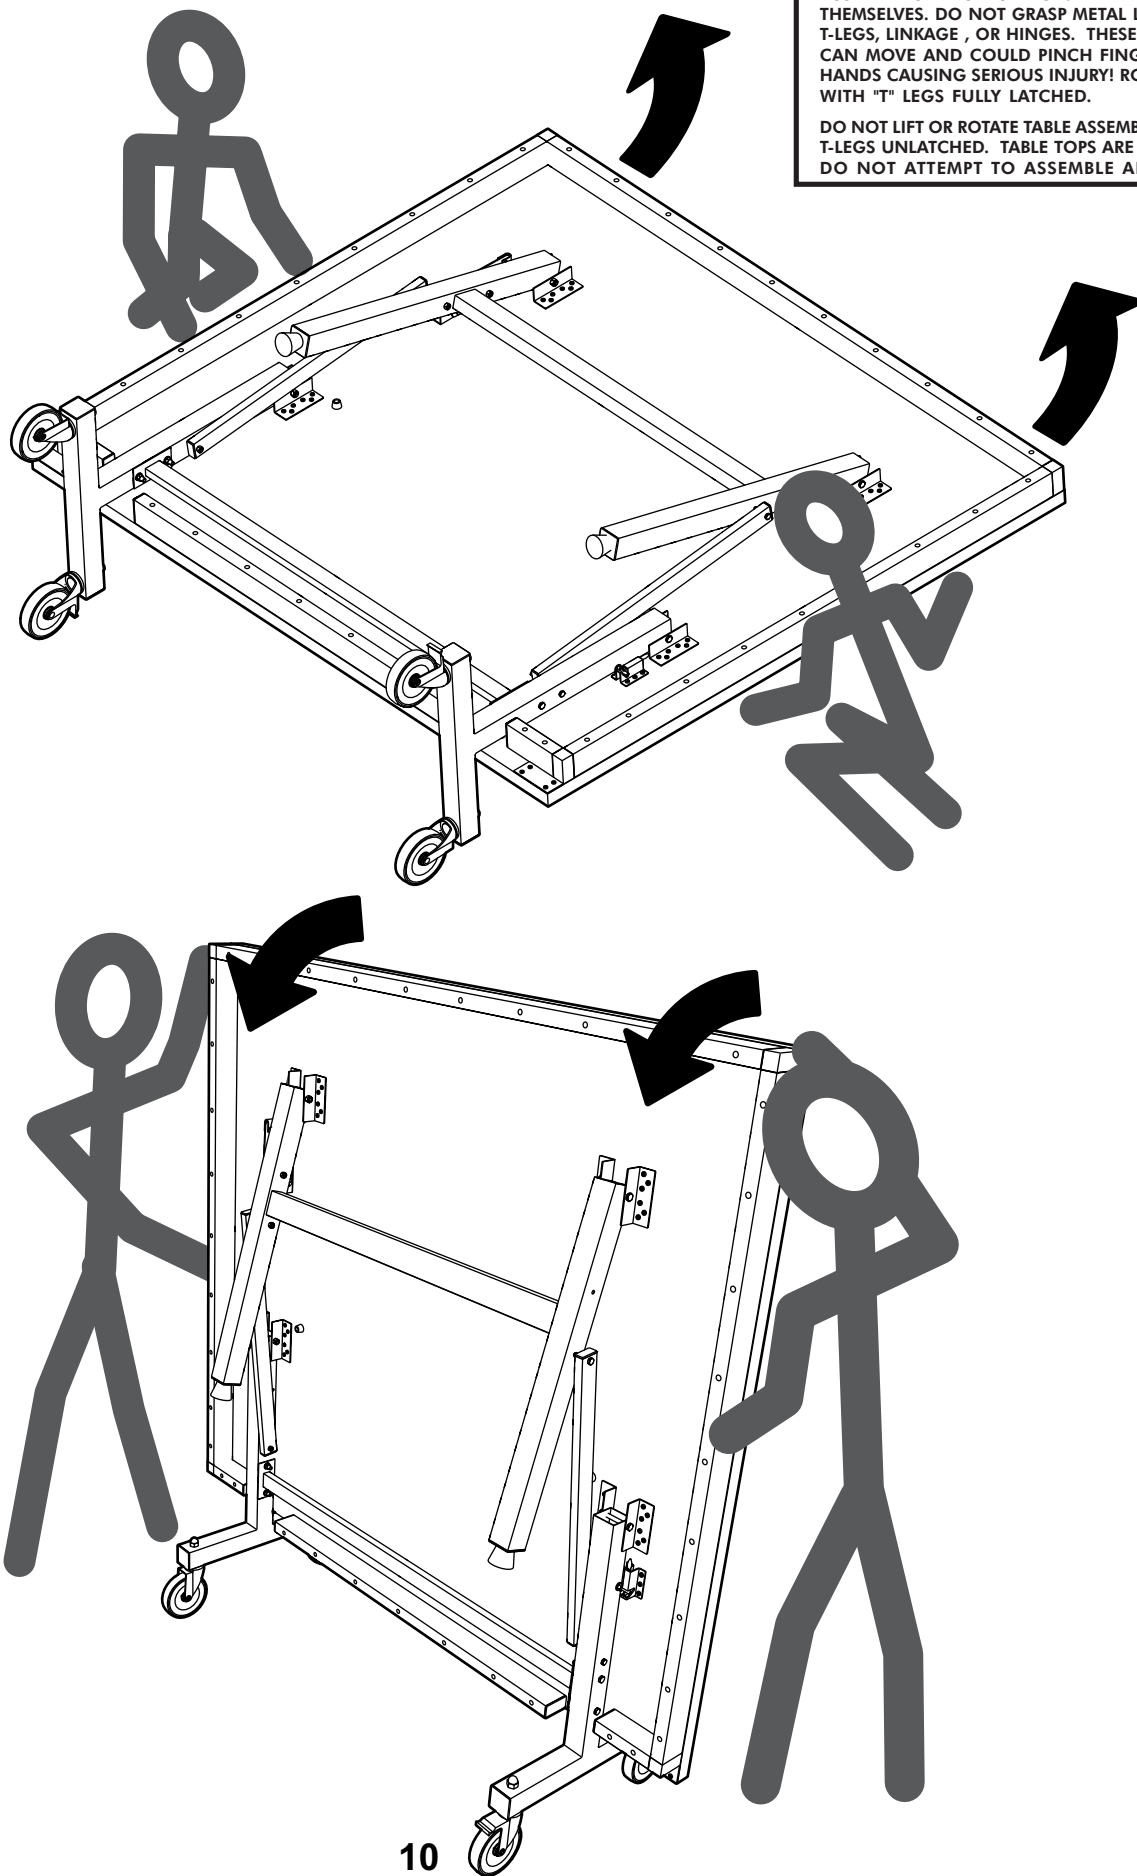


Replacement Parts List for Model Number PT2010

Key#	Part #	Description	Qty.
P1	PT2010-P1	1" Table Top	2
P2	PT2010-P2	T-LEG	2
P3	PT2010-P3	WELDED LEG ASSEMBLY	2
P4	PT2010-P4	LOCKING CASTER WHEEL	4
P5	PT2010-P5	NON-LOCKING CASTER WHEEL	4
P6	PT2010-P6	CROSS BRACE TUBE	2
P7	PT2010-P7	SIDE RAIL	4
P8	PT2010-P8	MIDDLE RAIL	2
P9	PT2010-P9	CORNER RAIL	4
P10	PT2010-P10	RAIL CAP	2
P11	PT2010-P11	RUBBER BUMPER	8
P12	PT2010-P12	END RAIL	2
P13	PT2010-P13	HINGE	2
P14	PT2010-P14	SAFETY LATCH	2
P15	PT2010-P15	LINKAGE	4
P16	PT2010-P16	PLASTIC CORNER	8
P17	PT2010-P17	LEG MOUNTING BRACKET	16
P18	PT2010-P18	LEG LEVELER	4
P19	PT2010-P19	METAL CORNER PLATE	4
P20	PT2010-P20	HINGE Mounting Bracket	2
H1	PT2010-H1	TABLE TOP SCREW	-
H2	PT2010-H2	HINGE BOLT - 3/4"	2
H3	PT2010-H3	CASTER CAP NUT	8
H4	PT2010-H4	HINGE PLASTIC WASHER	4
H5	PT2010-H5	HINGE NUT	4
H6	PT2010-H6	3 1/8" BOLT	2
H7	PT2010-H7	M8 X 70mm Bolt	8
H8	PT2010-H8	FLAT WASHER	10
H9	PT2010-H9	M8 NUT	10
H10	PT2010-H10	M6 X 65mm BOLT	16
H11	PT2010-H11	M6 NUT	24
H12	PT2010-H12	M8 X 80MM BOLT	2
H13	PT2010-H13	M6 X 90 MM BOLT	8
H14	PT2010-H14	PLASTIC BUSHING	8
M1	PT2010-M1	This Owner's Manual	1


*PARTS IDENTIFIER ON NEXT PAGE.

HARDWARE KIT IDENTIFIER (HARDWARE NOT PRE-ASSEMBLED)

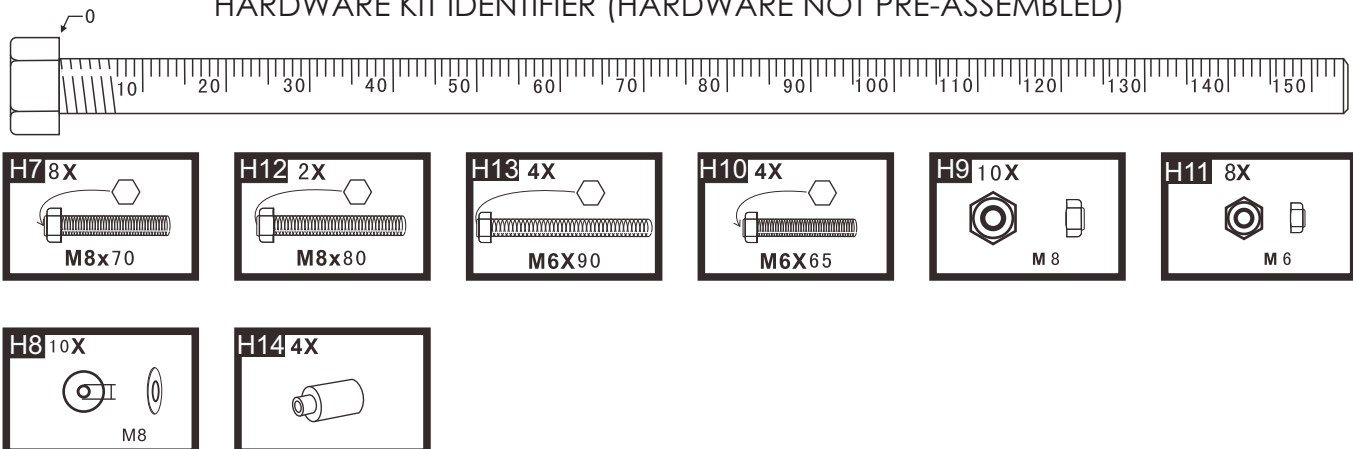

PT2010-00

UNASSEMBLED PARTS

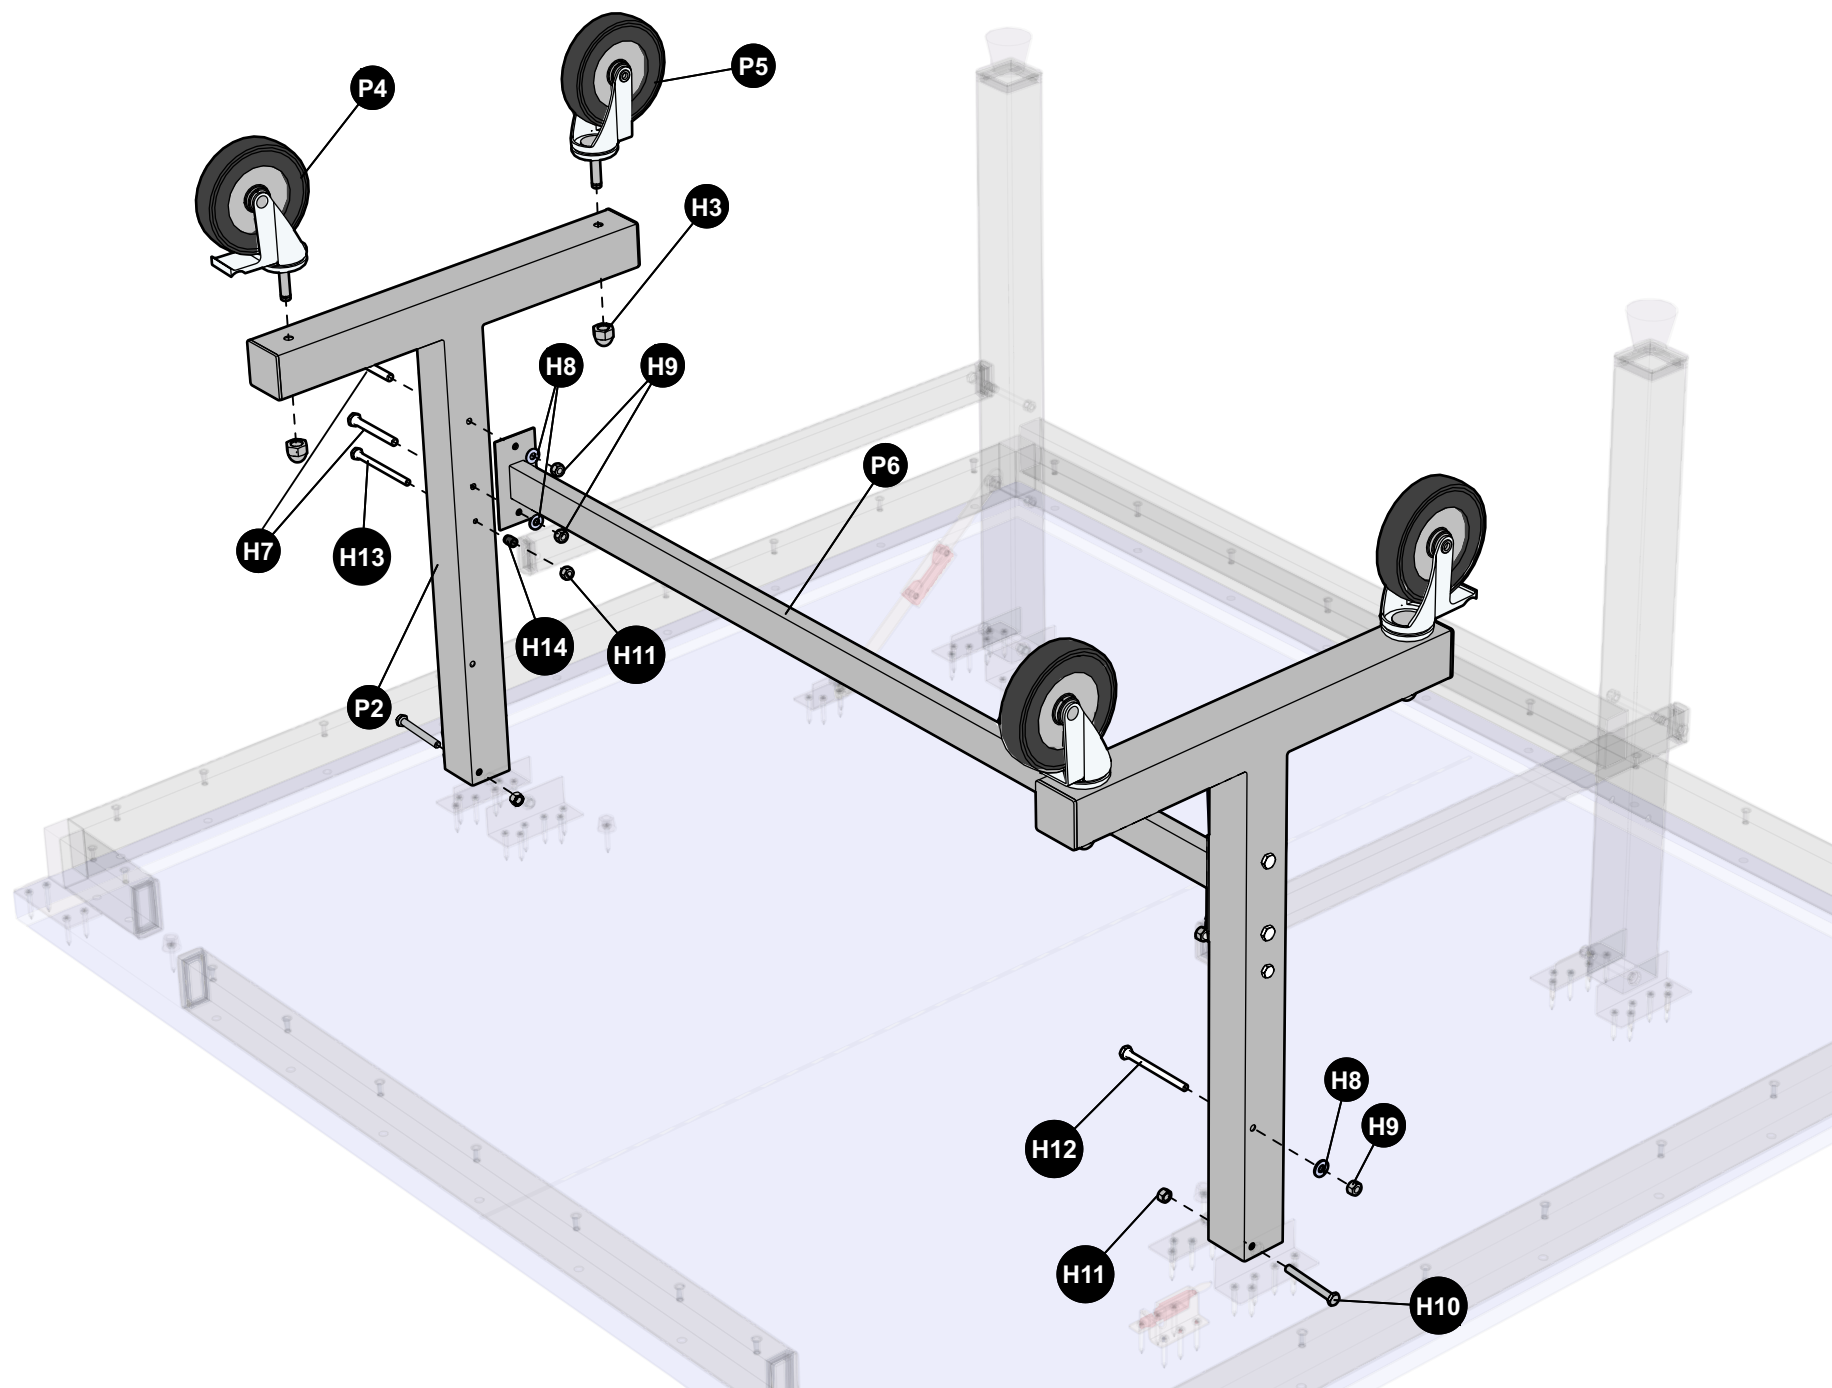

PRE-ASSEMBLED PARTS

