



Congratulations on the purchase of your new Prince Table Tennis table. Our products are designed and manufactured to give you years of game playing enjoyment.

☒ *KEEP BOX AND PACKING MATERIAL UNTIL TABLE HAS BEEN COMPLETELY ASSEMBLED.*

☒ *ALL DAMAGE MUST BE REPORTED TO DMI WITHIN TEN DAYS OF RECEIPT.*

☒ *If you have any problems with your new product,*

**PLEASE DO NOT RETURN IT TO THE STORE.**

Please contact us:

**1.800.399.4402**

**FAX: 215.283.9573**

Please have your model number when inquiring about parts.

Or write to:

DMI Sports

Customer Service

1300 Virginia Drive, Suite 401

Fort Washington PA, 19034

Please visit our web site at:

**[www.dmisports.com](http://www.dmisports.com)**

When contacting DMI Sports, please provide your model number and item number (if applicable) if requesting a replacement part.

Item numbers can be found inside this owners manual.

Your Model Number **PT1300**

**Your model number is also located on the original carton. These instructions are also available online at: [www.dmisports.com](http://www.dmisports.com).**


## IMPORTANT!

**Please Keep Your Instructions!** (You will need your Model number should you need to contact us.) Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts Identifier on the following page and be sure that all parts have been included. This product is manufactured according to the ITTF standards (International Table Tennis Federation), and includes national and international patents.

DMI Sports Inc. warrants this product for one year from the purchase date for any manufacturing or material defect. High-density chipboard is warranted for one year from date of purchase. Although we at DMI Sports are dedicated to giving our customers the highest quality products, occasionally a part may be missing. If you are missing a part, or if you have any questions, please call our customer service department at 1.800.399.4402 Mon-Fri between the hours of 9:00am and 5:00pm E.S.T; or you can reach us at: [www.dmisports.com](http://www.dmisports.com).

Do not return the game to the store. Please contact us first at: 1.800.399.4402 or on our website at: [www.dmisports.com](http://www.dmisports.com).

## TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS TENNIS TABLE




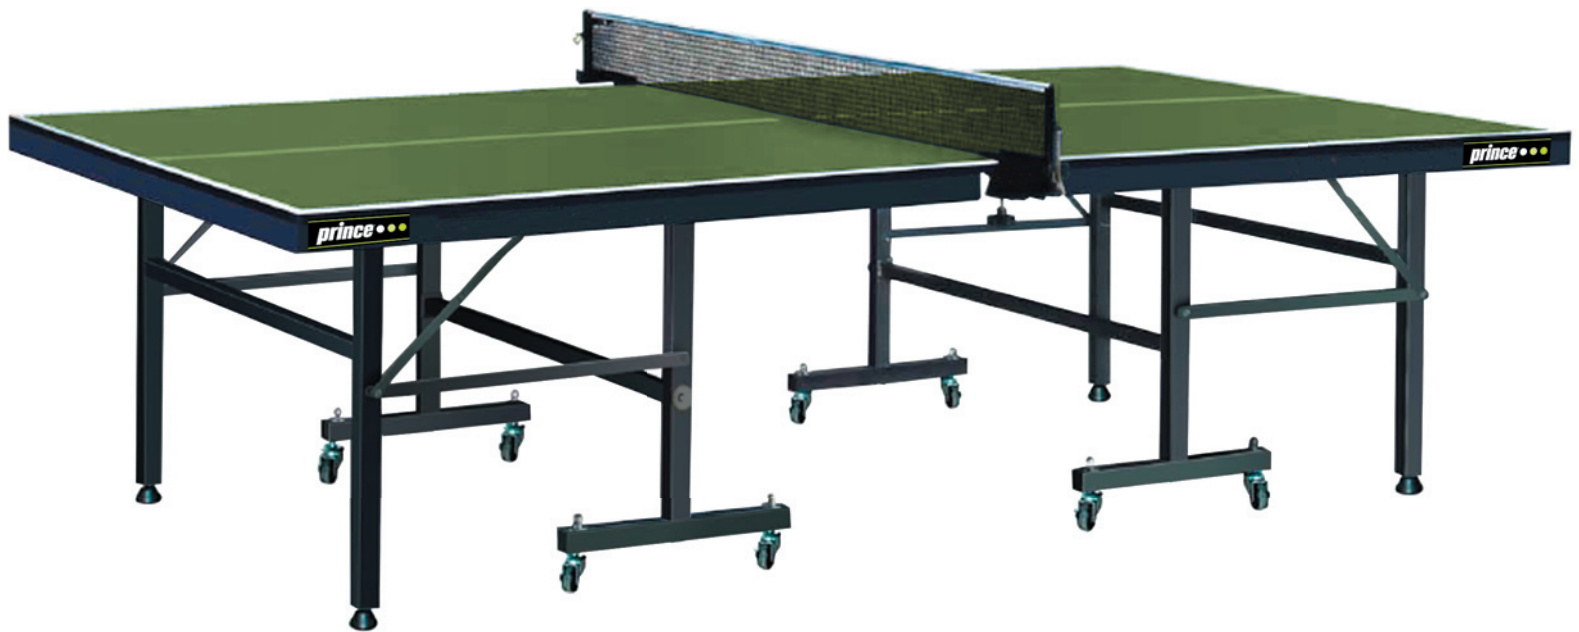


## TOOLS REQUIRED FOR ASSEMBLY:

- Wrench Set or Pliers- Not Included

## PARTS IDENTIFIER

### ASSEMBLY PARTS

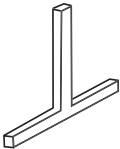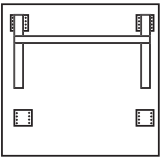
|                                                                                     |        |                                                                                     |        |                                                                                       |        |                                                                                      |        |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|--------|--------------------------------------------------------------------------------------|--------|
| P1                                                                                  | Qty. 4 | P2                                                                                  | Qty. 4 | P3                                                                                    | Qty. 2 | P4                                                                                   | Qty. 2 |
|    |        |    |        |     |        |   |        |
| <b>Leg Bolt</b><br>RPPT1300-BOLT                                                    |        | <b>Inner Leg</b><br>RPPT1300-ILEG                                                   |        | <b>Cross Bar</b><br>RPPT1300-CBAR                                                     |        | <b>Outer Leg</b><br>RPPT1300-OLEG                                                    |        |
| P5                                                                                  | Qty. 4 | P6                                                                                  | Qty. 4 | P7                                                                                    | Qty. 2 | P8                                                                                   | Qty. 1 |
|   |        |   |        |    |        |  |        |
| <b>Leg Leveler</b><br>RPPT1300-LEV                                                  |        | <b>Control Brace</b><br>RPPT1300-BRACE                                              |        | <b>Table Half</b><br>RPPT1300-THALF                                                   |        | <b>Net and Post</b><br>RPPT1300-NET                                                  |        |
| P9                                                                                  | Qty. 8 | P10                                                                                 | Qty. 8 | <b>Note: Outer Legs (P4)<br/>come pre-assembled<br/>to the Table halves<br/>(P7).</b> |        |                                                                                      |        |
|  |        |  |        |                                                                                       |        |                                                                                      |        |
| <b>Wheels</b><br>RPPT1300-WHEEL                                                     |        | <b>Wheel Washer</b><br>RPPT1300-WASH                                                |        |                                                                                       |        |                                                                                      |        |

# Prince Challenger FSA - Code: PT1300 - Assembly Instructions



Open the box and position the two play surfaces face down on the cardboard.

**Note:** Make sure that at least two adults handle the table at all times during assembly.

**STEP 1.** (Fig. 1) Attach Inner Legs (P2) by aligning the pre-drilled hole at the top of the inner leg with the hole in the pre-assembled bracket of the table half, shown in Fig. 1. Secure the inner leg to the bracket using Leg Bolt and Washer (P1). Carefully place the Washer (P10) provided with the Wheels (P9) on the wheel as seen in Fig. 1a. Now secure the wheel (P9) to the Inner Leg (P2) as shown in Fig. 1.

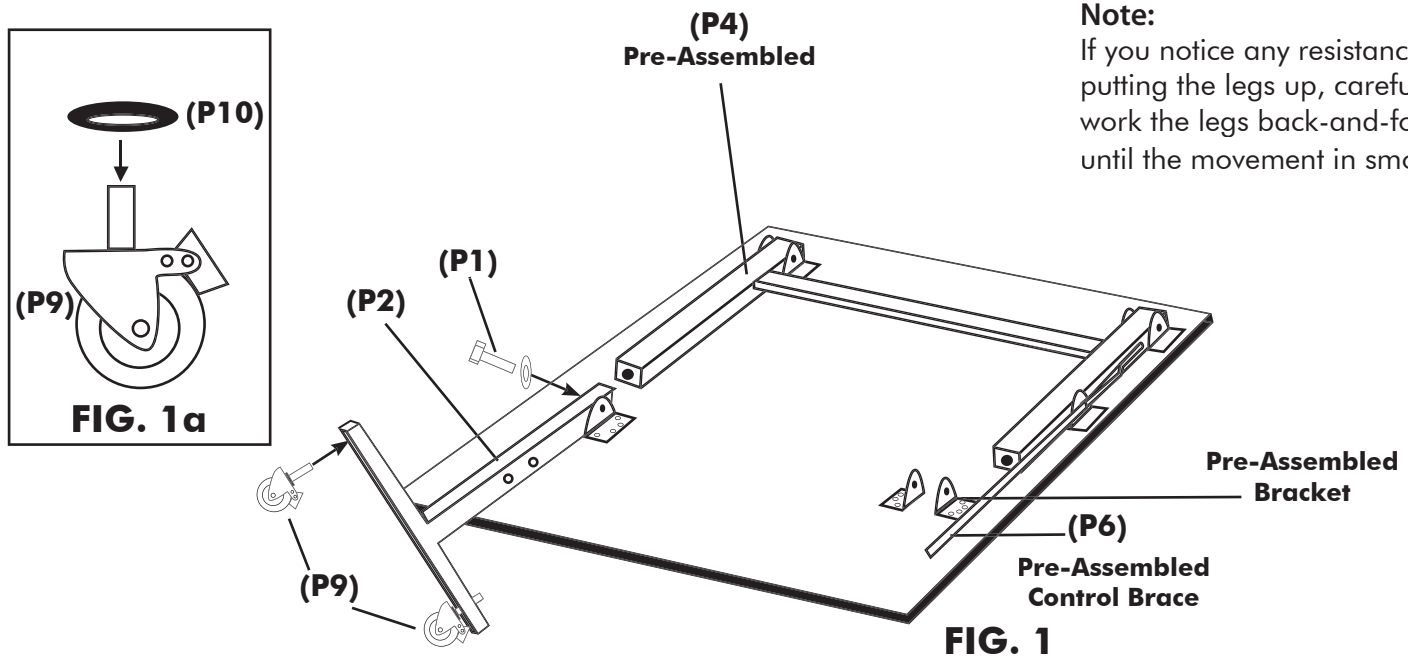

**STEP 2.** (Fig. 2) Attach the Control Brace (P6) to the Inner Leg (P2) as shown in Fig 2. The control brace is pre-assembled to (P4). Note: the control brace hardware is pre-assembled to the control brace. Carefully remove the hardware to properly attach the brace to the inner leg. Attach Leg Levelers (P5) to the pre-assembled Outer Legs (P4).

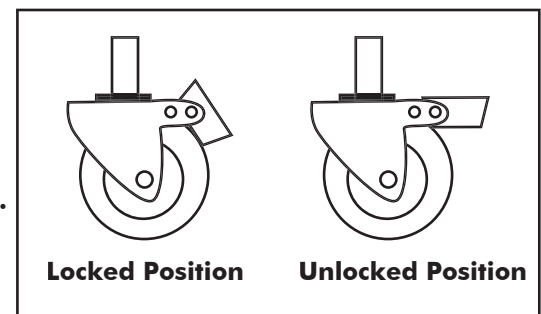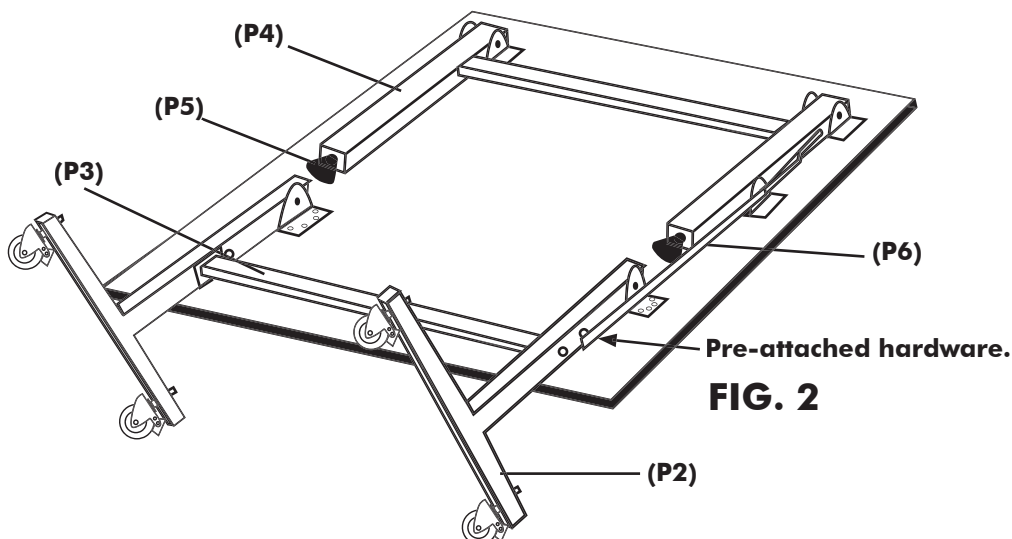

**STEP 3.** (Fig. 2) Attach the Cross Bar (P3) to the now assembled Inner Legs (P2) using the pre-installed hardware provided in the cross bar.



## RECOMMENDATION OF USE AND PRECAUTIONS

**Anyone using or handling this table tennis table must always follow the illustrated instructions attached to the back of the board and be fully aware of the operation instructions.**

1. Handling the table, (Assembly, open, close or to store) should always be done by two adults to prevent accident or injury.
2. Be sure that no persons or objects are in the way of the boards when opening the table.
3. Do not put heavy objects on the table.
4. Do not sit on the table.
5. Do not clean the table with solvents or any other aggressive product because it could damage the paint finish.
6. Do not use sharp objects on the board or painter surface.
7. If the table is used for purposes other than playing table tennis, cover the surface to prevent any damage.
8. Request proof of purchase and keep it during the warranty period.
9. Under no circumstances is the manufacturer responsible for direct or indirect damages including loses of benefits or any other commercial damage occurred by the use of the purchased product.
10. The functioning and storage of this product should always be supervised by an adult.
11. Do not store or handle the table on an unstable floor surface.
12. If safety device malfunction occurs, secure table tops until the problem is solved.
13. To extend the life of this product, (outdoor table or indoor table) protect it from moisture or severe climate changes.
14. Use only the net system supplied. For replacements please contact customer service at: 800.399.4402

## Care and Maintenance

### Cleaning your table

Use a soft damp (not wet) cloth only. DO NOT USE ANY CHEMICALS, ABRASIVE OR CLEANING PRODUCTS on the playing surface.

### Maintenance of your table

All moving parts must be oiled including the pivot points. This will insure ease of use and safety of your table.

This table must be stored indoors to avoid damage to the surface. The dampness and temperature changes can cause wood to warp, swell or blister.

## PARTS RE-ORDER FORM

## PT1300 Table Tennis Table

Send this form along with your  
check or money order payable to:

# DMI SPORTS

1300 Virginia Drive, Suite 401

Fort Washington, PA 19034

**www.dmisports.com**

DATE: \_\_\_\_\_

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_ PHONE: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP CODE: \_\_\_\_\_

[illegible]