


GoalrillaTM

THE TOUGHEST TRAINING SYSTEM ON THE PLANET.

MODEL NO.

TR5000

STRIKER TRAINERTM

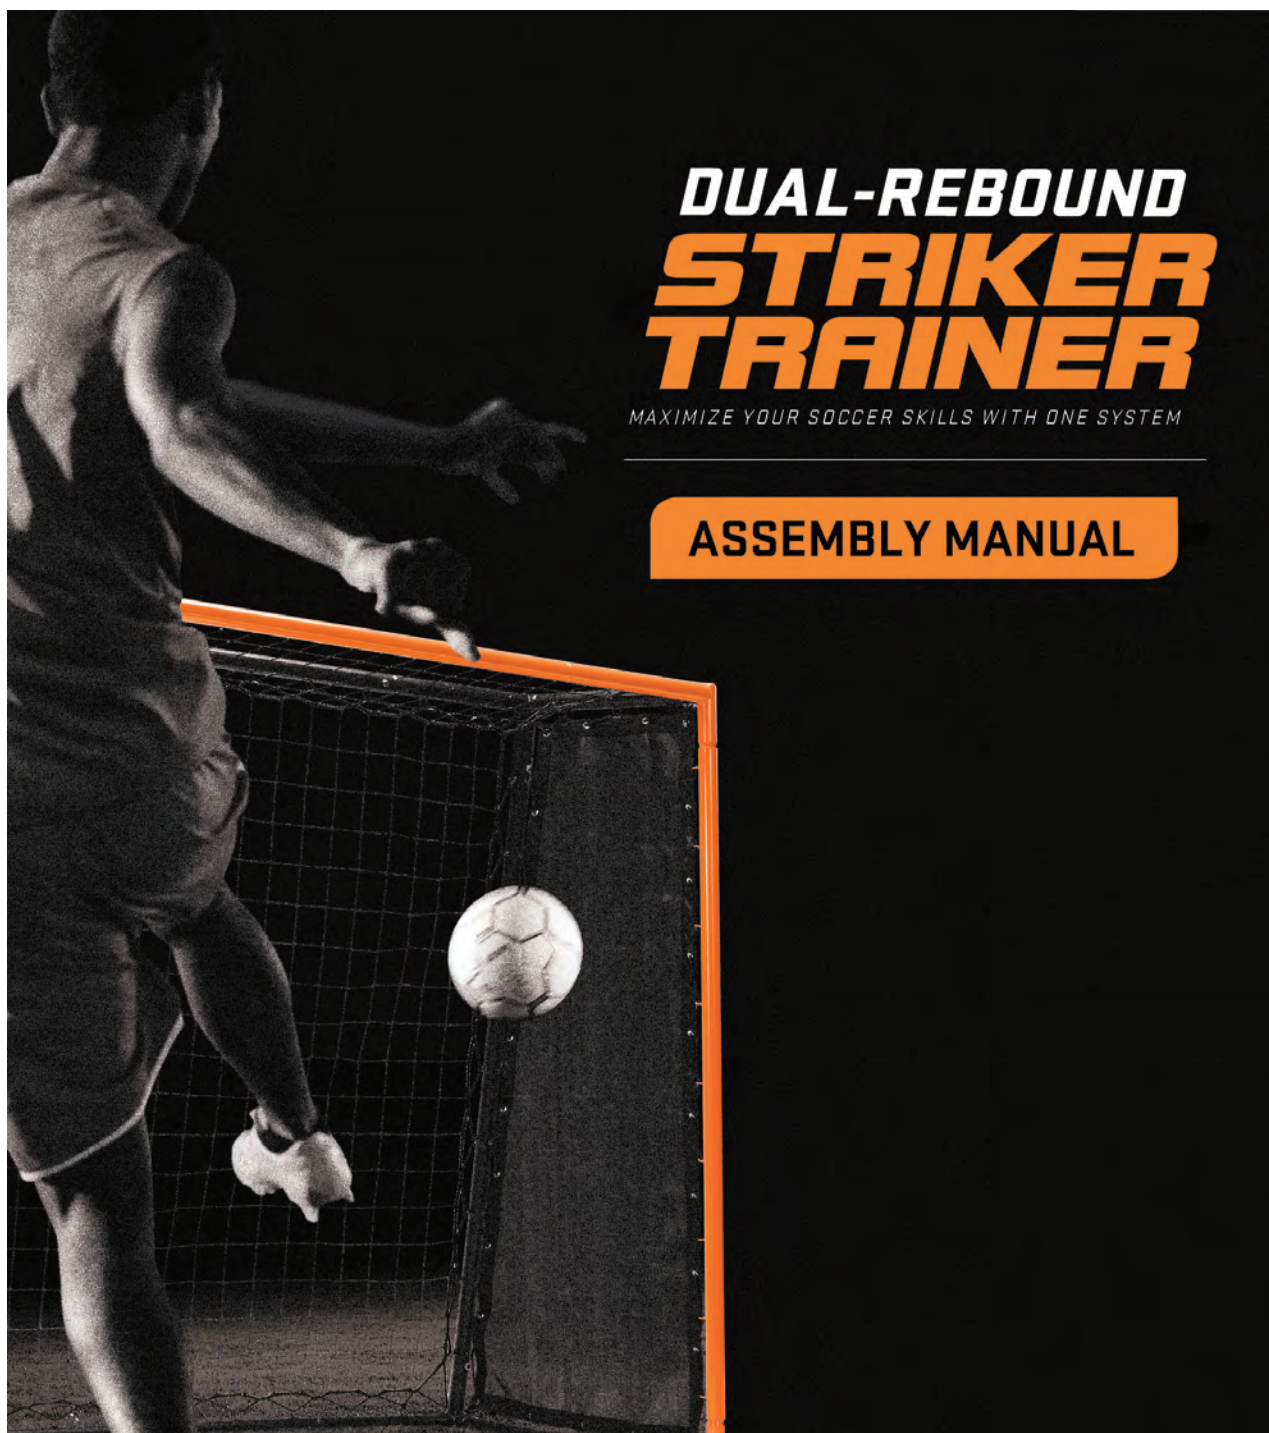

DUAL-REBOUND STRIKER TRAINER

MAXIMIZE YOUR SOCCER SKILLS WITH ONE SYSTEM

ASSEMBLY MANUAL

ESCALADE[®]

S P O R T S

2L-7250-00

Escalade[®] Sport products may be manufactured and/or licensed under the following patents.

6419596, 6179733, 5919102, 5071120, 4798381, 4424968, D326128

Additional patents may be pending. One or more of the listed patents and/or pending patents may cover specific product.

© 2011 Escalade[®] Sports



THE TOUGHEST TRAINING SYSTEM ON THE PLANET.

MODEL NO.

TR5000

STRIKER TRAINER™

OWNER'S MANUAL

1. Read this manual carefully before starting assembly. Read each step completely before beginning each step.
2. Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.
3. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together. Leave bolts slightly loose until you are instructed to tighten them.
4. Tools required for assembly:
Allen Wrench T1 (included) Rubber Mallet
5. To make assembly as easy as possible, place all parts of the trainer in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
6. Avoid scratching metal tube parts during the assembly process.
7. Assemble product on level surface.
8. Take time to correctly orientate parts exactly as per each assembly diagram.
9. Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

FOR ASSEMBLY VIDEOS, VISIT:

www.goalrilla.com/training

Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

Phone: 1-888-USA-GOAL Toll-Free!

Fax: 1-866-873-3536 Toll-Free!

E-mail: training@escaladesports.com

Mailing Address:

Escalade Sports

PO Box 889

Evansville, IN 47706



Please visit our website at: www.Goalrilla.com

ON-LINE TROUBLE SHOOTING

ON-LINE PARTS REQUESTS

ADDITIONAL ESCALADE® SPORTS PRODUCT INFORMANTION

TECHNICAL ASSISTANCE

FREQUENTLY ASKED QUESTIONS

ESCALADE®
SPORTS

2L-7250-00

Escalade® Sport products may be manufactured and/or licensed under the following patents.

6419596, 6179733, 5919102, 5071120, 4798381, 4424968, D326128

Additional patents may be pending. One or more of the listed patents and/or pending patents may cover specific product.

© 2011 Escalade® Sports


WARNING

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE


Owner must ensure that all users know and follow these rules for safe operation of the product.

- Product is recommended for children 9 years of age and older.
- Strangulation hazard, keep young children away from netting.
- Do not climb or jump on any part of the product including the rebound net.
- Do not use in gusty or severe winds. It is recommended to store indoors, or chained to a nearby sturdy structure, during windy/stormy days.
- Never use the rebounder side and goal side at the same time.
- Balls can come back off the rebound net an frame at high speeds. Be prepared for the returning ball.
- During play, do not wear jewelry (rings, watches, necklaces, etc.) Objects may entangle in the net.
- Check product before each use for loose hardware, frayed nets or bungee cord, or signs of rust and instability. Repair before each use. Never play on damaged equipment.
- This goal is not to be stored or used on a slop or hill area.
- Always exercise caution when moving goals.
- Always instruct player on the safe handling and potential dangers associated with movable goals.
- This goal should be securely anchored when possible.
- This goal is exempt from the requirements of ASTM F2673 (All goals must be anchored)
- When inserting P21 - Ground Stakes into the ground, make sure to choose an area where there are no underground pipes or cables that could be damaged by the stakes.

HARDWARE IDENTIFIER (To Scale)




H1 - M6 x 16mm
Allen Head Bolt
(22 pcs)



H2 - M6 x 12mm
Flat Washer
(22 pcs)




H3 - M6
Lock Washer
(22 pcs)




(Not to Scale)
T1 - M6 Allen
Wrench - 4mm
(1 pc)


PARTS IDENTIFIER (Not to Scale)

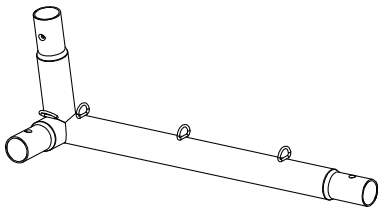


P1L - **Black** Left Back
Bottom Corner (1 pc)

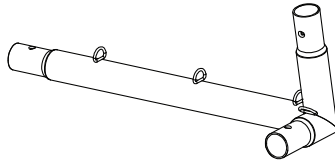


P2R - **Black** Right Back
Bottom Corner (1 pc)

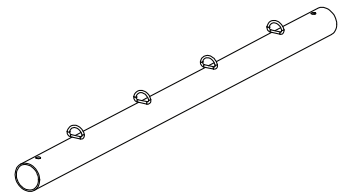


P3 - **Black** Bottom
Side Connecting
Tube (2 pcs)




P4 - **Orange** Front
Bottom Corner (2 pcs)

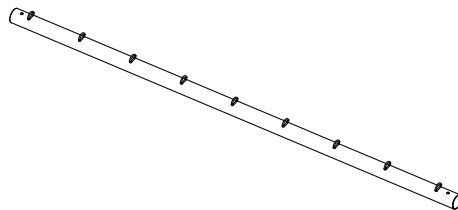


P5 - **Orange** Front
Vertical Connection
Tube (2 pcs)

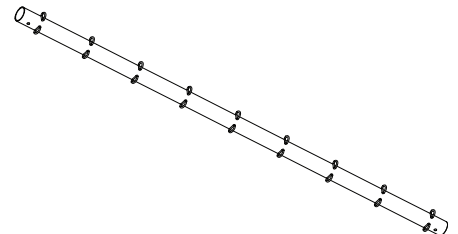

P6 - **Black** Back
Vertical Connection
Tube (2 pcs)

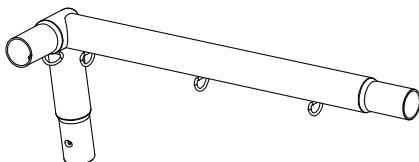


P7L - **Black** Left Back
Top Corner (1 pc)

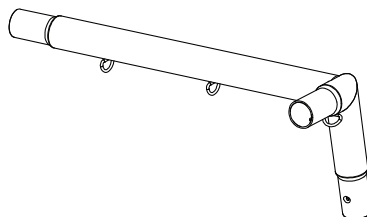

P8R - **Black** Right Back
Top Corner (1 pc)

Goalrilla logo
in this side

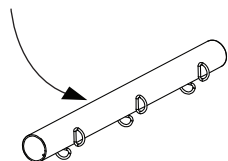


P9L - **Black** Left Top
Side Connecting
Tube (1 pc)


PARTS IDENTIFIER (Not to Scale)




P10R - **Black** Right
Top Side Connecting
Tube (1 pc)

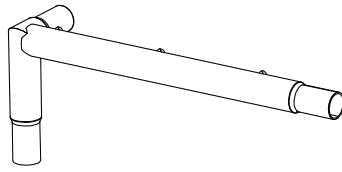


P11L - **Orange** Left
Front Top Corner (1 pc)

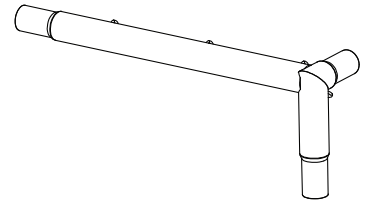


P12R - **Orange** Right
Front Top Corner (1 pc)

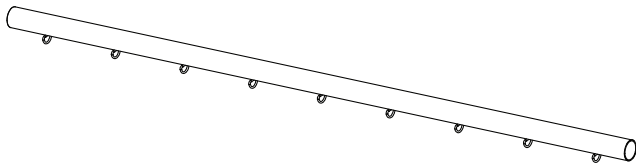


P13 - **Black** Back Bottom Top Horizontal
Connecting Tube (2 pcs)

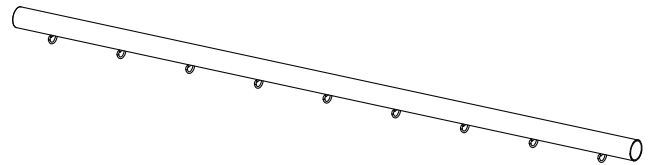


P14 - **Orange** Front Top Horizontal
Connecting Tube (1 pc)

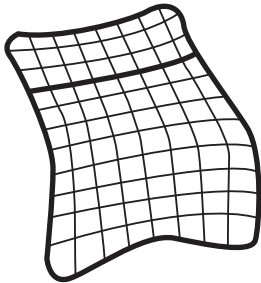

P15 - Rebound / Goal
Net (1 pc)

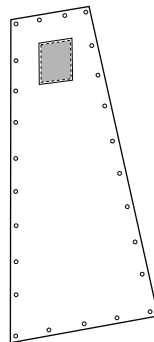

P16L - Left Side
Net (1 pc)

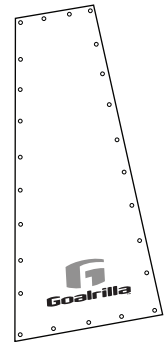

P17R - Right Side
Net (1 pc)




P18 - 256" Rebound /
Goal Net Outer
Perimeter
Bungee Cord
(1 pc)



P19 - 70-7/8"
Secondary Rebound /
Goal Net Top-Back
Bungee Cord
(1 pc use / 1 Extra pc
for Future Use)



P20 - 185" Side
Net Bungee
Cord (2 pcs)

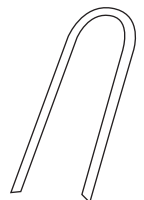

P21 - Ground
Stake (4 pcs)

STEP 1:

DO NOT TIGHTEN ANY ALLEN HEAD BOLTS H1 UNTIL COMPLETION OF FRAME ASSEMBLY IN STEP 4.

NOTE CORRECT ORIENTATION OF ALL PARTS AS SHOWN IN FIGURE 1 FOR CORRECT ASSEMBLY.

Assemble **P1L**, **P3** and **P4** as shown in **FIGURE 1**.



Assemble **P2R**, **P3** and **P4** as shown in **FIGURE 1**.

Install, but **do not tighten** Allen Head Bolts **H1** as shown in **FIGURE 1**.

PARTS REQUIRED:

- 4 pcs - **H1** Allen Head Bolt
- 4 pcs - **H2** Flat Washer
- 4 pcs - **H3** Lock Washer
- 1 pc - **P1L Black** Left Back Bottom Corner
- 1 pc - **P2R Black** Right Back Bottom Corner
- 2 pcs - **P3 Black** Bottom Side Connecting Tube
- 2 pcs - **P4 Orange** Front Bottom Corner

- 1 pc - **T1** Allen Wrench
- 1 pc - Rubber Mallet

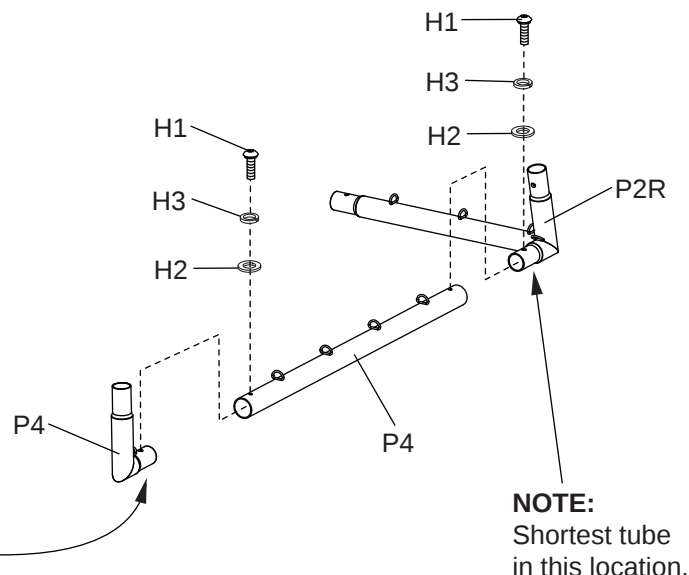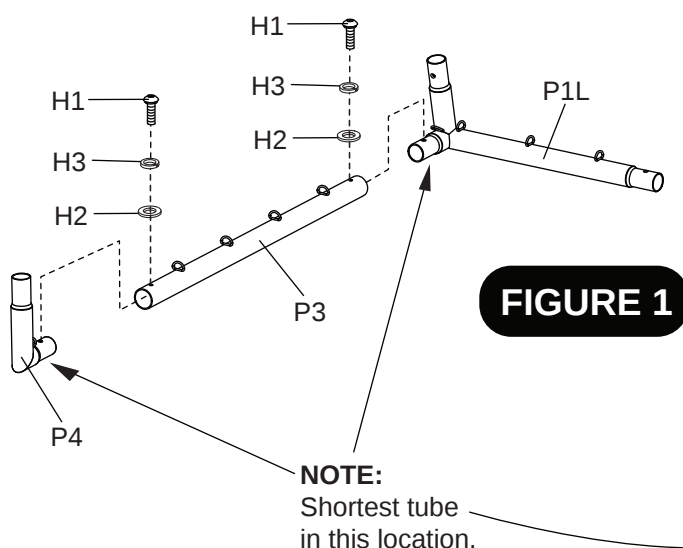

STEP 2:

DO NOT TIGHTEN ANY ALLEN HEAD BOLTS H1 UNTIL COMPLETION OF FRAME ASSEMBLY IN STEP 4.

NOTE CORRECT ORIENTATION OF ALL PARTS AS SHOWN IN FIGURE 1 FOR CORRECT ASSEMBLY.

Assemble **P5** Tubes onto each **P4** Tube as shown in **FIGURE 2**. Assemble **P6** Tubes onto **P1L** and **P2R** Tube as shown in **FIGURE 2**. Install, but **do not tighten** Allen Head Bolts **H1** as shown in **FIGURE 2**.

PARTS REQUIRED:

- 4 pcs - **H1** Allen Head Bolt
- 4 pcs - **H2** Flat Washer
- 4 pcs - **H3** Lock Washer
- 2 pcs - **P5 Orange** Front Vertical Connecting Tube
- 2 pcs - **P6 Black** Back Vertical Connecting Tube


- 1 pc - **T1** Allen Wrench
- 1 pc - Rubber Mallet

NOTE:
"D" Rings must face back.

NOTE:
"D" Rings must face front and inside.

NOTE:
"D" Rings must face back.

FIGURE 2

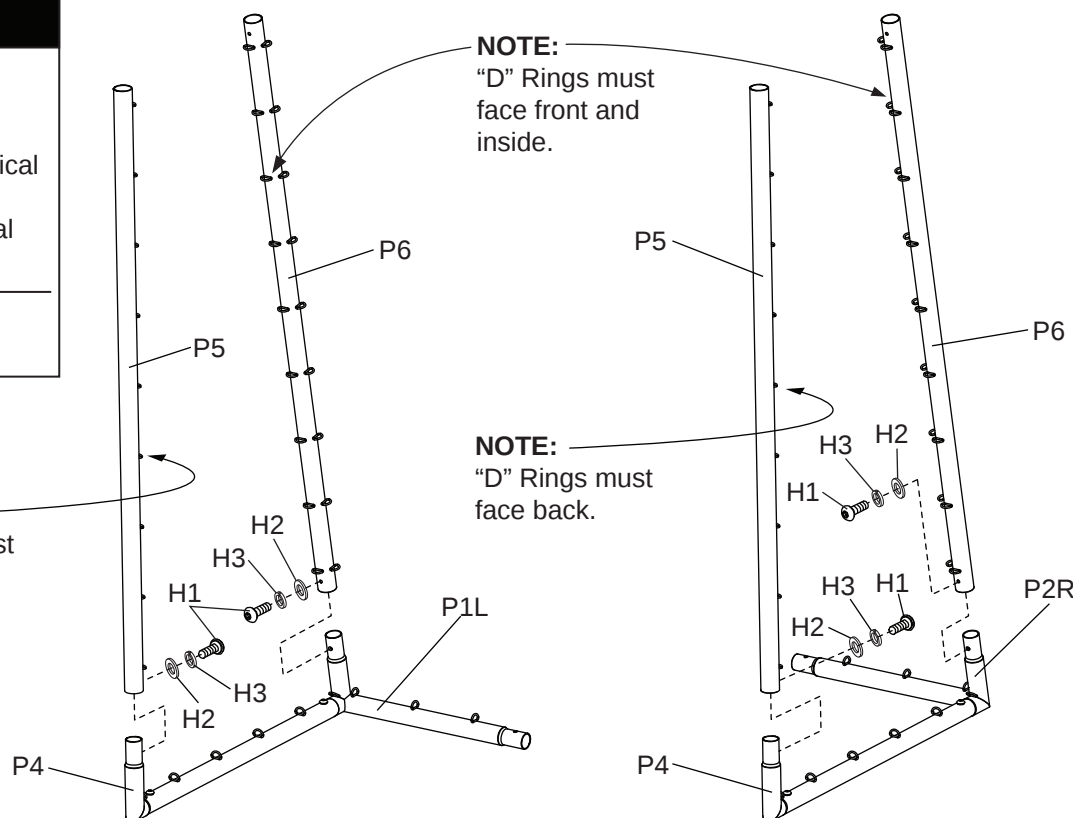

⚠ CAUTION:

THIS STEP REQUIRES TWO OR MORE ADULTS TO KEEP THE PARTIAL ASSEMBLIES FROM TIPPING OVER.

STEP 3:

DO NOT TIGHTEN ANY ALLEN HEAD BOLTS H1 UNTIL COMPLETION OF FRAME ASSEMBLY IN STEP 4.

NOTE CORRECT ORIENTATION OF ALL PARTS AS SHOWN IN FIGURE 3 FOR CORRECT ASSEMBLY.

PARTS REQUIRED:

8 pcs - **H1** Allen Head Bolt
 8 pcs - **H2** Flat Washer
 8 pcs - **H3** Lock Washer
 1 pc - **P7L Black** Left Back Top Corner
 1 pc - **P8R Black** Right Back Top Corner
 1 pc - **P9L Black** Left Top Side Connecting Tube
 1 pc - **P10R Black** Right Top Side Connecting Tube
 1 pc - **P11L Orange** Left Front Top Corner
 1 pc - **P12R Orange** Right Front Top Corner

1 pc - **T1** Allen Wrench
 1 pc - Rubber Mallet

Assemble **P7L**, **P9L** and **P11L** as shown in **FIGURE 3**. Attach this assembly onto **P5** and **P6** as shown in **FIGURE 1**.

Assemble **P8R**, **P10R** and **P12R** as shown in **FIGURE 3**. Attach this assembly onto **P5** and **P6** as shown in **FIGURE 1**.

Install, but **do not tighten** Allen Head Bolts **H1** as shown in **FIGURE 3**.


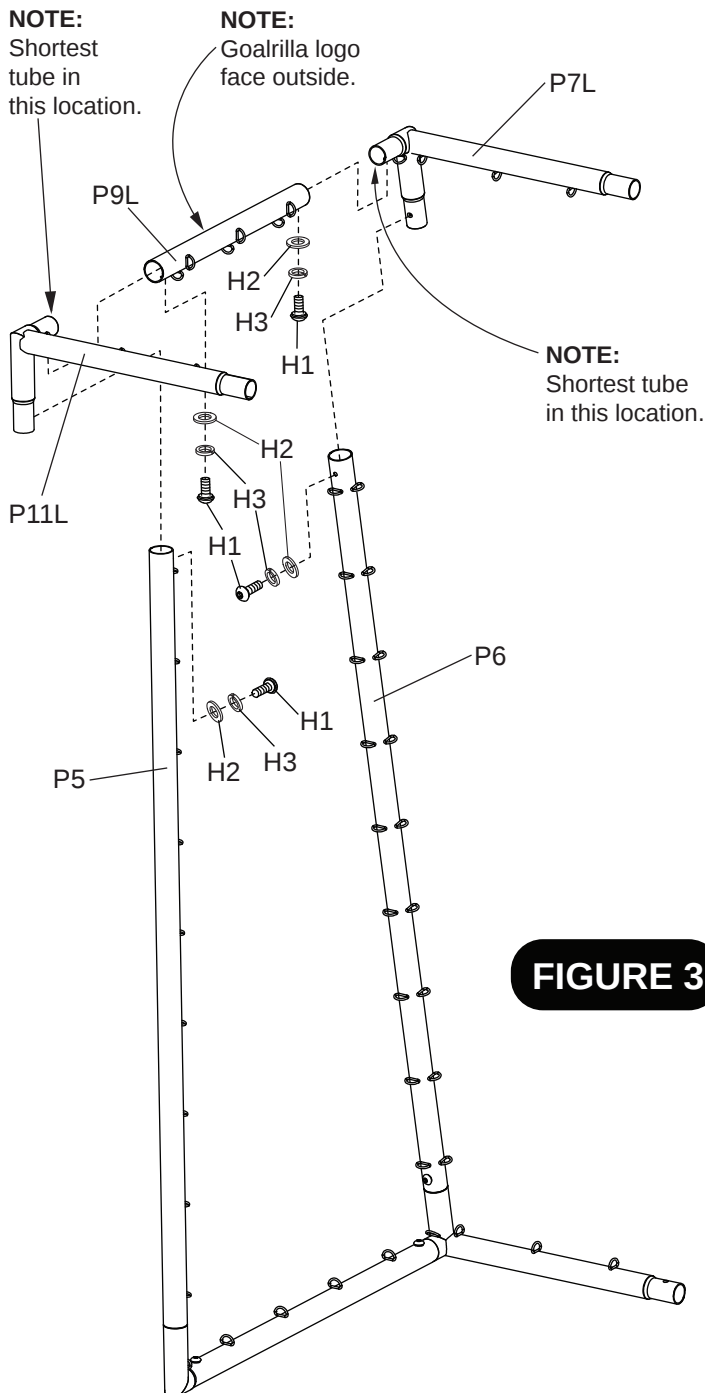


FIGURE 3

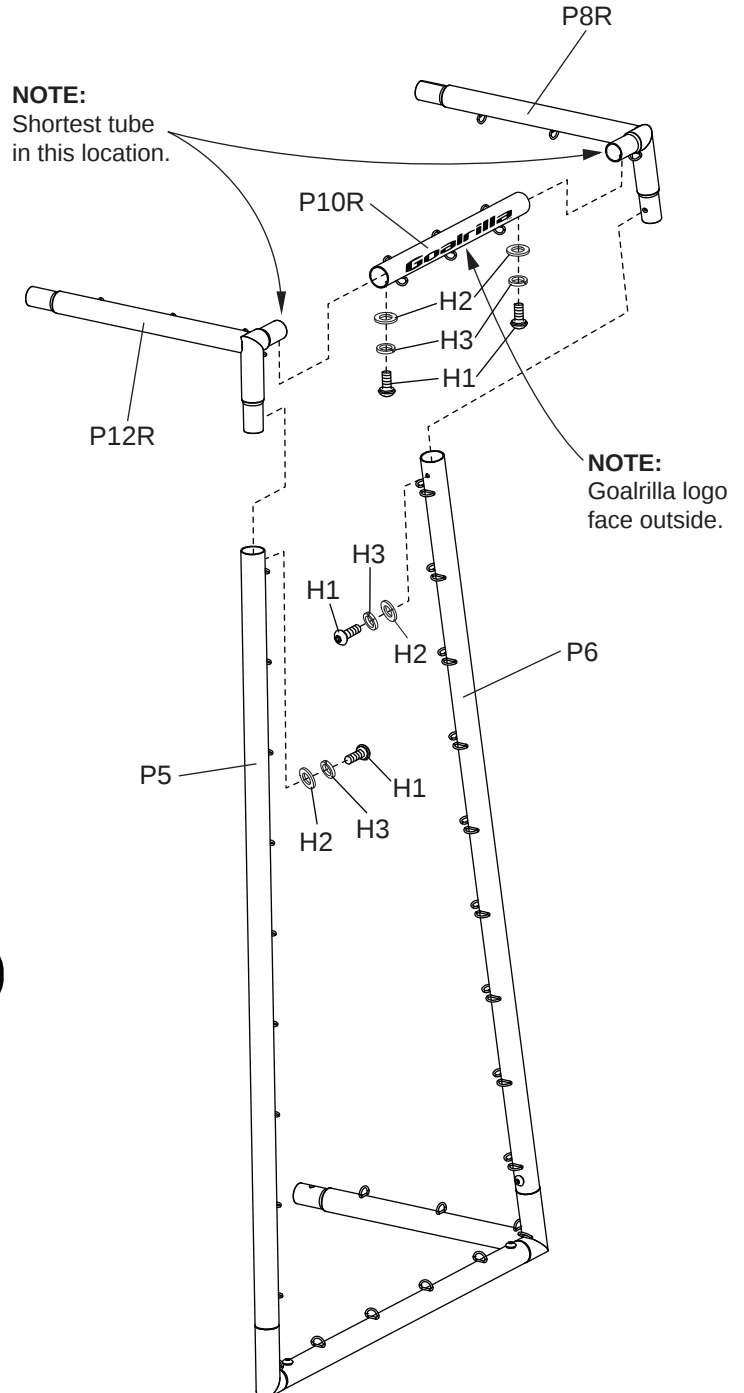

⚠ CAUTION:

THIS STEP REQUIRES TWO OR MORE ADULTS TO KEEP THE PARTIAL ASSEMBLIES FROM TIPPING OVER.

STEP 4:

DO NOT TIGHTEN ANY ALLEN HEAD BOLTS H1 UNTIL COMPLETION OF FRAME ASSEMBLY IN STEP 4.

NOTE CORRECT ORIENTATION OF ALL PARTS AS SHOWN IN FIGURE 4 FOR CORRECT ASSEMBLY.

Assemble one piece **P13** to **P7L** and another one piece **P13** to **P1L** as shown in **FIGURE 4**.

Attach **P14** to **P11L** as shown in **FIGURE 4**.

Next, carefully attach **P13** to **P8R**, **P14** to **P12R** and **P13** to **P2R** as shown in **FIGURE 4**.

Next, on a level surface go through entire frame assembly and **tighten** all twenty two pieces Allen Head Bolts **H1**.

PARTS REQUIRED:

6 pcs - **H1** Allen Head Bolt
6 pcs - **H2** Flat Washer
6 pcs - **H3** Lock Washer
2 pcs - **P13** Black Back Bottom and Top Horizontal Connecting Tube
1 pc - **P14** Orange Front Top Horizontal Connecting Tube

1 pc - **T1** Allen Wrench
1 pc - Rubber Mallet


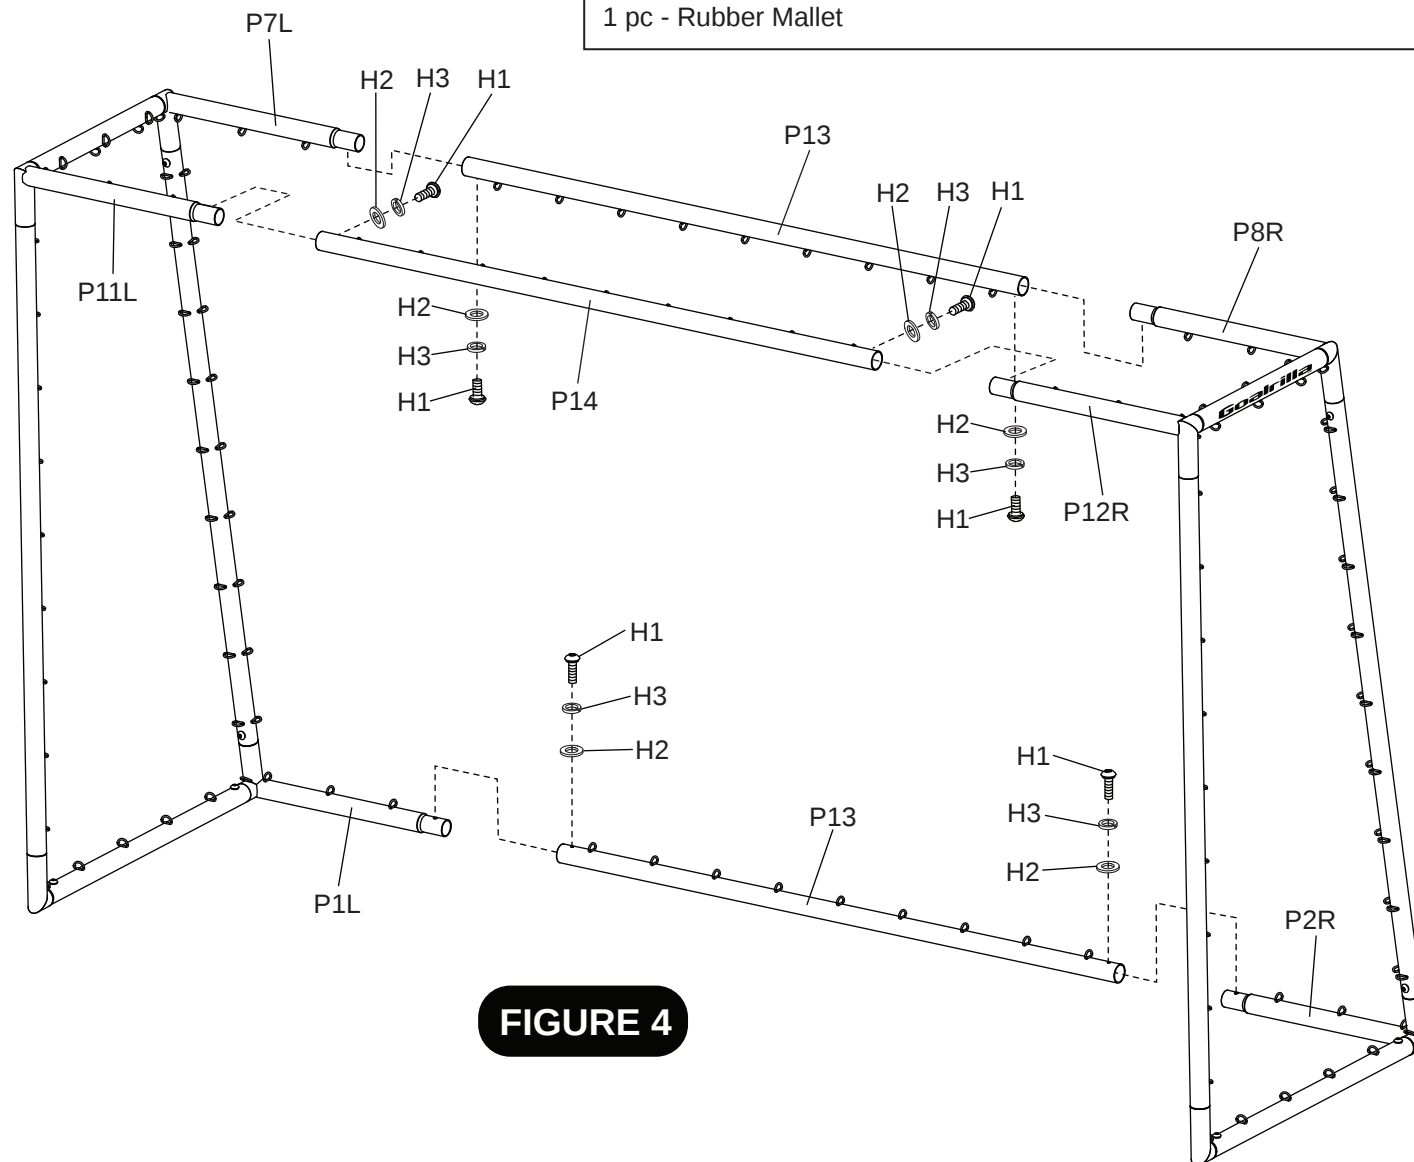


FIGURE 4



CAUTION:

THIS STEP REQUIRES TWO OR MORE ADULTS.

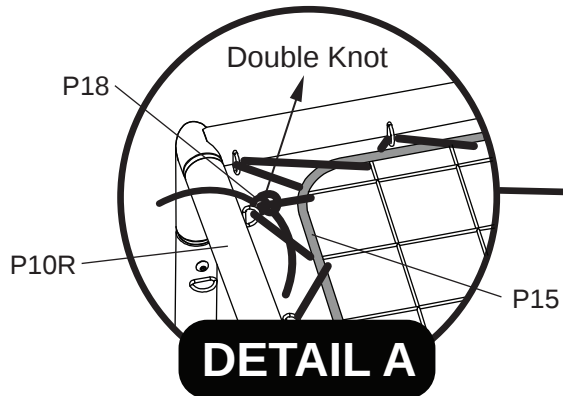

STEP 5:

With the help of another adult, attach **P15** Net using **P18** Bungee Cord onto outer perimeter of the frame as shown in **FIGURE 5**.

IMPORTANT NOTES: Orientate net - **26 squares** horizontally by **23 squares** vertically. Orientate secondary horizontal border in the net towards the top of the net. Do not attach **P15** Net to top tubes **P7L**, **P13** or **P8R**. Do not place **P15** Net over top tubes **P7L**, **P13** or **P8R**.

1. Tie off one end of **P18** Bungee Cord using a double knot to the welded D-Ring on part **P10R** as shown in **DETAIL A** and **FIGURE 5**.
2. With help of another adult, thread **P18** Bungee Cord through **P15** Net and frame welded D-Rings, following **FIGURE 5** arrows.


IMPORTANT NOTES:

- A. **P18** Bungee Cord should be pulled tight.
 - B. The welded D-Rings are 6" apart, and the net is a 3" mesh. Thus, the general rule is to thread the bungee cord through **every other hole of the net**.
 - C. On each corner D-Ring, pull bungee cord tight and tie a single knot for ease of assembly.
3. Upon completion of 4th side bungee cord / net attachment, tie off a double knot on the same D-Ring of the first/beginning bungee cord double knot.
 4. Bungee Cord should be tight on all four sides.

PARTS REQUIRED:

- 1 pc - **P15** Rebound / Goal Net
- 1 pc - **P18** 256" Rebound / Goal Net Outer Perimeter Bungee Cord

Start / finish in here with double knot

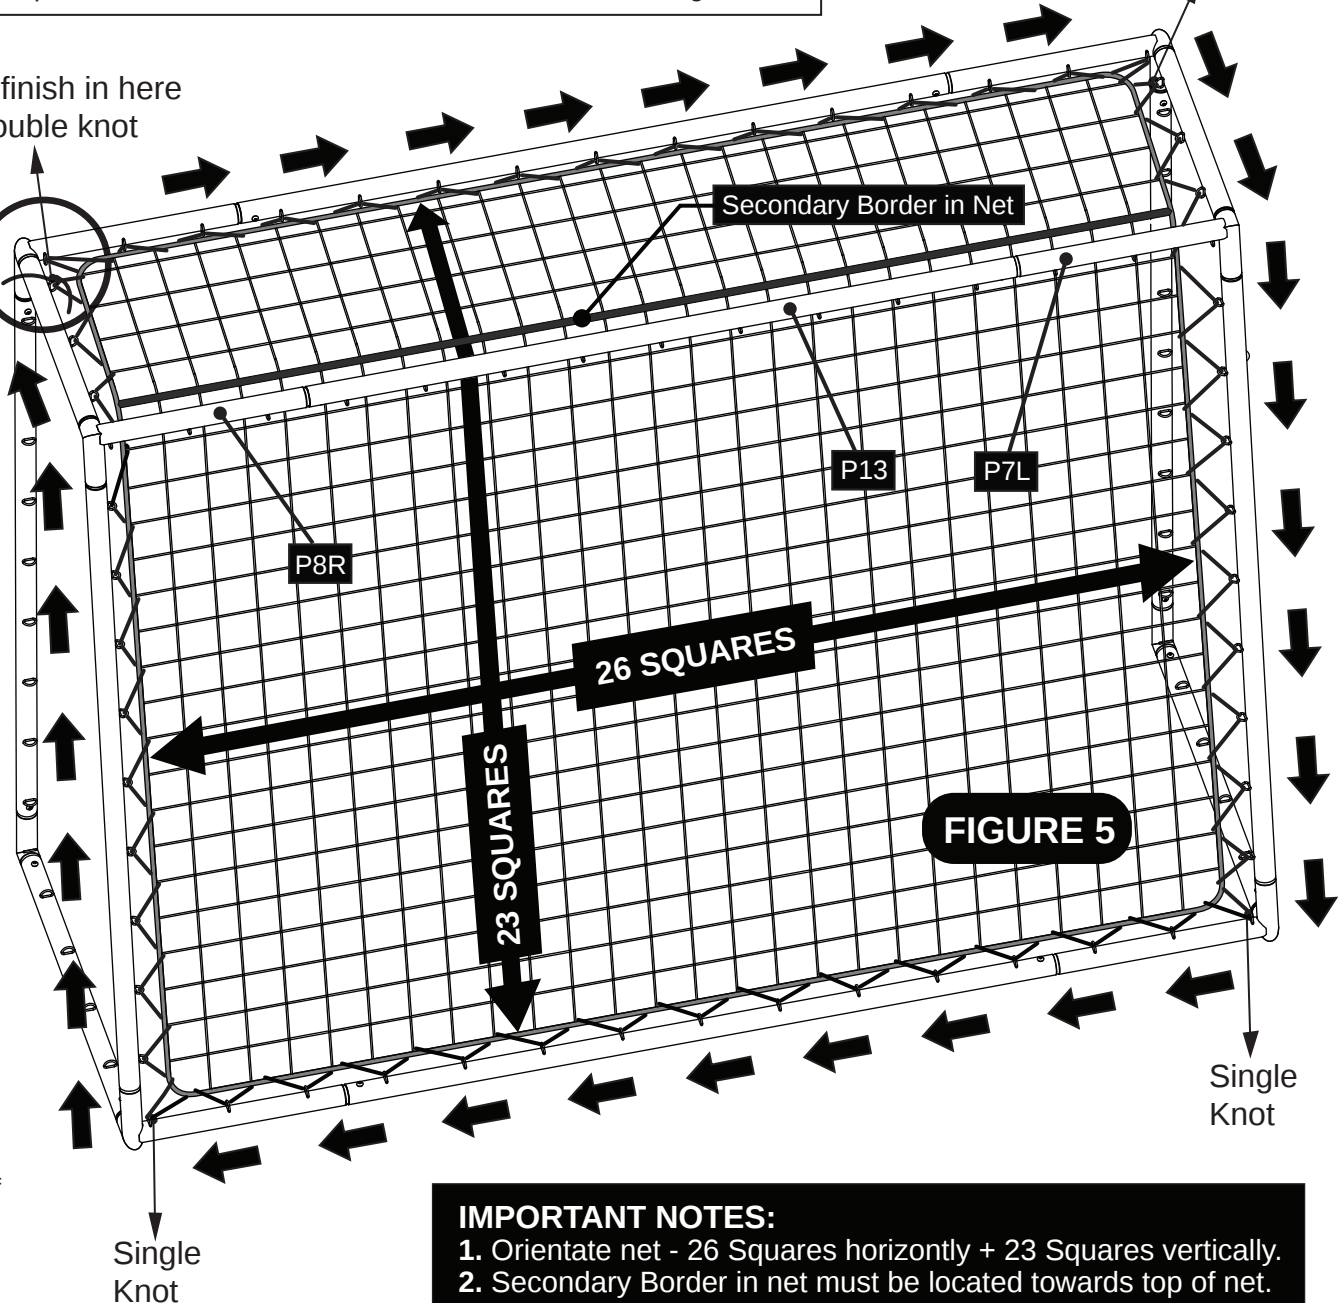

IMPORTANT NOTES:

1. Orientate net - 26 Squares horizontally + 23 Squares vertically.
2. Secondary Border in net must be located towards top of net.



CAUTION:

THIS STEP REQUIRES TWO OR MORE ADULTS.

PARTS REQUIRED:

1 pc - **P19** 70-7/8" Secondary Rebound / Goal Net Top-Back Bungee Cord

STEP 6:

With the help of another adult, attach **P19** Bungee Cord through the top back welded D-Rings on tubes **P17**, **P13**, **P8R** and Net **P15** as shown in **FIGURE 6**.

IMPORTANT NOTES: The **P15** Rebound/Goal Net must be orientated correctly in the previous assembly **STEP 5**, in order to achieve correct assembly in this step. The **P19** Bungee Cord used in this step must be threaded under the “thicker” horizontal secondary border located in the top half of the **P15** Rebound Goal Net.

1. Tie off one end of **P19** Bungee Cord using a double knot on the welded D-Ring located at the very corner of **P7L** Tube as shown in **FIGURE 6**.
2. Carefully thread **P19** Bungee Cord through **every other hole** in net and every welded D-Ring on **P7L**, **P13** and **P8R** Tubes as shown in **FIGURE 6**.
3. When complete, pull **P19** Bungee Cord tight and tie a double knot in the corner welded D-Ring of **P8R** Tube.

IMPORTANT NOTES: This assembly step will create a distinct “top” and “back” surface of the net. This product comes with an extra **P19** Bungee Cord for future use.

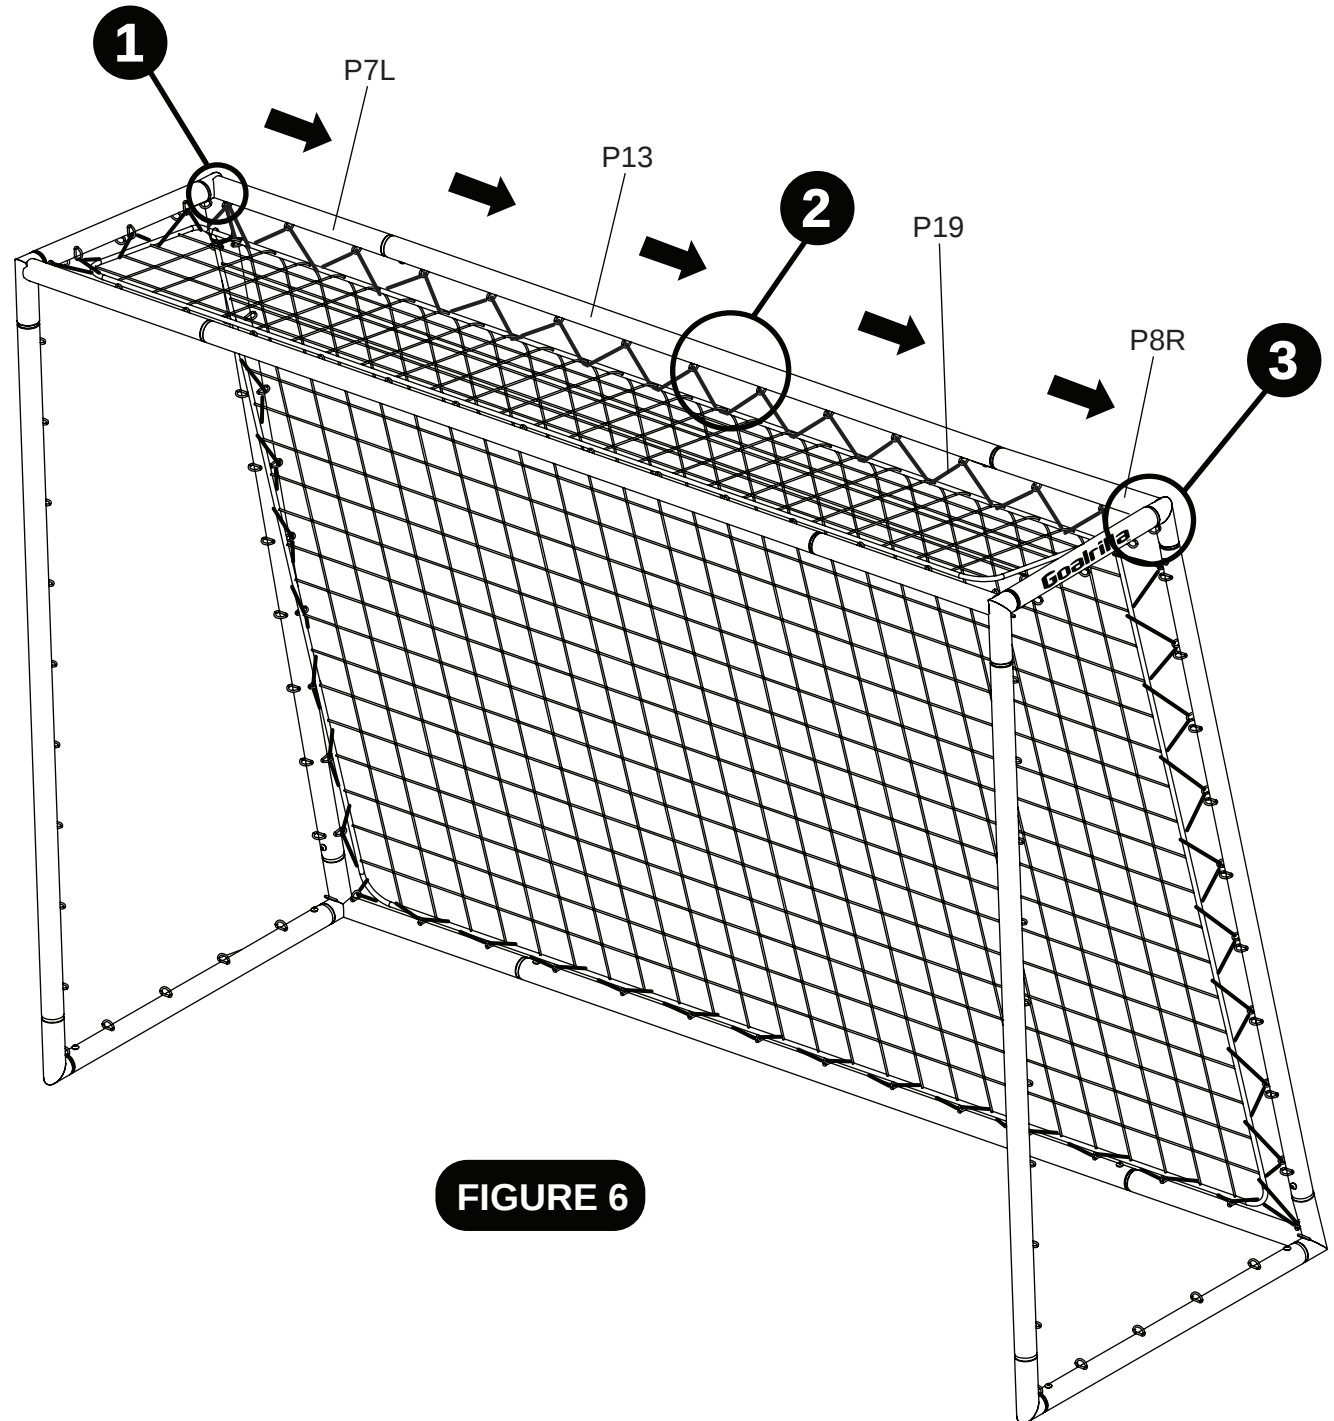


FIGURE 6

PARTS REQUIRED:

1 pc - P16L Left Side Net	4 pcs - P21 Ground Stake
1 pc - P17R Right Side Net	
2 pcs - P20 Side Net Bungee Cord	

STEP 7:


Attach **P16L** & **P17R** Side Nets using **P20** Bungee Cords onto each side of frame assembly as shown in **FIGURE 7**.

IMPORTANT NOTES: Each of the (4) corners will require double **P20** Bungee Cord threading for correct assembly. Please follow directions and diagrams closely. Bungee Cord should be pulled only **taught** throughout these following assembly steps.

1. Tie off the end of each **P20** Bungee Cord using a double knot onto welded D-Ring on **P9L** and **P10R** Tubes (Left or Right Side Net Attachment) as shown in **DETAIL B** and **FIGURE 7**.
2. Thread bungee cord from the outside through corner of top side net grommet and continue through the corner D-Ring. Then continue back through the same corner net grommet once again from the outside to make a loop. Continue on to the first welded D-Ring as shown in **DETAIL B** and **FIGURE 7**.
3. Continue threading bungee cord around all (4) sides of frame, threading Bungee Cord through all welded D-Rings and side net grommets as shown in **FIGURE 7**.
IMPORTANT NOTE: Please follow **STEP 2** above for correct "corner / net attachment".
4. Upon completion of 4th side bungee cord / net attachment, tie off a double knot on the same D-Ring of first/beginning bungee cord double knot.
5. Bungee Cord should be only taught and side net should not be loose in any areas.

STEP 8:

Upon final placement of the Striker Trainer, install (4) pcs **P21** Ground Stakes onto the bottom and most outward (4) corner tubes and tap into the ground using a rubber mallet.

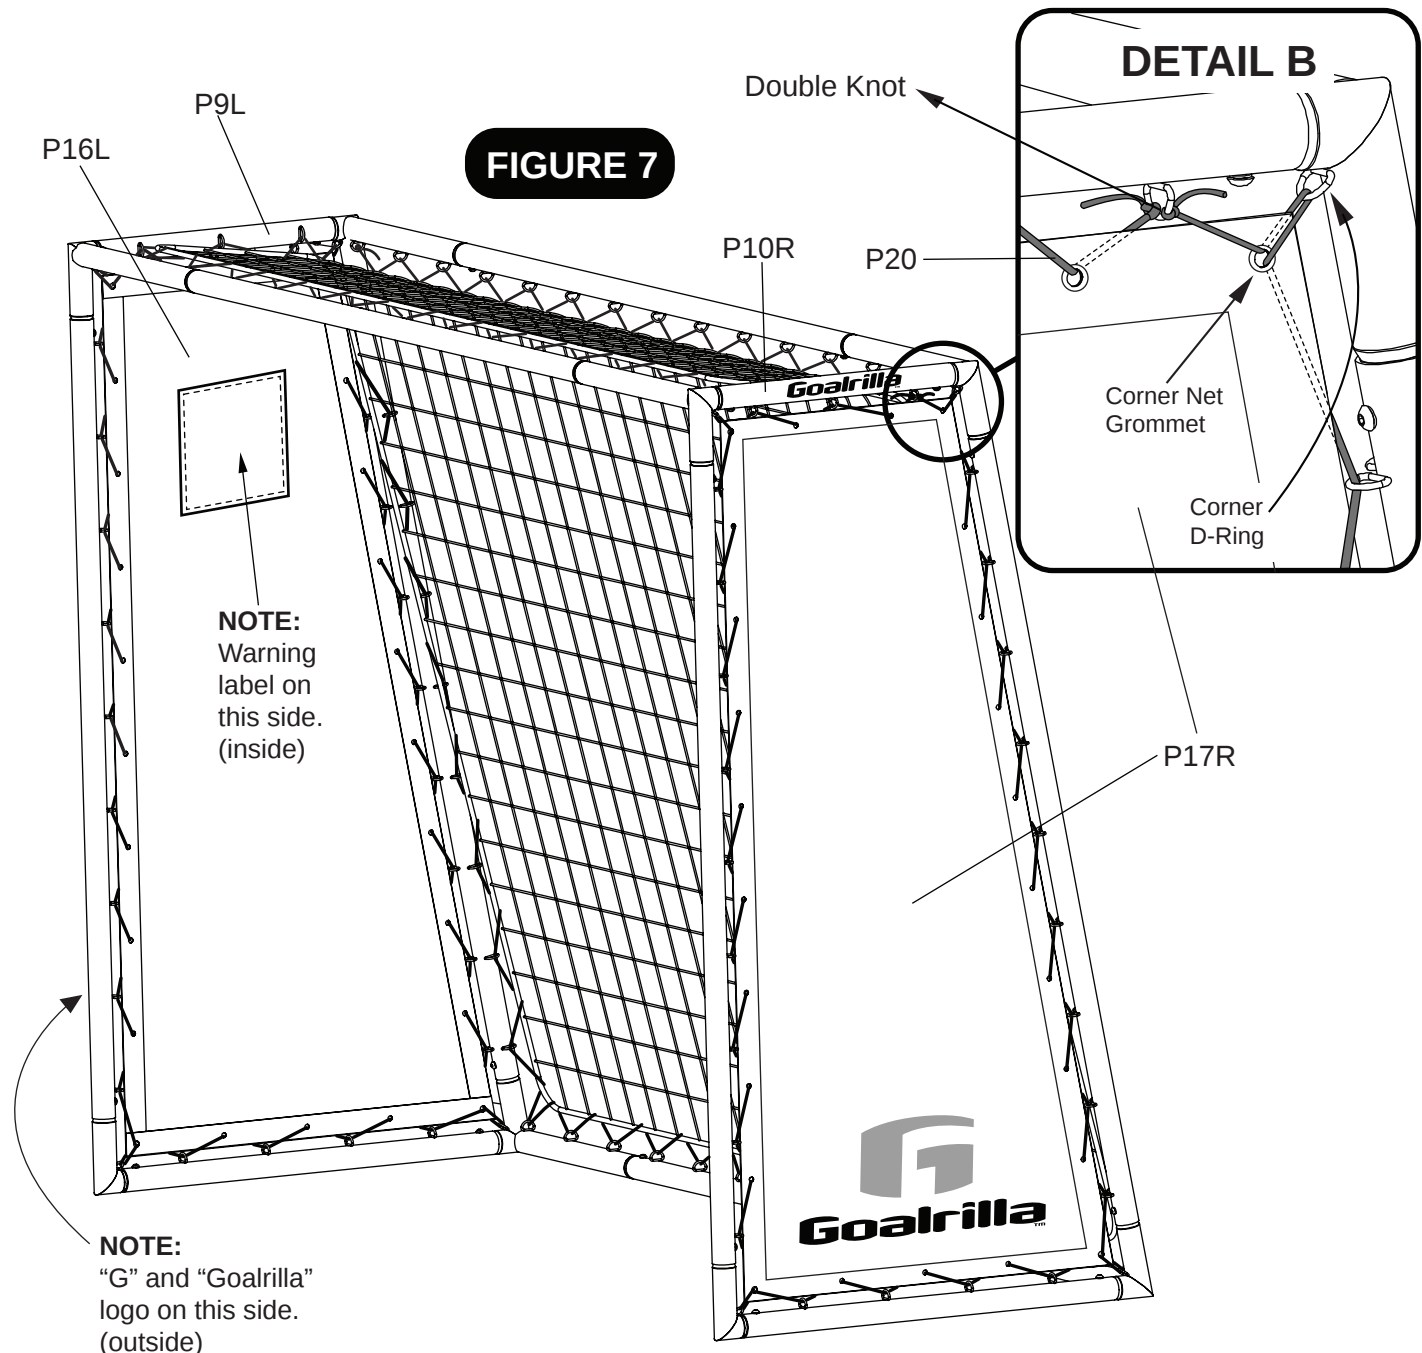

Let us know how you Train with
The Striker Trainer.

Post a video on Goalrilla's Youtube channel at:

[youtube.com/user/TheOfficialGoalrilla](https://www.youtube.com/user/TheOfficialGoalrilla)

and/or Goalrilla's Facebook page at:

[facebook.com/Goalrilla](https://www.facebook.com/Goalrilla)

GOAL SIDE



REBOUND SIDE



LAYING DOWN ON GOAL SIDE



PRODUCT PARTS LIST

TR5000W / F

PARTS#	KEY#	DESCRIPTION	QTY.
TR5000-H1	H1	M6 x 16mm Allen Head Bolt	22
TR5000-H2	H2	M6 x 12mm Flat Washer	22
TR5000-H3	H3	M6 Lock Washer	22
TR5000-T1	T1	Allen Wrench	1
TR5000-P1L	P1L	Black Left Back Bottom Corner	1
TR5000-P2R	P2R	Black Right Back Bottom Corner	1
TR5000-P3	P3	Black Bottom Side Connecting	2
TR5000-P4	P4	Orange Front Bottom Corner	2
TR5000-P5	P5	Orange Front Vertical Connection Tube	2
TR5000-P6	P6	Black Back Vertical Connection Tube	2
TR5000-P7L	P7L	Black Left Back Top Corner	1
TR5000-P8R	P8R	Black Right Back Top Corner	1
TR5000-P9L	P9L	Black Left Top Side Connecting Tube	1
TR5000-P10R	P10R	Black Right Top Side Connecting Tube	1
TR5000-P11L	P11L	Orange Left Front Top Corner	1
TR5000-P12R	P12R	Orange Right Front Top Corner	1
TR5000-P13	P13	Black Back Bottom Top Horizontal Connecting Tube	2
TR5000-P14	P14	Orange Back Bottom Top Horizontal Connecting Tube	1
TR5000-P15	P15	Rebound / Goal Net	1
TR5000-P16L	P16L	Left Side Net	1
TR5000-P17R	P17R	Right Side Net	1
TR5000-P18	P18	256" Rebound / Goal Net Outer Perimeter Bungee Cord	1
TR5000-P19	P19	70-7/8" Secondary Rebound / Goal Net Top-Back Bungee Cord (1 pc use / 1 Extra pc for future use)	2
TR5000-P20	P20	185" Side Net Bungee Cord	2
TR5000-P21	P21	Ground Stake	4
TR5000-K1	K1	Hardware Kit	1
TR5000-M1	M1	Owner's Manual	1

To purchase these parts, please contact Escalade Sports Customer Service

1(ONE) YEAR LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any Escalade® Sports Product (hereinafter referred to as the "Product").

WARRANTY COVERAGE: Escalade® Sports warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP.

Subject to proper installation and normal use, Escalade® Sports warrants, subject to the limitations below, to the original retail purchaser all structural components of the Striker Trainer™ to be free of defects in material and workmanship for the duration of ownership by the original retail purchaser.

Merchandise must be shipped prepaid with a copy of proof of purchase to Escalade® Sports factory for examination to determine if the trainer needs to be repaired or replaced. Any labor costs, travel expenses and any other changes involved in the removal, installation or replacement of the defective/repaired parts from/to your Striker Trainer™ will be the purchaser's responsibility. Shipping charges for replaced or warranted merchandise sent back to the customer from Escalade® Sports factory must be prepaid by the customer in advance. If not, the replacement shipment will be sent out collect.

Escalade® Sports reserves the right to examine photographs or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to authorization of warranty claims. A "Returned Goods Authorization" number may be required, please call for details (see information below) prior to the return of any photographs or merchandise.

This 1(one) year limited warranty is expressly in lieu of all warranties, expressed or implied, including warranties of merchantability or fitness for use. Escalade® Sports does not assume or authorize any person or representative to assume for us, any other liability in connection with the sale of our products.

The remedy of repair or replacement stated above is Escalade® Sports exclusive remedy. Escalade® Sports will not be liable for any other damages or expenses which may incur, including but not limited to incidental or consequential damages. Escalade® Sports assumes no other obligations or liability on the part of the purchaser, and Escalade® Sports neither assumes nor authorizes any other person to assume for it any other liability in connection with the goods sold.

This warranty shall not apply in any manner to parts or accessories not manufactured by Escalade® Sports.

NOT COVERED BY THIS 1(ONE) YEAR LIMITED WARRANTY

- Bungee cords, rebound net and side nets are warranted for a period of 60 days from the original purchase under normal use and proper care.
- Any merchandise subjected to abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of Escalade® Sports.
- Paint or rusted parts. If rust should appear, remove loose paint, sand lightly, primer and paint anything black with black exterior flat matte finish enamel paint, and anything orange with orange exterior gloss enamel paint.
- Shipping charges both ways. Note: Any merchandise shipped to Escalade® Sports collect will be refused.
- Dealer service charges, labor charges and travel expenses associated with replacement of repair of warranty item.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS. EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you. LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

WARRANTY GUIDELINES IS REQUIRED FOR ALL WARRANTY CLAIMS

1. Proof of Purchase (original retail purchaser) is required for all warranty claims.
2. Call or write Escalade® Sports to receive a Return Authorization # and determine specific needs. Phone: 1-888-USA-GOAL / Warranty Dept. or Write Escalade® Sports at: Escalade® Sports -P.O. Box 889, Evansville, IN 47706 -Attn: Warranty Dept. or E-mail us at: customerservice@escaladesports.com



PRE-ASSEMBLY TIPS

1. Read this manual carefully before starting assembly. Read each step completely before beginning each step.
2. Save these instructions and your proof of purchase (receipt) in the event that the manufacturer has to be contacted for replacement parts.

No tools needed for assembly:

STRIKER TARGET

MODEL NO.
TR55W

ESCALADE®
S P O R T S

Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

Phone: 1-800-467-1421

E-mail: Training@escaladesports.com

Escalade Sports

Physical Location:

817 Maxwell Ave.


Evansville, IN 47711

Mailing Address: (Correspondence Only)


PO Box 889

Evansville, IN 47706


PARTS LIST (NOT ACTUAL SIZE)

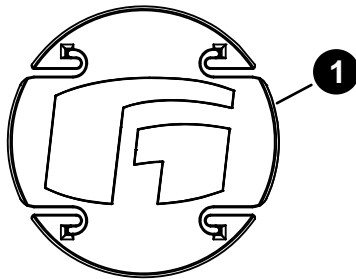

Movable Target
2M-6988-00
QTY. 1

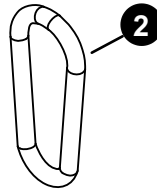

Carabiner
7B-8608-00
QTY. 4

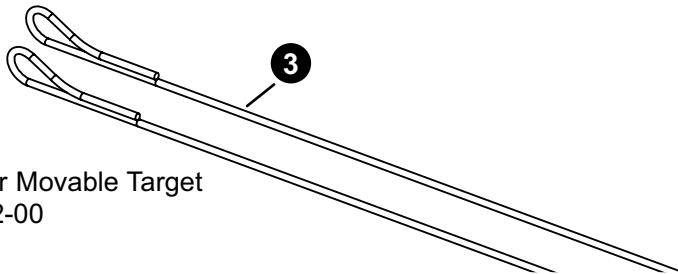

Rope for Movable Target
2F-7222-00
QTY. 2

SAFETY INSTRUCTIONS

WARNING

Follow all warnings on the Striker Trainer (TR5000W-1) as specified in the manual or on the side net.

CAUTION

Target will move when hit by a ball, do not stand near target when being used.

CAUTION

Maintain control of bungee cord and clip until clip is secured to TR5000W-1 Striker Trainer

NOTICE



Check bungee cord for wear and fraying, replace as needed.

NOTICE

Do not store near abrasive or sharp objects.

ESCALADE®
S P O R T S

1. Attach a Carabiner (#2) to each loop on the ropes (#3). See **Detail A**.
2. Clip the Carabiners (#2) to the welded D-Rings on both **front orange tubes**. See **Figure 1 & Detail A**.
3. Attach the Moveable Target (#1) the Ropes. See **Figure 1**.

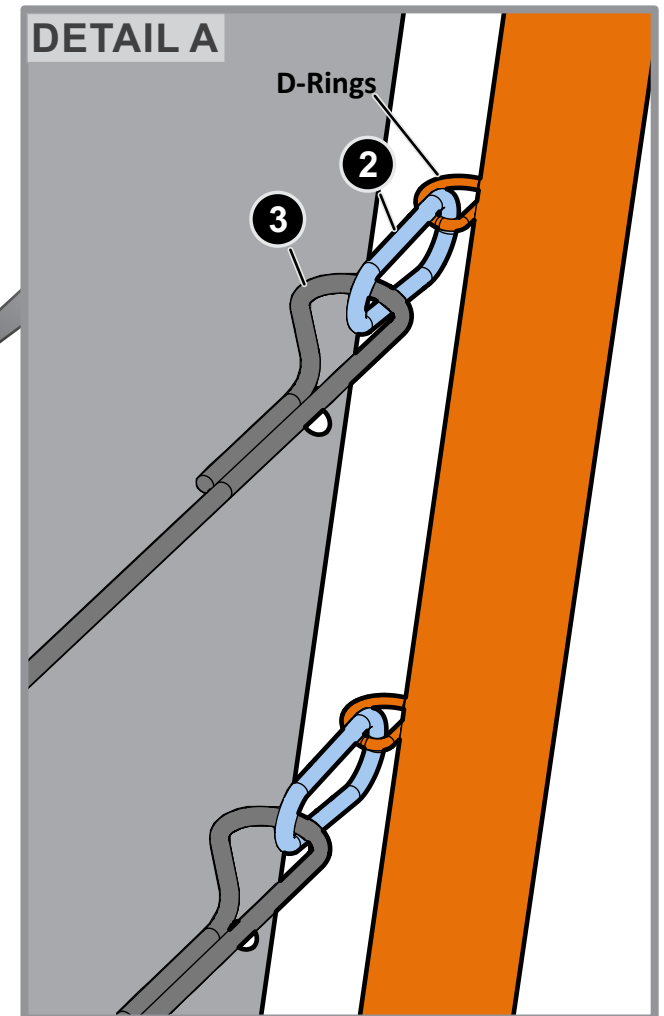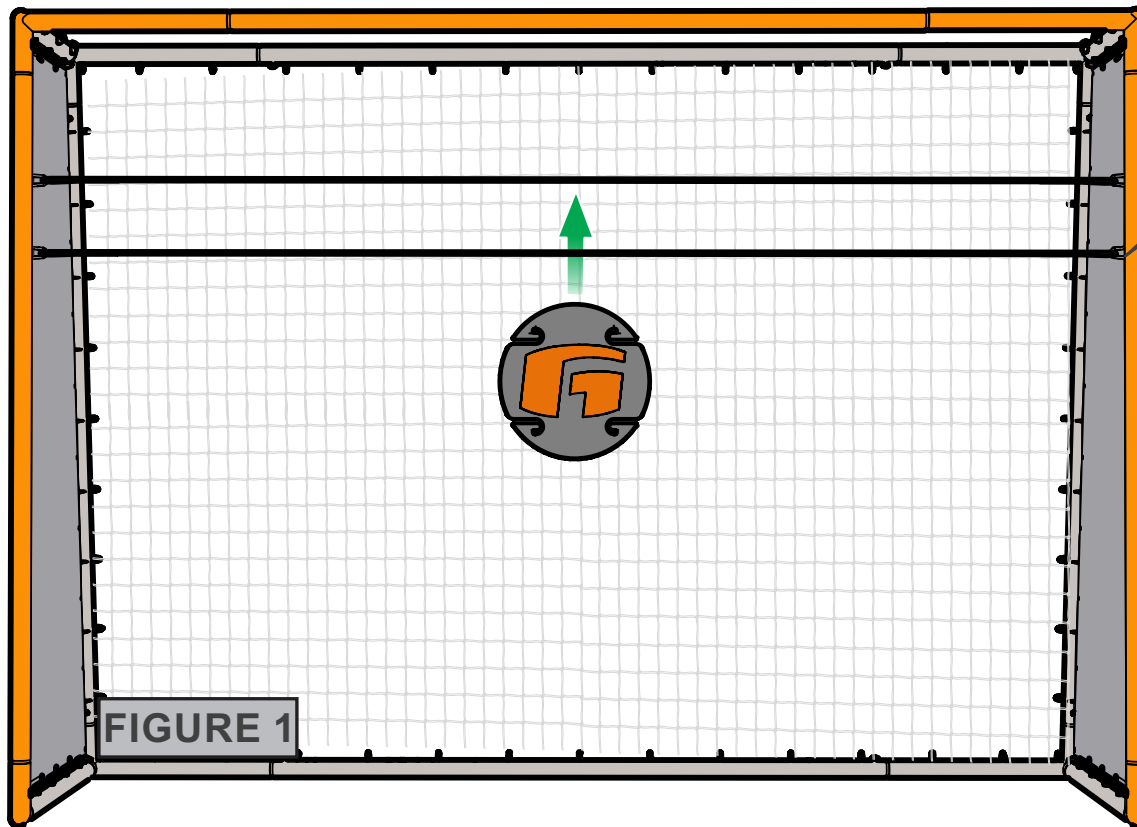

NOTICE

The Carabiners (#2) can be attached to different D-rings, and the Target (#1) can be moved left or right as desired.