



Text 1-812-652-2525
(US and Canada only, carrier fees may apply)

Visit safety1st.com
Email support@djgusa.com

Call 1-800-544-1108
(Toll free, US and Canada only)

Replacement Parts List

- Lower Anchor Belt
- Seat Pad Set
- Removable Cup Holder(s)
- Instructions
- Buckle Assembly
- Chest Clip
- Top Tether
- Locking Clip

For parts availability and questions, text, chat, call, or email. If requested color is not available, a similar color will be substituted. Applicable tax and shipping & handling will also be added.

©Disney
www.disney.com

©2025 Dorel Juvenile Group, Inc.

(800) 544-1108 www.doreljuvenile.com. Styles, colors, and labeling may vary. Los estilos, colores y etiquetado pueden variar. Made in USA from American and imported parts (including seat pad). Hecho en EE.UU. a partir de piezas americanas e importadas (incluyendo la almohadilla del asiento). Distributed by (distribuido por) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2233 Argentia Road, Suite 110, Mississauga, ON L5N 2X7



Disney baby



Grow and Go™

All-in-One Convertible Car Seat

Your model may look different than one shown on cover.

Read all instructions BEFORE USING this car seat.

KEEP INSTRUCTIONS FOR FUTURE USE.

⚠ Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child. Serious injury may include paralysis and/or permanent brain injury.




4358-8773
09.17.25



Thank you for choosing this car seat, also known as a child restraint!

To help you get started using your child's new car seat, here are the 4 main tasks you'll need to complete.

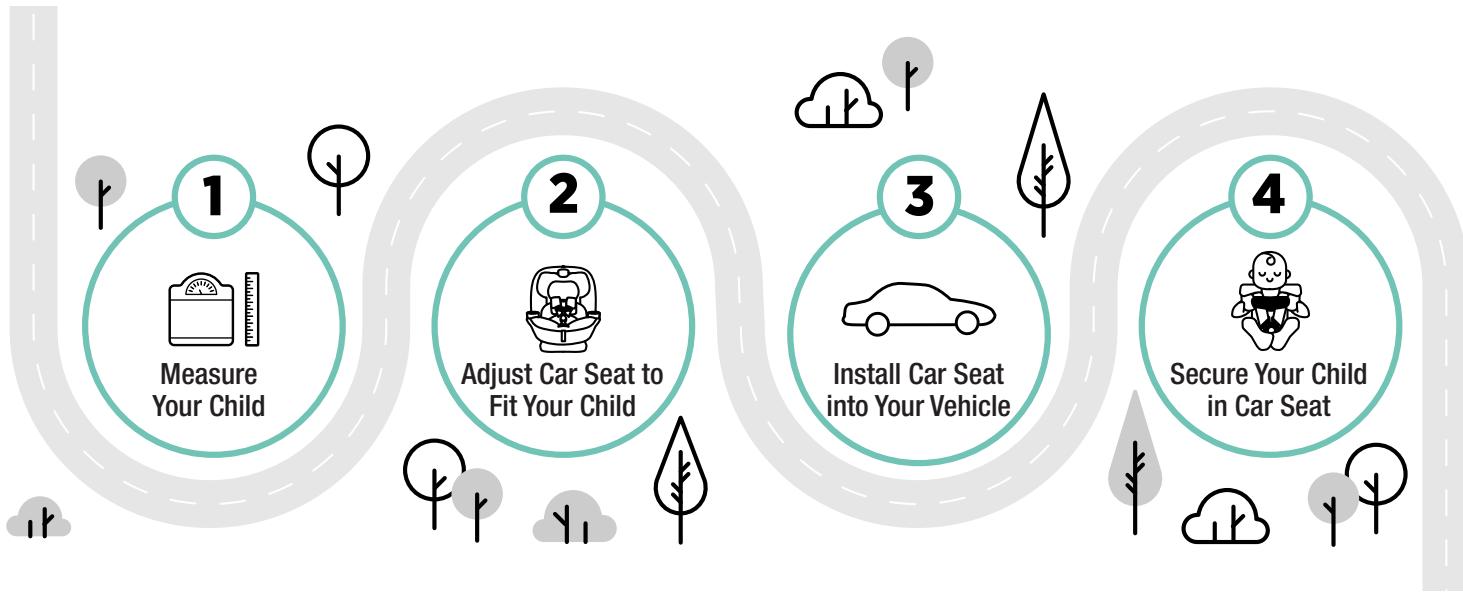

Your child's safety is worth the time it will take to read and follow these instructions.

Ready? Let's go!

Pages 1–5 will introduce you to the parts of the car seat.

The Back Cover of this Manual has our contact information.

If at any point you would like assistance, please feel free to reach out to us.

Contents

1 Getting Started

- 1 Parts of Car Seat
- 3 Accessory Use
- 5 Choosing Car Seat Mode

7 Rear-Facing Section

- 9 Rear-Facing Child Fit
- 11 Rear-Facing Vehicle Install

18 Forward-Facing Section

- 20 Forward-Facing Child Fit
- 22 Forward-Facing Vehicle Install

29 Securing Child in Car Seat

32 Booster Seat Section

- 34 Storing Harness System
- 37 Booster Seat Use in Vehicle
- 40 Booster Seat Child Fit

41 Making Adjustments to Car Seat

- 41 Changing Headrest/Harness Height
- 42 Changing Buckle Position
- 44 Harness System Adjustments for Smaller Infants
- 49 Reclining Car Seat

50 Wash and Care

- 50 Removing Seat Pad Set
- 52 Cleaning Parts of Car Seat and Installing Seat Pad Set

53 LATCH and Vehicle Belt Information


- 53 LATCH: Lower Anchor Belt
- 55 Vehicle Belts
- 59 Top Tether

60 Safety Information

- 60 Child Restraint Use
- 61 Vehicle Seating Position
- 62 Installation in Vehicle
- 63 Replacement and Expiration
- 64 Registration and Safety Notices
- 65 Aircraft Information


66 Warranty

1 Parts of Car Seat

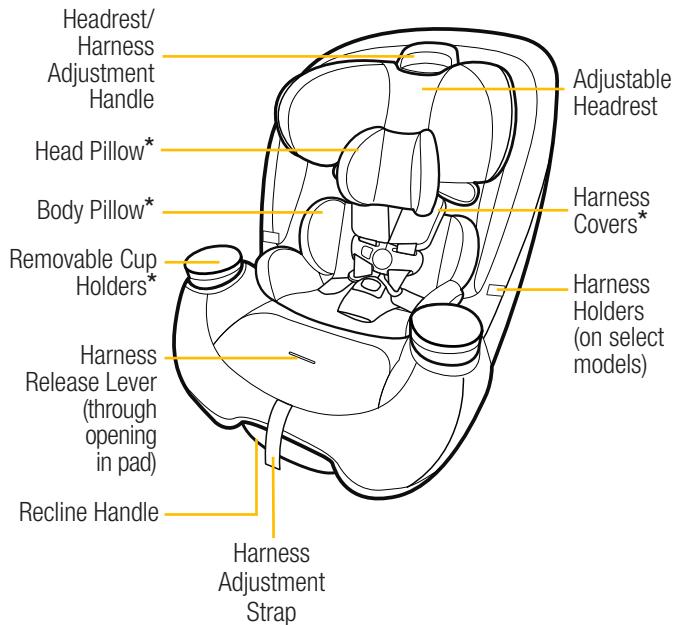



Your model may look different than one shown.


Harness System Detail

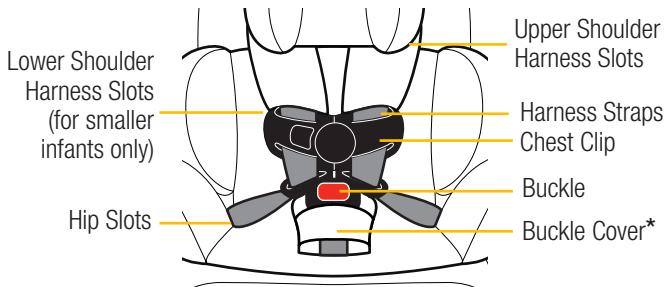

*See page 3 for Accessory Use.

2

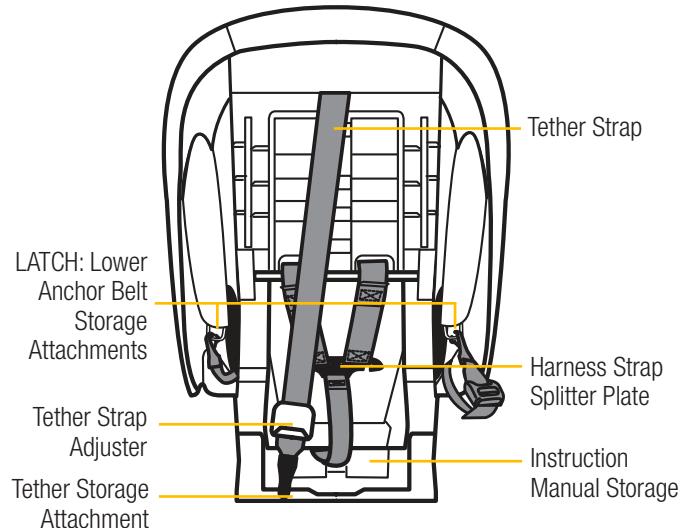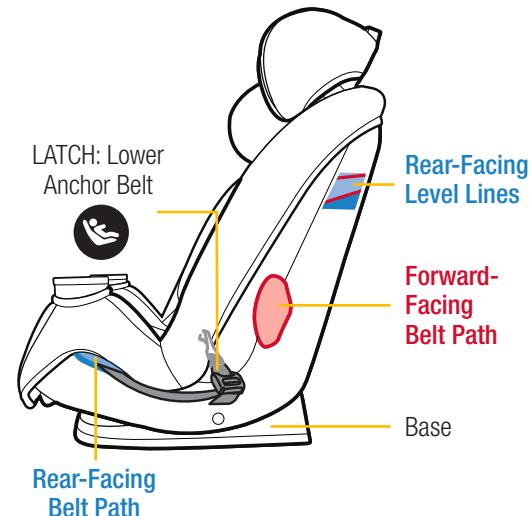

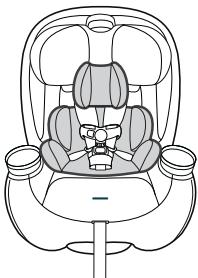

Head and Body Pillows

For Optional Use in Rear-Facing Mode Only

The head and body pillows MUST be used together.

To remove head pillow: From the back of the head pillow, gently pull the fabric tabs out of the slots in the seams of the headrest fabric.

To attach head pillow: Insert the fabric tabs on the back of the head pillow into the slots in the seams of the headrest fabric.

To remove body pillow: Undo the buckle and then pull it through the slot in the body pillow. Gently pull the body pillow off the car seat.

To attach body pillow: Undo the buckle and place the body pillow in the seat. Pull the buckle through the body pillow using the same buckle slot as the seat pad.

If using the lower shoulder harness slots for smaller infants, see pages 44–47.

To rethread harness for upper harness slots, see page 48.




Buckle Cover

For Optional Use in Rear-Facing Mode or Forward-Facing Mode

To remove buckle cover: Undo the buckle and pull the buckle cover off the buckle.

To install buckle cover: Undo the buckle and slide the cover over the buckle. Tuck the bottom part of the cover behind the buckle strap into the body pillow or seat pad slot.

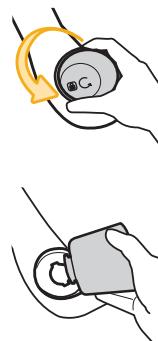


Removable Cup Holder(s)

For Use in All Modes

The cup holders are top-rack dishwasher safe.

To remove cup holder: Twist the cup holder counterclockwise. Pull it out of the slot in the car seat.


To install cup holder: Align the bottom of the cup holder to the slot in the seat. Twist the cup holder clockwise until it clicks into place.

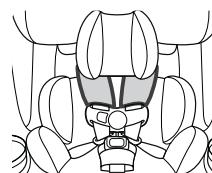

Harness Covers

For Optional Use in Rear-Facing Mode or Forward-Facing Mode

The harness covers help provide comfort to your child's neck.

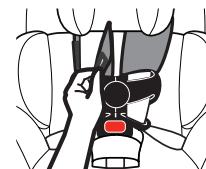

If the harness covers will not allow proper positioning of the chest clip or interfere with getting a tight enough harness fit for a smaller infant, remove and do not use. Store until your child is large enough to use the harness covers while maintaining a properly fitting harness.

To remove harness covers: Pull the fastening strips apart and pull the harness covers off the harness straps.

To install harness covers: Place the upper part of the harness strap above the chest clip into the harness cover. Reattach both sides of the fastening strip. Repeat with the other harness cover.

⚠️ WARNING

Failure to follow these instructions may result in serious injury or death to your child. Serious injury can include paralysis and/or permanent brain injury.

Be certain to measure your child's weight and height (do not guess) before choosing this car seat's mode.

Your child's height, weight, and age determine how the car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—**please consult your doctor before switching between any modes within the limits and fit requirements of the car seat.**

Infants and Toddlers

Children must ride rear-facing and remain rear-facing until they reach the maximum weight or height limits for rear-facing mode. Rear-facing child restraints installed behind another vehicle seat must be installed touching the back of the vehicle seat in front of it, or be as close as possible.

Toddlers and Preschoolers

Children can only use a forward-facing car seat once they outgrow rear-facing weight or height limits. Once they are forward-facing, children must use their child restraint in forward-facing mode with a harness until they reach the maximum weight or height limits for forward-facing harness mode.

School-Aged Children

Children can only use a belt-positioning booster car seat once they outgrow forward-facing harness weight or height limits. Children must use the belt-positioning booster mode until the vehicle's lap and shoulder seat belt fit them properly without the belt-positioning booster.



Rear-Facing Mode

5–40 lb (2.3–18 kg) and 19–40 in. (48–101.6 cm)

In this car seat, your child **MUST** ride **Rear-Facing** and remain in **Rear-Facing** mode until they outgrow any one of the above.

Rear-Facing Section [PAGE 7](#)

Rear-Facing Child Fit [PAGE 9](#)

Rear-Facing Vehicle Install [PAGE 11](#)



Forward-Facing Mode

30–65 lb (13.7–29.5 kg) and 34.4–49 in. (87.1–125 cm)

In this car seat, your child **MUST** remain in harnessed **Forward-Facing** mode until they outgrow any one of the above.

Forward-Facing Section [PAGE 18](#)

Forward-Facing Child Fit [PAGE 20](#)

Forward-Facing Vehicle Install [PAGE 22](#)



Booster Seat Mode

40–100 lb (18.1–45.4 kg) and 43.4–52 in. (110.1–132.1 cm)

In this car seat, your child can use the **Booster Seat** mode until they fit the vehicle's lap and shoulder seat belt properly without a **Booster Seat** **OR** outgrow any one of the above.

Booster Seat Section [PAGE 32](#)

Storing Harness System [PAGE 34](#)

Booster Seat Use in Vehicle [PAGE 37](#)

Booster Seat Child Fit [PAGE 40](#)



**5–40 lb (2.3–18 kg) and
19–40 in. (48–101.6 cm)**

In this car seat, your child **MUST** ride **Rear-Facing** and remain in **Rear-Facing** mode until they outgrow any one of the following:

- Weight Limit: 40 lb (18 kg); **OR**
- Height Limit: 40 in. (101.6 cm); **OR**
- **Rear-Facing Child Fit** requirements, see page 9.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Rear-Facing Child Fit: Page 9

Rear-Facing Vehicle Install: Page 11

⚠️ WARNING



NEVER install a rear-facing child restraint in the front seat of a vehicle equipped with an active frontal airbag.

DO NOT use the tether for rear-facing mode. Secure the tether strap hook to its storage attachment.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

Check the vehicle belt or the lower anchor belt before each use.


Use **ONLY** if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

This child restraint **MUST ALWAYS** face the rear of the vehicle until the child has reached the maximum weight or height limit for the rear-facing mode.

Rear-Facing Child Fit

1

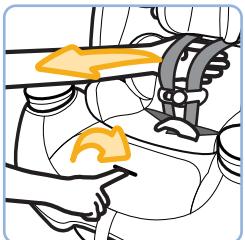

Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.


4



Check Head Position

The top of your child's head **MUST** be at least **1 in. (2.5 cm)** below the top of the car seat's headrest.


5

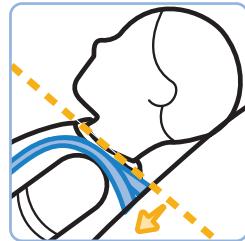

Check Harness Strap Position

The harness strap **MUST** be placed **at the shoulder** when possible, or slightly below; never above.

2

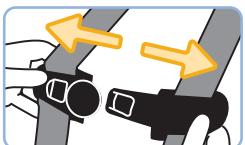


Undo Chest Clip and Buckle

While holding both sides of the chest clip, press the release button with your thumb and pull the chest clip apart.

To unbuckle the harness, press the red button to release the buckle tongues.



6

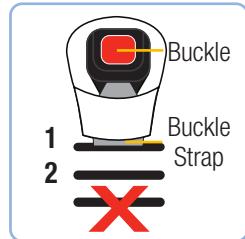

Check Buckle Position

- Use the slot closest to your child.
- The buckle strap **should not be underneath or behind** your child.

3



Place Child in Car Seat

You may use the harness holders to place the harness straps out of the way.

Your child's bottom and back should be flat against the car seat.



To change the harness strap height, see page 41.

To change the buckle position, see page 42.

To learn how to check harness tightness, see pages 29–30.

If you cannot achieve a snug harness fit for your child, see pages 44–47.

Rear-Facing Vehicle Install

There are 2 different methods for install.

Use only one:



Vehicle Belt



LATCH: Lower Anchor Belt


⚠ WARNING

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.




- Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position for your child. **See step 6 on page 10 for child fit.** Once the car seat is installed, you will not be able to adjust the buckle position.
- **Review vehicle owner's manual.** Determine the type of vehicle belts in your car and how to use them to lock a car seat in place **OR** where LATCH: lower anchor seating positions are located in your vehicle.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away (see page 54).
- Make sure the tether strap is properly stored away (see page 59).

1

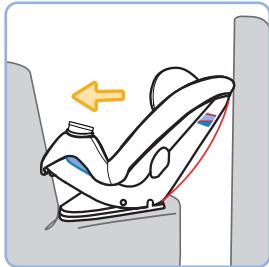

the back of the vehicle seat in front of it, or be as close as possible.

2

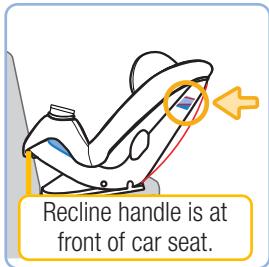


Recline handle is at front of car seat.

Recline Car Seat and Check Rear-Facing Level Lines

For children 5–30 lb (2.3–13.6 kg) and 19–34.3 in. (48–87 cm), the bottom level line on the car seat **MUST** be parallel with the ground.

For children 30–40 lb (13.7–18 kg) and 34.4–40 in. (87.1–101.6 cm) AND can sit up unassisted, the top level line on the car seat **MUST** be parallel with the ground.

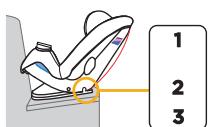

Use Position 3 or 2 to make sure the appropriate level line for your child's weight and height is parallel to the ground.

DO NOT use Position 1 for Rear-Facing Mode. See Reclining Car Seat on page 49.

3



OR




Locate Rear-Facing Belt Path and Route Vehicle Belt or Lower Anchor Belt through It

For the Lower Anchor Belt:
You may need to fully lengthen the belt before routing it into the belt path. Squeeze the adjuster button and pull the belt out as shown.



4

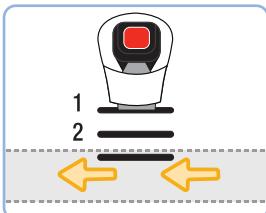

Vehicle Belt or Lower Anchor Belt Goes:

- Under the car seat pad; **AND**
- Across the car seat; **AND**
- In front of the buckle; **AND**
- Out the other **Rear-Facing Belt Path** opening.

DO NOT twist belt.


i

Finished Lower Anchor Belt Routing

The lower anchor belt adjuster can be on either side of the car seat.



5

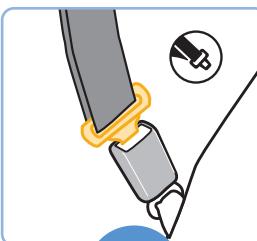

OR




Buckle Vehicle Belt

If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 57 of this manual or your vehicle owner's manual.


Attach Lower Anchor Belt Hooks to Vehicle's Lower Anchors

6

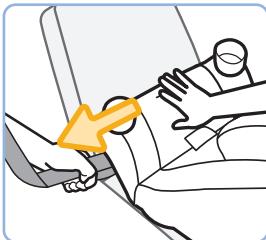


Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

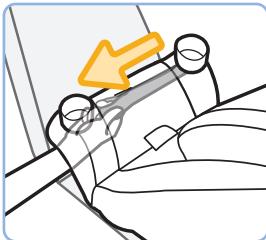

For the Lower Anchor Belt or Lap Only Vehicle Belt: it may be easier to tighten if you route the free end of the belt back into the **Rear-Facing Belt Path**, reach into the **Rear-Facing Belt Path**, and pull the free end of the belt towards you.

7

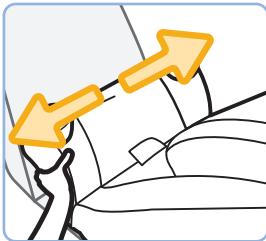

Check Belt Tightness

Hold the **Rear-Facing Belt Path** with your non-dominant hand. Push and pull the car seat from side to side.


The car seat should not move more than **1 in.** (2.5 cm) at the belt path.



If the car seat moves more than **1 in.** (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat; **OR**
- Changing to a different seating location; **OR**
- Switching to a different install method (LATCH or vehicle belt).


8

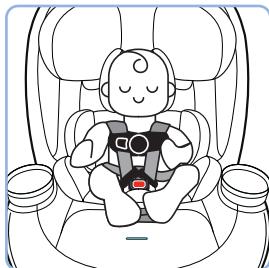

Secure Child in Car Seat


See pages 29–31.

9

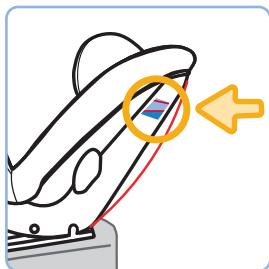

Recheck Rear-Facing Level Lines


Redo the installation if the car seat is not reclined correctly for your child. See step 2 and the info box on page 12.

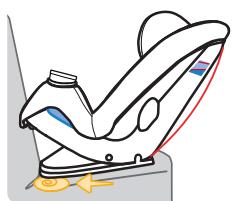

Only if necessary, you may place a tightly rolled towel(s) or foam pool noodle(s) under the front of the car seat base to help make the appropriate **Rear-Facing Level Line** for your child's weight and height parallel with the ground.

Check often to make sure padding is still in place and the belt is tight.

FINISHED!

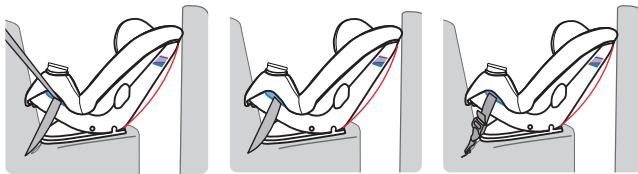

Lap/Shoulder Belt



Lap Belt



LATCH: Lower Anchor Belt

- Vehicle Belt Install:** Is the vehicle belt locked? See step 5.
- LATCH: Lower Anchor Belt Install:** Are the hooks securely attached to the vehicle's lower anchors? See step 5.
- Is the belt tightened enough so that the car seat does not move more than 1 in. (2.5 cm) from side to side at the belt path? Check the tightness of the install often to make sure it has not loosened. See steps 6 and 7.
- Is the appropriate level line for your child parallel with the ground? See steps 2 and 9 and the info box on page 12.

When using the passenger or driver-side locations, the car seat **MUST** be touching the back of the vehicle seat in front of it, or be as close as possible.

Forward-Facing Section



**30–65 lb (13.7–29.5 kg) and
34.4–49 in. (87.1–125 cm)**

In this car seat, your child **MUST** remain in harnessed **Forward-Facing** mode until they outgrow any one of the following:

- **Weight Limit:** 65 lb (29.5 kg); **OR**
- **Height Limit:** 49 in. (125 cm); **OR**
- **Forward-Facing Child Fit** requirements, see page 20.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Forward-Facing Child Fit: Page 20

Forward-Facing Vehicle Install: Page 22

WARNING

DO NOT use the lower anchors of the child restraint anchorage system (LATCH system) to attach this child restraint when restraining a child weighing more than 55 lb (24.9 kg).

The vehicle belt **MUST** be used for installation if your child weighs more than 55 lb (24.9 kg).

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.


Before using this seat in Forward-Facing mode, your child must have outgrown the seat in Rear-Facing mode.

Forward-Facing Child Fit


Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.

1

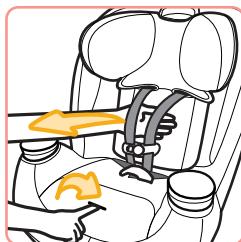

2

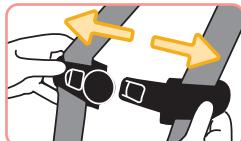

3



Undo Chest Clip and Buckle

While holding both sides of the chest clip, press the release button with your thumb and pull the chest clip apart.

To unbuckle the harness, press the red button to release the buckle tongues.

Place Child in Car Seat

You may use the harness holders to place the harness straps out of the way.

Your child's bottom and back should be flat against the car seat.


4



Check Head Position

The top of your child's ears **MUST** be below the top of the car seat's headrest.


5

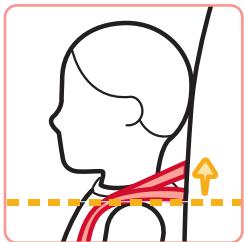

Check Harness Strap Position

The harness strap **MUST** be placed **at the shoulder** when possible, or slightly above; never below.

6

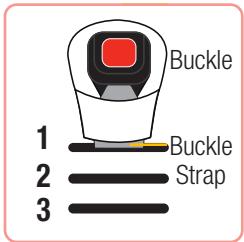

Check Buckle Position

- Use the slot closest to your child.
- The buckle strap **should not be underneath or behind** your child.

The buckle can be used in **any** buckle slot.



To change the harness strap height, see page 41.

To change the buckle position, see page 42.

To learn how to check harness tightness, see pages 29–30.

Forward-Facing Vehicle Install

There are 2 different methods for install.
Use only one:



OR



Vehicle Belt + Tether

for a child up to 65 lb (29.5 kg)

LATCH: Lower Anchor Belt + Tether

Do not install by this method for a child weighing more than 55 lb (24.9 kg).


⚠ WARNING

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.




- Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position for your child. **See step 6 on page 21 for child fit.**
- **Review vehicle owner's manual.** Determine the type of vehicle belts in your car and how to use them to lock a car seat in place **OR** where LATCH: lower anchor seating positions are located in your vehicle.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away (see page 54).

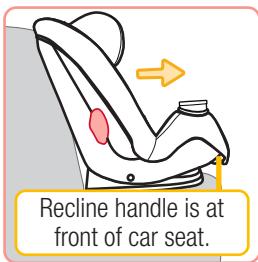


1

Put Car Seat Upright into Position 1 and Place Car Seat Forward-Facing in Back Seat

The base of the car seat should be flat against the vehicle seat bottom. The vehicle seat back **MUST** be in the upright position, but you can adjust the angle slightly to better match the angle of the car seat. Refer to the vehicle owner's manual for how to adjust the vehicle seat back.

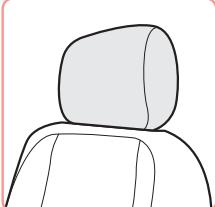


If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.

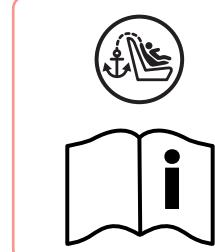

2

Locate Vehicle Top Tether Anchors

Review your vehicle owner's manual for top tether anchor locations and how to route the tether strap when there are vehicle headrests.

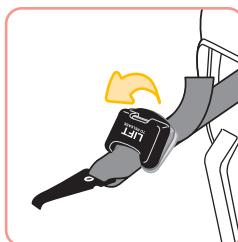


3

Loosen Tether Strap

Lift the tether adjuster to loosen the strap. Or, if your car seat has an adjuster with a button, then squeeze the adjuster button and pull the strap to loosen as shown.





4

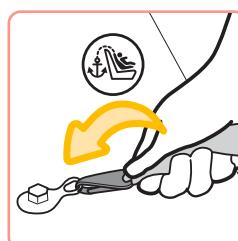

Attach Tether Hook to Vehicle's Top Tether Anchor

5

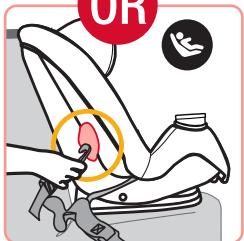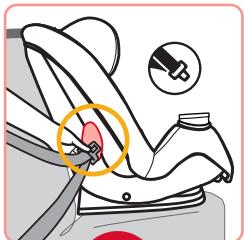


Locate Forward-Facing Belt Path and Route Vehicle Belt or Lower Anchor Belt through It

For the Lower Anchor Belt: You may need to fully lengthen the belt before routing it into the belt path. Squeeze the adjuster button and pull the belt out as shown.



6

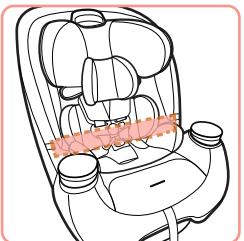

Vehicle Belt or Lower Anchor Belt Goes:

- Under the car seat pad; **AND**
- Across the car seat; **AND**
- Out the other **Forward-Facing Belt Path** opening.

DO NOT twist belt.




Finished Lower Anchor Belt Routing

The lower anchor belt adjuster can be on either side of the car seat.



7


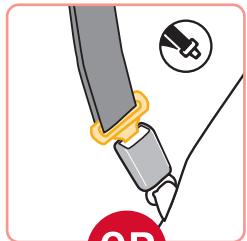


Buckle Vehicle Belt

If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 57 of this manual or your vehicle owner's manual.

Attach Lower Anchor Belt Hooks to Vehicle's Lower Anchors

8

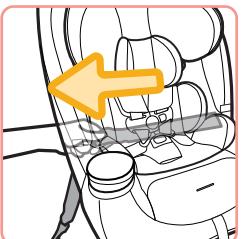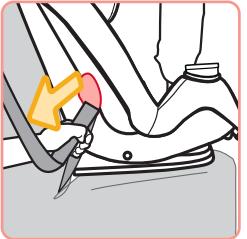

Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

For the Lower Anchor Belt or Lap Only Vehicle Belt: it may be easier to tighten if you route the free end of the belt back into the **Forward-Facing Belt Path**, reach into the **Forward-Facing Belt Path**, and pull the free end of the belt towards you.

9



Check Belt Tightness

Hold the **Forward-Facing Belt Path** with your non-dominant hand. Push and pull from side to side.


The car seat should not move more than **1 in.** (2.5 cm) at the belt path.



If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat; **OR**
- Changing to a different seating location; **OR**
- Switching to a different install method (LATCH or vehicle belt).

10

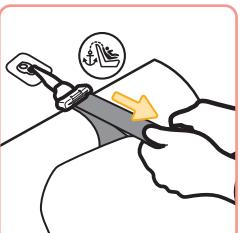

Tighten Tether

Push firmly on the back of the car seat and pull the free end of the tether strap to remove all of the slack.

FINISHED!



Lap/Shoulder Belt + Tether
for a child up to 65 lb (29.5 kg)

Lap Belt + Tether
for a child up to 65 lb (29.5 kg)

LATCH: Lower Anchor Belt + Tether
Do not install by this method for a child weighing more than 55 lb (24.9 kg).

Vehicle Belt Install: Is the vehicle belt locked?
See step 7.


LATCH: Lower Anchor Belt Install: Are the hooks securely attached to the vehicle's lower anchors?
See step 7.

Is the belt tightened enough so the car seat does not move more than 1 in. (2.5 cm) from side to side at the belt path? Check the tightness of the install often to make sure it has not loosened. See steps 8 and 9.

Has the tether been installed and tightened? See steps 4 and 10.

Securing Child in Car Seat


1

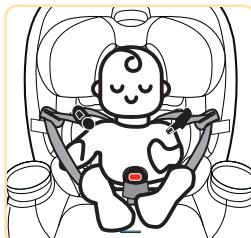

Place Child in Car Seat

Your child's bottom and back should be flat against the car seat.


2

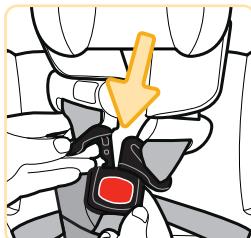

Buckle Harness

Pull the harness straps up to make sure the buckle is locked.


3

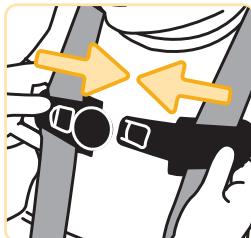

Fasten Chest Clip

Insert right half of the chest clip into the left half and snap together.

4

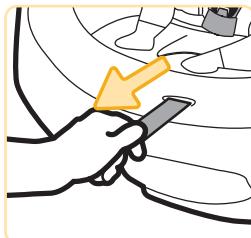


Tighten Harness

Pull the harness adjustment strap straight out to snugly tighten the harness.


Position Chest Clip

Slide the chest clip up the harness straps and position it at mid-chest (even with armpits) and away from your child's neck.

5

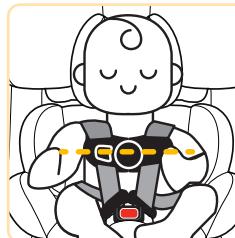

6

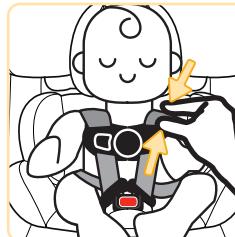

Check Harness Tightness

Unfasten the harness covers.

Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

If you can pinch the harness strap, tighten more.

Fasten the harness covers.



A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

If one side of the harness is tighter than the other, lengthen the tighter side by pulling up the harness near the hip slot.

FINISHED!



Your child is now secured in the car seat. Check your child's fit often and make any needed adjustments to the car seat as they grow.

To Remove Child from Car Seat:

1. Loosen harness strap.
2. Unbuckle harness.
3. Release chest clip.
4. Remove child.

Troubleshooting

1. If the buckle or harness release lever sticks: DO NOT lubricate. Check for dropped food, sticky spilled drinks, dirt, leaves, etc.

Clean with warm water and/or remove the object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, **DO NOT** use this car seat.

2. If your harness twists: Straighten the harness each time you put your child in the car seat. Lock the buckle and tighten the harness so it will be ready for next use.

 **WARNING**

Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

DO NOT mistake comfort for safety. The harness system **MUST** be snugly adjusted.



DO NOT put snowsuits or bulky garments on your child when placing them in the child restraint.

Bulky clothing can prevent the harness straps from being tightened properly.



**40–100 lb (18.1–45.4 kg) and
43.4–52 in. (110.1–132.1 cm)**

In this car seat, your child can use the **Booster Seat** mode until they fit the vehicle's lap and shoulder seat belt properly without a **Booster Seat** OR outgrow any one of the following:

- **Weight Limit:** 100 lb (45.4 kg); **OR**
- **Height Limit:** 52 in. (132.1 cm); **OR**
- **Booster Seat Child Fit** requirements, see page 40.

You **MUST** store the harness system and remove the accessories, except the cup holder(s), when using the **Booster Seat Mode**.

To remove accessories, see pages 3–4.

Storing Harness System: Page 34

Booster Seat Use in Vehicle: Page 37

Booster Seat Child Fit: Page 40

⚠ WARNING

DO NOT use the harness system when using as a booster seat.

DO NOT use LATCH when using as a booster seat. Secure the lower anchor belt and the tether strap to their storage attachments.

Warning! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



DO NOT use only the lap belt when using this seat as a booster seat. The shoulder belt **MUST** always be adjusted snugly across the child's chest.



NEVER place shoulder belt under the child's arms or behind their back.




DO NOT use this booster seat if the top of your child's ears are above the top of the booster seat's headrest.


Storing Harness System

Fully Loosen Harness Straps


1

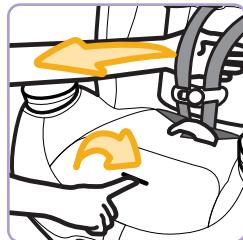

2

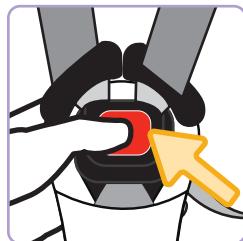

3

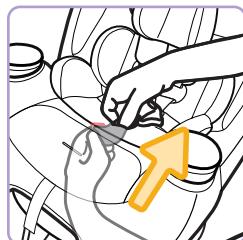


Undo Buckle

Recline Car Seat

Reach under the car seat. Rotate the buckle's metal retainer and push it up through the car seat.


4

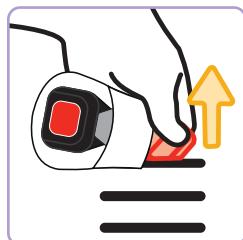

Pull Buckle and Buckle Cover Out of Car Seat


Store the buckle and buckle cover in a safe place for future use.

5

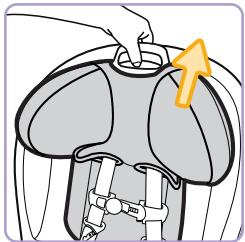


Adjust Headrest to
Highest Position

6

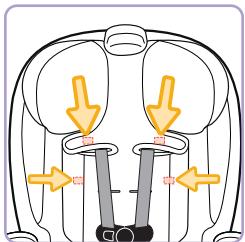


Undo Fabric Tabs on
Headrest Pad and
Seat Pad

7

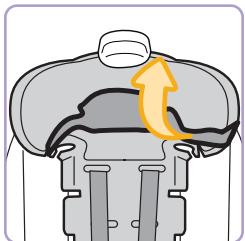


Gently Pull Headrest
Pad Off Bottom
of Headrest

8

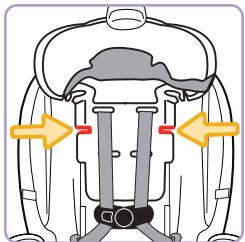


Thread Harness
Straps into
Slots on Sides
of Headrest

9

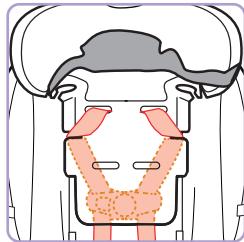

Place Chest Clip,
Harness Straps,
and Buckle Tongues
Behind Headrest
and Seat Pad


10

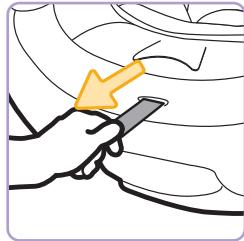

Tighten Harness

Remove any slack from the harness system.


11

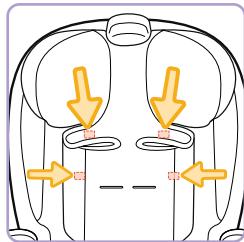

Wrap Headrest Pad
Around Bottom
of Headrest

Attach the fabric tabs on
the headrest pad and the
seat pad.

FINISHED!

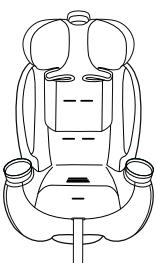

The car seat has been converted to the
Booster Seat Mode.

See next page for **Booster Seat Use
in Vehicle**.

Booster Seat Use in Vehicle

1




Put Booster Seat into Position 1

Place the booster seat in the back seat. The booster seat **MUST** be flush against the back of the vehicle seat.


The booster seat **MUST** be **upright**. The vehicle seat back **MUST** be in

the upright position, but you can adjust the angle slightly to better match the angle of the car seat. Refer to the vehicle owner's manual for how to adjust the vehicle seat back.

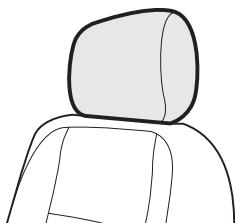

If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.


2

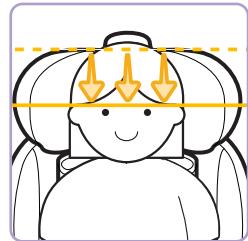

Have Child Sit in Booster Seat

The top of your child's ears should never be above the top of the booster seat's headrest.


3

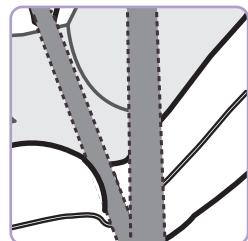

Position Lap Belt on Child

Route the lap belt portion of the vehicle belt through the **Booster Seat Belt Path** as shown. The lap belt should lay snugly across your child's hips; not on their stomach.


4

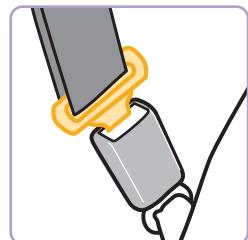

Buckle Vehicle Belt


Pull the shoulder belt up to tighten.

5

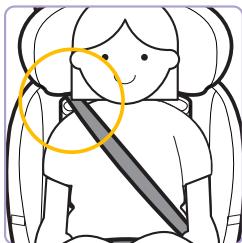


Position Shoulder Belt on Child

Thread the shoulder belt through the belt-positioning guide in the headrest.

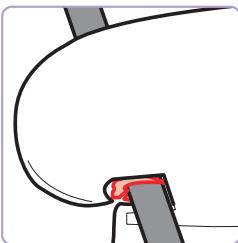

Pull the shoulder belt up to tighten so that it lies snugly across the center of your child's shoulder and across their chest.


FINISHED!

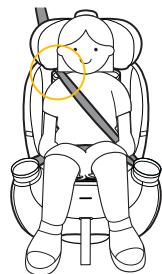

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.



Keep the booster seat securely belted even when unoccupied.

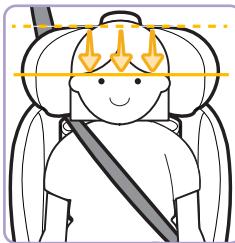

Check Head Position

The top of your child's ears should **never be above** the top of the booster seat's headrest.




Check Car Position

DO NOT use the booster seat if your child's head is less than 5 in. (12.7 cm) below the roof of the car. Consult your vehicle manual for proper seatbelt usage.



Check Shoulder Belt Position

The shoulder belt should lay snugly across the center of your child's shoulder and across their chest.

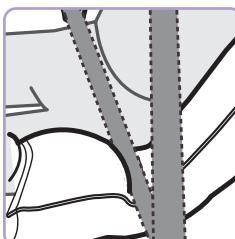


Check Lap Belt Position

The lap belt should lay snugly across your child's hips; **not on their stomach**.

Changing Headrest/ Harness Height


1

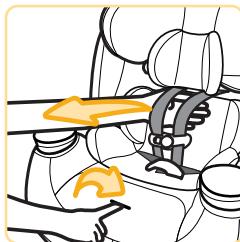

Fully Loosen Harness Straps

Push down on the harness release lever (through the opening in the pad) while pulling out on the harness straps as shown.

2

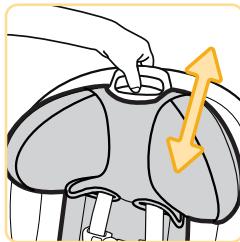

Adjust Headrest/ Harness Height

1. Squeeze the headrest adjustment handle.
2. Move the headrest up or down to the proper height for your child.
3. Release the handle to lock in place.
4. Make sure it is locked securely.



For Rear-Facing Child Fit, see page 9.

For Forward-Facing Child Fit, see page 20.

To learn how to check harness tightness, see pages 29–30.

If you cannot achieve a snug harness fit for your child, see pages 44–47.

Check the harness straps often for any wear or damage.

Changing Buckle Position

WARNING

Failure to place buckle's metal retainer completely through pad and child restraint can result in serious injury or death. Serious injury can include paralysis and/or permanent brain injury.


1



Undo Buckle

It may be easier to undo the buckle by pressing in towards the top of the button.

2

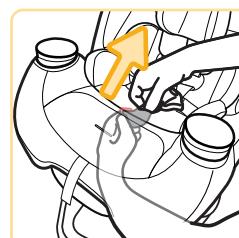

Recline Car Seat

Reach under the car seat. Rotate the buckle's metal retainer and push it up through the car seat.


3



From Top of Car Seat, Pull Buckle and Buckle Cover Out of Car Seat and Pad

continued on next page

4

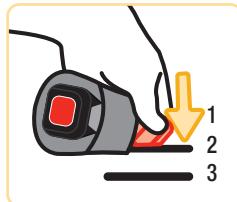


Insert Buckle's Metal Retainer into Buckle Slot Closest to Child

The buckle **MUST** face out. Tuck the ends of the buckle cover into the same pad slot as the buckle.

Rear-Facing Mode: You **MUST** use the **1st or 2nd** buckle slot.

Forward-Facing Mode: **ANY** slot can be used.

5

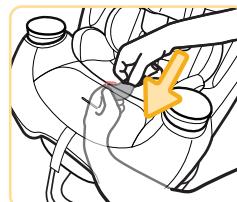

Reach Under Car Seat Between Base and Car Seat

Pull the buckle's metal retainer completely through the seat pad and car seat.

6



Check Buckle

Pull the buckle up to make sure it is secured.

The buckle **MUST NOT** pull out.



For Rear-Facing Child Fit, see page 9.

For Forward-Facing Child Fit, see page 20.

To learn how to check harness tightness, see pages 29–30.

If you cannot achieve a snug harness fit for your child, see pages 44–47.

Harness System Adjustments for Smaller Infants



If you cannot achieve a snug harness fit for your child, you may need to adjust the buckle strap position and/or harness strap length and location as shown in this section.

⚠ WARNING


The harness system **MUST** be installed correctly.

DO NOT use a child restraint with damaged harness straps.

Failure to place buckle's metal retainer completely through pad and child restraint can result in serious injury or death. Serious injury may include paralysis and/or permanent brain injury.

Adjusting Buckle


1

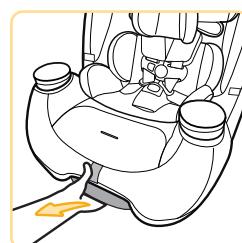


With Buckle in 1st Slot, Fully Recline Car Seat

If you need to move the buckle to the 1st slot, see pages 42–43.

2

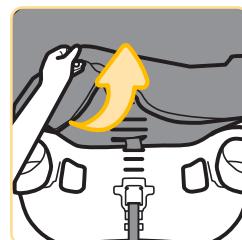


Pull Front of Car Seat Pad Up

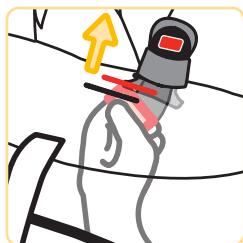

3

Reach Under Car Seat

Pull the buckle's metal retainer down and then push it up into the middle slot as shown.

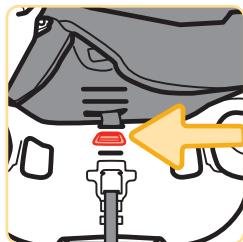

4

From Top of Car Seat, Lay Metal Retainer Flat Against Car Seat



5

Tuck Car Seat Pad Around Front of Car Seat and Check Buckle


Pull the buckle up to make sure it is secured.

The buckle **MUST NOT** pull out.



When using the lower shoulder harness slots for smaller children, you **MUST** use the head and body pillow and the headrest **MUST** be in the lowest position.


See page 3 for installing the head and body pillow.
See page 41 for adjusting the headrest height.

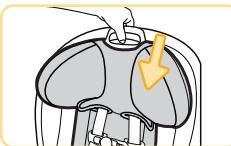

1



2

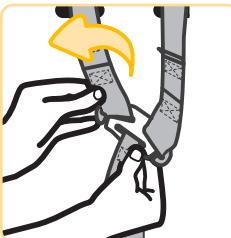

3



4

Adjust Headrest to Lowest Position and Fully Loosen Harness Straps


From Back of Car Seat, Remove Harness Strap Loops From Splitter Plate

Pull Harness Straps Out of Upper Shoulder Harness Slots

Pull Body Pillow Forward Away from Car Seat

Thread the harness straps through the slots in the pillow, the lower shoulder harness slots in the seat pad, and the car seat.


5

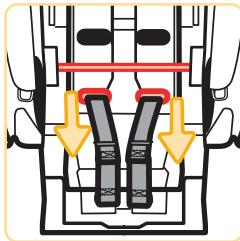

From Back of Car Seat, Pull Harness Straps Through Car Seat

The harness straps **MUST** be in the shoulder harness slots **below** the metal bar.


6

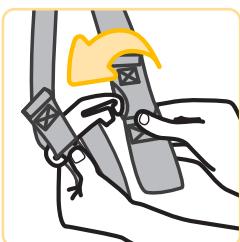

Attach 2nd Harness Strap Loops to Splitter Plate



The sewn ends of the harness strap loops **MUST** face towards you.

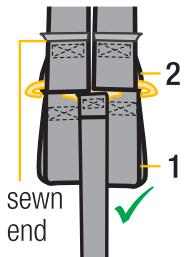

DO NOT twist the harness strap or the harness adjustment strap.

Make sure the same harness strap loops are fitted completely on both sides of the splitter plate.



To return the harness straps to upper shoulder harness slots, follow the steps below to rethread them.


1. Remove harness strap loops from splitter plate and pull harness straps out of lower shoulder harness slots in body pillow and car seat.



2. Thread harness straps into upper shoulder harness slots in seat pad and car seat.



3. From back of car seat, thread harness straps **OVER** metal bar.



4. Attach 1st harness strap loops to splitter plate.

The sewn ends of the harness strap loops **MUST** face towards you.


DO NOT twist the harness strap or the harness adjustment strap.

Make sure the lower harness straps (labeled "1") are fitted completely on both sides of the splitter plate.



If harness straps have been removed from chest clip and buckle, rethread them:

The harness strap ends go through the **back** of the buckle tongues and through the chest clip **front to back**.

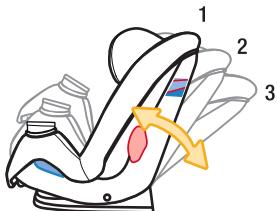

This car seat has 3 positions.

Rear-Facing Mode - 3 Reclined or 2 Semi-reclined

Use Position 3 or 2 to make sure the appropriate **Rear-Facing Level Line** is parallel to the ground. To determine which **Rear-Facing Level Line** to use for your child's weight and height, see page 12 step 2.

Forward-Facing Mode - Position 1 Fully Upright

Booster Seat Mode - Position 1 Fully Upright



To Recline: Pull the recline handle out and push the top of the car seat back.

For More Upright: Pull the recline handle out and pull the top of the car seat forward.



In **Forward-Facing Mode** or **Booster Seat Mode**, the vehicle seat back **MUST** be in the upright position, but you can adjust the angle slightly to better match the angle of the car seat. Refer to the vehicle owner's manual for how to adjust the vehicle seat back.




You do not need to remove the harness system to remove the pad from the car seat.

DO NOT fully pull the harness strap out of the car seat. Leave it threaded in the hip harness slots. If removed, you will not be able to rethread it.


To remove accessories, see pages 3–4.

1

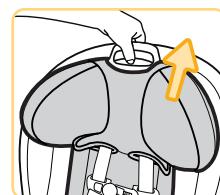


Adjust Headrest to Highest Position

2

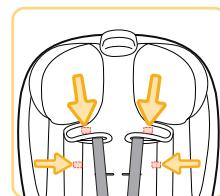

Undo Fabric Tabs on Headrest Pad and Seat Pad


3

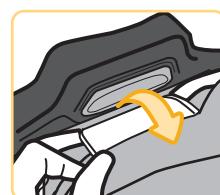

Undo the Fabric Flap on the Top of the Headrest Pad

Pull the fabric flap out of the slot on the top of the headrest.


4

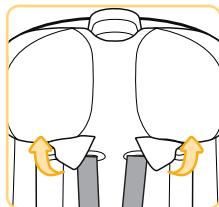

Undo the Fabric Flaps on the Bottom of the Headrest Pad


Pull the two fabric flaps out of the slots between the foam and plastic on the bottom of the headrest.

5

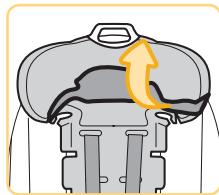


Gently Pull Headrest Pad Off Headrest Starting From the Bottom

6

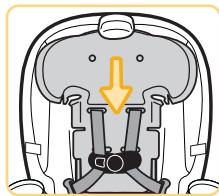


Lower Headrest to Middle of Car Seat

7

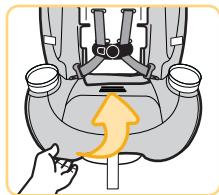

Pull Seat Pad Off Sides and Front of Car Seat

8

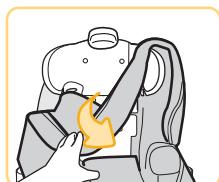

Pull Seat Pad Around Headrest and Off Car Seat

Cleaning Parts of Car Seat and Installing Seat Pad Set

Cleaning Pad and Accessories

Machine wash separately with cold water on a gentle cycle. Make sure the harness covers are closed so the fastening strips are not exposed. **DO NOT** use bleach. Tumble dry separately for 10–12 minutes on low heat. Remove immediately.

Cleaning Harness Strap

Check the harness straps often for any wear or damage.

Spot clean using warm sudsy water and damp cloth. Spilled food and liquids on the car seat may result in mold or bacterial growth over time. These spills could also attract insects or rodents.

Cleaning Buckle and Car Seat


Spot clean using warm sudsy water and damp cloth. **DO NOT** submerge into water.

Installing Seat Pad Set

1. Lower headrest to middle of car seat.
2. Pull seat pad around headrest and onto car seat.
3. Pull headrest pad on to the headrest.
4. Insert the bottom headrest pad fabric flaps into the slots between the foam and plastic in the bottom of the headrest.
5. Insert the top headrest fabric flap into the slot on the top of the headrest.
6. Attach the fabric tabs on the headrest.

⚠️ WARNING


DO NOT use the child restraint without the seat pad or with damaged harness straps.

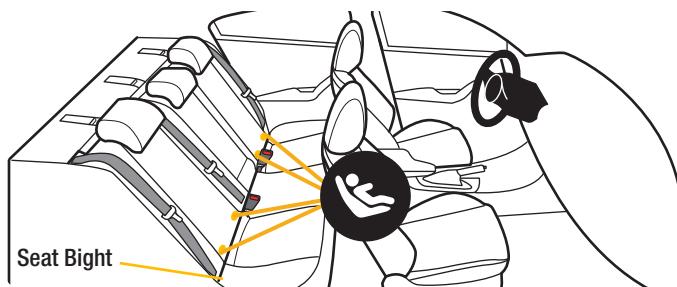


Your vehicle's features may be considerably different than those pictured here.

The lower anchors of **LATCH** (Lower Anchors and Tethers for **C**hildren) is a universal system for installing car seats without using vehicle seat belts. The LATCH: lower anchor belt can **ONLY** be used in vehicles that have the lower anchor bars installed in designated seating positions. Most vehicles manufactured after September 2002 are equipped with LATCH: lower anchor bars. Check your vehicle owner's manual to see which seating positions may be equipped with LATCH: lower anchor bars.

Lower Anchor Belt Storage Location

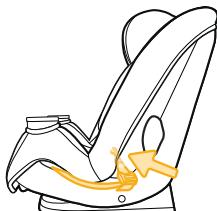

Lower Anchor Belt Parts



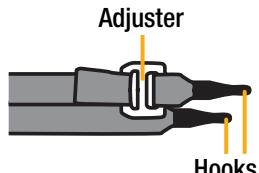


To Remove Lower Anchor Belt from Storage Location on Car Seat

Squeeze the spring lever on the hooks and remove the hooks from the attachments in the storage location.

To Remove Lower Anchor Belt from Vehicle's Lower Anchor Bars

1. Remove the tension from the belt by pushing down on the side of the car seat with the adjuster.
2. Then press the adjuster's button to loosen the belt.
3. Squeeze the spring lever on the hooks, push the hooks back into the vehicle seat, and rotate the hooks to the side.
4. Pull the hooks out of the vehicle seat.

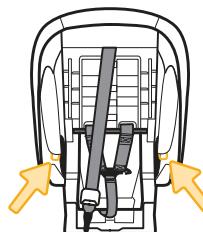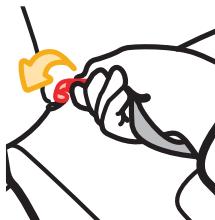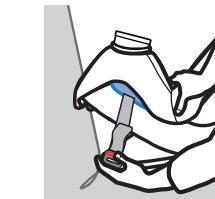

To Store Lower Anchor Belt


The lower anchor belt **MUST** be properly stored in its storage location when:

- Using the vehicle belts to install the car seat; **OR**
- Using the **Booster Seat Mode**; **OR**
- The car seat is not installed in a vehicle.

Secure the hooks to the attachments in the storage location as shown. Gently tighten the belt to remove slack.

⚠️ WARNING

DO NOT use both the lower anchor belt and vehicle belt at the same time.

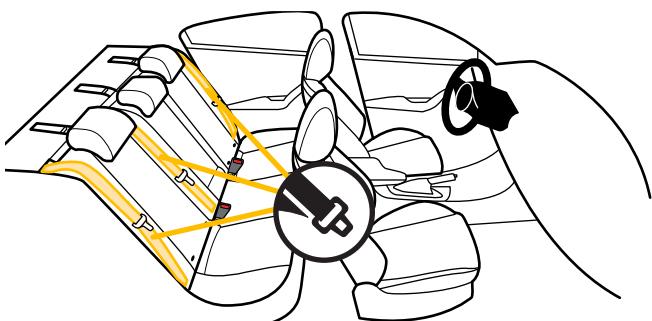

Your vehicle's features may be considerably different than those pictured here.

If LATCH: lower anchors are not an option or if your child weighs more than **55 lb** (24.9), you **MUST** use the vehicle seat belt system to install the car seat.

Not all vehicle belts and seating positions will work with car seats. Please go through the following steps to understand how to lock a car seat in [Rear-Facing Mode](#) or [Forward-Facing Mode](#) with a vehicle belt.

1



You **MUST** Review Your Vehicle Owner's Manual

Review your vehicle owner's manual to determine the type of vehicle belts in your car and the seating positions available for installing the car seat.

2




Check How This Car Seat Will Be Locked Into Place

The vehicle belt **MUST NOT** loosen after tightening.

This requires locking it by using either:

- The vehicle belt's retractor (see step 3); **OR**
- The vehicle belt's latch plate (see step 4).

3

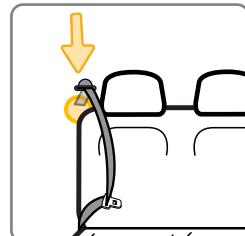

Check Retractor

Retractors pull vehicle belts into stored positions and lock the belt to hold passengers in place.

See the next page for some common types of vehicle belt retractors that will work with this car seat.

Types of Retractors



Switchable Retractor

(most vehicles have this type)

This retractor can be switched to a locking mode.

You **MUST** have the retractor in the **locking mode** to use the vehicle belt with this car seat.

Switching to locking mode: Slowly pull the shoulder belt all the way out, then let it go back in **1–2 in.** (2.5–5 cm).

As it goes back in, you will most likely hear a ratcheting sound.

Gently pull the belt to see if it has locked. You will not be able to pull any more belt out if the lock has engaged.



Automatic Locking Retractor

This retractor always locks.

It will automatically lock after slowly pulling the vehicle belt out at least halfway and letting the belt go back into the retractor **1–2 in.** (2.5–5 cm).



Emergency Locking Retractor


See Step 4

Check Latch Plates


If the retractor does not lock, it is most likely an Emergency Locking Retractor. These retractors only lock during a sudden stop or collision.

You will need to determine if your seat belt's latch plate can lock the belt. See step 4, Check Latch Plates.

4



Locking
Latch
Plate



Sliding Latch
Plate

Check Latch Plates

Latch plates are the part of the vehicle belt that goes into the buckle.

To see if the latch plate locks:

1. Buckle vehicle belt.

2. Slowly pull up on the lap portion of the vehicle belt.

If the vehicle belt does not slide through the latch plate, it's locked.

If the vehicle belt slides through the latch plate, it is a **sliding latch plate**.

Sliding latch plates easily slip between the lap and shoulder portions of the belt.




If you have an Emergency Locking Retractor with a Sliding Latch Plate, you **MUST** use a locking clip.

Please contact us for one, see the back cover of the manual.


Never Use the Following With This Car Seat:

- Emergency Locking Retractor Lap Only Belt
- Inflatable Seat Belts

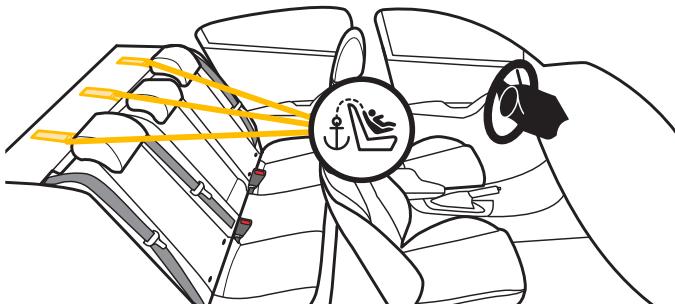

Your vehicle's features may be considerably different than those pictured here.

When anchors are available, you **MUST always attach, adjust, and secure the tether (top anchorage) strap** when installing the car seat in the **Forward-Facing Mode** with internal harness. Tethers improve the installation and stability of car seats and reduce the risk of injury. Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information. If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed.

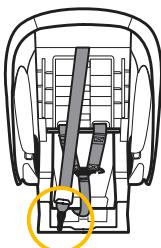

Storing Top Tether Strap

The tether strap **MUST** be properly stored in its storage location when:

- installing in **Rear-Facing Mode**; **OR**
- using the **Booster Seat Mode**; **OR**
- the car seat is not installed in a vehicle.

Attach the tether hook to its storage location as shown. Gently tighten to remove slack.

⚠ WARNING

Using this child restraint without the tether strap anchored as required by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could result in serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

DO NOT fasten multiple tether hooks on the same tether anchor in the vehicle.

⚠ WARNING

NEVER take your child out of the child restraint while the vehicle is moving.

NEVER leave your child unattended.

Placing your child in a hot child restraint may result in burns.

DO NOT use a child restraint with damaged or missing parts.

DO NOT use a child restraint with cut, frayed, or damaged harnesses.

DO NOT substitute parts or try to modify the child restraint in any way. **DO NOT** lubricate buckles and fasteners.

DO NOT use any child restraint accessory except those approved by Dorel Juvenile Group.

NEVER allow any child to play with this child restraint; it is not a toy.

DO NOT remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. **DO NOT** use in a boat, on a motorcycle, or in a cargo van or bus where there are no seat belts or tether anchors.

Read all instructions for additional warnings.

⚠ WARNING



NEVER place a child rear-facing in a seating position with an active frontal air bag.



Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the child restraint only on vehicle seats that face forward.

DO NOT use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

Rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the car seat in your vehicle:

- Consult your vehicle owner's manual; **OR**
- Contact Dorel Juvenile Group Consumer Care Department; **OR**
- Visit your local Child Passenger Inspection Station. Go to <https://www.nhtsa.gov/vehicle-safety/car-seats-and-booster-seats> to find your closest station.

To avoid your child being seriously burned, take the following precautions:

- Park in the shade or where the sun does not directly hit the car seat.
- Cover the car seat with a sheet or blanket when not in use.
- Check for hot seat and buckles before placing child in car seat.

To help protect your vehicle seat's upholstery from damage: you may use an accessory approved by Dorel Juvenile Group or a single layer towel underneath and behind car seat.

⚠ WARNING

Check the vehicle belt or lower anchor belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

Even when unoccupied, this booster seat **MUST** be firmly secured to the vehicle with the vehicle seat belt.

In a crash or sudden stop, an unsecured child restraint or booster seat could injure occupants.



DO NOT risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash; even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL** of the following **MUST** be true:

- Vehicle able to drive away from the crash site; **AND**
- Vehicle door nearest the car seat was not damaged; **AND**
- No passengers were injured; **AND**
- Airbags did not deploy; **AND**
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **MUST** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat **MUST** be replaced immediately.

Expiration

On the side of the car seat there is a date of manufacture label as shown.

DO NOT use this car seat more than 10 years after the date of manufacture.

0515079 Tear Off and Mail This Part or Register Online 4348-0081D

Consumer: Just fill in your name, address and email. Please print (use dark ink).

Your Name		
Your Street Address		
City	State	Zip Code
Email Address (optional)		
Model Number	Model Name	Manufacture Date
AB123CDE	Brand Car Seat	2024/05/01

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the car seat.

Please complete the postage-paid registration card that came with your child restraint, and send it to us.

Child restraints could be recalled for safety reasons.

You must register this restraint to be reached in a recall.

Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group

Attn: Consumer Care

P.O. Box 2609
Columbus, IN 47202


or call 1-800-544-1108 or register online at
www.djgusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to www.NHTSA.gov.



This restraint is certified for aircraft use when used with the internal harness.

Install the car seat in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

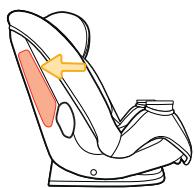

Use only on forward-facing aircraft seats. Contact the airline for their specific policies. Some airlines may ask to see a label stating that this car seat is certified for aircraft use. There is an airplane certification label located on the side of this car seat as shown.

⚠ WARNING

You **MUST** store the lower anchor belt and tether strap when installing with aircraft belts.



Rear-Facing Aircraft Installation

Follow the vehicle belt install steps on pages 11–17.



Forward-Facing Aircraft Installation

Follow the vehicle belt install steps on pages 22–28, skipping the tether strap steps.



Booster Seat

This restraint is not certified for aircraft use, when used as a booster seat, because aircraft seats do not have shoulder belts.

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase.

An original receipt is required to validate your warranty.

DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-544-1108 or text: 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights: Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty.

Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.