





ITEM: OS-AZ010-01SS
OS-AZ011-01SS
ANZZI OUTDOOR SHOWER
INSTALLATION & OPERATION MANUAL

V1.0

06/11/2026

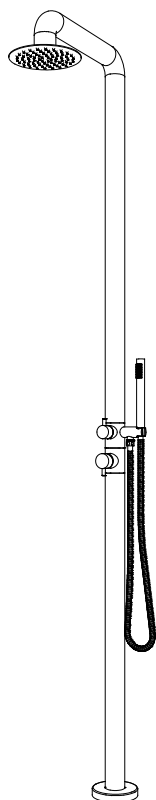

OS-AZ010-01SS

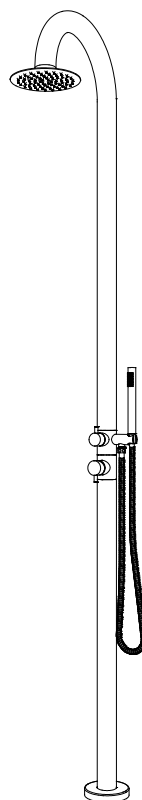

OS-AZ011-01SS

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

Register online at <https://anzzi.com/pages/register> or scan the QR code at PG. 2.



PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.

Registering online is fast, secure, and ensures we receive your information.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE



2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

...

Model Purchased*


Installer Phone Number

Customer Age Range

Submit



3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

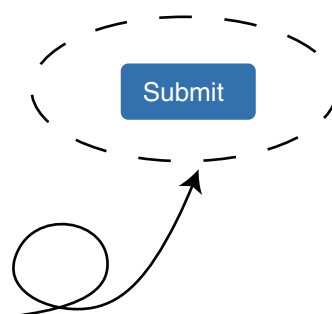

Need help? For technical support call **305-614-4070** or visit us at www.ANZZI.com

PARTS LIST

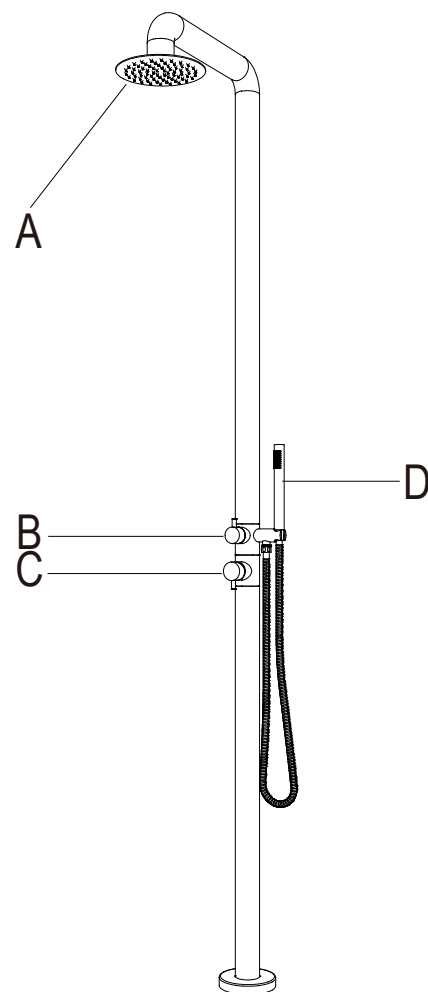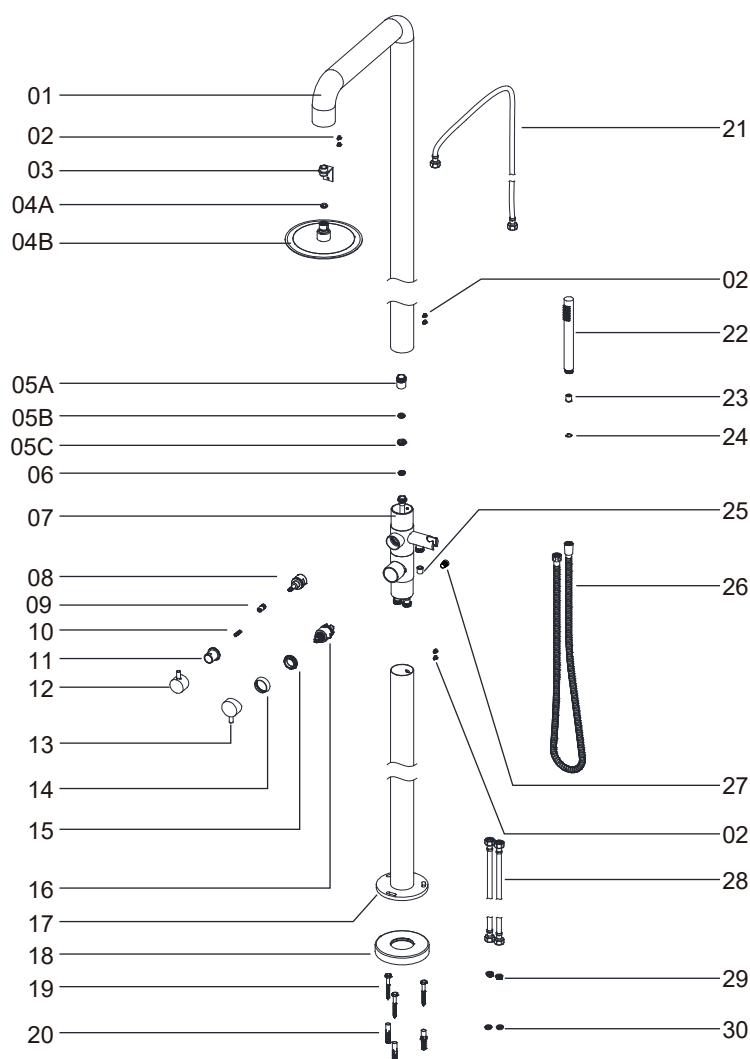

Part	Description	Qty	Part	Description	Qty
[01]	Spout	1	[15]	Retainer	1
[02]	Screw	6	[16]	Cartridge	1
[03]	Connector	1	[17]	Post	1
[04A]	1/2" Washer	1	[18]	Escutcheon	1
[04B]	Shower Head	1	[19]	Screw(5/16 in.x 2.9 in.)	3
[05A]	Nipple	1	[20]	Anchor	3
[05B]	Flow Restrictor	1	[21]	Hose	1
[05C]	Lock Nut	1	[22]	Hand Shower	1
[06]	1/2" Washer	1	[23]	Check valve	1
[07]	Body	1	[24]	C-clip	1
[08]	Diverter Cartridge	1	[25]	Check valve	1
[09]	Adaptor	1	[26]	Shower Hose	1
[10]	Screw	1	[27]	Plug	1
[11]	Retainer	1	[28]	Hose	2
[12]	Diverter Handle	1	[29]	U-shaped Gasket	2
[13]	Handle	1	[30]	1/2" Washer	2
[14]	Cover	1			


A. Shower Head
B. Diverter
C. Mixer
D. Hand Shower

PRODUCT FEATURES

- Corrosion-Resistant 316 Stainless Steel
- Single diverter controls water flowing between Rain Shower/ Hand Shower

BEFORE YOU START


Recommended Items

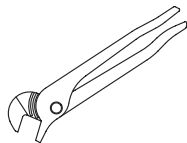


Channel Locks




Goggles



Rubber Mallet




Measure

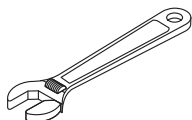

Adjustable Wrench



Pencil

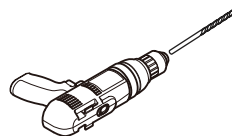

Electric Drill

Read Before Using Your New Outdoor Shower Faucet

- Congratulations on your purchase. This premium shower panel delivers the pleasure of shower and modern functionality, all within the comfort of your own home.
- The Outdoor Shower Faucet is designed to operate with standard residential plumbing systems and will function using your existing water supply lines at typical household water pressure and flow rates.
- Before installing or using this product, please read this manual carefully and completely. The instructions and safety information provided are essential for proper installation, safe operation, and long-term performance. Improper installation, maintenance, or repair — including failure to follow care and cleaning instructions — may result in product damage and could void the warranty.

IMPORTANT

1. Inspect Before Installation

Before beginning installation, ensure the package is intact and all components are free of damage. If you discover any damaged parts, contact your dealer or ANZZI immediately.

2. Installation Knowledge Required

Basic plumbing knowledge is required to install this Outdoor Shower Faucet. If you are unfamiliar with plumbing techniques or have questions, contact your dealer or consult a licensed professional plumber.

3. Water Pressure Requirements

The required water supply pressure range is **20–125 PSI**. If your water pressure exceeds this range, a pressure-reducing valve must be installed.



4. Leak Inspection

After installation, check all connections for leaks. Tighten fittings if necessary, but do not overtighten.


5. Pipe Line Cleaning

Clean the water pipeline thoroughly before installation to remove sediment and impurities, avoiding blockage and damage to cartridge and shower nozzles.

PRODUCT SIZE CHART - OS-AZ010-01SS

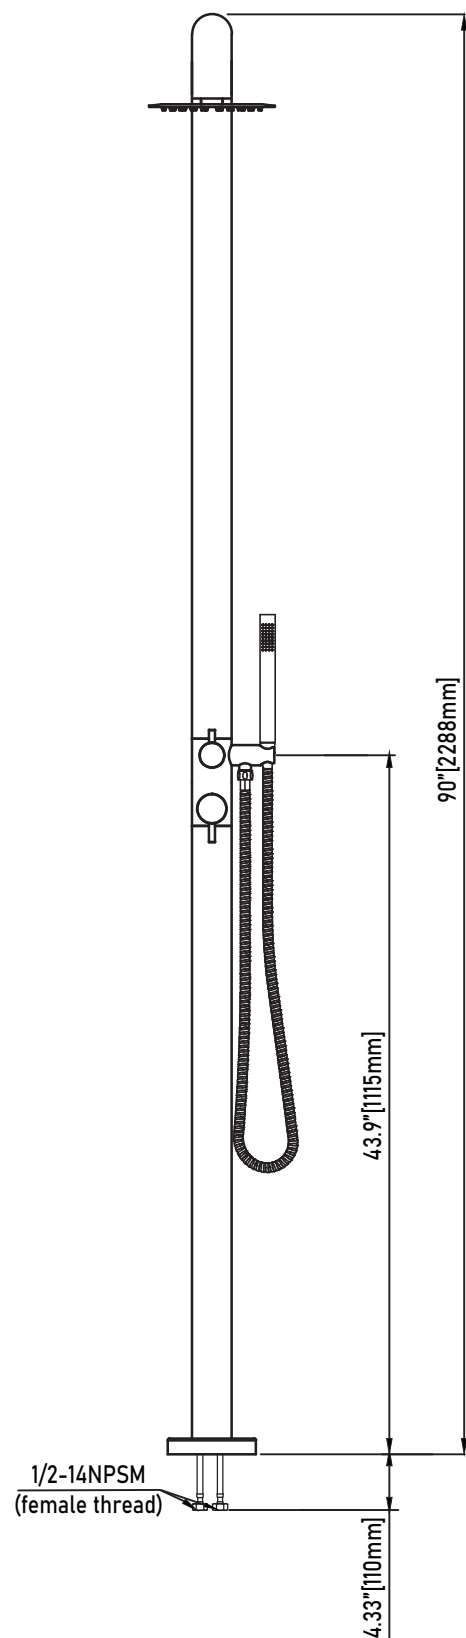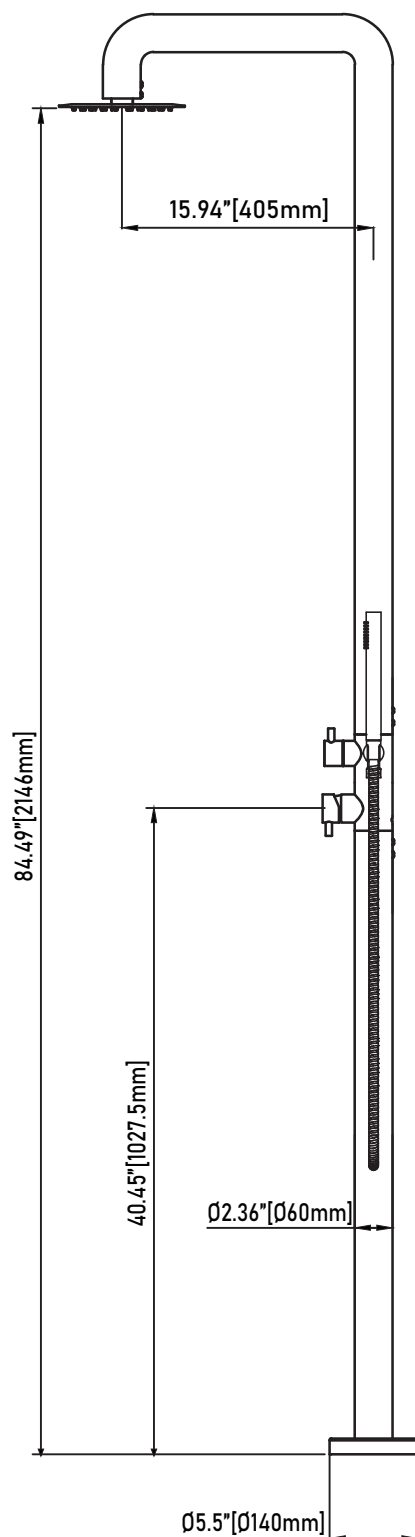

PRODUCT SIZE CHART - OS-AZ011-01SS

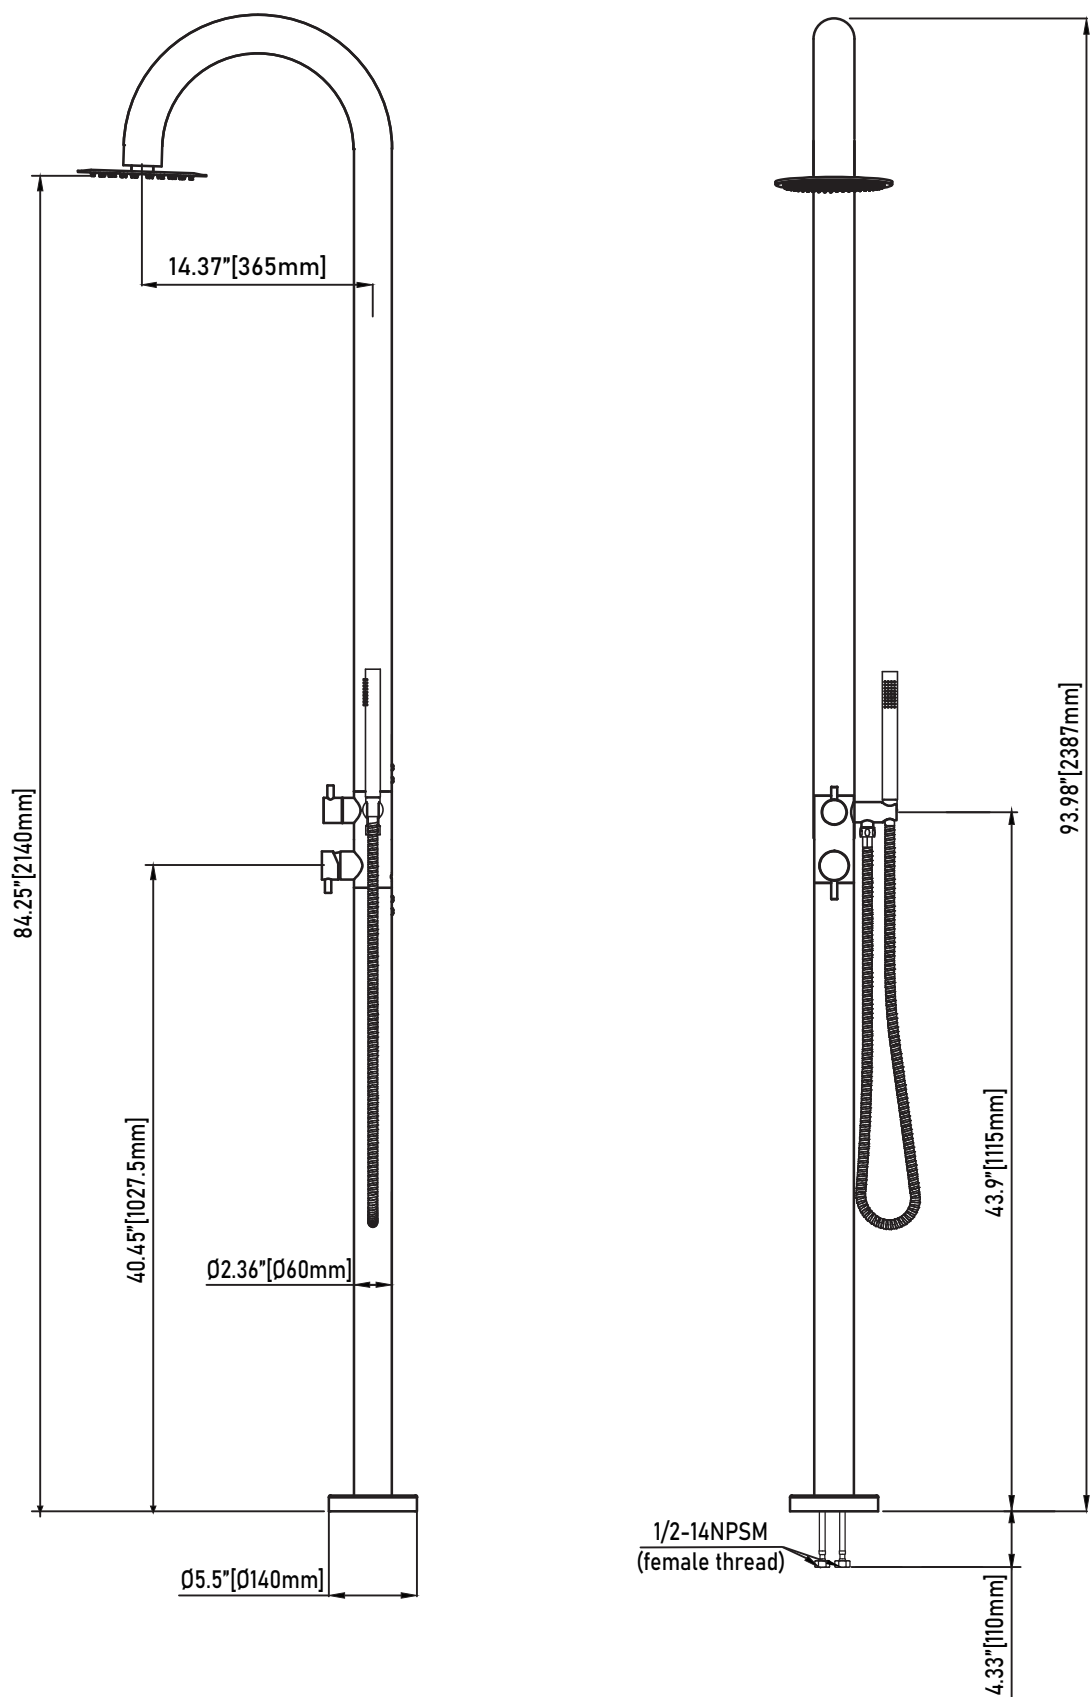

STEP 1

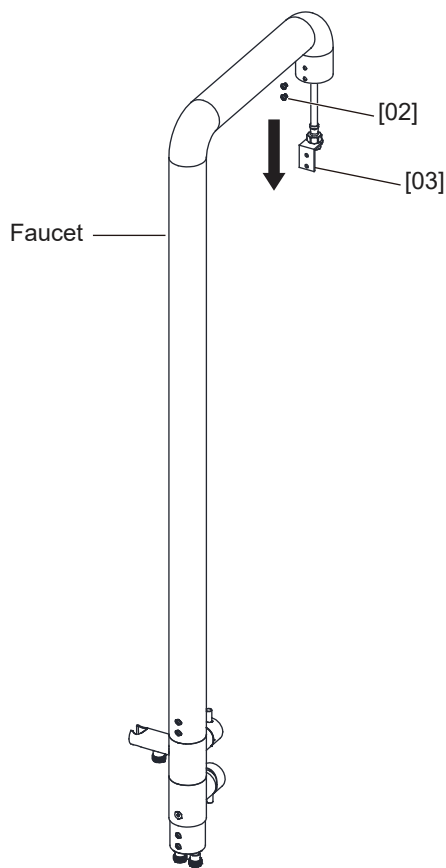


Fig 1.1

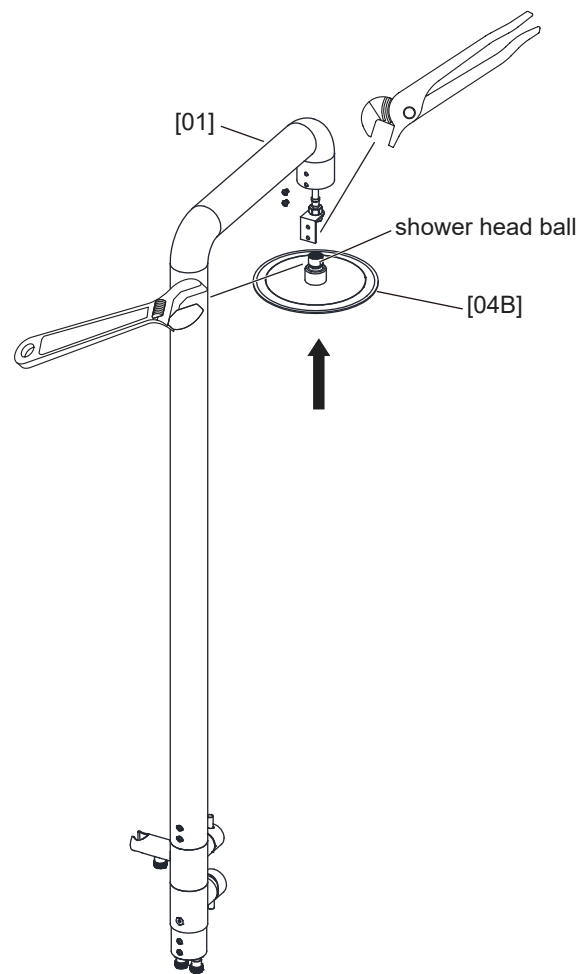


Fig 1.2

- 1-1** Move the cover of the inner package to the ground.
- 1-2** Take out the **Faucet** from the package and place on the cover.
- 1-3** Remove the **Screws [02]** from the **Faucet** and slightly pull out the **Connector [03]** from inside as figure shows. (Fig 1.1)
- 1-4** Connect the **Shower Head [04B]** to the **Connector [03]**. Use the Channel Locks to hold the **Connector [03]** and tighten the shower head ball by Adjustable Wrench.
Note: Make sure there is a washer inside the shower head ball.
Do Not Over Tighten. (Fig 1.2)
- 1-5** Push the **Connector [03]** back inside the **Spout [01]** and secure with the **Screws [02]**. (Fig 1.2)

STEP 2

- 2-1** Install the **Hoses [28]** to the **Faucet**. The hose with Hot label connect to the hot inlet of the faucet. The hose with Cold label connect to the cold inlet of the faucet. Tighten the hoses to secure. Do not over tighten. (Fig 2)

Note: The hoses end far from the Hot/Cold label connect to the faucet.

- 2-2** Slide the **Escutcheon [18]** to the **Post [17]** as figure shows. (Fig 2)

- 2-3** Slide the **Hoses [28]** to the **Post [17]** and install the **Post [17]** to the **Faucet** as figure shows. Make sure the side holes of the **Post [17]** align with the screw holes of the **Faucet**. (Fig 2)

- 2-4** Secure the **Post [17]** and the **Faucet** with one **Screws [02]** as figure shows. Do not tighten it. (Fig 2)

There are "Hot" , "Cold"
labels on this end of the hoses.

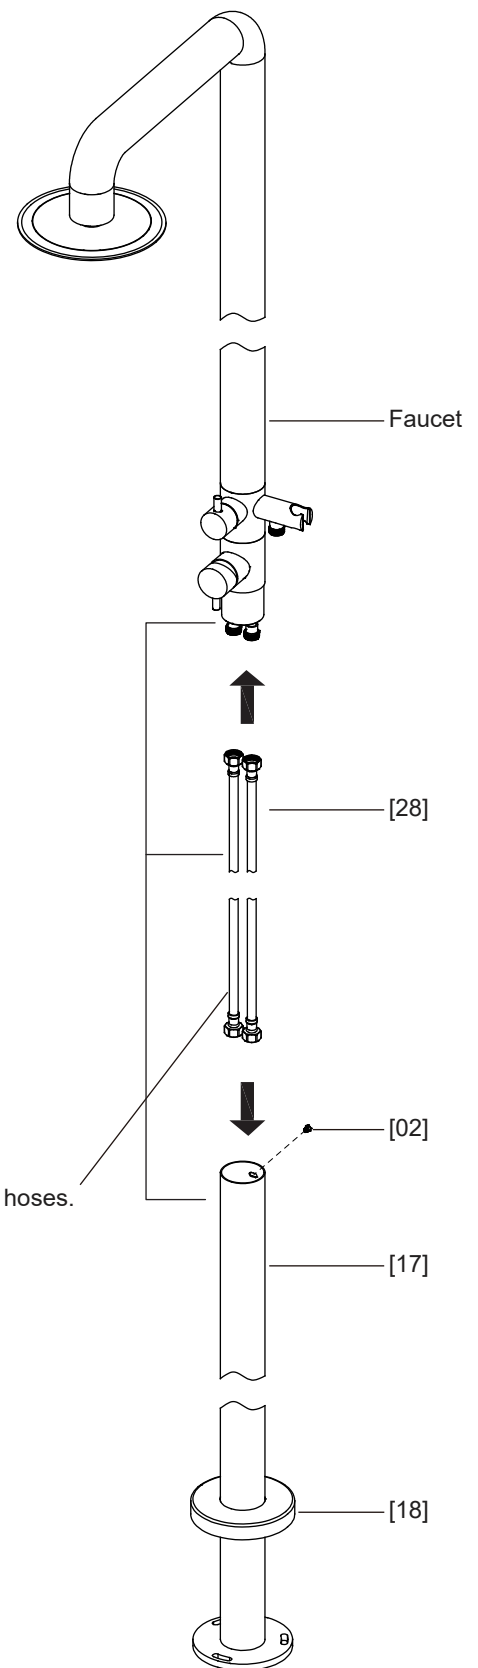


Fig 2

STEP 3

3-1 Position the **Faucet** over the intended installation spot. Mark the center point on the floor. Then, mark on the floor through the screw holes of the anchor. (Fig 3.1)

- 3-2**
- Drill a 2" [51mm] hole into the floor, see Fig. 3.2.
 - Drill 15/32" pilot holes in each mounting location if drilling into concrete floor. Drill 9/64" pilot holes in each mounting location if drilling into wooden floor. Then drill 15/32" holes through the tile (if any) only at the same locations to allow the wood screw to pass through.
- Note: The pilot hole size is for soften wood. Try to drill bigger holes for hard wood.
- Connect the **Hoses [28]** to the water supply lines (which should be protruding from the ground and have matching male threading). (Fig 3.2)

Note:

- Make sure to connect the **Hose [28]** labeled "Hot" to the hot water supply line and the **Hose [28]** labeled "Cold" to the cold water supply line.
- Install shut-off valves for this shower faucet is recommended.

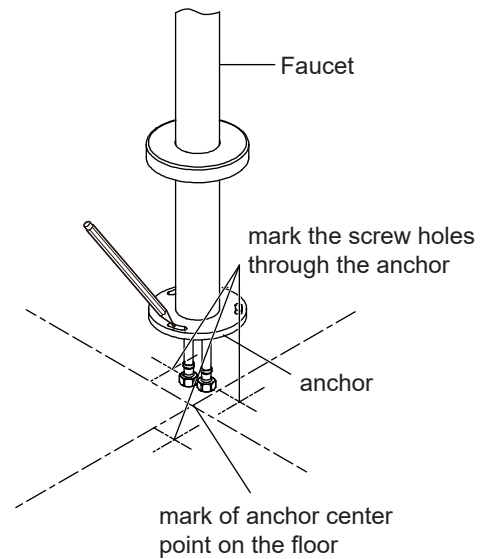


Fig 3.1

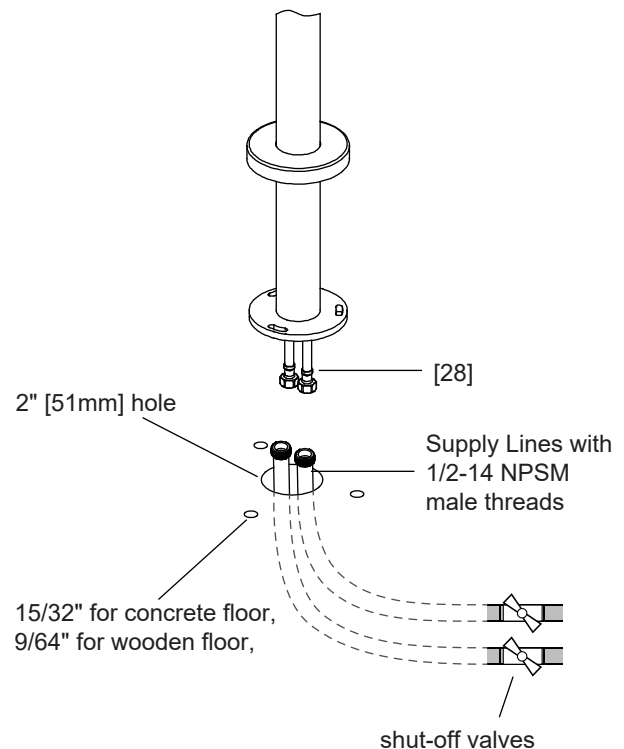


Fig 3.2

STEP 4

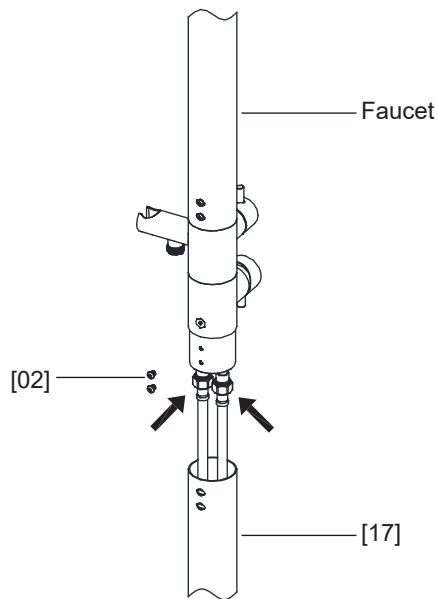


Fig 4.1

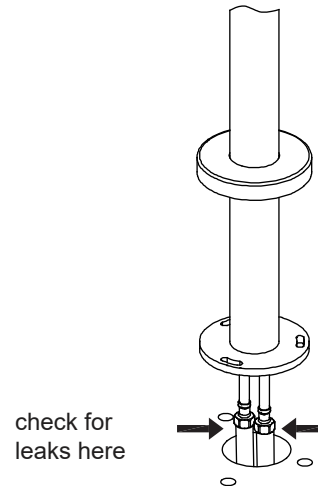


Fig 4.2

4-1 Remove the **Screw [02]** and detach the **Post [17]** from the **Faucet** as figure shows. (Fig 4.1)

4-2 Turn on hot and cold water supplies and check connections at arrows for leaks. (Fig 4.1, Fig 4.2)

4-3 Connect the **Post [17]** to the **Faucet** again and secure with two **Screws [02]**.

- 4-4**
- a-1. Install the **Plugs [20]** to the floor for concrete floor and secure the anchor of the **Post [17]** by **Screws [19]**.
 - a-2. For the wooden floor, please secure the anchor of the **Post [17]** by **Screws [19]** directly.
 - b. Slide the **Escutcheon [18]** to the floor to cover the anchor.(Fig 4.3)

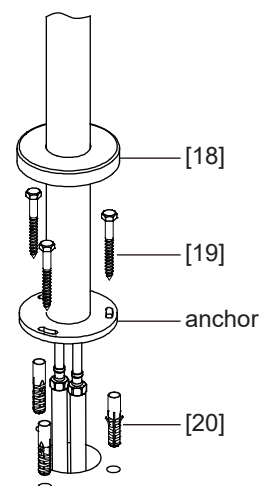


Fig 4.3

STEP 5

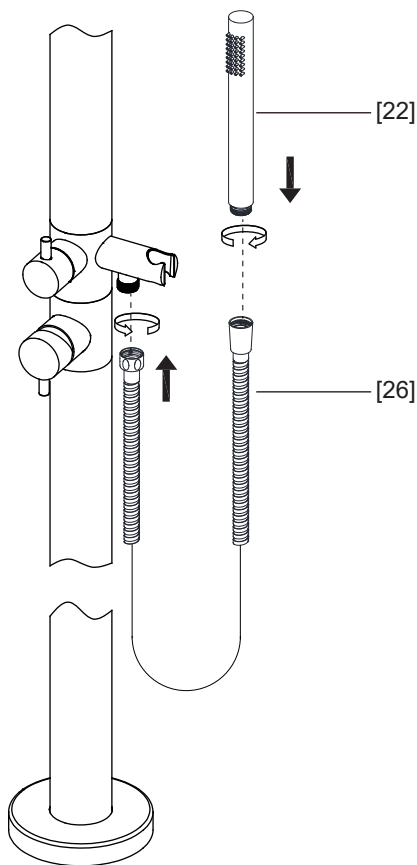


Fig 5.1

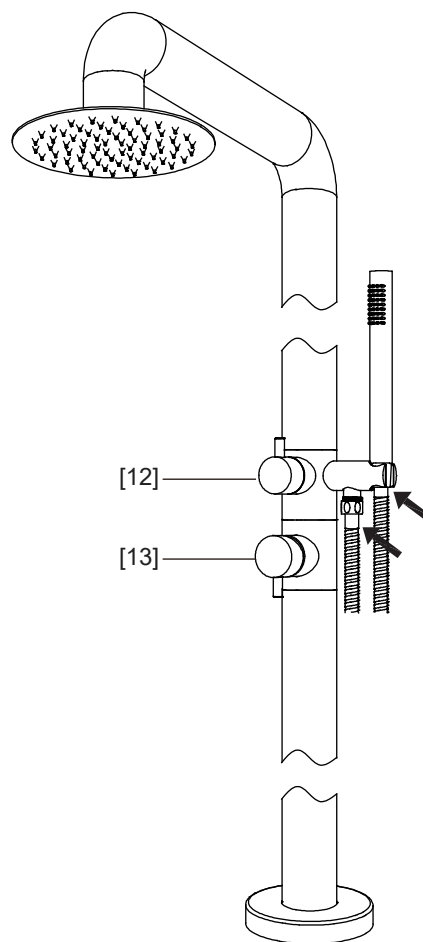


Fig 5.2

5-1 Install and secure the **Hand Shower [22]** and **Shower Hose [26]** to the faucet as the figure shows. (Fig 5.1)


Note: Make sure there are washers between the connections.

5-2 Turn on the **Handle [13]**, then turn the **Diverter Handle [12]** to check the flow of shower head and hand shower. Check connections at arrows for leaks. Retighten if necessary, but do not over tighten. (Fig 5.2)

OPERATION


Pressure Balancing Valve

- Lift the handle up to turn on the valve.
- Turn the handle to the left to increase water temperature.
- Turn the handle to the right to decrease water temperature.

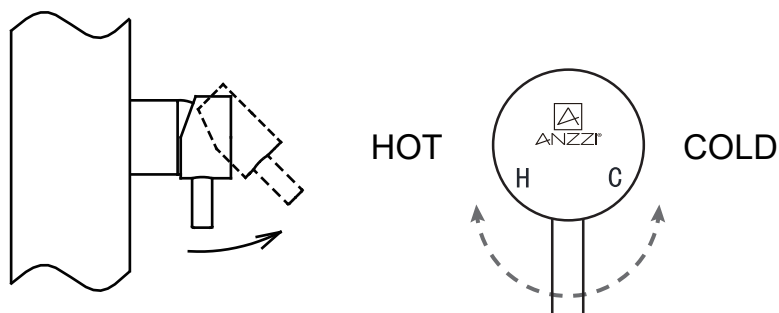

Diverter Valve

- The initial position of the diverter handle is for shower head.
- Turn the diverter handle 90° clockwise to direct water flow to hand shower.

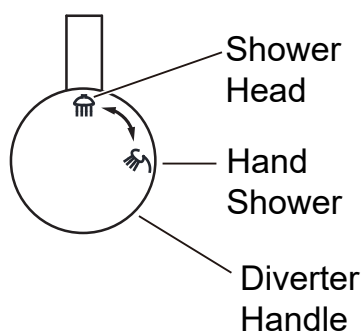

CARE AND MAINTENANCE- PART 1

1. If the lowest temperature is higher than 32°F at your location, you can leave your outdoor shower faucet outside. If the outdoor shower faucet is not being used for a long time, turn the diverter handle upward and drain the water inside the faucet by removing the **Plug [27]** at the back of the faucet. Disconnect the **Shower Hose [26]** from the faucet and drain the water inside. Install the **Shower Hose [26]** and **Plug [27]** back to the faucet. (Fig 6)

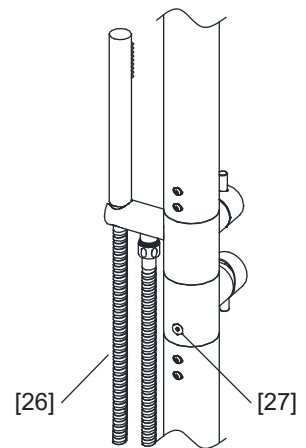


Fig 6

2. If the lowest temperature is between 32°F and 68°F at your location, you can leave your outdoor shower faucet outside. Turn the diverter handle upward and drain the water inside the faucet by removing the **Plug [27]** from the back of the faucet. Disconnect the **Shower Hose [26]** from the faucet and drain the water inside. Turn off the shut-off valves and disconnect the water supply hoses to drain the water inside. Install the **Shower Hose [26]** and **Plug [27]** back to the faucet. Reconnect the water supply hoses back to the shut-off valves. (Fig 7)

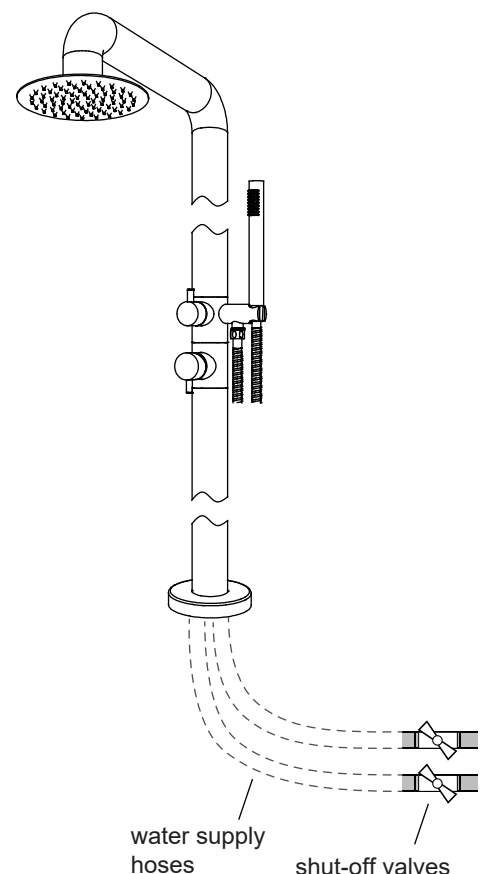


Fig 7

3. If the lowest temperature is lower than 68°F at your location, remove your outdoor shower faucet, drain the water inside the faucet and move it indoor.

CARE AND MAINTENANCE- PART 2

ANZZI® products are crafted with superior quality standards and workmanship and engineered to stand the test of time. However, that does not mean the product can be neglected - it will need some care and cleaning.

This shower adopts stainless steel pipes. It still has rust risk in seaside and high salt spray areas without regular cleaning. Rinse the product with clean water after each use and wipe dry with a soft cotton cloth.

Residues of shampoo and body wash will corrode stainless steel and surface coating if left uncleaned for a long time. Please clean and wipe timely.

It is recommended to use regular soap and hot water along with a non-abrasive cloth or sponge to regularly clean the product. This avoids any build up or deposits which would be tougher to remove.

If you feel the use of stronger cleaning solutions or chemicals is necessary, always test the cleaning solution or chemical on an inconspicuous area before applying to the entire surface.

Wipe all surfaces clean and rinse completely with water immediately after applying cleaner. Rinse and dry any overspray that lands on nearby surfaces.

Do not use steel wool, hard brushes, coarse cloths or abrasive cleaning powder.

Limescale removal for shower head and hand shower: Simply rub the nozzles under running water to clear limescale.

When not in use for a long time, cover the shower with an outdoor protective cover or store it indoors. Avoid long-term direct sunlight and rain erosion, especially colored coated models which may fade and oxidize easily.

DISCLAIMER & NON-WARRANTY SCOPE

1. Damage, water leakage or parts failure caused by unauthorized disassembly, non-professional installation or not following installation instructions are not covered by warranty.
2. Damage caused by artificial collision, impact, falling, surface scratches and dents are not covered.
3. Malfunction caused by poor water quality, pipeline sediment blockage and abnormal water pressure are not covered.
4. Rust and corrosion caused by lack of regular cleaning and daily maintenance are not covered.
5. Fading, rusting and coating peeling caused by long-term sun exposure, rain erosion and seaside salt corrosion without protective measures are not covered.
6. Damage to pipes, cartridge and accessories caused by freezing without indoor storage in winter are not covered.
7. Faults caused by unauthorized modification, pipeline changing or using non-original parts are not covered.
8. Damage caused by force majeure including fire, flood, earthquake, lightning and natural disasters are not covered.
9. Normal wear and tear, aging of rubber seals and consumable components are natural loss and not covered by warranty.
10. Surface corrosion and coating peeling caused by using strong acid, strong alkali or abrasive cleaners are not covered.

Sincerely,

La Familia ANZZI®

