


### PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damage. This product is for indoor use only. Observe all local codes.

Please see next page for a larger installation image

### TOOLS AND MATERIALS NEEDED

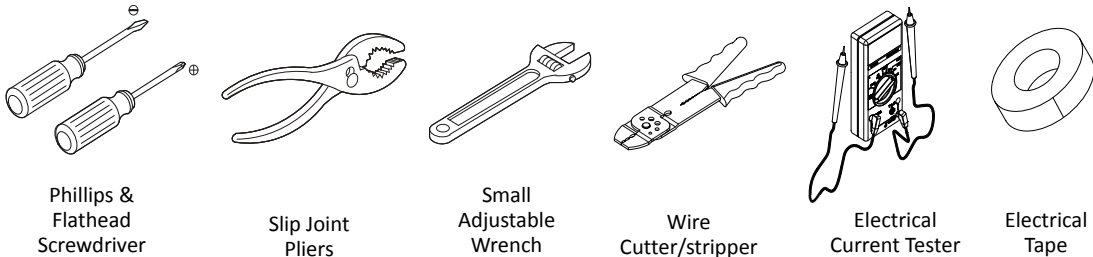

### FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. Adjust chain (J) length to desired height by removing excess chain. Install chain (J) onto loop (M) and coupling (H) with chain ends (L).
3. Adjust nipple (F) protruding height to the desired position and then tighten nut (D). Secure coupling (H) onto nipple (F).
4. Thread wire (K) and ground wire through rod (N), loop (M), and lace wire (K) and ground wire through chain (J), coupling ring (I), canopy (G), coupling (H), nipple (F).
5. Secure rod (N) onto hood (O). Lift fixture then attach mounting bar (B) onto outlet box with screws (E). Ensure ground screw (C) is as shown.
6. Trim excess cord to minimum 13" beyond canopy (G). Strip wire to 5/8" at the end, and twist.
7. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (C) on mounting plate.
8. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture natural wire with ridges or white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
9. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture lead wire without ridges or black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
10. Tuck wires carefully inside outlet box. Let coupling (H) protrude through the hole on canopy (G). Attach canopy (G) onto ceiling by threading coupling ring (I) onto coupling (H).
11. **NOTICE:** Do not exceed recommended wattage. Rated **Max60 W, Type A19.** (Bulb(s) not included).
12. Install bulbs into sockets.
13. Attach glass shade (P) to screws (Y) with plastic washer (X), washer (W) and knurled nuts (Q), then tighten knurled nuts.
14. Attach decorative ring (R) and glass cover (S) onto glass shade (P) with washer (T) and hex nut (U).
15. Secure finial (V) onto glass cover (S).
16. Restore power to circuit at breaker or fuse box.


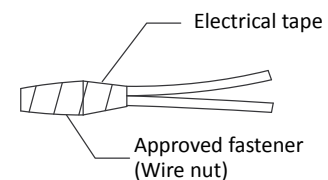


Diagram 1

**CLEANING:** Please clean fixture with a soft and dry cloth ONLY. Clean glass with a mild soap.

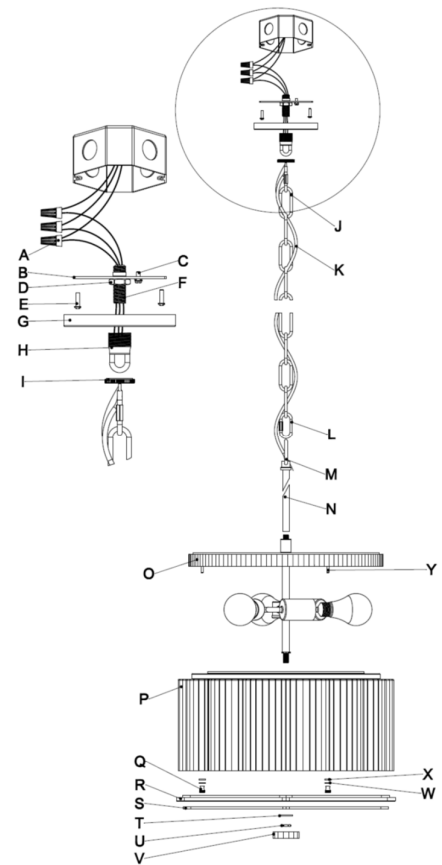