

DAVIS & WADDELL


essentials

5kg Digital Kitchen Scale
G0001724

Instruction Manual


Thank you for choosing the Davis & Waddell 5kg Digital Kitchen Scales. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

Product Overview

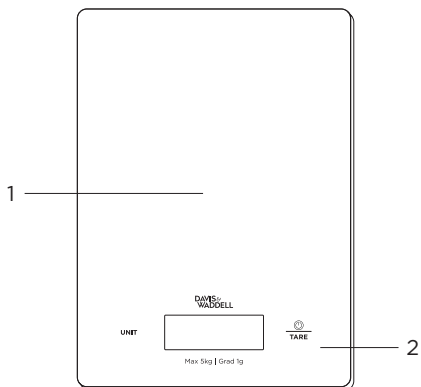

1. Tempered glass platform
2. Control panel

Control Panel Overview

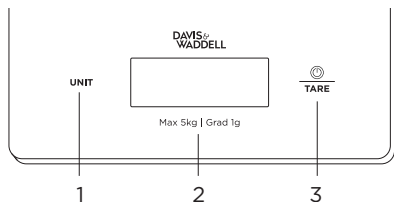

1. UNIT Button: Switches between units (g, fl'oz, ml, lb)
2. Maximum and minimum weight capacity
3. ON/TARE Button: For power on, power off and reset weight function

Important Safety Instructions

Read all the instructions before operating the appliance and retain for future use.

- This appliance is intended for indoor household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should not use this appliance unsupervised.
- Do not operate any appliance with faulty batteries, or after the appliance malfunctions, is dropped, or has been damaged in any manner.
- The appliance should always be used on a hard and stable surface, such as a table or benchtop.
- To protect against the risk of fire, electric shock, or personal injury, do not immerse the appliance in water or other liquids.
- Do not place the appliance on hot surfaces such as stoves, hotplates or near open gas flames.
- Do not place objects on top of the scale when in storage.
- Always ensure the scale is turned OFF after use to conserve battery life.
- This scale is a high precision strain gauge sensor system measuring device. Do not attempt to disassemble it yourself or knock it heavily. Handle the scale carefully to avoid dropping or breaking it while moving.
- If the scale malfunctions, check the battery and replace if necessary.

Packaging And Recycling

The materials used for this product's packaging can be reused, recycled and disposed of through specific waste streams.

- REUSE: Keep packaging to safely store or transport your appliance, preventing damage.
- RECYCLE: Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- DISPOSE: Look for symbols on packaging components and dispose of materials accordingly.

Technical Information

- Maximum capacity: 5kg
- Division: 1g
- Tare function available
- Reset weight function
- Auto power-off feature
- Low battery and overload indicators
- Automatic switching between three units: g, fl'oz, oz, ml, lb
- Powered by 2 x AAA batteries

Before First Use

- Carefully unpack the scale and check for any damaged or missing parts.
- Make sure to remove all packaging materials, but do not remove any warning or model labels on the scale.
- Give the scale a quick wipe using soft tissue with alcohol or glass cleaner. Avoid using soap or other chemicals.

Operating Instructions

1. Place the scale on a hard, flat surface and ensure it is steady before use.
2. Press the ON/TARE button to turn the scale on. Once the LED screen displays Og after a moment, the scale is ready for use.
3. Press the UNIT button to select from the following units: g, fl'oz, oz, ml, or lb.
4. Place the food you wish to weigh on the scale's platform. The weight will be displayed on the screen.

5. After weighing, press the ON/TARE button to reset the weight to zero. The screen will show Og again. Then place your next food item on the platform, and its weight will be displayed.
6. To measure the weight of additional items individually, continue pressing the ON/TARE button to reset the scale between measurements. The total weight will appear on the screen after all items have been removed from the platform.
7. Once you're done weighing, long press the ON/TARE button to turn off the scale or allow it to auto turn-off after a few seconds of inactivity.

Tips

- If 'O-Ld' appears on the screen, it means the scale is overloaded.
- If 'LO' appears on the screen, the battery power is low, and the batteries need to be replaced.
- If the scale malfunctions, check the batteries and replace them with new ones if necessary.
- The maximum capacity of the scale is 5kg. Do NOT overload the scale as it may damage the sensor.

Care Instructions

- To clean the scale, use soft tissue with alcohol or glass cleaner. Avoid using soap or other chemicals.
- Keep the scale away from water, corrosive liquids, heat, and extreme temperatures.
- Handle the scale carefully while cleaning and storing to avoid dropping or damaging it.
- If the scale is not used for an extended period, remove the battery.
- If the scale is not working, ensure the battery is correctly positioned. If the scale has been unused for a while, the battery may be flat and require replacement.
- Never submerge the scale in water.
- The scale is not dishwasher safe.

Our 12-Month Guarantee

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable losses or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product and therefore, we offer a 12-month guarantee. The benefits of this guarantee are in addition to any rights and remedies imposed by the Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

What IsAlbi will do: During this guarantee period, IsAlbi will repair, replace or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

What to do: If a fault/defect is identified, cease using the product immediately. To make a claim on this guarantee, take the product, proof of purchase, and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

IsAlbi

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: enquiries@isalbi.com.au

isalbi.com.au