



Form Series

Passage and Privacy

INSTALLATION INSTRUCTIONS

Featuring QuickFix™

Box contents

- Rose & lever set - contains 2 factory fitted screws
- Strike
- Latch
- Pack of 6 fixing screws (includes 2 anti-rotational screws)
- Jig template

Door thickness

- Passage set 32mm – 50mm
- Privacy set 32mm – 42mm

Tools required

- Tape measure
- Pencil
- Level
- Drill
- Drill bits - 4mm & 8mm
- Spade bit - 25mm
- Hammer
- Chisel
- Screwdriver (Phillips)




Scan here for more information
on installing Schlage Form Series
with QuickFix™




1. DOOR PREPARATION

Measure 970mm (recommended) from floor, on door and jamb.

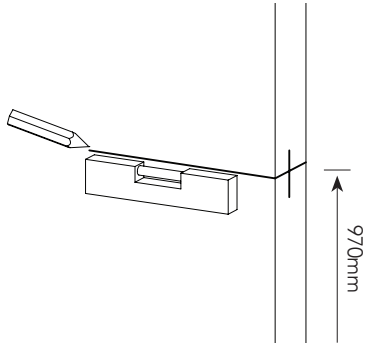


2. DRILL SPINDLE HOLE

Using the jig, mark and drill Ø25mm spindle hole on both sides of the door.

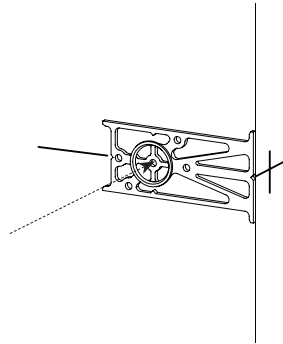


3. DRILL HOLES

Position jig within the drilled spindle hole. Mark 2x holes (labelled QF) and optional privacy (labelled PR). Drill pilot holes Ø4mm from both sides of the door. Re-drill Ø8mm holes on both sides of the door. Drill barrel hole Ø25x85mm.

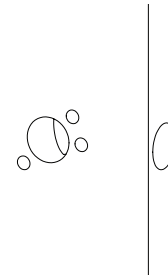


4. PREPARE & INSTALL LATCH

Use latch as guide to mark and chisel latch recess. Install latch to ensure the curved latch bolt faces the door jamb. Drill pilot holes and screw in latch.

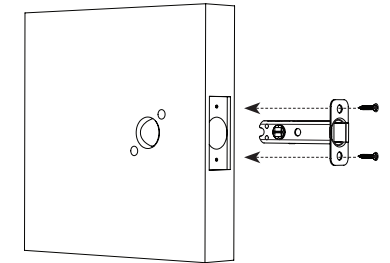


5. PREPARE JAMB & INSTALL STRIKE

Measure Ø8mm either side of centre mark, drill Ø25x15mm hole. Use strike as a guide to mark and chisel recess, allowing space behind strike plate for the dust box. Insert dust box, drill holes and screw strike in place.

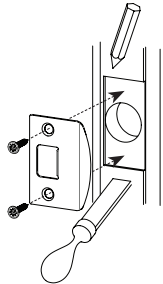


6. INSTALL FURNITURE

Attach QuickFix™ furniture with preinstalled studs and screws.

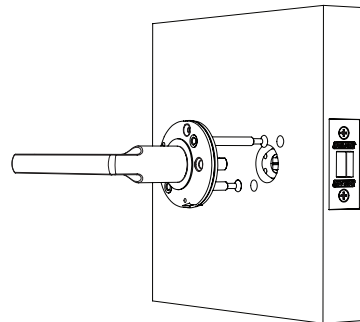


7. INSTALL FURNITURE

Align furniture without the preinstalled studs on the opposite side.

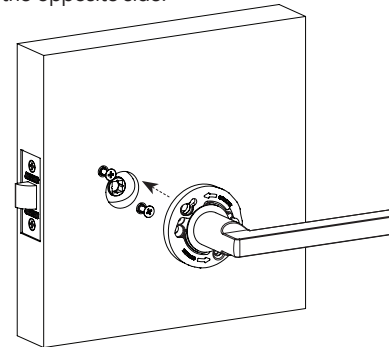


8. ROTATE BEZEL

Rotate bezel to lock in place.

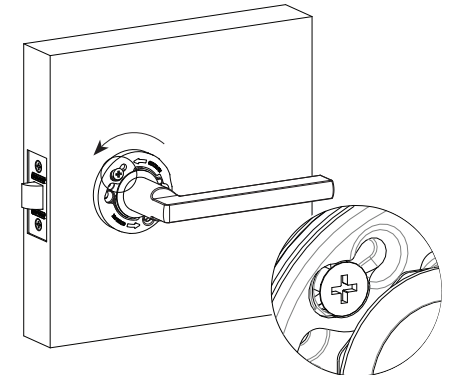


9. TIGHTEN SCREWS

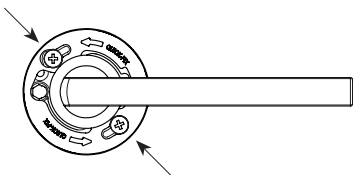


10. FIT ANTI-ROTATIONAL SCREWS

Recommend Anti-Rotation screws for all applications.

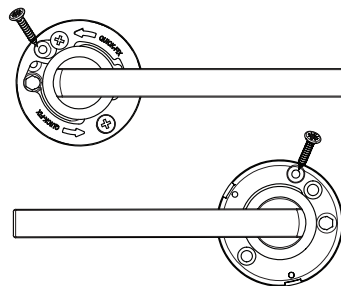


11. FIT ROSE COVER

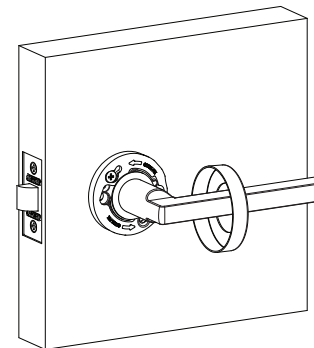

12. FIT PRIVACY PIN (PRIVACY ONLY)

Depress latchbolt and screw the privacy pin tightly into the hole on the internal side of the door.

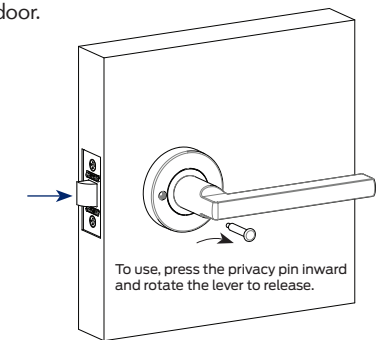

CARE AND MAINTENANCE

Door Furniture

At twelve (12) monthly intervals, the fixing screws securing the furniture to the door, both surface fix and through fix, should be checked and tightened as required. Loose fitting furniture which fails will not be covered under warranty.

All door furniture should only be wiped clean with a soft damp cloth. In the case of Satin Stainless Steel or Satin Chrome Plate, a non-abrasive mild household detergent may be used to remove ingrained grime.

Locks & Latches

Care should be taken to ensure the internal components are kept free of dirt and woodchips during installation as this is the most common cause of malfunction and will not be covered under warranty. Tubular latches used in external situations should be lubricated by an aerosol lubricant at twelve (12) monthly intervals.

Note

For applications that are subject to high use/abuse or in corrosive environments, additional preventative maintenance will be required at a minimum of three (3) monthly intervals.

WARRANTY

Our goods come with guarantees that cannot be excluded under the local consumer law. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty does not cover any defect or damage which may be caused or partly caused if the goods are not properly maintained, installed or are not suitable to the specified application.

10 year mechanical warranty.

For finish warranty, please refer to our website www.allegion.co.nz/finisheswarranty

Allegion (Australia) Pty Ltd
Freephone 1800 098 094
Email info.au@allegion.com
www.allegion.com.au

Allegion (New Zealand) Limited
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz

