


### PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damage. This product is for indoor use only. Observe all local codes.  
**Please see next page for a larger installation image**

### TOOLS AND MATERIALS NEEDED

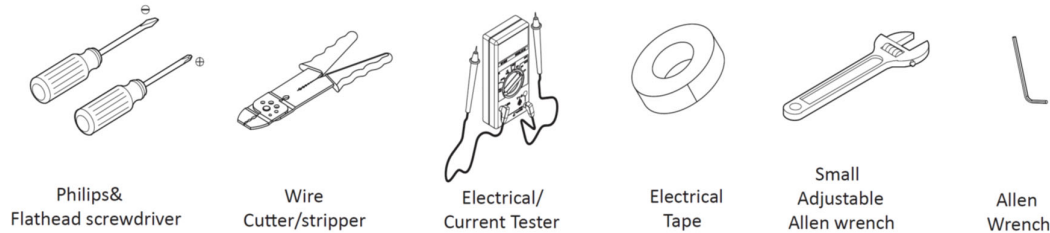

### FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. Adjust the length of chain (J) to desired height by removing excess chain. Attach chain (J) onto loop (L) with chain end (I).
3. Thread wire (K) and ground wire through rod (M) and loop (L). Lace wire (K) and ground wire through chain (J).
4. Attach rod (M) onto fixture by turning it until the connection is tight.
5. Loosen knurled nut (H), remove mounting bar (B) from canopy (F). Attach mounting bar (B) onto outlet box with screws (D). Ensure ground screw (C) is attached to mounting plate (B).
6. Install loop (G) onto chain (J) with chain end (I). Thread wire (K) and ground wire through knurled nut (H), loop (G) and canopy (F). Trim excess cord to minimum 13" beyond canopy (F). Strip wire 5/8" at the end, and twist.
7. Lift fixture. Thread wire (K) and ground wire through nipple (E), mounting bar (B), and then lace safety cord (R) around mounting plate (B). Secure by tightening set screws (S) with Allen wrench.
8. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (C) on mounting plate.
9. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture neutral wire (with ridges and no text)/white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
10. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture live wire (with text and no ridges)/black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
11. Tuck wires carefully inside outlet box. Lift fixture then attach canopy (F) onto mounting plate (B) by tightening knurled nut (H) onto nipple (E).
12. Install glass shade (O) onto socket sleeve (N) with socket ring (P).
13. **NOTICE:** Do not exceed recommended wattage. Rated **Max 60 W, Type G.** (Bulb(s) not included).
14. Install bulb into socket.
15. Repeat steps 12-14 for all glass shades.
16. Restore power to circuit at breaker or fuse box.


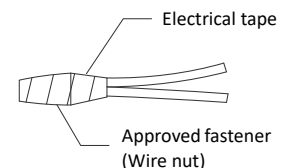


Diagram 1

**CLEANING:** Please clean fixture with a soft and dry cloth ONLY. Clean glass with a mild soap.

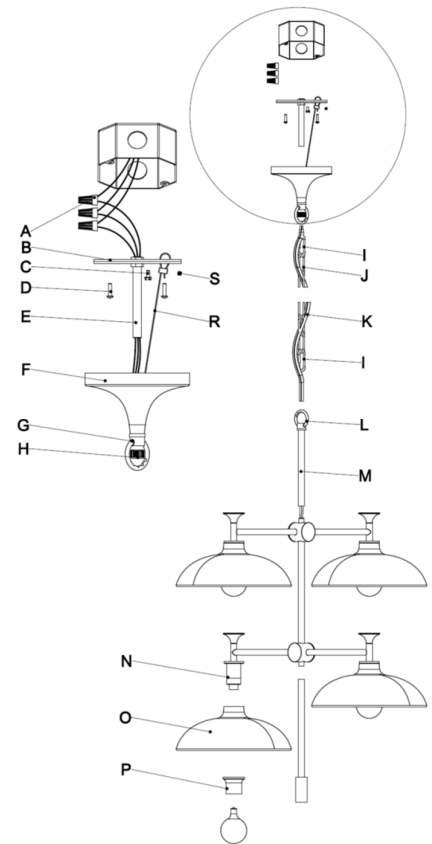