Hardware™ Resources


IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

INCLUDED:

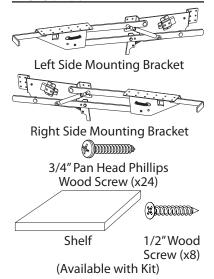

TOOLS NEEDED:

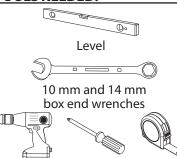

Screw Phillips Tape Gun Screwdriver Measure NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws. ML-1CH
-12S, -15S, -18S
Mixer/Appliance Lift and Kits

Installation Instructions

Scan QR or visit link to view insallation video http://delivr.com/2nr58




WARNING

THIS PRODUCT IS SPRING LOADED AND COULD CAUSE SEVERE HARM IF NOT INSTALLED CORRECTLY!




For Full-Height Face Frame Cabinets

*Full-height frameless cabinets proceed to step 2

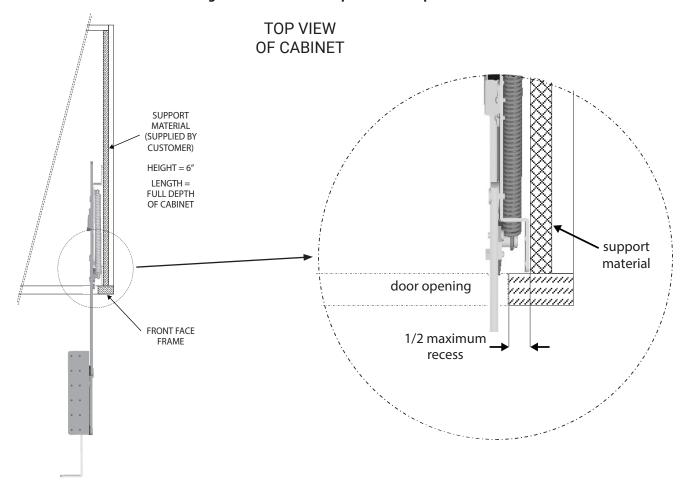


Cabinet Modifications: The Mixer/Appliance Lift is designed to install to the inside wall of any cabinet. To ensure proper operation, face frame cabinets with side panels less than 3/4" thick require support material for the side mounting brackets to screw into.

NOTE: Support material and mounting screws not included. Install support material as high as possible on both inside walls of the cabinet. Support material should be 6" high and run the entire depth of the inside of the cabinet. The thickness of the support material should allow for a maximum 1/2" recess.

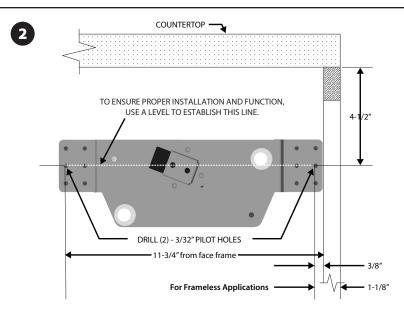


On both sides of the cabinet, measure 4-1/2" down from the top of the cabinet, and use a level to draw a 12" long horizontal line. On the line, make a mark at 3/8" and 11-3/4" from the back of the face frame (1-1/8" from front of cabinet for frameless application) on both sides. Install mounting brackets to each side using $4 \pm 10 \times 3/4$ " pan head phillips wood screws in the pilot holes, repeat on other side. Fully secure both mounting brackets as shown above with the remaining screws provided.

NOTE: To ensure proper operation of the lift, 12 screws per mounting bracket must be installed.

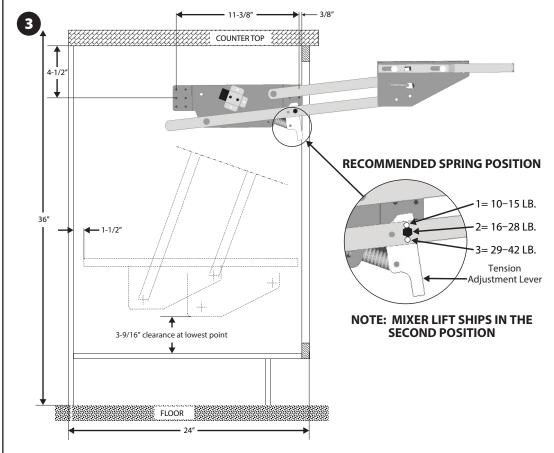

Following the recommended spring position for varying appliance weights shown above, adjust the spring by using a 10 mm box end wrench to remove the set bolt while releasing the spring tension on the tension adjustment lever. Do this by placing the box end of a 14 mm box end wrench over the end of the tension adjustment lever and pulling toward the front of the cabinet. WARNING: SPRING IS UNDER HIGH TENSION! Do not release the tension until the set bolt is in the desired location and firmly secured. Repeat with other side.

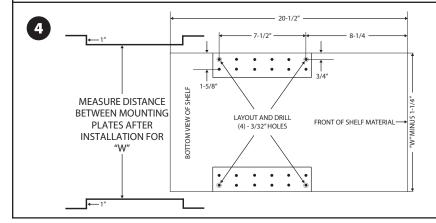

Kits with shelf included (ML1-CH-12S, ML1-CH-15S, ML1-CH-18S):

• Included shelf can be trimmed to fit. Mounting screws are included.

Mechanism only (ML1-CH):

- Shelf material and mounting screws are not included.
- Shelf should be a minimum of 3/4" thick and no longer than 20-1/2" in length. Shelf width is
 determined by measuring between the side mounting brackets "W" minus 1-1/4".
 (See diagram at left)

Raise left and right-side mixer lift arms to full up position. Position shelf 1/2" to 1" from countertop edge and centered on arm brackets. Mount shelf with minimum of 4 screws per side, suggested #8 x 1/2" wood screws to mounting brackets as shown in diagram.