

Text 1-812-652-2525 Call 1-800-544-1108

Replacement Parts List

Non-Magnetic Chest Clip SecureTech™ Magnetic Cup Holder Snack Lid Locking Clip

For parts availability and questions, text, chat, call, or email. If requested color is not available, a similar color will be substituted. Applicable tax and shipping & handling will also be added.

CHÍNA. Hecho en CHÍNA. Distributed by (distribuido por) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2233 Argentia Road, Suite 110, Mississauga, ON L5N 2X7



DISNEP baby iti



EverSlim

4-in-1

Convertible Car Seat

Your model may look different than one shown on cover.

Read all instructions BEFORE USING this car seat.


KEEP INSTRUCTIONS FOR FUTURE USE.

Tailure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child. Serious injury may include paralysis and/or permanent brain injury.



Thank you for choosing this car seat, also known as a child restraint!

To help you get started using your child's new car seat, here are the 4 main tasks you'll need to complete.

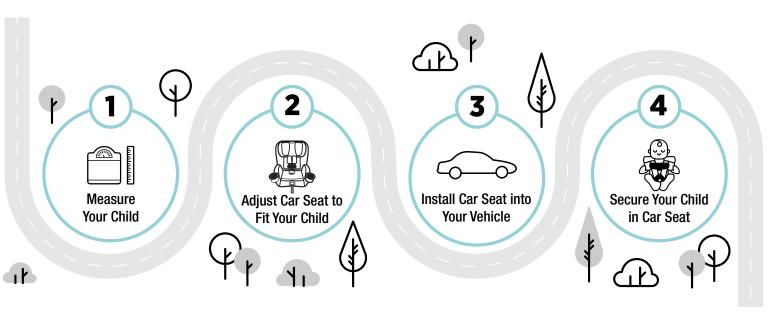

Your child's safety is worth the time it will take to read and follow these instructions.

Ready? Let's go!

reach out to us.


Pages 1-4 will introduce you to the parts of the car seat.


The Back Cover of this Manual has our contact information. If at any point you would like assistance, please feel free to


Contents


Getting Started	55 Harness Adjustment for Smaller Infants
1 Parts of Car Seat	58 Reclining Car Seat
3 Accessory Use	59 Wash and Care
5 Choosing Car Seat Mode	59 Removing Seat Pad Set and Cleaning Parts
Rear-Facing Section	of Car Seat
_	— 63 Installing Seat Pad Set
	65 LATCH and Vehicle Belt Information
· ·	65 LATCH: Lower Anchor Belt
	67 Vehicle Belts
	71 Top Tether
22 Forward-Facing Venicle Install	•
Securing Child in Car Seat	72 Safety Information
	72 Child Restraint Use
Booster Seat Section	73 Vehicle Seating Position
33 Storing Harness System	74 Installation in Vehicle
38 Booster Seat Child Fit	75 Replacement and Expiration
40 Backed Booster Seat Use in Vehicle	76 Registration and Safety Notices
43 Converting to Backless Booster Seat Mode	77 Aircraft Information
47 Backless Booster Seat Use in Vehicle	78 Warranty
Making Adjustments to Car Seat	
51 Changing Headrest/Harness Height	
	1 Parts of Car Seat 3 Accessory Use 5 Choosing Car Seat Mode Rear-Facing Section 9 Rear-Facing Child Fit 11 Rear-Facing Vehicle Install Forward-Facing Section 20 Forward-Facing Child Fit 22 Forward-Facing Vehicle Install Securing Child in Car Seat Booster Seat Section 33 Storing Harness System 38 Booster Seat Child Fit 40 Backed Booster Seat Use in Vehicle 43 Converting to Backless Booster Seat Mode 47 Backless Booster Seat Use in Vehicle Making Adjustments to Car Seat

Parts of Car Seat

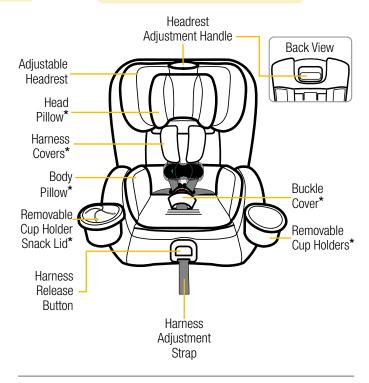

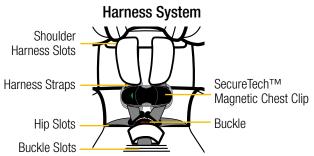

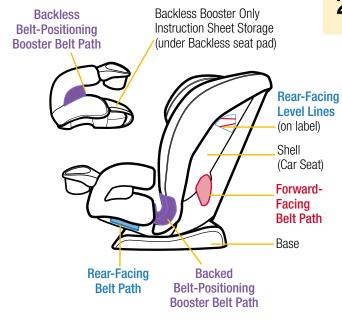

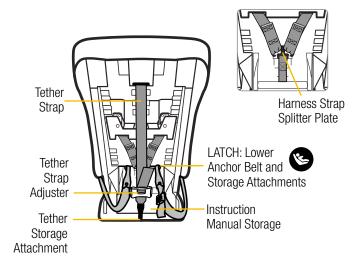

Accessory Use



Head Pillow and Body Pillow

Only For Optional Use in Rear-Facing Mode

The head and body pillows MUST be used together.

To remove head pillow,

from the back of the head pillow gently pull the fabric tabs out of the seams in the headrest fabric.

To attach head pillow, slide the fabric tabs into the slots in the seams of the headrest fabric seams



To remove body pillow,

undo the buckle and then pull it through the slot in the pillow. Pull pillow off of seat.

To attach body pillow, feed buckle into matching buckle slot in pad.



Removable Cup Holder(s)

For Use in All Modes

The cup holder(s) is top-rack dishwasher safe.

To attach, push the cup holder post into the end of the armrest, firmly, until you feel a

click. Pull out gently to make sure it is secure. Repeat for other side.

To remove, pull out on the cup holder.



Cup Holder Snack Lid

For Use in All Modes

The cup holder lid is top-rack dishwasher safe.

To install, fit front of cup holder lid around cup holder. Then press down around the top edges to secure the lid. **To remove**, pull off of the cup holder.





Buckle Cover

For Optional Use in Rear-Facing Mode or Forward-Facing Mode

To remove, undo the buckle and pull the buckle cover off of the buckle.





Harness Covers

For Optional Use in Rear-Facing Mode or Forward-Facing Mode

The harness covers help

provide comfort to your child's neck.

To remove, undo the fasteners and pull the harness covers off of the harness straps.



Shoulder Belt Positioning Clip Only for Use in

Backless Booster Mode

NOTE: Belt clip may be stored in bag with cup holder and instruction manual in shipment.

See page 45 for storage location in car seat base.

AWARNING

Failure to follow these instructions may result in serious injury or death to your child. Serious injury can include paralysis and/or permanent brain injury.

Be certain to measure your child's weight and height (do not guess) before choosing this car seat's mode.

Your child's height, weight, and age determine how the car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—please consult your doctor before switching between any modes within the limits and fit requirements of the car seat.

Infants and Toddlers

Children must ride rear-facing and remain rear-facing until they reach the maximum weight or height limits for rear-facing mode. Rear-facing child restraints installed behind another vehicle seat must be installed touching the back of the vehicle seat in front of it, or be as close as possible.

Toddlers and Preschoolers

Children can only use a forward-facing car seat once they outgrow rear-facing weight or height limits. Once they are forward-facing, children must use their child restraint in forward-facing mode with a harness until they reach the maximum weight or height limits for forward-facing harness mode.

School-Aged Children

Children can only use a belt-positioning booster car seat once they outgrow forward-facing harness weight or height limits. Children must use the belt-positioning booster mode until the vehicle's lap and shoulder seat belt fit them properly without the belt-positioning booster.



Rear-Facing Mode

5–40 lb (2.3–18 kg) **and 19–40 in.** (48–101.6 cm)

In this car seat, your child **MUST** ride **Rear-Facing** and remain in **Rear-Facing** mode until they outgrow any one of the above.

Rear-Facing Section PAGE 7
Rear-Facing Child Fit PAGE 9
Rear-Facing Vehicle Install PAGE 11



Forward-Facing Mode

30–65 lb (13.7–29.5 kg) **and 34.4–49 in.** (87.1–125 cm)

In this car seat, your child **MUST** remain in harnessed **Forward-Facing** mode until they outgrow any one of the above.

Forward-Facing Section PAGE 18
Forward-Facing Child Fit PAGE 20
Forward-Facing Vehicle Install PAGE 22



Backed Booster Seat Mode

40–100 lb (18.1–45.4 kg) **and 43.4–52 in.** (110.1–132.1 cm)

Backless Booster Seat Mode


40–100 lb (18.1–45.4 kg) **and 43.4–57 in.** (110.1–144.8 cm)

In this car seat, your child can use the **Booster Seat** mode until they fit the vehicle's lap and shoulder seat belt properly without a **Booster Seat OR** outgrow any one of the above.

Booster Seat Section PAGE 32
Storing Harness System PAGE 33
Booster Seat Child Fit PAGE 38
Backed Booster Seat Use in Vehicle PAGE 40

Converting to Backless Booster Seat Mode PAGE 43
Backless Booster Seat Use in Vehicle PAGE 47

Rear-Facing Section

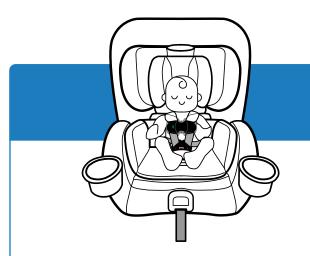

5–40 lb (2.3–18 kg) **and 19–40 in.** (48–101.6 cm)

In this car seat, your child MUST ride Rear-Facing and remain in Rear-Facing mode until they outgrow any one of the following:

• Weight Limit: 40 lb (18 kg); **OR**

• Height Limit: 40 in. (101.6 cm); **OR**

• Rear-Facing Child Fit requirements, see page 9.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Rear-Facing Child Fit: Page 9

Rear-Facing Vehicle Install: Page 11

AWARNING



NEVER install a rear-facing child restraint in the front seat of a vehicle equipped with an active frontal airbag.

DO NOT use the tether for rear-facing mode. Secure the tether strap hook to its storage attachment.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

This child restraint **MUST ALWAYS** face the rear of the vehicle until the child has reached the maximum weight or height limit for the rear facing mode.



Do not use the magnetic chest clip with children who have an implanted electronic medical device.

A magnet is used to help secure the chest clip locking mechanism together which may interfere with the proper

function of an implanted electronic medical device.

Parents or caregivers who have an implanted electronic device should keep their device away from the chest clip and consult their doctor and medical device manufacturer for specific information before using this chest clip.

If a parent/caregiver or child has an implanted electronic medical device, please contact Dorel (see back cover) for a replacement (non-magnetic) chest clip free of charge.

Rear-Facing Child Fit





Fully Loosen Harness Straps

Push down on the harness release button (through the opening in the pad) while pulling out on the harness straps as shown.

2



Undo Chest Clip

Press in on the top and bottom buttons and pull apart.

3



Undo Buckle

It may be easier to undo the buckle by pressing in towards the top of the button.

4



Place Child in Car Seat

Your child's bottom and back should be flat against the car seat.

5



Check Head Position

The top of your child's head **MUST be at least 1 in.** (2.5 cm) **below** the top of the car seat's headrest.


6



Check Harness Strap Position

The harness strap **MUST** be placed **at the shoulder** when possible, or slightly below; never above.

7

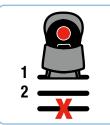

Check Buckle Position

- Use the slot closest to your child.
- The buckle strap should not be underneath or behind your child.

DO NOT use the 3rd buckle slot in **Rear-Facing Mode**.



To change the harness strap height, see page 51.

To change the buckle position, see page 53.

To secure child in car seat and check harness tightness, see pages 29–31.

If you cannot achieve a snug harness fit for your child, see pages 55–57.

Rear-Facing Vehicle Install

There are 2 different methods for install. **Use only one:**







Vehicle Belt

LATCH: Lower Anchor Belt

WARNING

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.



- Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position for your child. See page 10 for child fit. Once the car seat is installed, you will not be able to adjust the buckle position.
- Review vehicle owner's manual. Determine the type of vehicle belts in your car and how to use them to lock a car seat in place OR where LATCH: lower anchor seating positions are located in your vehicle.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away (see page 66).
- Make sure the tether strap is properly stored away (see page 71).

1



Place Car Seat Rear-Facing in

Back Seat

The car seat base **MUST** be flat on the vehicle seat.

When using the passenger or driver-side locations, the car seat **MUST** be touching the back of the vehicle seat in front of it, or be as close as possible.

2



Recline Car Seat and Check Rear-Facing Level Lines

For children 5–30 lb (2.3–13.6 kg) and 19–34.3 in. (48–87 cm), the bottom level line on the car seat MUST be parallel with the ground using Positions 5–2.


For children 30–40 lb (13.7–18 kg) **and 34.4–40 in.** (87.1–101.6 cm) **AND can sit up unassisted**, the top level line on the car seat **MUST** be parallel with the ground using Positions 4–2.





Use Position 5–2 to make sure the appropriate level line for your child's weight and height is parallel to the ground.

DO NOT use Position 1 for Rear-Facing mode. See Reclining Car Seat, page 58.

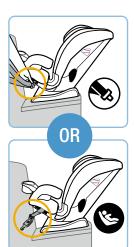

Locate Rear-Facing Belt Path and Route Vehicle Belt or Lower Anchor Belt through It

For the Lower Anchor Belt:

You may need to fully lengthen the belt before routing it into the belt path.

Squeeze the adjuster button and pull the belt out as shown.









For Lower Anchor Belt Installation


a. Undo the chest clip and buckle. Lift up the headrest pad and pull the back of the seat pad down away from the backrest (remove the body pillow first if attached, see page 3).

Gather the entire lower anchor belt, with lanyard, to the side of the harness strap as shown so that the belt and strap do not cross over each other. Route the belt under the seat pad. Lift the seat pad back up and behind the headrest pad.

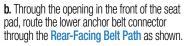

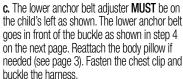

4

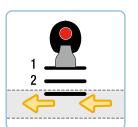

Vehicle Belt or Lower Anchor Belt Goes:

- Under the car seat pad; AND
- Across the car seat: AND
- In front of the buckle: AND
- Out the other Rear-Facing Belt Path opening.

DO NOT twist the belt.





Finished Lower Anchor Belt Routing

The lower anchor belt adjuster **MUST** be on the child's left.

5




Buckle Vehicle Belt

If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 69 of this manual or your vehicle owner's manual.





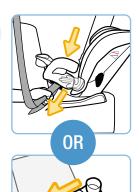

Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

For the Lower Anchor Belt or Lap Only Vehicle Belt: it may be easier to tighten if you route the free end of the belt back into the Rear-Facing Belt Path, reach into the Rear-Facing Belt Path,

and pull the free end of the

belt towards you.

7



Check Belt Tightness

Hold the **Rear-Facing Belt Path** with your non-dominant hand. Push and pull the car seat from side to side.

The car seat should not move more than **1 in.** (2.5 cm) at the belt path.

8



Secure Child in Car Seat

See pages 29-31.



If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat; OR
- Changing to a different seating location; **OR**
- Switching to a different install method (LATCH or vehicle belt).

9



Recheck Rear-Facing Level Lines

Redo the installation if the car seat is not reclined correctly for your child. See step 2 and info box on page 12.





Only if necessary, you may place a tightly rolled towel(s) or foam pool noodle(s) under the front of the car seat base to help make the appropriate Rear-Facing Level Line for your child's weight and height parallel with the ground.

Check often to make sure padding is still in place and the belt is tight.



To secure child in car seat and check harness tightness, see pages 29–31.

To change the harness strap height, see page 51.

To change the buckle position, see page 53.

If you cannot achieve a snug harness fit for your child, see pages 55-57.

Forward-Facing Section

18

FINISHED!





Lap/Shoulder Belt





Lap Belt





LATCH: Lower **Anchor Belt**

- **Vehicle Belt Install:** Is the vehicle belt locked? See step 5.
- LATCH: Lower Anchor Belt Install: Are the hooks securely attached to the vehicle's lower anchors? See step 5.
- Is the belt tightened enough so that the car seat does not move more than 1 in. (2.5 cm) from side to side at the belt path? Check the tightness of the install often to make sure it has not loosened. See steps 6 and 7.
- Is the appropriate level line for your child parallel with the ground? See steps 2 and 9 and the info box on page 12.

When using the passenger or driver-side locations, the car seat MUST be touching the back of the vehicle seat in front of it, or be as close as possible.



30–65 lb (13.7–29.5 kg) **and 34.4–49 in.** (87.1–125 cm)

In this car seat, your child MUST remain in harnessed Forward-Facing mode until they outgrow any one of the following:

- Weight Limit: 65 lb (29.5 kg); **OR**
- Height Limit: 49 in. (125 cm); **OR**
- Forward-Facing Child Fit requirements, see pages 20–21.

Before installing the car seat in your vehicle, check your child's fit in the car seat.

This way you won't have to redo the vehicle installation to make adjustments to the car seat.

Forward-Facing Child Fit: Page 20 Forward-Facing Vehicle Install: Page 22

▲ WARNING

DO NOT use the lower anchors of the child restraint anchorage system (LATCH system) to attach this child restraint when restraining a child weighing more than 45 lb (20 kg).

The vehicle belt **MUST** be used for installation if your child weighs more than 45 lb (20 kg).

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing mode with internal harness.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

Before using this seat in Forward-Facing mode, your child must have outgrown the seat in Rear-Facing mode.



DO NOT use the magnetic chest clip with children who have an implanted electronic medical device.

A magnet is used to help secure the chest clip locking mechanism together which may interfere with the proper function of an implanted electronic medical device.

Parents or caregivers who have an implanted electronic device should keep their device away from the chest clip and consult their doctor and medical device manufacturer for specific information before using this chest clip.

If a parent/caregiver or child has an implanted electronic medical device, please contact Dorel (see back cover) for a replacement (non-magnetic) chest clip free of charge.

Forward-Facing Child Fit






Fully Loosen Harness Straps

20

Push down on the harness release button (through the opening in the pad) while pulling out on the harness straps as shown.

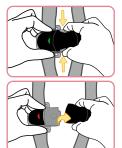

Undo Chest Clip

Press in on the top and bottom buttons and pull apart.

3



Undo Buckle

It may be easier to undo the buckle by pressing in towards the top of the button.



Place Child in Car Seat

Your child's bottom and back should be flat against the car seat.



Check Head Position

The top of your child's ears **MUST be below** the top of the car seat's headrest.


6



Check Harness Strap Position

The harness strap **MUST** be placed **at the shoulder** when possible, or slightly above; never below.

7

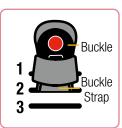

Check Buckle Position

- Use the slot closest to vour child.
- The buckle strap should not be underneath or behind your child.

The buckle can be used in **any** buckle slot.



To change the harness strap height, see page 51.

To change the buckle position, see page 53.

To learn how to check harness tightness, see pages 29–31.

Forward-Facing Vehicle Install

There are 2 different methods for install.

Use only one:











Vehicle Belt + Tether

for a child up to 65 lb (29.5 kg)

LATCH: Lower Anchor Belt + Tether

Do not install by this method for a child weighing more than 45 lb (20 kg).

AWARNING

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.



- Before installing the car seat in your vehicle, check to see if you need to adjust the buckle position for your child. See page 21 for child fit.
- Review vehicle owner's manual. Determine the type of vehicle belts in your car and how to use them to lock a car seat in place **OR** where LATCH: lower anchor seating positions are located in your vehicle.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away (see page 66).



Put Car Seat into Most Upright Position and Place Car Seat Forward-Facing in Back Seat

The vehicle seat back **MUST**

be in the upright position, but you can adjust the angle slightly to better match the angle of the car seat. Refer to the vehicle owner's manual for how to adjust the vehicle seat back.





If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.

2



Locate Vehicle Top Tether Anchors

Review your vehicle owner's manual for top tether anchor locations and how to route the tether strap when there are vehicle headrests.

3



Loosen Tether Strap

Lift the tether adjuster to loosen the strap. Or, if your car seat has an adjuster with a button, then squeeze the adjuster button and pull the strap to loosen as shown.



4



Attach Tether Hook to Vehicle's Top Tether Anchor

5



Locate Forward-Facing Belt Path and Route Vehicle Belt or Lower Anchor Belt through It

For the Lower Anchor Belt: You may need to fully lengthen the belt before routing it into the belt path. Squeeze the adjuster button and pull the belt out as shown.



6



Vehicle Belt or Lower Anchor Belt Goes:

- Under the car seat pad; AND
- Across the car seat; AND
- Out the other Forward-Facing Belt Path opening.

DO NOT twist the belt.





Finished Lower Anchor Belt Routing

The lower anchor belt adjuster **MUST** be on the child's right.

7




Buckle Vehicle Belt

If your car has a **switchable retractor**, use it to lock the vehicle belt. Review page 69 of this manual or your vehicle owner's manual.

Attach Lower Anchor Belt Hooks to Vehicle's Lower Anchors

8

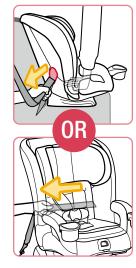

Tighten Belt

Place your hand in the car seat and firmly push the car seat down and back towards the vehicle seat. Pull the belt towards you and parallel (in line) with the belt path as shown.

For the Lower Anchor Belt or Lap Only Vehicle Belt:

it may be easier to tighten if you route the free end of the belt back into the Forward-Facing Belt Path, reach into the Forward-Facing Belt Path, and pull the free end of the belt towards you.

continued on next page



Check Belt Tightness

Hold the Forward-Facing
Belt Path with your nondominant hand. Push and pull
from side to side.

The car seat should not move more than **1 in.** (2.5 cm) at the belt path.



If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter: OR
- Reinstalling the car seat; OR
- Changing to a different seating location; OR
- Switching to a different install method (LATCH or vehicle belt).

10



Tighten Tether

Push firmly on the back of the car seat and pull the free end of the tether strap to remove all of the slack.

FINISHED!





Lap/Shoulder Belt + Tether for a child up to 65 lb (29.5 kg)





Lap Belt + Tether for a child up to 65 lb (29.5 kg)





LATCH: Lower Anchor Belt + Tether

Do not install by this method for a child weighing more than 45 lb (20 kg).

- **Vehicle Belt Install:** Is the vehicle belt locked? See step 7.
- LATCH: Lower Anchor Belt Install: Are the hooks securely attached to the vehicle's lower anchors? See step 7.
- Is the belt tightened enough so the car seat does not move more than 1 in. (2.5 cm) from side to side at the belt path? Check the tightness of the install often to make sure it has not loosened. See steps 8 and 9.
- Has the tether been installed and tightened? See steps 4 and 10.

Securing Child in Car Seat

AWARNING

IMPLANTED ELECTRONIC MEDICAL DEVICES Do not use the magnetic chest clip with children who have an implanted electronic medical device.

A magnet is used to help secure the chest clip locking mechanism together which may interfere with the proper function of an implanted electronic medical device.

Parents or caregivers who have an implanted electronic device should keep their device away from the chest clip and consult their doctor and medical device manufacturer for specific information before using this chest clip. If a parent/caregiver or child has an implanted electronic medical device, please contact Dorel (see back cover) for a replacement (non-magnetic) chest clip free of charge.

1



Place Child in Car Seat

Your child's bottom and back should be flat against the car seat.

2



Fasten Chest Clip

Lay the right (top) half of the chest clip over the left (bottom) half and it will automatically snap together and lock.

Pull gently on each half of the chest clip together to make sure it is locked.





When the magnetic chest clip is properly secured, the triangle will change from red to green.

3



Buckle Harness

Pull the harness straps up to make sure the buckle is locked.

4



Tighten Harness

Pull the harness adjustment strap straight out to snugly tighten the harness.

5



Position Chest Clip

Slide the chest clip up the harness straps and position it at mid-chest (even with armpits) and away from your child's neck.

6



Check Harness Tightness

Unfasten the harness covers.

Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness

is tight enough. **If you can pinch the harness strap**, tighten more. Fasten the harness covers.

A snug strap should not allow any slack. It lies in a relatively straight line without sagging.

It does not press on the child's flesh or push the child's body into an unnatural position. If one side of the harness is tighter than the other, lengthen the tighter side by pulling up the harness near the hip slot.

If you cannot achieve a snug harness fit for your child, see pages 53–57.

To Remove Child from Car Seat:

- 1. Loosen harness strap.
- 2. Unbuckle harness.
- **3.** Release chest clip.
- 4. Remove child.

Troubleshooting

1. If the buckle or harness release button sticks: DO NOT lubricate. Check for dropped food, sticky spilled drinks, dirt, leaves, etc.

FINISHED!



Your child is now secured in the car seat.

Check your child's fit often and make any needed adjustments to the car seat as they grow.

Clean with warm water and/or remove the object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, **do not** use this car seat.

2. If your harness twists:

Straighten the harness each time you put your child in the car seat. Lock the buckle and tighten the harness so it will be ready for next use.

WARNING

Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death. Serious injury may include paralysis and/or permanent brain injury.

DO NOT mistake comfort for safety. The harness system must be snugly adjusted.

DO NOT put snowsuits or bulky garments on your child when placing them in the child restraint. Bulky clothing can prevent the harness straps from being tightened properly.



40–100 lb (18.1–45.4 kg) **and 43.4-52 in.** (110.1–132.1 cm)

40–100 lb (18.1–45.4 kg) **and 43.4–57 in.** (110.1–144.8 cm)

In this car seat, your child can use the Booster Seat mode until they fit the vehicle's lap and shoulder belt properly without a Booster Seat OR outgrow any one of the following:

Backed

• **Weight Limit:** 100 lb (45.4 kg); **OR**

• Height Limit: 52 in. (132.1 cm); OR

• Booster Seat Child Fit requirements, see pages 38–39.

Backless

• Weight Limit: 100 lb (45.4 kg); OR

• Height Limit: 57 in. (144.8 cm); **OR**

• Booster Seat Child Fit requirements, see pages 38–39.

You **MUST** store the harness system and remove the accessories, except the cup holder(s), when using the **Booster Seat Mode**.

To remove accessories, see pages 3–4.

Storing Harness System: Page 33

Booster Seat Child Fit: Page 38

Backed Booster Seat Use in Vehicle: Page 40 Converting to Backless Booster Mode: Page 43 Backless Booster Seat Use in Vehicle: Page 47

continued on next page

Storing Harness System

You **MUST** remove head pillow, body pillow and harness covers. To remove accessories, see pages 3–4.




Fully Loosen Harness Straps



Adjust Headrest to Highest Position

3

4



Undo Chest Clip

Press in on the release button and pull apart.

Press in on the top and bottom buttons and pull apart.



Undo Buckle



It may be easier to undo the buckle by pressing in towards the top of the button.

5




Remove Backless Booster

34

Locate the backless booster release levers under the seat pad as shown.

Squeeze both levers and pull out on the backless booster to remove it from the main car seat.

6

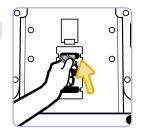

From Bottom of **Backless Booster. Rotate Buckle's Metal Retainer and Push** It Up twhrough **Booster Seat**



Out of Shell Remove buckle cover from buckle.

Store the buckle cover and rest of accessories in a safe place for future use.


Pull Buckle and

Buckle Cover

Slide Shoulder **Harness Straps** Out from Slots in **Headrest Pad**


8



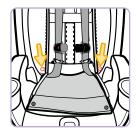

Pull Bottom of Seat Pad Down and Locate Fasteners on Lower Back of Seat Pad

10

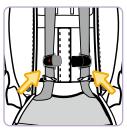

Secure Chest Clip and Buckle Tongues Behind Seat

From front of seat, feed left buckle tongue and left half of chest clip through opening to back as shown.


Repeat for other side.

11



From Back of Car Seat, Clip Chest Clip Backwards and Slide Up Harness Straps

12

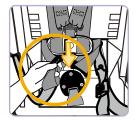

Secure Buckle Behind Seat


Slide both buckle tongues up the harness straps and then point the metal part of both buckle tongues down.

Holding the buckle so the

red button is facing the back of the seat, insert the buckle tongues into the backward buckle as shown.

Tighten harness slightly to remove slack.

13








Feed Buckle Strap's Metal Retainer Behind Buckle and Between Harness Straps As Shown

The harness system is now stored for **Booster Seat Mode**.

14

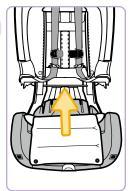

Attach Backless Booster to Main Shell

Align backless booster and slide into opening at bottom of backed shell. Push firmly.

The booster seat will click on both sides when it locks into place.


Pull on backless booster to confirm it is securely attached to backed shell.



Make sure no padding or straps are in the way of connecting the backless booster securely.

You will hear a loud click when backless booster is securely attached.

Pull on backless booster to confirm it is securely attached to backed shell.

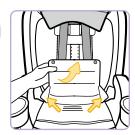

Replace Seat Bottom Pad


Tuck side flaps behind seat bottom pad.

16



Replace Bottom of Headrest Pad

17

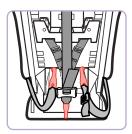

Secure Top Tether Strap and Lower **Anchor Straps To Storage Locations** As Shown

Pull end of straps to tighten and remove slack.

FINISHED!



The car seat has been converted to the Backed Booster Seat Mode.

See page 40 for Backed Booster Seat Use in Vehicle.

Backed and Backless Booster Modes



Check Car Position

38

DO NOT use the booster seat if your child's head is less than 5 in. (12.7 cm) below the roof of the car.

Consult your vehicle manual for proper seatbelt usage.



Check Lap Belt Position

The lap belt should lay snugly across your child's hips; not on their stomach.

Backed Booster Mode



Check Head Position

The top of your child's ears should **never be above** the top of the booster seat's headrest.



Check Shoulder Belt Position

The shoulder belt should lay snugly across the center of your child's shoulder and across their chest.

Backless Booster Mode



Check Head Position

The top of your child's ears should **never be above** the top of the vehicle seat back or vehicle headrest.




Check Shoulder Belt Position

The shoulder belt should lay snugly across the center of your child's shoulder and across their chest.

To help position the shoulder belt you may need to secure the shoulder belt into the belt positioning clip.

NOTE: Use the shoulder belt positioning clip only if necessary to correctly position the shoulder belt on the child. See pages 45–46.

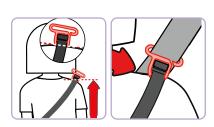

Belt Positioning Clip Use

With child in booster seat, pull the belt positioning clip across the child's back to the top of the child's shoulders.

The top of the shoulder must be even with the line in the positioning clip as shown.

AWARNING

DO NOT use the harness system when using as a booster seat.







DO NOT use LATCH when using as a booster seat. Secure the lower anchor belt and the tether strap to their storage attachments.

Warning! Use **ONLY** the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

DO NOT use only the lap belt when using this seat as a booster seat.

The shoulder belt **MUST** always be adjusted snugly across the child's chest.

NEVER place shoulder belt under the child's arms or behind their back.

DO NOT use this booster seat if the top of your child's ears are above the top of the booster seat's headrest.

1



Put Booster Seat into Position 1

Place booster seat in the back seat. Booster seat MUST be flush against the back of the vehicle seat. Booster Seat MUST be upright. Vehicle seat back must be in the upright position.





Adjust Booster Seat To Fully Upright Position





If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.

3



Have Child Sit in Booster Seat

The top of your child's ears should **never be above** the top of the booster seat's headrest.

4



Position Lap Belt on Child

Route **ONLY** the lap belt portion of the vehicle belt through the **Booster Seat Belt Path** as shown.

The lap belt should lay snugly across your child's hips, **not on their stomach**.

5



Buckle Vehicle Belt

Pull the shoulder belt up to tighten.

6





Position Shoulder Belt on Child

Thread the shoulder belt through the belt-positioning guide in the headrest.

Pull the shoulder belt up to tighten so that it lies snugly across the center of your child's shoulder and across their chest.

FINISHED!



Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.



Keep the booster seat securely belted even when unoccupied.

See Booster Seat Child Fit, page 38.

Converting to Backless Booster Seat Mode

1

Fully Loosen Harness Straps

Undo Buckle

2



3



Push Harness Adjustment Strap Through Opening in Bottom of Pad As Shown

4



Remove Backless Booster

Locate the backless booster release levers under the seat pad as shown.

Squeeze both levers and pull out on the backless booster to remove it from the main car seat.

5



Pull Buckle and Buckle Cover From Car Seat

Remove the buckle cover from the buckle. Insert the buckle tongues into the buckle to keep it with the backed part of

the booster seat while not in use. Store buckle cover and backed seat in safe place.


6



Remove Cup Holders and Reattach to Opposite Side


Turn booster around and push cup holders into attachment openings in the booster seat as shown.

7

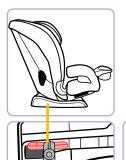


Remove Shoulder Belt Positioning Clip from Storage Location

Turn car seat over and locate plastic plate. Rotate plastic plate.



8

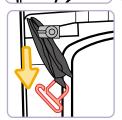

Remove Clip and Strap




To store clip, lay strap flat. Fold strap in half, then fold in half again.

Insert bottom of clip, where strap is attached, into opening first then press in rest of clip firmly.

Fit strap and clip into opening in shell as shown. Rotate plastic plate. It will click when locked into place.









9










Thread Belt Positioning Clip Strap Through Buckle Slots in Shell

- a. From the bottom of the backless booster, feed the loop end of the strap up through the bottom buckle slot in the shell only. From the top of the seat, lift the front of the seat pad and feed the loop end of the strap down through the middle slot.
- **b.** From the bottom of the backless booster, thread the belt-positioning clip through loop end of strap.
- c. Pull strap tight, as shown.

Reverse steps to remove the belt-positioning clip.

10





Attach Seat Pad **Fasteners**

Wrap loose end of seat pad around front bottom of backless booster.

Attach both fasteners and both elastic straps as shown.

FINISHED!




The car seat has now been converted to Backless Booster Seat Mode.

See pages 47–50 for Backless Booster Seat Use in Vehicle.

See Booster Seat Child Fit, page 38.





To convert to one of the backed modes, for use in Forward-Facing and Rear-Facing harnessed modes or Backed Booster mode, see page 36, step 14.

To reinstall buckle, see pages 53–54. To change headrest/harness height, see pages 51-52.

To install seat pad set, see pages 63-64.

To remove/store Shoulder Belt-Positioning Clip, see page 44. steps 7 and 8. and the info box on page 45.

AWARNING

DO NOT use the harness system when using as a booster seat.







DO NOT use this booster seat if the top of your child's ears are above the top of the vehicle seat back or vehicle headrest.

Warning! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

DO NOT use only the lap belt when using this booster seat. The shoulder belt **MUST** always be adjusted snugly across the child's chest.

NEVER place shoulder belt under the child's arms or behind their back.

By the nature of the design, backless booster car seats do not have a back or headrest. These types of booster car seats help position the vehicle belt across the body.

Any additional protection of the body or head is dependent on the protection systems of your vehicle.

Please consider this when choosing where this booster will be used in your vehicle and always consult your vehicle owner's manual.

1



Place Backless Booster Seat in Back Seat of Vehicle

The vehicle seat back **MUST** be upright.


2



Have Child Sit in Booster Seat

The top of your child's ears should **never be above** the top of the vehicle seat's headrest.

3



Position Lap Belt on Child

Route the lap portion of the lap/shoulder belt through the **Booster Seat Belt Path** and under both armrests as shown.

The shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side.

The lap belt should lay snugly across your child's hips, **not on their stomach**.



Buckle Vehicle Belt

5



Position Shoulder Belt on Child

Pull the shoulder belt up to tighten so that it lies snugly across the center of your child's shoulder and across their chest.

The vehicle's shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side and over the armrest on the non-buckle side.

Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.




To help position the shoulder belt, you may need to secure the shoulder belt into the belt-positioning clip.

NOTE: Use the shoulder belt-positioning clip only if necessary to correctly position the shoulder belt on the child.

To attach Belt-Positioning Clip Strap to backless booster, see Converting to Backless Booster Seat Mode section pages 43–46.



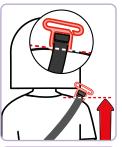

Belt-Positioning Clip Use

With child in booster seat, pull the belt-positioning clip across the child's back to the top of the child's shoulders.

The top of the shoulder must be even with the bottom of the positioning clip as shown.



Pull the shoulder belt up to tighten so that it lies snugly across the center of your child's shoulder and across their chest.



To Lengthen: Push free end of the strap (1) into the clip.

Pull on the opposite end of the strap (2) to remove slack as shown.



To Shorten: From the top of the clip, make a loop in the strap.

Push the strap up (1) as shown.

Pull free end of the strap (2) to remove the loop.

Changing Headrest/ Harness Height

1



Fully Loosen Harness Straps

Push down on the harness release button (through the opening in the pad) while pulling out on the harness straps as shown.

2



Back View

Adjust Headrest/ Harness Height

- **1.** Squeeze the adjustment handle lever up.
- **2.** Move the headrest up or down to the proper height for your child.
- **3.** Release the handle to lock in place.
- **4.** Make sure it is locked securely.



For Rear-Facing Child Fit, see page 9.

For Forward-Facing Child Fit, see page 20.


To learn how to check harness tightness, see pages 29–31.

If you cannot achieve a snug harness fit for your child, see pages 55-57.

Check the harness straps often for any wear or damage.

To Use Headrest in Lowest Position:

1

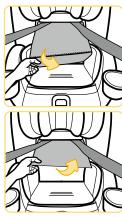

Fold Bottom of Headrest Pad Up Underneath Middle Section of Headrest Pad

2



Adjust Headrest to Lowest Position

NOTE: To use headrest in higher position, do opposites of steps 1 and 2.





If the harness straps have been removed from the chest clip and buckle, rethread them.

The harness strap ends go through the back of the buckle tongues and through the chest clip front to back.



To use in harnessed mode, slide the shoulder harness straps into the slots in the headrest pad.

To reinstall buckle, see pages 53–54.

WARNING

Failure to place buckle's metal retainer completely through pad and child restraint can result in serious injury or death. Serious injury may include paralysis and/or permanent brain injury.



You must remove backless booster to change buckle position.

See Convert to Backless Booster, pages 43–46.

To reattach backless booster to main shell, see page 36, step 14.


1



Unbuckle Harness

Press in toward top of red button.

2

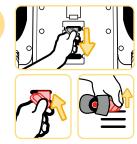

Pull Buckle and Buckle Cover Out of Booster Seat and Pad


Turn the booster seat over.

Pull down on buckle's metal retainer.

Rotate the retainer and push it up through the shell.

3



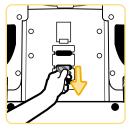

Insert Buckle's Metal Retainer into Buckle Slot Closest to Child

From top of booster seat, tuck the ends of the buckle cover into the same pad slot as the buckle.

4



Check Buckle

Pull up on the buckle to make sure it is secured.

The buckle **MUST NOT** pull out.

i

For Rear-Facing Child Fit, see page 9.

For Forward-Facing Child Fit, see page 20.

To learn how to check harness tightness, see pages 29–31.

If you cannot achieve a snug harness fit for your child, see pages 55–57.

Harness Adjustment for Smaller Infants



If you cannot achieve a snug harness fit for your child, you may need to adjust the harness strap as shown in this section.

When using the lower shoulder harness slots for smaller children, you **MUST** use the head and body pillow and the headrest **MUST** be in the lowest position.

WARNING


The harness system **MUST** be installed correctly.

DO NOT use a child restraint with damaged harness straps.

Fully Loosen Harness Straps

Push down on the harness release button (through the opening in the pad) while pulling out on the harness straps as shown.

2



Move Buckle to 1st Buckle Slot

To access buckle's metal retainer, you must first remove backless booster.

To remove backless booster, see pages, 43–46.

To change buckle slot, see pages 53–54.

3



From Back of Car Seat, Remove Harness Strap Loops From Splitter Plate


1



4




Attach 2nd Harness Strap Loops to Splitter Plate

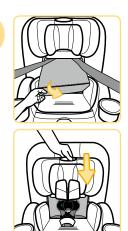

Fold Bottom of Headrest Pad Up and Adjust Headrest to Lowest Position

The bottom section of the headrest pad will need to be folded up behind the middle section. See page 52.






The sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist the harness strap or the harness adjustment strap.

Make sure the same harness strap loops are fitted completely on both sides of the splitter plate.

To learn how to check harness tightness, see pages 29–31.

This car seat has 5 positions.

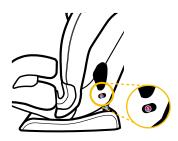

There is a small window on each side of the seat that shows which position the car seat is in.

NOTE: When the car seat is in **Position 5 - Fully Reclined**, the number window on the side of the seat will no longer be visible.



Rear-Facing Mode - 5 Fully Reclined and 2–4 Semi-Reclined

For children 5–30 lb (2.3–13.6 kg) and 19–34.3 in. (48–87 cm), the bottom Rear-Facing Level line on the car seat MUST be parallel with the ground using Positions 5–2.

For children 30–40 lb (13.7–18 kg) and 34.4–40 in. (87.1–101.6 cm)

AND can sit up unassisted, the top **Rear-Facing Level Line** on the car seat **MUST** be parallel with the ground starting from the fully reclined Position 5 and adjusting to more upright Positions 4–2.

DO NOT use Position 1 for Rear-Facing mode.

Forward-Facing Mode - 1 Fully Upright Booster Seat Mode - 1 Fully Upright



To Recline: Pull the recline handle out and push the top of the car seat back.

For More Upright: Pull the recline handle out and pull the top of the car seat forward.

Removing Seat Pad Set and Cleaning Parts of Car Seat



You do not need to remove the harness system to remove the pad from the car seat.

DO NOT fully pull the harness strap out of the car seat. Leave it threaded in the hip harness slots. If removed, you will not be able to rethread it.

To remove accessories, see pages 3-4.

3





Undo Chest Clip

Press in on the top and bottom buttons and pull apart.

Headrest and Backed Seat Pads





Fully Loosen Harness Straps

Push down on the harness release button (through the opening in the pad) while pulling out on the harness straps as shown.

4



Unbuckle Harness


Press in toward top of red button.

2




Adjust Headrest to Highest Position

5

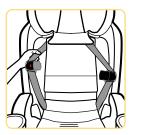

Slide Shoulder Straps Out from Shoulder Slots in Seat Pad



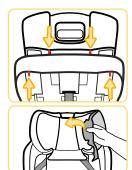


From Behind Seat, Locate Elastic Straps

There are two elastic straps behind the top of the headrest and two on the seat back.

Pull elastic straps off of tabs.

Gently remove pad from headrest.





Locate Fasteners at Bottom of Seat Pad

Undo fasteners.





Pull Sides of Fabric Down and Out From Around Booster Belt Path

Pull elastic straps down and out from under belt

path covers. Lift pad up off sides and top of car seat.

Backless Booster Pad





The two snap fasteners on the backless seat pad will not be attached anywhere when the backless booster is attached to the backed portion of the car seat.





Remove Backless Booster

See pages 43-46.

2



Remove Cup Holders





Unfasten Elastic Straps and Plastic Tabs

Pull both elastic straps off the tabs underneath the front of the backless booster.

Pull the plastic seat pad tabs

out from the slots on the underside of the backless booster as shown.

4




Pull Seat Pad Down and Out from Around Harness Adjustment Cover





Pull Pad Out from Around Backed Mode Cup Holder Attachments

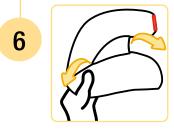

Remove Pad From Backless Booster

Pull pad down and out from around belt path covers and backless booster cup holder attachments.

Slide pad up off of armrests and remove pad from shell.

Cleaning Pad and Accessories

Machine wash separately with cold water on a gentle cycle. Make sure the harness covers are closed so the fastening strips are not exposed. **DO NOT** use bleach. Tumble dry separately for 10–12 minutes on low heat. Remove immediately.

Cleaning Harness Strap

Check the harness straps often for any wear or damage. Spot clean using warm sudsy water and damp cloth. Spilled food and liquids on the car seat may result in mold or bacterial growth over time. These spills could also attract insects or rodents.

Cleaning Buckle and Car Seat

Spot clean using warm sudsy water and damp cloth. **DO NOT** submerge into water.

Installing Seat Pad Set

Backless Booster Seat Pad

- Fit seat pad over armrests and around Backless cup holder attachments, then fit around Backed seat mode cup holder attachments.
- Fit pad over side and around belt path covers. Repeat for other side
- 3. Pull pad down and around back of Backless booster.

- **4.** Fit pad around harness adjustment button cover.
- Flip plastic tabs down and slide into slots around bottom of booster.
- **6.** Attach seat pad elastics to tabs in shell.
- **7.** Pull front of seat pad around bottom of shell and snap fasteners into openings in shell.

Backed Car Seat/Booster Seat Pad

- 1. Adjust headrest to lowest position.
- **2.** Fit top, back of seat pad over shell and pull down around sides of seat. Attach elastic straps on top, back of shell.
- **3.** Fit elastic strap around bottom of booster belt path.
- **4.** Fit fabric flaps on back of seat pad around edges of car seat behind backed belt-positioning booster belt path.
- **5.** Snap fasteners on bottom of seat pad.
- **6.** Feed harness adjustment strap through opening at bottom of pad, from back to front.

Headrest Pad


- **1.** Adjust headrest to highest position.
- **2.** Fit pad around sides of headrest and around headrest adjustment handle.
- **3.** Attach elastic straps on back of headrest at top.

To reattach backless booster to main shell, see page 36, step 14.

AWARNING


DO NOT fully pull the harness strap out of the car seat. Leave it threaded in the hip harness slots. If removed, you will not be able to rethread it.

DO NOT use the child restraint without the seat pad or with damaged harness straps.

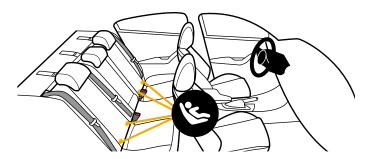

Your vehicle's features may be considerably different than those pictured here.

The lower anchors of **LATCH** (Lower **A**nchors and **T**ethers for **CH**ildren) is a universal system for installing car seats without using vehicle seat belts. The LATCH: lower anchor belt can **ONLY** be used in vehicles that have the lower anchor bars installed in designated seating positions. Most vehicles manufactured after September 2002 are equipped with LATCH: lower anchor bars. Check your vehicle owner's manual to see which seating positions may be equipped with LATCH: lower anchor bars.

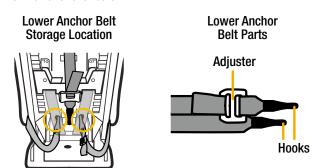

To Remove Lower Anchor Belt from Storage Location on Car Seat

Squeeze the spring lever on the hooks and remove the hooks from the attachments in the storage location, on the shell behind the harness straps.



To Remove Lower Anchor Belt from Vehicle's Lower Anchor Bars

- **1.** Remove the tension from the belt by pushing down on the side of the car seat with the adjuster.
- **2.** Then press the adjuster's button to loosen the belt.
- **3.** Squeeze the spring lever on the hooks, push the hooks back into the vehicle seat, and rotate the hooks to the side.
- **4.** Pull the hooks off of the vehicle's lower anchor bars.



To Store Lower Anchor Belt

The lower anchor belt **MUST** be properly stored in its storage location on the shell behind the harness straps when:


- Using the vehicle belts to install the car seat: OR
- Using the Booster Seat Mode; OR
- The car seat is not installed in the vehicle.

Secure the hooks to the attachments in the storage location on the shell behind the harness straps as shown. Gently tighten the belt to remove slack.

AWARNING

DO NOT use both the lower anchor belt and vehicle belt at the same time.

Vehicle Belts

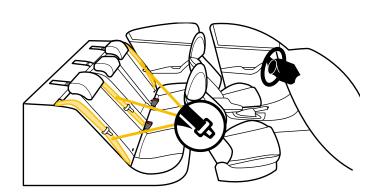

Your vehicle's features may be considerably different than those pictured here.

If LATCH: lower anchors are not an option or if your child weighs more than **45 lb** (20 kg), you **MUST** use the vehicle seat belt system to install the car seat.

Not all vehicle belts and seating positions will work with car seats. Please go through the following steps to understand how to lock a car seat in Rear-Facing Mode or Forward-Facing Mode with a vehicle belt.

AWARNING

DO NOT use both the lower anchor belt and vehicle belt at the same time.





You MUST Review Your Vehicle Owner's Manual

Your vehicle owner's manual will let you know which vehicle belts and seating positions car seats can be installed in.

2



Check How This Car Seat Will Be Locked Into Place

The vehicle belt **MUST NOT** loosen after tightening.

This means there needs to be a way to lock the vehicle belt.

The ways this can be done are:

- By using the seat belt's retractor (see step 3); OR
- By using the seat belt's latch plate (see step 4).

3



Check Retractor

Retractors pull seat belts into stored positions and lock the belt to hold passengers in place.

See the next page for some common types of vehicle belt retractors that will work with this car seat.

Types of Retractors

Switchable Retractor

(most vehicles have this type)

This retractor can be switched to a locking mode.

You **MUST** have the retractor in the locking **mode** to use the seat belt with this car seat.

Switching to locking mode: Slowly pull the shoulder belt all the way out, then let it go back in **1–2 in.** (2.5–5 cm).

As it goes back in, you will most likely hear a ratcheting sound.

Gently pull the belt to see if it has locked. You will not be able to pull any more belt out if the lock has engaged.

Automatic Locking Retractor

This retractor always locks.

It will automatically lock after slowly pulling the seat belt out at least halfway and letting the belt go back into the retractor **1–2 in.** (2.5–5 cm).

Emergency Locking Retractor See Step 4 Check Latch Plates

If the retractor does not lock, it is most likely an Emergency Locking Retractor. These retractors only lock during a sudden stop or collision.

You will need to determine if your seat belt's latch plate can lock the belt. See step 4, Check Latch Plates.





Locking Latch Plate



Sliding Latch Plate

Check Latch Plates

Latch plates are the part of the seat belt that goes into the buckle.

To see if the latch plate locks:

- 1. Buckle vehicle belt.
- **2.** Slowly pull up on the lap portion of the vehicle belt.

If the vehicle belt does not slide through the latch plate, it's locked.

If the vehicle belt slides through the latch plate, it is a **sliding latch plate**.

Sliding latch plates easily slip between the lap and shoulder portions of the belt.



If you have an Emergency Locking Retractor with a Sliding Latch Plate, you must use a locking clip.

Please contact us for one, see the back cover of the manual.

Never Use the Following With This Car Seat:


- Emergency Locking Retractor Lap Only Belt
- Inflatable Seat Belts





Your vehicle's features may be considerably different than those pictured here.

When anchors are available, you MUST always attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness. Tethers improve the installation and stability of car seats and reduce the risk of injury. Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information. If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed.

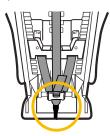

Storing Top Tether Strap

The tether strap **MUST** be properly stored in its storage location when:

- installing in Rear-Facing Mode; OR
- using the Booster Seat Mode: OR
- the car seat is not installed in a vehicle.

Attach the tether hook to its storage location as shown. Gently tighten to remove slack.

To adjust tether strap, see pages 23 and 27.

▲ WARNING

Using this child restraint without the tether strap anchored as required by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could result in serious injury or death. Serious injury may include paralysis and/or permanent brain injury.

DO NOT fasten multiple tether hooks on the same tether anchor in the vehicle.

AWARNING

NEVER take your child out of the child restraint while the vehicle is moving.

NEVER leave your child unattended.

Placing your child in a hot child restraint may result in burns.

DO NOT use a child restraint with damaged or missing parts.

DO NOT use a child restraint with cut, frayed, or damaged harnesses.

DO NOT substitute parts or try to modify the child restraint in any way. **DO NOT** lubricate buckles and fasteners.

DO NOT use any child restraint accessory except those approved by Dorel Juvenile Group.

NEVER allow any child to play with this child restraint; it is not a toy.

DO NOT remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. **DO NOT** use in a boat, on a motorcycle or in a cargo van or bus where there are no seat belts or tether anchors.

Read all instructions for additional warnings.

AWARNING



NEVER place a child rear-facing in a seating position with an active frontal air bag.

Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the child restraint only on vehicle seats that face forward.



DO NOT use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

Rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the car seat in vour vehicle:

- Consult your vehicle owner's manual; **OR**
- Contact Dorel Juvenile Group Consumer Care Department: **OR**
- Visit your local Child Passenger Inspection Station. Go to https://www.nhtsa.gov/vehicle-safety/car-seats-and-boosterseats to find your closest station.

To avoid your child being seriously burned, take the following precautions:

- Park in the shade or where the sun does not directly hit the car seat.
- Cover the car seat with a sheet or blanket when not in use.
- Check for hot seat and buckles before placing child in car seat.

To help protect your vehicle seat's upholstery from damage: you may use an accessory approved by Dorel Juvenile Group or a single layer towel underneath and behind car seat.

AWARNING

Check the vehicle belt or lower anchor belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

Even when unoccupied, this booster seat **MUST** be firmly secured to the vehicle with the vehicle seat belt.

In a crash or sudden stop, an unsecured child restraint or booster seat could injure occupants.

Replacement and Expiration

DO NOT risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash, even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor ALL of the following MUST be true:

- Vehicle able to drive away from the crash site; AND
- Vehicle door nearest the car seat was not damaged; AND
- No passengers were injured; AND
- Airbags did not deploy; AND
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You MUST replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat **MUST** be replaced immediately.

Expiration



On the bottoms of the main car seat shell and the backless booster is a date of manufacture label as shown.

DO NOT use this car seat more than 10 years after the date of manufacture.

Registration and **Safety Notices**



Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the bottoms of the main car seat shell and the backless booster.

76

Please complete the postage-paid registration card that came with your child restraint, and send it to us.

Child restraints could be recalled for safety reasons.

You must register this restraint to be reached in a recall.

Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group

P.O. Box 2609

Columbus, IN 47202

Attn: Consumer Care

or call 1-800-544-1108 or register online at www.digusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to www.NHTSA.gov.

Aircraft Information

Warranty

78

This restraint is certified for aircraft use when used with the internal harness.



Rear-Facing Aircraft Installation

Follow the vehcile belt install steps on pages 11-17.



Forward-Facing Aircraft Installation

Follow the vehicle belt install steps on pages 22–28, skipping tether strap steps.



Booster Seat

This restraint is not certified for aircraft use, when used as a booster seat. because aircraft seats do not have shoulder belts.

Install the car seat in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward-facing aircraft seats. Contact the airline for their specific policies.



Some airlines may ask to see a label stating that this car seat is certified for aircraft use.

There is an airplane certification label located on the side of this car seat as shown.

▲ WARNING

You **MUST** store the lower anchor belt and tether strap when installing with aircraft belts.

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase.

An original receipt is required to validate your warranty.

DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-544-1108 or text: 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law **rights:** Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty.

Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other

rights, which vary from state to state.

Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.