



Send Us a Text: 1-812-652-2525
(US and Canada Only. Carrier Fees
May Apply)



Find Us Online: www.coscokids.com

Email Us: support@djgusa.com



Give Us a Call: 1-800-544-1108
(Toll Free, US and Canada Only)

together, we're the village. together, we're the village.



replacement parts list

- Seat Pad Set
- Instructions

For parts availability and questions,
call, text, or chat.

If requested color is not available, similar color
will be substituted.

Applicable tax and shipping and handling will also be added.

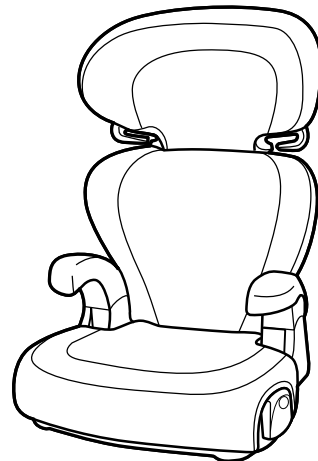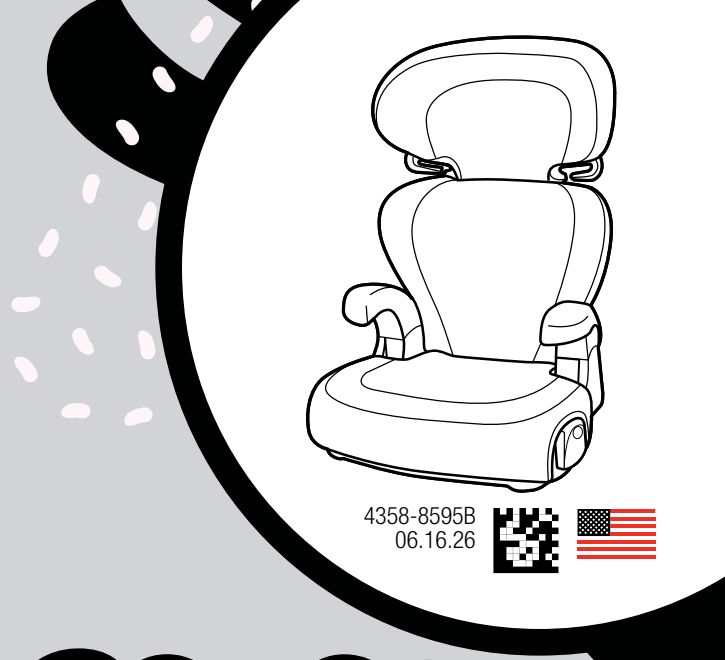

4358-8595B
06.16.26



pronto!™

pronto!™ trend

**belt-positioning booster
car seat**

KEEP INSTRUCTIONS FOR FUTURE USE.

Read all instructions before using this car seat.



Failure to follow the warnings on the labels and in the
instruction manual can result in serious injury or death to your
child. Serious injury may include paralysis and/or permanent
brain injury.

Table of Contents

	Getting Started	1
	Booster Seat Requirements	1
	Parts of the Booster Seat	2
	Installing Seat Base Pad.....	3
	Attaching Headrest to Backrest.....	4
	Installing Headrest Pad	5
	Installing Backrest Pad.....	5
	Attaching Backrest to Base	6
	Adjusting and Removing Headrest.....	8
	Adjusting and Removing Backrest.....	9
	Cup Holder	10
	Removing Seat Pad for Cleaning.....	11
	Vehicle Information.....	13
	Understanding Your Vehicle	13
	Knowing Your Vehicle Belts.....	13
	Backed Booster Seat Mode	14
	Backed Booster Seat Child Fit Requirements.....	15
	Backed Booster Seat Use in Vehicle	16
	Backless Booster Seat Mode	19
	Backless Booster Seat Child Fit Requirements	20
	Backless Booster Seat Use in Vehicle	21
	Safety Information	23
	Child Restraint Use	23
	Vehicle Seating Position	23
	Installation in Vehicle	24
	Replacement and Expiration	25
	Registration and Safety Notices	26
	Aircraft Information	27
	Warranty.....	28

Thank you for choosing this booster seat. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a booster seat can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this booster seat, please look at the back page.



⚠ WARNING

Failure to follow these instructions may result in serious injury or death to your child. Serious injury can include paralysis and/or permanent brain injury.




Be certain to measure your child's weight and height (do not guess) before choosing this car seat's mode.

Your child's height, weight, and age determine how the car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—**please consult your doctor before switching between any modes within the limits and fit requirements of the car seat.**


School-Aged Children

Children can only use a belt-positioning booster car seat once they outgrow forward-facing harness weight or height limits. Children must use the belt-positioning booster mode until the vehicle's lap and shoulder seat belt fit them properly without the belt-positioning booster.

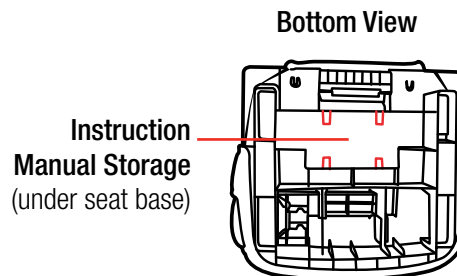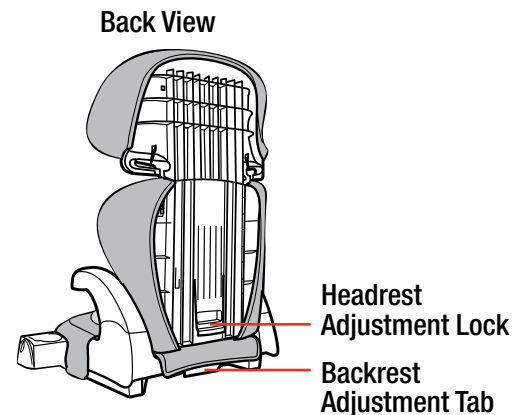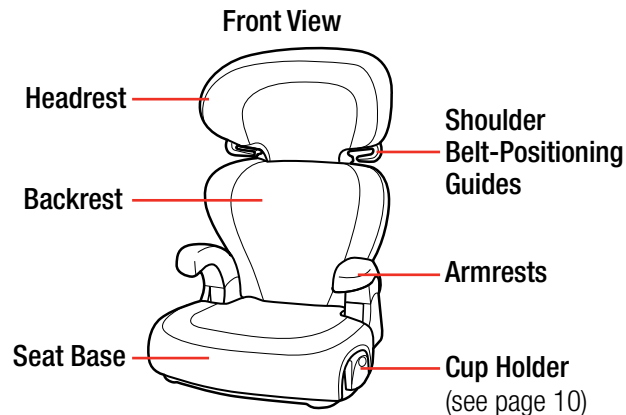

Installing Seat Base Pad


1

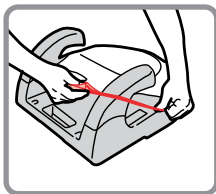

Attach Seat Pad

Slide seat pad onto the front of the base. Slide the elastic strap over the armrest, one side at a time.

2

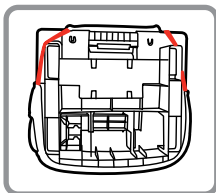


Wrap Elastic Straps Under Seat as Shown

3



Pull Pad Down and Around Cup Holder


4

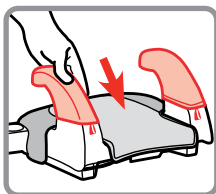

Attach Arm Covers (on select models)

Slide armrest covers over armrests and attach the armrest cover's elastic straps to bottom of seat as shown.


5

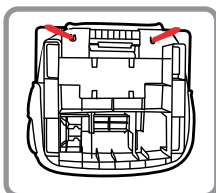

Attach Elastic To Tab


Attach the elastic on back of armrest cover to bottom of seat.

Attaching Headrest to Backrest

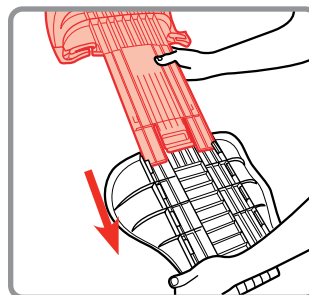

Attach Headrest to Backrest


With the headrest and backrest facing down, slide the headrest into the track on the back of the headrest.

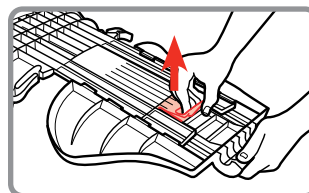

Lift headrest adjuster lock up and pull headrest down into a locked position.

Installing Headrest Pad


1

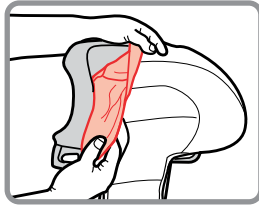

Attach Headrest Pad

Attach headrest pad to the headrest by sliding the pad over one side of the headrest, then the other.


2

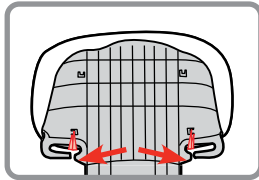

Attach Elastic Straps

From the back of headrest, attach the elastic straps to the hooks above the shoulder belt positioning guide.

Installing Backrest Pad

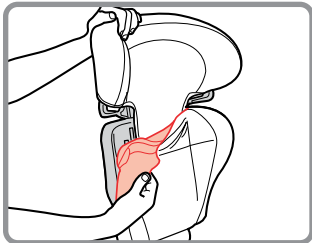

Attach Backrest Pad

The headrest pad will go behind only the backrest pad as shown.

Slide backrest pad onto one side of the backrest.


Pull pad tight and slide the pad over the other side of the backrest.

Attaching Backrest to Base

i

Headrest **MUST** always be used when using backrest. If headrest has been removed from backrest, see page 4 to attach headrest.


1

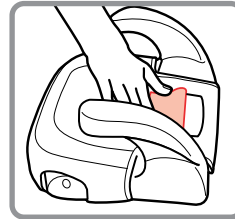

Locate the Backrest Connection Hole

Hold the rectangular shaped tab on the rear of the seat base pad back to expose the backrest connection hole.


2

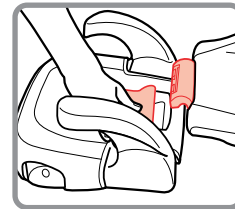

Attach Backrest to Base

Lay backrest flat (horizontal) and pull back the seat base fabric.


Insert the hook on the backrest into the large opening on back of seat base pad. Then insert the hook on the backrest into the large opening on the back of the seat base.

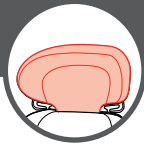

i

Make sure seat pad does not get caught between the moving parts. The backrest may not connect properly if the pad is in the way.

3

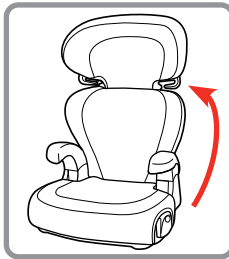

Rotate Backrest Up Until It Clicks

Tuck backrest connection hole flap under the backrest pad.

⚠ WARNING

DO NOT use this booster seat without the seat pad. Failure to do this can result in serious injury. Serious injury may include paralysis and/or permanent brain injury.



To Adjust Headrest



This booster seat has multiple headrest positions.

Grasp top of headrest and push down with one hand while pulling out on the headrest adjustment lock with the other.

Raise and lower headrest into selected position. Release the headrest adjustment lock at the selected headrest position.

Make sure headrest is locked by pulling headrest up and down. Headrest may move slightly when it is locked.

The backrest/headrest are removable.

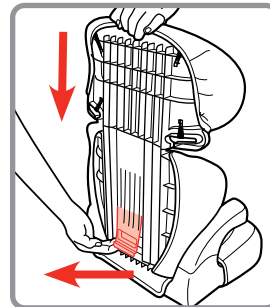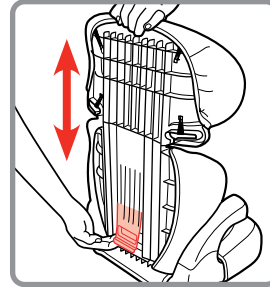



To Remove Headrest from Backrest

Move backrest to most upright position.

Grasp top of headrest and push down with one hand while pulling out on the headrest adjustment lock with the other.

Pull out and hold headrest adjustment lock and raise headrest up until it comes out of the backrest track completely.

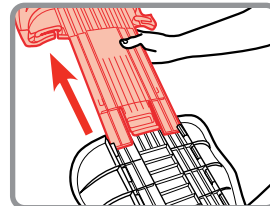

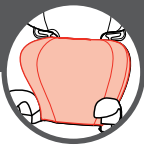

Adjusting and Removing Backrest



To Recline Backrest

Recline the backrest by pushing on the backrest release tab and rotate top of seat back about an inch.

The restraint is now in semi-reclined position.

The backrest has 2 positions, upright and semi-reclined.



The semi-reclined position is to be used only to install the booster seat flush against the vehicle seat back, if needed.

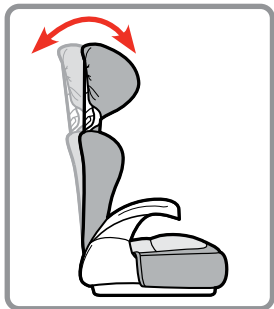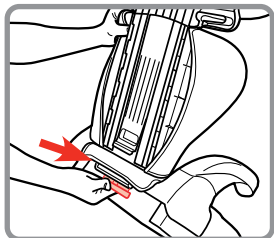


To Remove Backrest

Press in firmly on backrest release tab and rotate backrest back until it lays flat (horizontal).


Lift backrest hook out of the opening in seat base. Store backrest for future use.

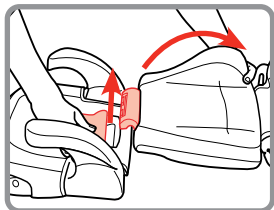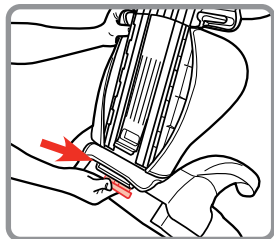

Cup Holder

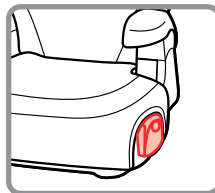

The cup holder is located on the side of the booster seat as shown.

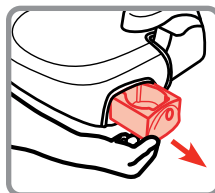

Pull out cup holder to use.

Push cup holder in when not needed.




Removing Seat Pad for Cleaning


i

Headrest and backrest must be removed from seat bottom to remove complete seat pad set. See pages 8–9 to remove headrest/backrest from base.


1

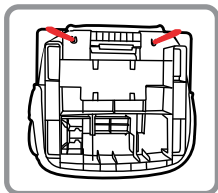


Undo Armrest Cover Elastic Straps from Bottom of Shell and Remove Armrest Cover
(on select models)

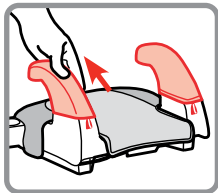


2

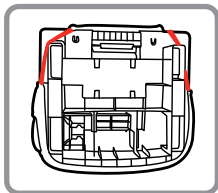

Undo Seat Pad Elastic Straps from Under Seat Bottom and Remove Seat Pad

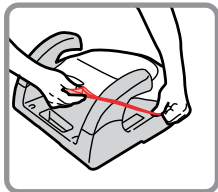


3

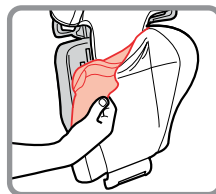


Remove Pad from Backrest

4

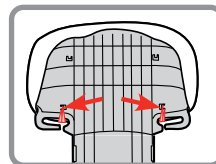

Remove Pad from Headrest

Undo the elastic straps.

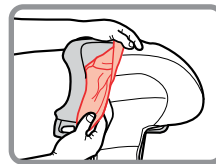


Cleaning Pad

Machine wash separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10–12 minutes on low heat. Remove immediately.

⚠ WARNING

DO NOT use booster seat without the seat pad. Failure to do this can result in serious injury or death. Serious injury may include paralysis and/or permanent brain injury.

Understanding Your Vehicle

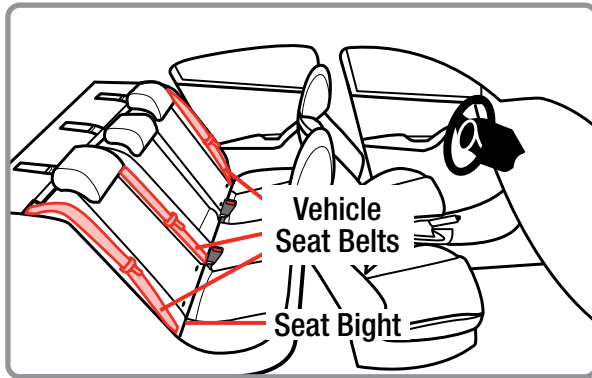

Your vehicle's features may be considerably different than those pictured here.

Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.

Knowing Your Vehicle Belts



Not all vehicle belts and seating positions will work with this booster seat. You must review your vehicle owner's manual for vehicle seat belt use with booster seats.

Never Use With This Booster Seat

Lap Belt Only



Inflatable Seat Belts



Backed Booster Seat Mode



**40–100 lb (18.1–45.4 kg) and
43.4–57 in. (110.1–144.8 cm)**



Lap/Shoulder Belt

In this car seat, your child can remain in the Booster Seat until they fit the vehicle's lap and shoulder seat belt properly without a Booster Seat **OR** outgrow any one of the following:

- Weight limit: 100 lb (45.4 kg); **OR**
- Height limit: 57 in. (144.8 cm); **OR**
- Backed Booster Seat Child Fit Requirements, see page 15

! WARNING

Warning! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.




DO NOT use only the lap belt when using this seat as a booster seat. The shoulder belt **MUST** always be adjusted snugly across the child's chest.

NEVER place shoulder belt under the child's arms or behind their back.

DO NOT use this booster seat if the top of your child's ears are above the top of the booster seat's headrest.




1

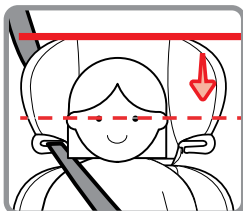

Check Headrest Position

The top of your child's ears should never be above the top of the booster seat's headrest.


2

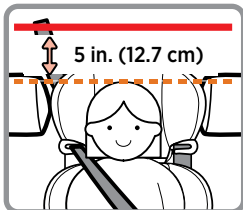

Check Vehicle Position

DO NOT use the booster seat if your child's head is less than 5 in. (12.7 cm) below the roof of the car. Consult your vehicle manual for proper seatbelt usage.


3

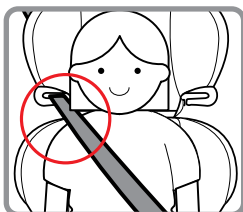

Check Shoulder Belt Position

The shoulder belt should lay snugly across the center of your child's shoulder and across their chest.


4

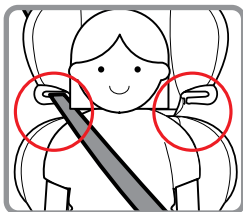

Check Headrest Position

Adjust the headrest to the proper height (see page 8). The shoulder belt-positioning guide should be slightly above your child's shoulders.

5

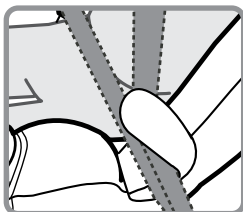

Check Lap Belt Position

The lap belt should lay snugly across your child's hips; **not on their stomach.**

To attach headrest/backrest, see pages 4 and 6–7.

1



Place Booster Seat Forward-Facing Flush Against Vehicle Seat Back

The vehicle seat back **MUST** be in the upright position, but you can adjust the angle slightly to better match the angle of the booster seat. Refer to the vehicle owner's manual for how to adjust the vehicle seat back.


2



Have Your Child Sit in Booster Seat

Your child should sit with their back flat against the back of the booster seat and bottom flat against the seat. The top of your child's ears should never be above the top of the booster seat's headrest. **DO NOT** use the booster seat if your child's head is less than 5 in. (12 cm) below the roof of the car.

i

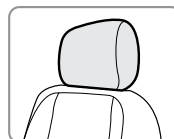

If your vehicle has a headrest that interferes with a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations for you to install.

3



Position Lap Belt on Child

Route lap portion of the lap/shoulder belt under both armrests. The shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side.

The lap belt should lay snugly across your child's hips; not on their stomach.


6



Adjust Headrest to Proper Height

The shoulder belt-positioning guide should be slightly above your child's shoulders. See page 8 for details on adjusting the headrest.

4

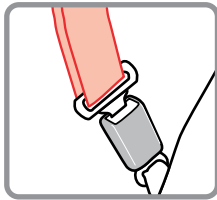

Buckle Vehicle Belt

Pull the shoulder belt up to tighten it. Consult your vehicle owner's manual for proper seat belt usage.


5




Position Shoulder Belt on Child

Pull up on shoulder belt to tighten. The shoulder belt should lay snugly across the center of the child's shoulders and across the chest and not on the face or neck.

FINISHED!

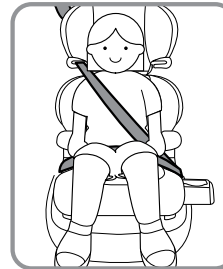

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.

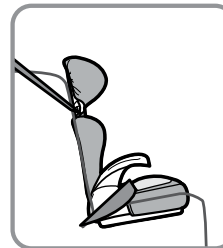

Keep the booster seat securely belted through the belt-positioning guide even when unoccupied.



Backless Booster Seat Mode



**40–100 lb (18.1–45.4 kg) and
43.4–57 in. (110.1–144.8 cm)**



Lap/Shoulder Belt

In this car seat, your child can remain in the Booster Seat until they fit the vehicle's lap and shoulder seat belt properly without a Booster Seat **OR** outgrow any one of the following:

- Weight limit: 100 lb (45.4 kg); **OR**
- Height limit: 57 in. (144.8 cm); **OR**
- Backless Booster Seat Child Fit Requirements, see page 20

WARNING

DO NOT use this booster seat if the tops of your child's ears are above the top of the vehicle seat's headrest or vehicle seatback.

Warning! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

Consult your vehicle manual for proper seatbelt usage.

DO NOT use only the lap belt when using this booster seat. The shoulder belt **MUST** always be adjusted snugly across the child's chest.

NEVER place shoulder belt under the child's arms or behind their back.


By the nature of the design, backless booster car seats **DO NOT** have a back or headrest. These types of booster car seats help position the vehicle belt across the body.

Any additional protection of the body or head is dependent on the protection systems of your vehicle.

Please consider this when choosing where this booster will be used in your vehicle and always consult your vehicle owner's manual.

Backless Booster Seat Child Fit Requirements

1

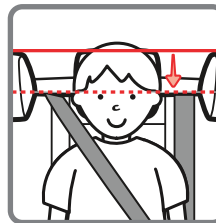

Check the Head Position

The top of your child's ears should **NEVER** be **above** the top of the vehicle seat's headrest.

2



Check the Vehicle Position

DO NOT use the booster seat if your child's head is less than 5 in. (12.7 cm) below the roof of the vehicle.

3



Check the Shoulder Belt Position

The shoulder belt should lay snugly across the center of your child's shoulder and across their chest.

4



Check the Lap Belt Position


The lap belt should lay snugly across your child's hips, **NOT** on their stomach.



Backless Booster Seat Use in Vehicle

To remove backrest/headrest, see page 8–9.

1

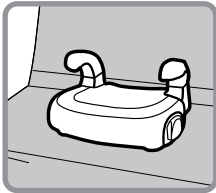

Place Booster Seat Forward-Facing Flush Against Vehicle Seat Back

The vehicle seatback **MUST** be upright.

2



Have Your Child Sit in Booster Seat

Your child should sit with their back flat against the vehicle seat and bottom flat against the seat. The top of your child's ears should never be above the top of the vehicle seat's headrest. **DO NOT** use the booster seat if your child's head is less than 5 in. (12.7 cm) below the roof of the car.

3




Position Lap Belt on Child

Route lap portion of the lap/shoulder belt under both armrests.

The shoulder belt **MUST GO UNDER** the armrest on the vehicle buckle side.

The lap belt should lay snugly across your child's hips; not on their stomach.


4

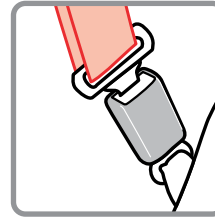

Buckle Vehicle Belt

Pull the shoulder belt up to tighten it. Consult your vehicle owner's manual for proper seat belt usage.

5

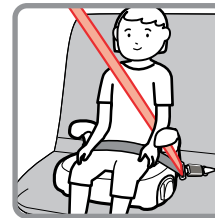

Position Shoulder Belt on Child


Pull up on the shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulders and across the chest and not on the face or neck.

FINISHED!



Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.

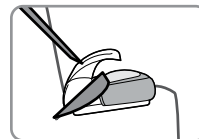

Keep the booster seat securely belted even when unoccupied.

Child Restraint Use

WARNING

NEVER take your child out of the booster seat while the vehicle is moving.

NEVER leave child unattended.

Placing your child in a hot booster seat may result in burns.

DO NOT use a booster seat with damaged or missing parts.

DO NOT substitute parts or try to modify the booster seat in any way.

DO NOT use any booster seat accessory except those approved by Dorel Juvenile Group.

NEVER allow any child to play with this booster seat; it is not a toy.

DO NOT remove or cover up any of the warning labels or other labels on the booster seat.

This child restraint has been certified for use in passenger vehicles.

DO NOT use in a boat, on a motorcycle, or in a cargo van or bus where there are no seat belts.

Read all instructions for additional warnings.

Vehicle Seating Position

WARNING

Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the booster seat only on vehicle seats that face forward.



DO NOT use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

Rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the car seat in your vehicle:

- Consult your vehicle owner's manual; **OR**
- Contact Dorel Juvenile Group Consumer Care Department; **OR**
- Visit your local Child Passenger Inspection Station. Go to <https://www.nhtsa.gov/vehicle-safety/car-seats-and-booster-seats> to find your closest station.

Installation in Vehicle

WARNING

Check the vehicle belt before each use. Use only if the belt can be tightened properly and securely.

Even when unoccupied, this booster seat **MUST** be firmly secured to the vehicle with the vehicle seat belt.

In a crash or sudden stop, an unsecured child restraint or booster seat could injure occupants.

To avoid your child being seriously burned, take the following precautions:

- Park in the shade or where the sun does not directly hit the car seat.
- Cover the car seat with a sheet or blanket when not in use.
- Check for hot seat and buckles before placing child in car seat.

To help protect your vehicle seat's upholstery from damage: you may use an accessory approved by Dorel Juvenile Group or a single layer towel underneath and behind car seat.

Replacement and Expiration

DO NOT risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash; even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL of the following MUST be true:**

- Vehicle able to drive away from the crash site; **AND**
- Vehicle door nearest the car seat was not damaged; **AND**
- No passengers were injured; **AND**
- Airbags did not deploy; **AND**
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **MUST** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat **MUST** be replaced immediately.



Expiration

On the side of the car seat there is a date of manufacture label as shown.

DO NOT use this car seat more than 10 years after the date of manufacture.

Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall.

Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group

P.O. Box 2609
Attn: Consumer Care
Columbus, IN 47202

or call 1-800-544-1108 or register online at
www.djgusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to www.NHTSA.gov.

Consumer: Just fill in your name, address and email. Please print (use dark ink).

Your Name _____

Your Street Address _____


City _____ State _____ Zip Code _____

Email Address (optional) _____

Model Number AB123CDE	Model Name Brand Car Seat	Manufacture Date 2024/05/01
--------------------------	-------------------------------------	--------------------------------

Barcode: L#11 B265035

Example of model number, manufacture date, and line code.

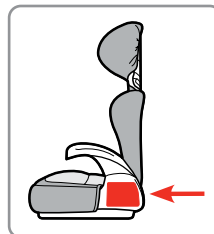

If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the car seat.



This restraint is not certified for aircraft use because aircraft seats do not have shoulder belts.

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase.

An original receipt is required to validate your warranty.

DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-544-1108 or text: 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty.

Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.