




4358-8527
10.30.24

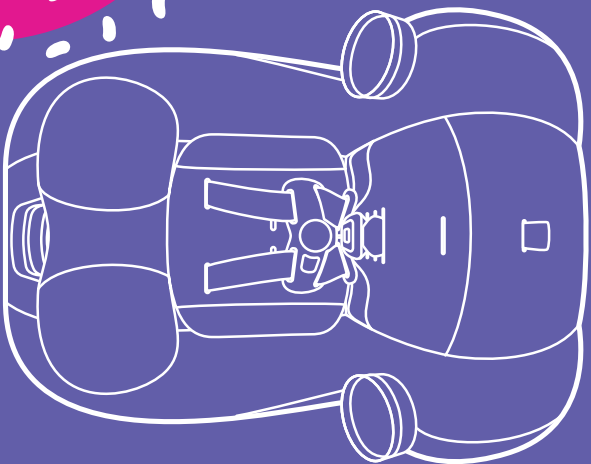

COSCOTM kids

entrada convertible car seat

Your model may look different than the one shown.
KEEP INSTRUCTIONS FOR FUTURE USE.

Read all instructions before using this car seat.
 Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child. Serious injury may include paralysis and/or permanent brain injury.

COSCOTM kids

Text 1-812-652-2525

(US and Canada only, carrier fees may apply)

Visit coscokids.com

Email support@digusa.com

Call 1-800-544-1108

(Toll free, US and Canada only)

Replacement Parts List

- | | |
|---------------------|----------------|
| • Buckle Assembly | • Locking Clip |
| • Harness Strap | • Seat Pad Set |
| • Chest Clip | • Cup Holders |
| • Lower Anchor Belt | • Instructions |
| • Tether | |

For parts availability and questions, text, chat, call, or email.

If requested color is not available, a similar color will be substituted.

Applicable tax and shipping & handling will also be added.

©2024 Dorel Juvenile Group, Inc. (800) 544-1108 www.coscokids.com. Styles, colors, and labeling may vary. Los estilos, colores y etiquetado pueden variar. Made in USA from American and imported parts (including seat pad). Hecho en EE.UU. a partir de piezas americanas e importadas (incluyendo la almohadilla del asiento). Distributed by (distribuido por) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2233 Argenta Road, Suite 110, Mississauga, ON L5N 2X7. Representante exclusivo en Chile: DOREL JUVENILE CHILE S.A. Av. del Parque 4161, oficina 602 A, Huechuraba, Santiago, Chile - Fono: 56 2 24971500 - www.infant.cl - www.dorel.cl Importado y distribuido en Perú por: COMEXA COMERCIALIZADORA EXTANQUEIA S.A. SUCURSAL DEL PERÚ - Los Libertadores 455, San Isidro, Lima 27, Lima, Perú RUC 20431062870 - Fono: 4413029 - www.infant.com.pe. En Centro América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá - Fono: (507) 300 2884. En Colombia por: Baby Universe S.A.S. - Via 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DUGM, S.A. DE C.V. Gabriel Mancera No. 1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DUG1403056N9 Tel: (55) 6719920

Table of Contents

Getting Started	3	Securing Your Child in the Car Seat	35	Vehicle Belt, LATCH Belt, & Tether Strap Information	67
Parts of the Car Seat	4	Making Adjustments to the Car Seat	40	Vehicle Belts	68
Accessory Use	6	Adjusting the Headrest	41	LATCH: Lower Anchor Belt	72
Choosing a Car Seat Mode	7	Changing the Harness Height	42	Tether Strap	75
Rear-Facing Mode	10	Changing the Buckle Position	44	Safety Information	76
Rear-Facing		Adjusting the Harness System for Smaller Infants	48	Child Restraint Use	77
Child Fit Requirements	11	Wash and Care	54	Vehicle Seating Position	78
Rear-Facing		Removing the Harness System	55	Installation in Vehicle	79
Vehicle Installation	14	Removing the Seat Pad Set for Cleaning	58	Replacement and Expiration	80
Forward-Facing Mode	22	Cleaning the Seat Pad Set and Parts of the Car Seat	59	Registration and Safety Notices	81
Forward-Facing		Installing the Harness System and Seat Pad Set	60	Aircraft Information	82
Child Fit Requirements	23			Warranty	83
Forward-Facing					
Vehicle Installation	26				


getting started

To help you get started using your child's new car seat (also known as a child restraint), these are the four main tasks you'll need to complete.


- 1 Measure your child.
- 2 Adjust the car seat to fit your child.
- 3 Install the car seat into your vehicle.
- 4 Secure your child in the car seat.

Parts of the Car Seat

Front

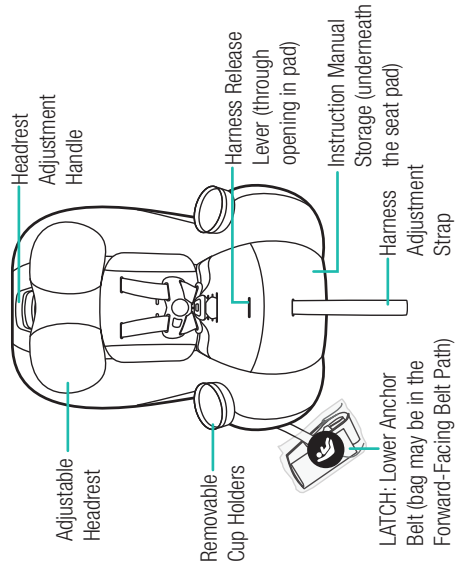


Harness System

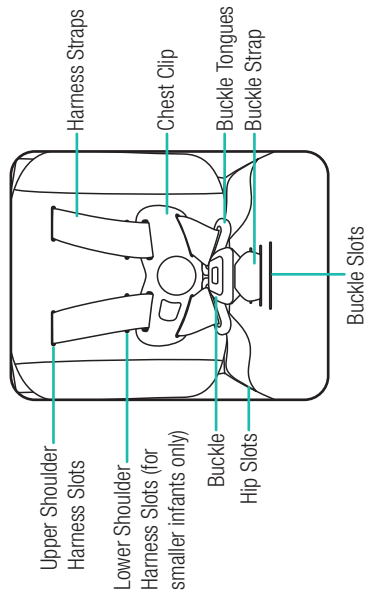


Your model may look different than the one shown.


Side

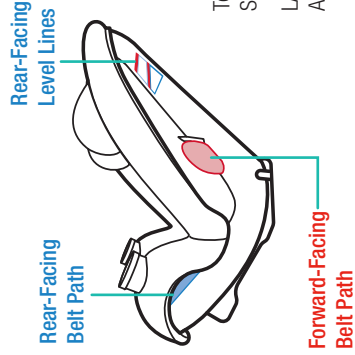

Back

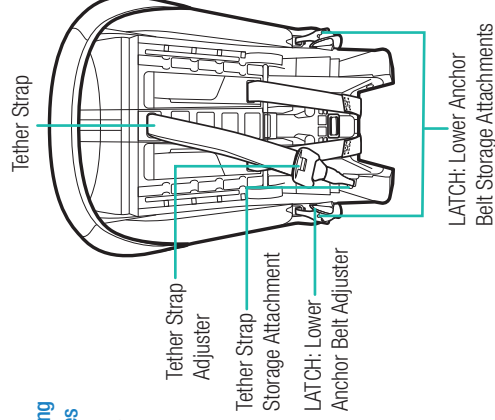


Bottom

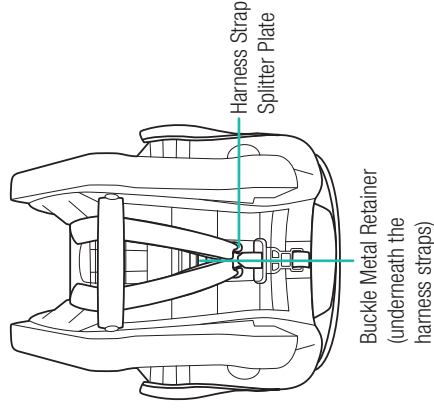


Accessory Use


Removable Cup Holders

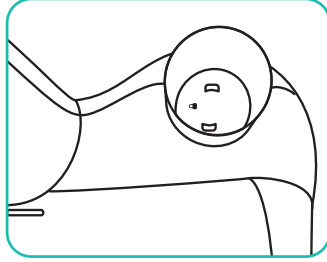

To remove the cup holders: Twist the cup holder counterclockwise and pull it out of the slot in the seat. Repeat on the other side.

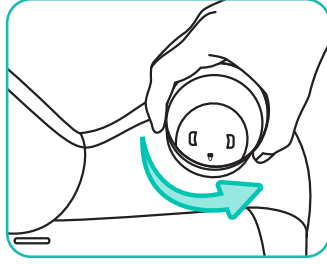

To install the cup holders: Align the bottom of the cup holder to the slot on the seat. Twist the cup holder clockwise until it clicks into place. Repeat on the other side.

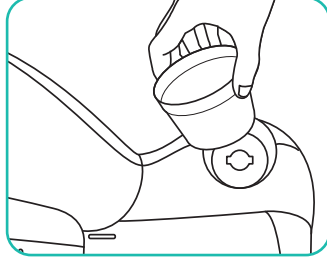

The cup holders are top-rack dishwasher safe.

6

Choosing a Car Seat Mode

⚠ WARNING

Failure to follow these instructions may result in serious injury or death to your child. Serious injury can include paralysis and/or permanent brain injury.

Be certain to measure your child's weight and height (do not guess) before choosing this car seat's mode.

Your child's height, weight, and age determine how the car seat should be placed in the vehicle.

Children vary widely in body size, shape, and temperament—**please consult your doctor before switching between any modes within the limits and fit requirements of the car seat.**

Infants and Toddlers

Children must ride rear-facing and remain rear-facing until they reach the maximum weight or height limits for rear-facing mode. Rear-facing child restraints installed behind another vehicle seat must be installed touching the back of the vehicle seat in front of it, or be as close as possible.

Toddlers and Preschoolers

Children can only use a forward-facing car seat once they outgrow rear-facing weight or height limits. Once they are forward-facing, children must use their child restraint in forward-facing mode with a harness until they reach the maximum weight or height limits for forward-facing harness mode.

continued on next page

7



REAR-FACING MODE

**5–40 lb (2.3–18 kg) and
19–40 in. (48–101.6 cm)**

In this car seat, your child **MUST** ride **Rear-Facing** and remain in **Rear-Facing** mode until they outgrow any one of the above.

Rear-Facing Child Fit Requirements PAGE 11
Rear-Facing Vehicle Installation PAGE 14




FORWARD-FACING MODE

**30–65 lb (13.7–29.5 kg) and
34.4–49 in. (87.1–125 cm)**

In this car seat, your child can use the harnesses **Forward-Facing** mode until they outgrow any one of the above.

Forward-Facing Child Fit Requirements PAGE 23
Forward-Facing Vehicle Installation PAGE 26

Rear-Facing Mode



5–40 lb (2.3–18 kg) and
19–40 in. (48–101.6 cm)

In this car seat, your child **MUST** ride **Rear-Facing** and remain in **Rear-Facing** mode until they outgrow any one of the following:

- Weight limit: 40 lb (18 kg); **OR**
- Height limit: 40 in. (101.6 cm); **OR**
- Rear-Facing Child Fit Requirements**
PAGE 11

Rear-Facing Vehicle Installation PAGE 14

⚠ WARNING

NEVER install a rear-facing child restraint in the front seat of a vehicle equipped with an active frontal airbag.



Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

This child restraint **MUST ALWAYS** face the rear of the vehicle until the child has reached the maximum weight or height limit for the rear-facing mode.

DO NOT use the tether for rear-facing mode. Secure the tether strap hook to its storage attachment.


DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

10

Rear-Facing Child Fit Requirements


1

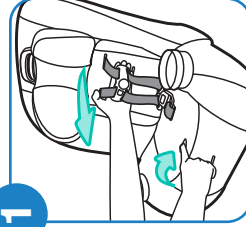

Fully loosen the harness straps

Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from the backrest.


2

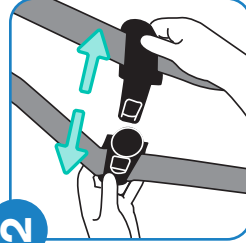

Unfasten the chest clip

While holding both sides of the chest clip, press the release button with your thumb and pull the chest clip apart.


3

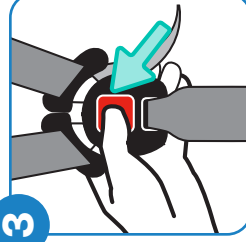

Unbuckle the harness

Press the red button to release the buckle tongues.

4

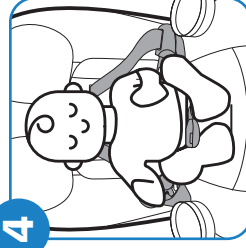


Place your child in the car seat



Your child's bottom and back should be flat against the car seat.

continued on next page

11

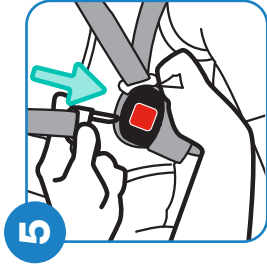


5

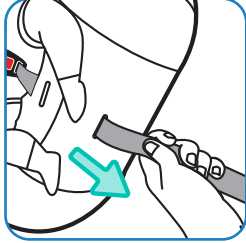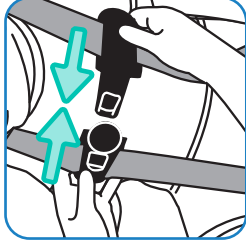

Buckle the harness and fasten the chest clip

Pull the harness adjustment strap straight out to snugly tighten the harness. Position the chest clip mid-chest (even with the armpits) and away from your child's neck.

See Securing Your Child in the Car Seat on page 35 for details on chest clip position and checking harness tightness.

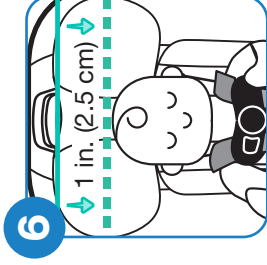


6

Check the head position

The top of your child's head **MUST be at least 1 in. (2.5 cm) below** the top of the car seat's headrest.

To change the headrest position, see page 41.

12

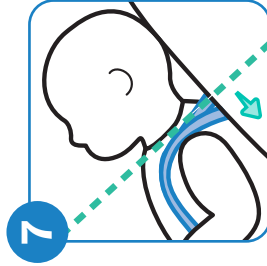


7

Check the harness strap position

The harness strap **MUST be positioned at or slightly below** the shoulders, never above.

To change the harness strap height, see page 42.

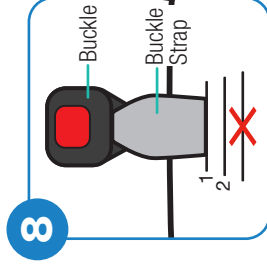

8

Check the buckle position

- Use the buckle slot closest to your child.
- The buckle strap **should not be underneath or behind your child.**
- **DO NOT** use the third buckle slot in **Rear-Facing** mode.

To change the buckle position, see page 44.



13

Rear-Facing Vehicle Installation

There are two methods for installing the car seat in your vehicle. **Use only one:**

Vehicle Belt



Lap/Shoulder
Belt

Lap Belt

OR

LATCH: Lower Anchor Belt



⚠ WARNING


DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.

Before installing the car seat:

- Check the child fit requirements on pages 11–13 and make any necessary adjustments to the harness height or buckle position. You can't make these adjustments while the seat is installed.
- Review your vehicle owner's manual to determine the type of vehicle belts in your car and how to use them to lock a car seat in place **OR** to locate the LATCH: lower anchor seating positions. See also Vehicle Belts on page 68 and LATCH: Lower Anchor Belt on page 72.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away.
- If you are using the lower anchor belt to install the seat, unpackage it from the shipping bag or remove it from the storage location if necessary (see LATCH: Lower Anchor Belt on page 72).
- Make sure the tether strap is properly stored away (see page 75).

14



1

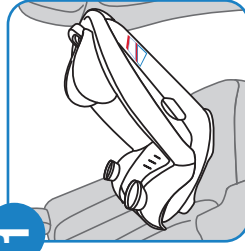

Place the car seat **Rear-Facing** in the back seat

When using the passenger or driver side locations, the car seat **MUST** be touching the back of the vehicle seat in front of it or be as close as possible.

2

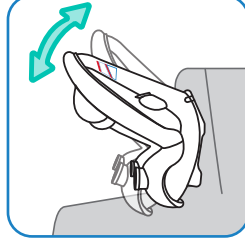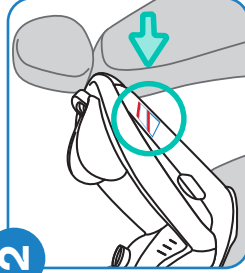

Check the **Rear-Facing Level Lines**

For children 5–30 lb (2.3–13.6 kg) and 19–34.3 in. (48–87 cm), the bottom level line on the car seat **MUST** be parallel with the ground.


For children 30–40 lb (13.7–18 kg) and 34.4–40 in. (87.1–101.6 cm) **AND** can sit up **unassisted**, the top level line on the car seat **MUST** be parallel with the ground.

Rotate the car seat up or down as needed until the appropriate level line for your child's weight and height is parallel with the ground.

continued on next page

15

3

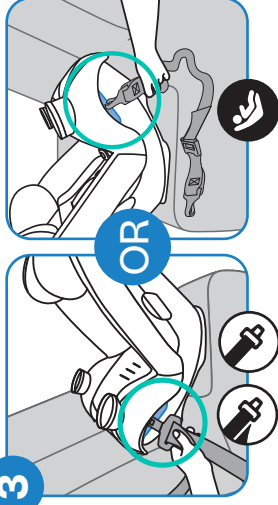

Locate the **Rear-Facing Belt Path** opening and begin routing the belt through the path

For the vehicle belt: Insert the vehicle belt into the **Rear-Facing Belt Path** opening.


For the lower anchor belt: Start with the entire lower anchor belt on the side where the belt is connected to the seat (the child's right). Insert one end of the lower anchor belt into the **Rear-Facing Belt Path** opening.

You may need to fully lengthen the lower anchor belt before routing it through the belt path. Squeeze the adjuster button and pull the belt out as shown.



16

4

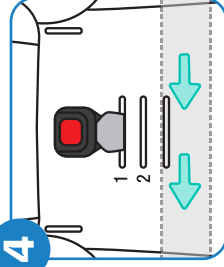


Finish routing the vehicle belt or lower anchor belt through the **Rear-Facing Belt Path**

Reach through the **Rear-Facing Belt Path** opening on the other side of the car seat to pull the belt completely through the path. Make sure the belt is positioned properly so that it goes:

- Under the car seat pad; **AND**
- Across the car seat; **AND**
- In front of the buckle; **AND**
- Out the other **Rear-Facing Belt Path** opening.

DO NOT twist the belt.

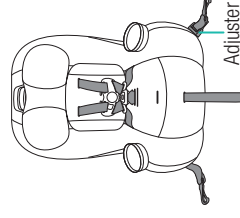


Finished Lower Anchor Belt Routing

Make sure there is a hook on both sides of the car seat. The lower anchor belt adjuster can be located on either side of the car seat.

continued on next page

17

5

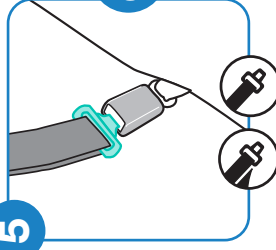

OR



Buckle the vehicle belt

If your vehicle belt has a switchable retractor, make sure it is in locking mode. Refer to page 70 or your vehicle owner's manual.


Attach the lower anchor hooks to the vehicle's lower anchors

The lower anchors are located in the crease (also known as the bight) of the vehicle seat.

Fasten one hook to the vehicle lower anchor bar on one side of the seat. Repeat with the second hook on the other side of the seat.

18

6

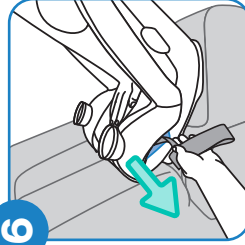


Tighten the belt

Place your hand in the car seat. Firmly push the car seat down and back towards the vehicle seatback while using your other hand to pull the belt towards you in line with the belt path.

If you are using a lap only vehicle belt or a lower anchor belt, it may be easier to tighten the belt by reaching into the belt path opening under the seat pad and pulling the free end of the belt towards you.

7

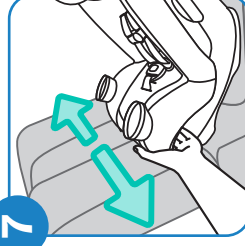

Check the belt tightness

Hold the car seat at the **Rear-Facing Belt Path** with your non-dominant hand. Push and pull the car seat from side to side. The car seat should not move more than 1 in. (2.5 cm).


If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat; **OR**
- Changing to a different seating location; **OR**
- Switching to a different install method (vehicle belt or lower anchor belt).

continued on next page

19


8

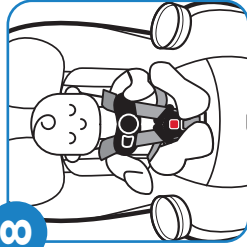

Secure your child in the car seat.

For complete details on properly securing your child in the car seat, including how to position the chest clip and check for harness tightness, see pages 35–38.


9

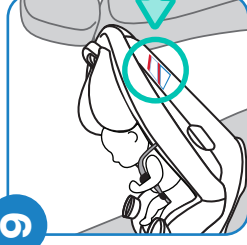


Recheck the Rear-Facing Level Lines

Check that the appropriate level line for your child's weight and height (see step 2) is parallel with the ground. Redo the installation if the car seat is not reclined correctly.

FINISHED!

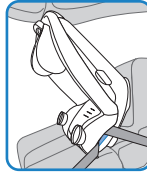

Lap/Shoulder Belt

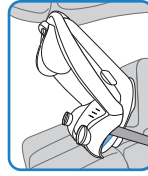

Lap Belt




LATCH: Lower Anchor Belt

When using the passenger or driver side locations, the car seat **MUST** be touching the back of the vehicle seat in front of it, or be as close as possible.

- If you used a vehicle belt, is it buckled and the switchable retractor locked? See step 5.
- If you used the lower anchor belt, are the hooks securely attached to the vehicle's lower anchors? See step 5.
- Is the belt tightened enough so that the car seat does not move more than 1 in. (2.5 cm) from side to side? See steps 6 and 7.
- Is the appropriate level line for your child parallel with the ground? See steps 2 and 9.

Check your child's fit often and make any adjustments to the car seat as they grow. Check the tightness of the installation often to make sure it has not loosened.

Forward-Facing Mode



30–65 lb (13.7–29.5 kg) and
34.4–49 in. (87.1–125 cm)

In this car seat, your child can use the harnesses **Forward-Facing** mode until they outgrow any one of the following:

- **Weight limit:** 65 lb (29.5 kg); **OR**
- **Height limit:** 49 in. (125 cm); **OR**

• **Forward-Facing Child**

Fit Requirements PAGE 23

Forward-Facing Vehicle Installation
PAGE 26

⚠ WARNING

DO NOT use the lower anchors of the child restraint anchorage system (LATCH system) to attach this child restraint when restraining a child weighing more than 55 lb (24.9 kg).

The vehicle belt **MUST** be used for installation if your child weighs more than 55 lb (24.9 kg).

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.

DO NOT use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the vehicle belt or the lower anchor belt before each use.

Use **ONLY** if the belt can be tightened properly and locked securely in place.

DO NOT fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.


Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

Before using this seat in Forward-Facing Mode, your child must have outgrown the seat in Rear-Facing Mode.

22

Forward-Facing Child Fit Requirements


1

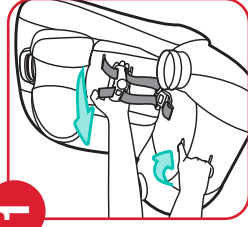

Fully loosen the harness straps

Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from the backrest.


2

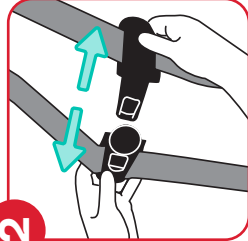

Unfasten the chest clip

While holding both sides of the chest clip, press the release button with your thumb and pull the chest clip apart.


3

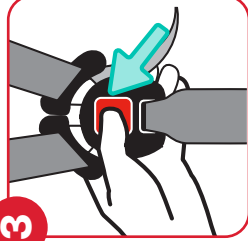

Unbuckle the harness

Press the red button to release the buckle tongues.

4

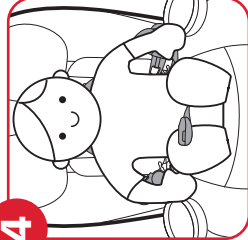


Place your child in the car seat




Your child's bottom and back should be flat against the car seat.

23

continued on next page

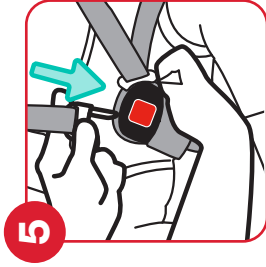

5

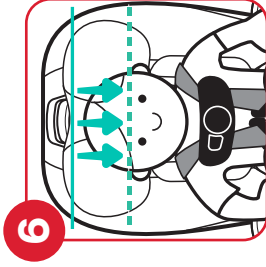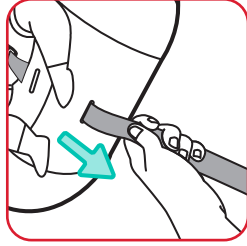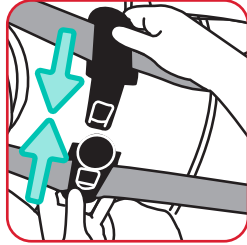

6

Buckle the harness and fasten the chest clip

Pull the harness adjustment strap straight out to snugly tighten the harness. Position the chest clip mid-chest (even with the armpits) and away from your child's neck.


See Securing Your Child in the Car Seat on page 35 for details on chest clip position and checking harness tightness.

Check the head position


The top of your child's ears **MUST** be **below** the top of the car seat's headrest.

To adjust the headrest, see page 41.

24

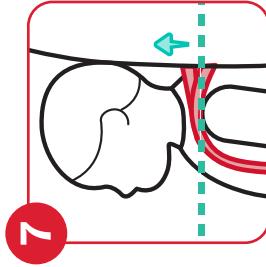

7

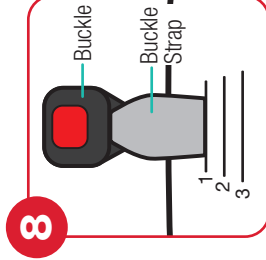

8

Check the harness strap position

The harness strap **MUST** be positioned at or slightly **above** the shoulders, never below.

To change the harness strap height, see page 42.

Check the buckle position

- Use the buckle slot closest to your child.
- The buckle strap **should not be underneath or behind** your child.
- The buckle can be used in **any** buckle slot in **Forward-Facing** mode.

To change the buckle position, see page 44.

25

Forward-Facing Vehicle Installation

There are two methods for installing the car seat in your vehicle. **Use only one:**

Vehicle Belt + Tether

For children up to 65 lb (29.5 kg).



OR

LATCH: Lower Anchor Belt + Tether

DO NOT install by this method for children weighing more than 55 lb (24.9 kg).



Before installing the car seat:

- Check the child fit requirements on pages 23–25 and make any necessary adjustments to the harness height or buckle position. You can't make these adjustments while the seat is installed.
- Review your vehicle owner's manual to determine the type of vehicle belts in your car and how to use them to lock a car seat in place **OR** to locate the LATCH: lower anchor seating positions. See also Vehicle Belts on page 68 and LATCH: Lower Anchor Belt on page 72.
- If you are using a vehicle belt to install the seat, make sure the lower anchor belt is stored away.
- If you are using the lower anchor belt to install the seat, remove it from the storage location if necessary (see LATCH: Lower Anchor Belt on page 72).


26

! WARNING

DO NOT use both the LATCH: lower anchor belt and vehicle belt at the same time to install the car seat.

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in the Forward-Facing Mode with internal harness.


1

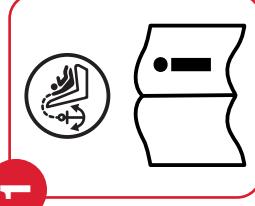

Locate the top tether anchors in your vehicle

Review your vehicle owner's manual for the top tether anchor locations and how to route the tether strap if there are vehicle headrests.

2

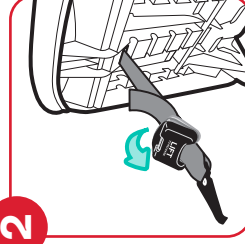


Lift the tether adjuster to loosen and lengthen the tether strap

Remove the tether hook from its storage location first if necessary (see page 75).

27

continued on next page

3

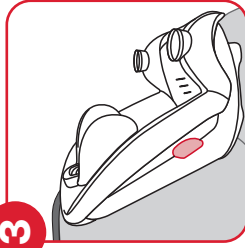

Place the car seat **Forward-Facing** in the back seat


Make sure the tether strap is accessible at the top of the seat.

The vehicle seatback **MUST** be in the upright position, but you can adjust the angle slightly to better match the angle of the car seat. Refer to the vehicle owner's manual for how to adjust the vehicle seatback.



If your vehicle has a headrest that interferes with a flush car seat fit, refer to your vehicle owner's manual to check whether it can be removed or adjusted, or if there are other seating locations to install the car seat.


4

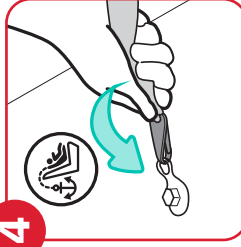

Loosely attach the tether hook to the vehicle's top tether anchor

See step 2 if you need to lengthen the strap to reach the anchor.

5

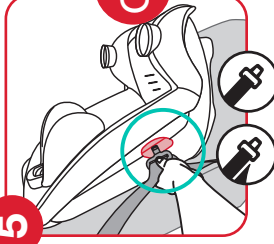

OR



Locate the **Forward-Facing Belt Path** opening and begin routing the belt through the path


For the vehicle belt: Insert the vehicle belt into the **Forward-Facing Belt Path** opening.

You may need to fully lengthen the lower anchor belt before routing it through the belt path. Squeeze the adjuster button and pull the belt out as shown.

For the lower anchor belt: Start with the entire lower anchor belt on the side where the belt is connected to the seat (the child's right). Insert one end of the lower anchor belt into the **Forward-Facing Belt Path** opening.



6

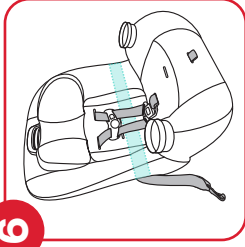


Finish routing the vehicle belt or lower anchor belt through the **Forward-Facing Belt Path**

Reach through the **Forward-Facing Belt Path** opening on the other side of the car seat to pull the belt completely through the path. Make sure the belt is positioned properly so that it goes:

- Under the car seat pad; **AND**
- Across the car seat; **AND**
- Out the other **Forward-Facing Belt Path** opening.

DO NOT twist the belt.


i

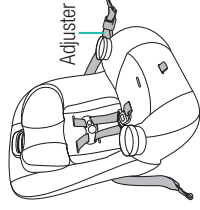

Finished Lower Anchor Belt Routing

Make sure there is a hook on both sides of the car seat. The lower anchor belt adjuster can be located on either side of the car seat.

7

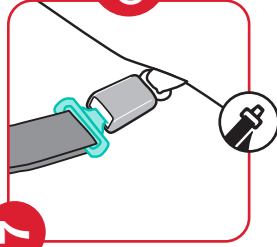

Buckle the vehicle belt

If your vehicle belt has a switchable retractor, make sure it is in locking mode. Refer to page 70 or your vehicle owner's manual.




Attach the lower anchor hooks to the vehicle's lower anchors

The lower anchors are located in the crease (also known as the bight) of the vehicle seat.

Fasten one hook to the vehicle lower anchor bar on one side of the seat. Repeat with the second hook on the other side of the seat.


8

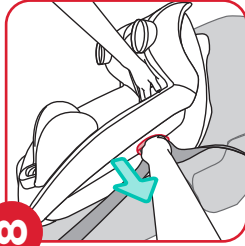

Tighten the belt


Place your hand in the car seat. Firmly push the car seat down and back towards the vehicle seatback while using your other hand to pull the belt towards you in line with the belt path.

a. If you are using a lap only vehicle belt or a lower anchor belt, pull the free end of the belt parallel with the belt path. It may be easier to reach into the belt path opening to access the free end of the belt.

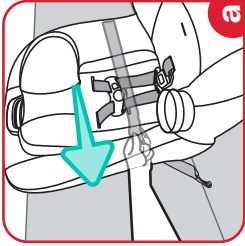

a

9

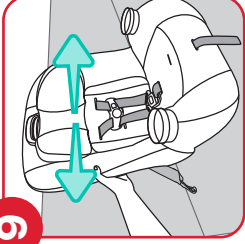

Check the belt tightness

Hold the car seat at the **Forward-Facing Belt Path** with your non-dominant hand. Push and pull the car seat from side to side. The car seat should not move more than 1 in. (2.5 cm).

If the car seat moves more than 1 in. (2.5 cm), you can try:

- Pulling the belt tighter; **OR**
- Reinstalling the car seat: **OR**
- Changing to a different seating location; **OR**
- Switching to a different install method (vehicle belt or lower anchor belt).

32


10



Tighten the tether

Push firmly on the back of the car seat and pull the free end of the tether strap to remove all the slack.

11

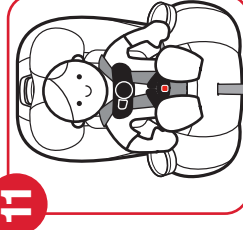

Secure your child in the car seat

For complete details on properly securing your child in the car seat, including how to position the chest clip and check for harness tightness, see pages 35–38.

33

continued on next page

FINISHED!



Lap/Shoulder Belt + Tether

For children up to 65 lb (29.5 kg).



Lap Belt + Tether

For children up to 65 lb (29.5 kg).



LATCH: Lower Anchor Belt + Tether

DO NOT install by this method for children weighing more than 55 lb (24.9 kg).

- If you used a vehicle belt, is it buckled and the switchable retractor locked? See step 7.
- If you used the lower anchor belt, are the hooks securely attached to the vehicle's lower anchors? See step 7.
- Is the belt tightened enough so that the car seat does not move more than 1 in. (2.5 cm) from side to side? See steps 8 and 9.
- Has the tether been installed and tightened? See steps 4 and 10.

Check your child's fit often and make any adjustments to the car seat as they grow. Check the tightness of the installation often to make sure it has not loosened.


34

Securing Your Child in the Car Seat

Follow the steps in this section to secure your child in both **Rear-Facing** and **Forward-Facing** modes, remove your child from the car seat, and troubleshoot any issues.

Refer to **Rear-Facing Child Fit Requirements** on page 11 and **Forward-Facing Child Fit Requirements** on page 23 to make sure your child fits the seat properly.


1

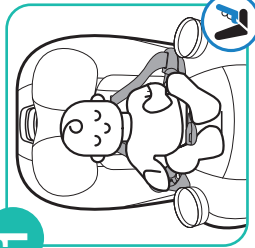

Place your child in the car seat

Your child's bottom and back should be flat against the car seat.


2

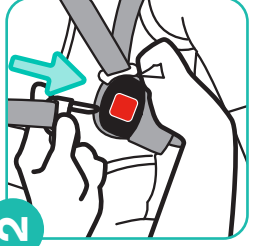

Buckle the harness

Push the buckle tongues into the buckle until they click. Pull the harness straps up to make sure the buckle is locked.

3

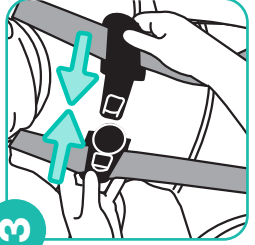


Fasten the chest clip

Insert the right half of the chest clip into the left half and snap together.

35


continued on next page

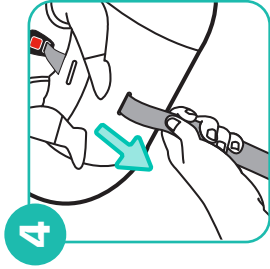

4

Tighten the harness



Pull the harness adjustment strap straight out to snugly tighten the harness.

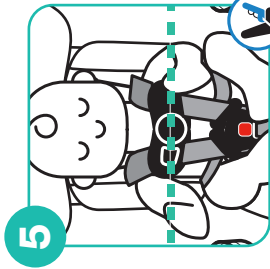

5

Position the chest clip


Slide the chest clip up the harness straps and position it at mid-chest (even with the armpits) and away from your child's neck.

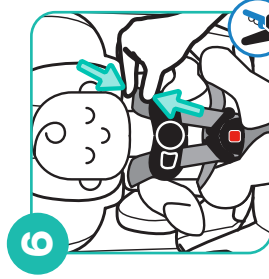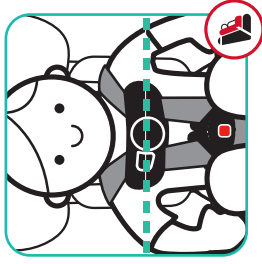

6

Check the harness tightness



Try to pinch the harness at the shoulders vertically between your index finger and thumb as shown. If your fingers slip off, the harness is tight enough. If you can pinch the harness strap, tighten it more (see step 4).

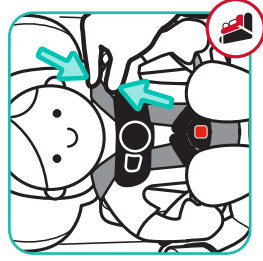

A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

If one side of the harness is tighter than the other, lengthen the tighter side by pulling up the harness near the hip slot.

FINISHED!

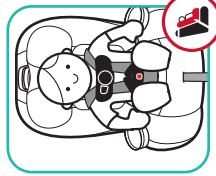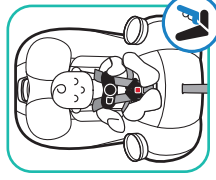

Your child is now secured in the car seat.

Check your child's fit often and make any needed adjustments to the car seat as they grow.

To remove your child from the car seat:

1. Loosen the harness straps. Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from your child.
2. Unfasten the chest clip. While holding both sides of the chest clip, press the release button with your thumb and pull the chest clip apart.
3. Unbuckle the harness. Press the red button to release the buckle tongues.
4. Remove your child.

Troubleshooting

- **If the buckle or harness release lever sticks: DO NOT LUBRICATE THEM.** Check for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean the buckle or harness release lever with warm water and remove any objects with tweezers. If you cannot adjust the harness to remain tight with the buckle securely locked, **DO NOT** use this car seat.
- **If the harness twists:** Straighten the harness each time you put your child in the car seat. When you remove your child, lock the buckle and tighten the harness so it will be ready for the next use.

⚠ WARNING

Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

DO NOT mistake comfort for safety. The harness system must be snugly adjusted.



DO NOT put snowsuits or bulky garments on your child when placing them in the child restraint.


Bulky clothing can prevent the harness straps from being tightened properly.

making adjustments to the car seat

Follow the steps in these sections when you need to adjust the car seat to better fit your child.


- 1 Adjusting the Headrest
- 2 Changing the Harness Height
- 3 Changing the Buckle Position
- 4 Adjusting the Harness System for Smaller Infants

Adjusting the Headrest

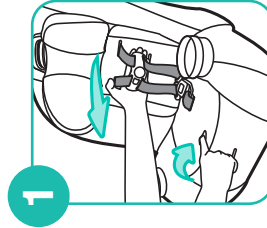


Fully loosen the harness straps

Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from the backrest.

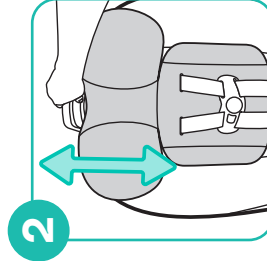

Squeeze the headrest adjustment handle

Move the headrest up or down to the proper height for your child. You may also need to adjust the harness straps to achieve the desired headrest height (see page 42).

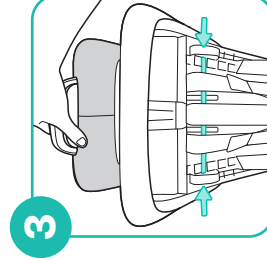

Release the handle to lock the headrest at the chosen height

Turn the seat around to check that the horizontal bar is securely locked into position.



The headrest **MUST** be at the lowest position if you have adjusted the car seat for a smaller infant.


For **Rear-Facing Child Fit Requirements**, see page 11.
For **Forward-Facing Child Fit Requirements**, see page 23.

Changing the Harness Height

WARNING

The harness system **MUST** be installed correctly. **DO NOT** use a child restraint with damaged harness straps.


1

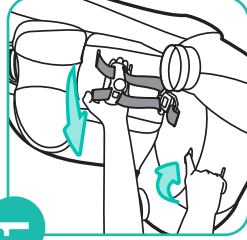

Fully loosen the harness straps

Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from the backrest.

2

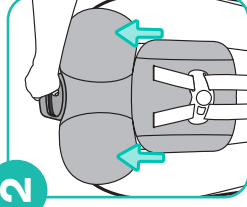


Adjust the harness height

Move the headrest up or down to adjust the harness to the proper height for your child. See page 41 for additional details on adjusting the headrest.

42

3

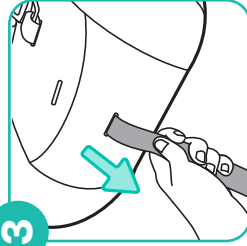

Tighten the harness adjustment strap

Turn the car seat over and pull the harness adjustment strap straight out to tighten the harness. Slide the chest clip up or down as needed.

i

For **Rear-Facing Child Fit Requirements**, see page 11.

For **Forward-Facing Child Fit Requirements**, see page 23.

To check harness tightness, see pages 35–38.

If you cannot achieve a snug harness fit for your child, see Adjusting the Harness System for Smaller Infants on pages 48–53.


Check the harness straps often for any wear or damage.

43

Changing the Buckle Position

⚠ WARNING


Failure to place buckle's metal retainer completely through pad and child restraint can result in serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

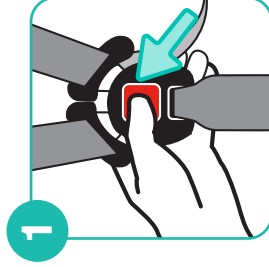

1

Unbuckle the harness

Press the red button to release the buckle tongues.

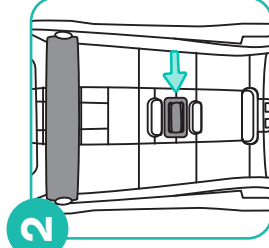


2

Turn the car seat over

Locate the buckle's metal retainer on the bottom of the car seat.




If the buckle had been adjusted for a smaller infant, the metal retainer will not be visible from the bottom of the seat. From the top of the seat, push the metal retainer down through the middle slot (pull the front of the car seat pad up for easier access). You'll then be able to access the metal retainer from the bottom of the seat. Be sure to tuck the seat pad back in when finished.

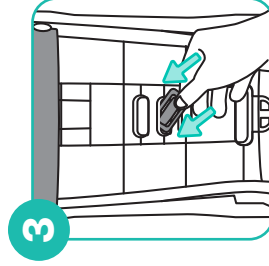

3

Rotate the metal retainer and push it through the slot


Push the metal retainer through the slot in both the car seat and the seat pad.

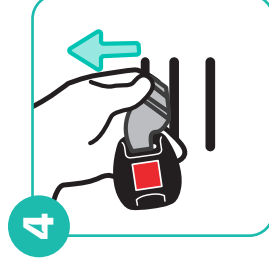

4


Pull the buckle out

From the top of the car seat, pull the buckle out

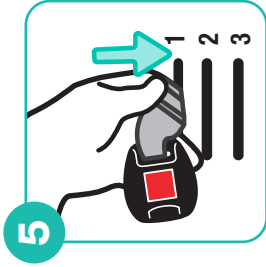



Insert the metal retainer into the slot closest to the child

The buckle **MUST** face out. The buckle strap should not be underneath or behind your child. For **Rear-Facing Mode**: You **MUST** use the first or second buckle slots closest to the back of the seat. For **Forward-Facing Mode**: You can use any of the three slots.

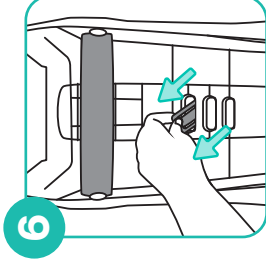

Pull the metal retainer through the slot

Turn the car seat over and pull the metal retainer completely through the slot in both the seat pad and the car seat. Rotate the metal retainer into position.

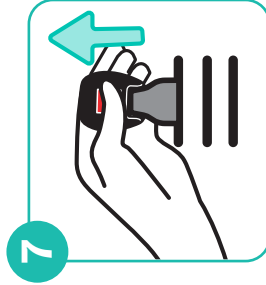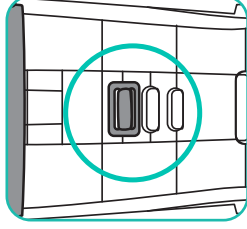

Check the buckle

Pull up on the buckle to make sure it is secured. The buckle **MUST NOT** pull out.



For **Rear-Facing Child Fit Requirements**, see page 11.

For **Forward-Facing Child Fit Requirements**, see page 23.

To check harness tightness, see pages 35–38.

If you cannot achieve a snug harness fit for your child, see Adjusting the Harness System for Smaller Infants on pages 48–53.

Adjusting the Harness System for Smaller Infants

Adjusting the Buckle for Smaller Infants




If you cannot achieve a snug harness fit for your infant, you may need to adjust the buckle strap position and/or the harness strap length and location as shown in this section.

WARNING

The harness system **MUST** be installed correctly. **DO NOT** use a child restraint with damaged harness straps.


1

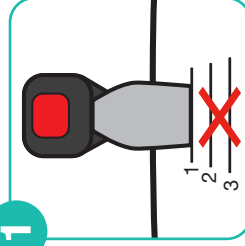

Make sure the buckle is in the first slot

To move the buckle to the first slot, see page 44.


2

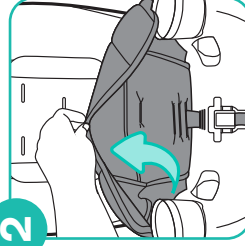

Pull the front of the car seat pad up

Pull the seat pad over the cup holders for easier access to the buckle slots.


3

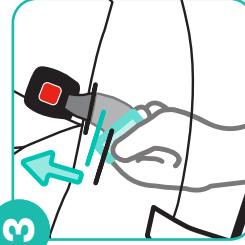

Reach under the car seat to move the metal retainer

While keeping the buckle in the first slot, reach under the car seat and pull the buckle's metal retainer down and away from the first slot. Push the metal retainer up into the middle slot from below the car seat as shown.

4

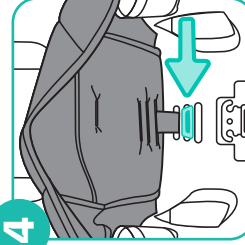

From the top of the car seat, lay the metal retainer flat against the car seat

The buckle strap should still be in the first slot while the metal retainer is flat against the car seat in the second slot as shown.

5



Tuck the car seat pad around the front of the car seat and check the buckle


Pull up on the buckle to make sure it is secured. The buckle **MUST NOT** pull out.

Adjusting the Harness Straps for Smaller Infants



When using the lower shoulder harness slots for smaller children, the headrest **MUST** be in the lowest position as shown in this section.


1

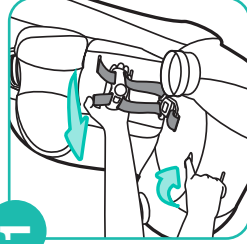

Fully loosen the harness straps

Push down on the harness release lever (through the opening in the seat pad) while pulling the harness straps away from the backrest.


2

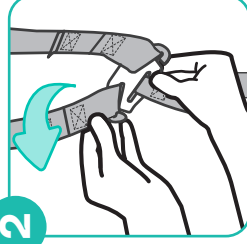

Remove both harness strap loops from the splitter plate

Turn the car seat over to access the splitter plate.


3

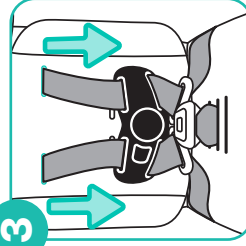

Pull the harness straps out of the shoulder harness slots

Turn the car seat over and back around to the front to remove the harness straps from the shoulder slots.


4

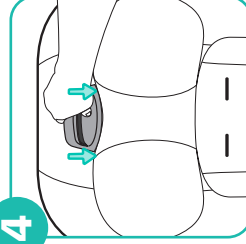

Adjust the headrest to the lowest position

Squeeze the handle to move the headrest to the lowest position.


5

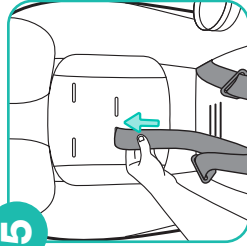

Rethread the harness straps into the lower shoulder slots

DO NOT twist the harness straps as you insert them into the lower shoulder slots.

6

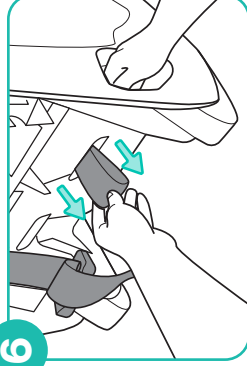


Pull the harness straps through the seat pad and car seat

Reach into the **Forward-Facing Belt Path** with one hand to pull the strap through the seat pad and then use the other hand to pull the strap from the lower shoulder slot in the rear of the car seat.

Repeat with the other strap.

52


7

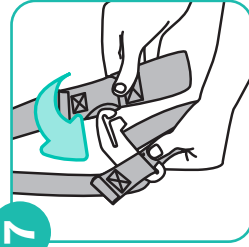

Attach the second harness strap loops to the splitter plate


The sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist the harness straps or the harness adjustment strap.

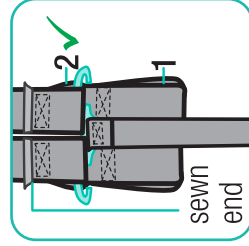

Make sure the same upper harness strap loops (labeled "2" above) are fitted completely on both sides of the splitter plate. **DO NOT** use the lower loops (labeled "1" above) for smaller infants.

8

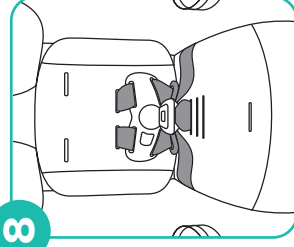

Check the finished harness system

On the bottom of the car seat, the harness system straps **MUST** lie under the horizontal portion of the harness strap as shown.

53

wash and care

Use the following sections to help
you clean and care for your car seat.

- 1 Removing the Harness System
- 2 Removing the Seat Pad Set for Cleaning
- 3 Cleaning the Seat Pad Set
and Parts of the Car Seat
- 4 Installing the Harness
System and Seat Pad Set

Removing the Harness System


i

You **MUST** remove the harness system
before you can remove the seat pad set for
cleaning. Only remove the harness system
to clean the seat pad.

WARNING


DO NOT use the child restraint without the
seat pad or with damaged harness straps.

1

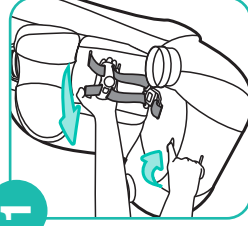


Fully loosen the harness straps.
Push down on the harness release
lever (through the opening in the
seat pad) while pulling the harness
straps away from the backrest.

2

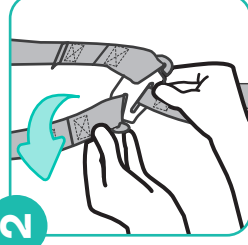


From the back of the car seat,
remove both harness strap
loops from the splitter plate.


continued on next page

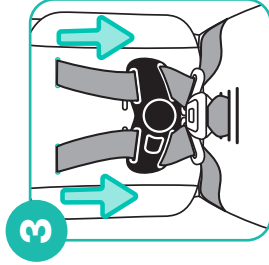


Pull the harness straps out of the shoulder harness slots

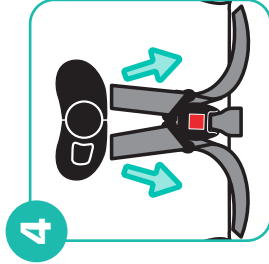


Unthread the harness straps from both sides of the chest clip.

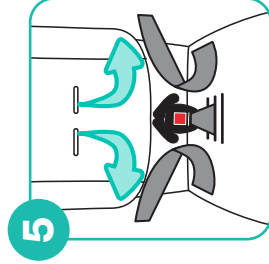


Unthread the harness straps from both buckle tongues.
DO NOT unbuckle them.

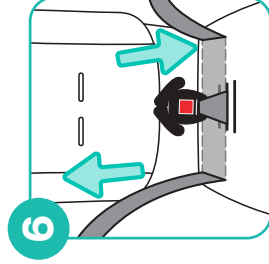


Pull the harness strap out of the car seat.

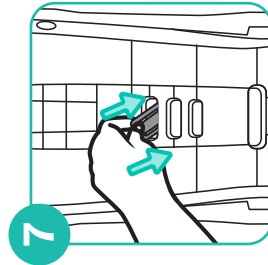

Turn the car seat over. Rotate the metal retainer and push it through the slot in both the car seat and the seat pad.

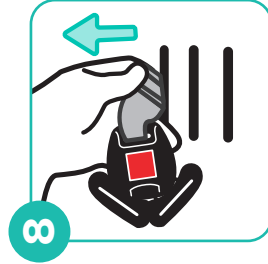

From the top of the car seat, pull the buckle out.

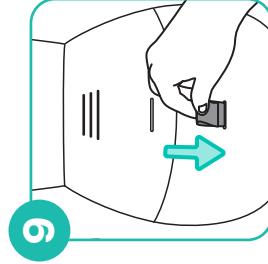

Push the harness adjustment strap through the slot in seat pad, but **DO NOT** remove it from the seat. See the next section for how to remove the seat pad.


i If the buckle had been adjusted for a smaller infant, the metal retainer will not be visible from the bottom of the seat. From the top of the seat, push the metal retainer down through the middle slot (pull the front of the seat pad up for easier access). You'll then be able to access the metal retainer from the bottom of the seat.

Removing the Seat Pad Set for Cleaning




You **MUST** remove the harness system before you can remove the seat pad set for cleaning. See page 55.

1

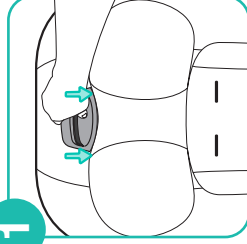

Move the headrest to the middle of the car seat (see Adjusting the Headrest on page 41).

2

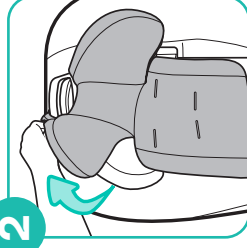


Gently pull the headrest pad off from one side of the headrest and then lift it off the other.

58


Cleaning the Seat Pad Set and Parts of the Car Seat

3

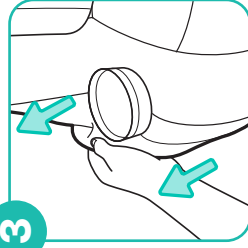

Lift the seat pad off from the sides by the cup holders.

4

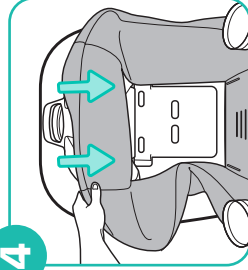

Pull the seat pad off from the top of the car seat and gently remove it.

To clean the seat pad set:

Machine wash separately with cold water on gentle cycle. **DO NOT** use bleach. Tumble dry separately for 10–12 minutes on low heat. Remove immediately.

To clean the harness straps:

Check the harness straps often for wear or damage. Spot clean using warm sudsy water and a damp cloth. Spilled food and liquids on the car seat may result in mold or bacterial growth over time. These spills could also attract insects or rodents.

To clean the buckle and the car seat:

Spot clean using warm sudsy water and a damp cloth. **DO NOT** submerge into water.


59

Installing the Harness System and Seat Pad Set


⚠ WARNING

The harness system **MUST** be installed correctly. **DO NOT** use the child restraint without the seat pad or with damaged harness straps.

1

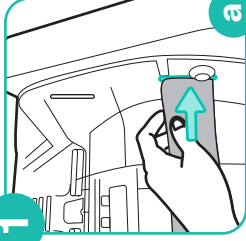

a

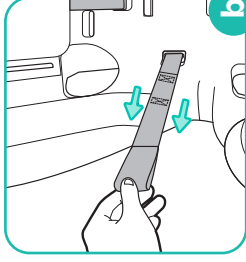

b


a. Turn the car seat over. Hold the harness strap with the sewn end facing down. Insert the harness strap through the side slot at the bottom of the car seat.

b. From the front of the car seat, pull the harness strap through the hip slot. Leave enough of the harness strap beneath the seat to use with the other hip slot. Make sure the sewn end is facing in as shown.

c. Repeat these steps with the other hip slot.


60

2

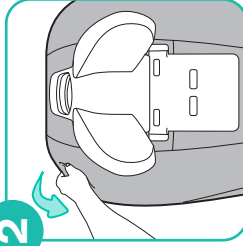


Pull the seat pad over the top and sides of the car seat, but not over the cup holders yet.

3

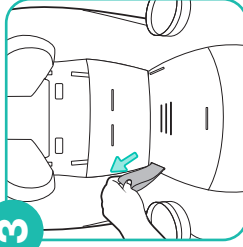


Pull the harness strap that is extending from one of the hip slots in the car seat through the corresponding hip slot in the seat pad. Repeat with the harness strap in the other hip slot.

4

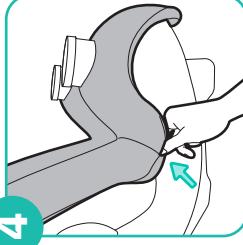

Pull the seat pad around the cup holders, making sure it is tucked around the bottom of both sides of the car seat.


5

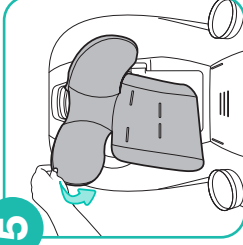

Pull the headrest pad over the headrest.


61

continued on next page

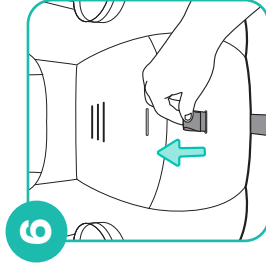

6

Pull the harness adjustment strap through the slot in the bottom of the seat pad.

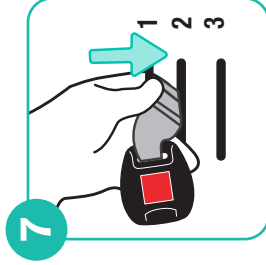


7

Insert the metal retainer into the slot closest to the child. The buckle **MUST** face out.


For Rear-Facing Mode: You **MUST** use the first or second buckle slots closest to the back of the seat.

For Forward-Facing Mode: You can use any of the three slots.

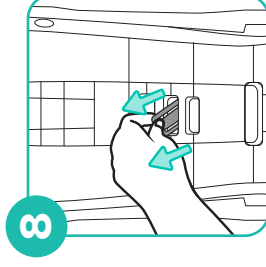


8

Turn the car seat over and pull the metal retainer completely through the slot in both the seat pad and car seat. Rotate the metal retainer into position.

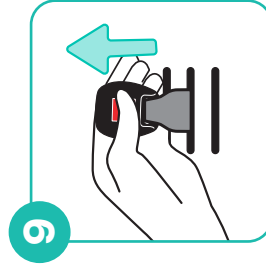


9

Turn the car seat back over. Pull up on the buckle to make sure it is secured. The buckle **MUST NOT** pull out.

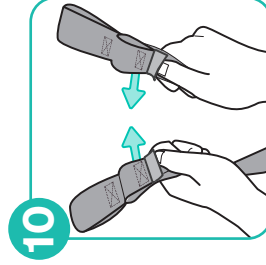


10

Make sure the straps are even in length. The sewn ends of the harness strap loops **MUST** face each other when you hold them up. Pull the shorter side of the strap up if needed until both harness straps are the same length.

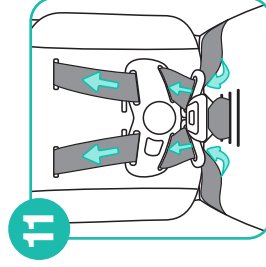

11


Rethread the harness straps through the buckle and chest clip. The harness strap ends go through the back of the buckle tongues and then through the chest clip from front to back.

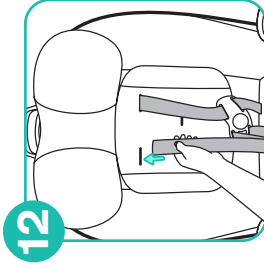

12

Thread the harness straps into the correct shoulder slots for your child.


DO NOT twist the harness straps as you insert them into the shoulder slots.

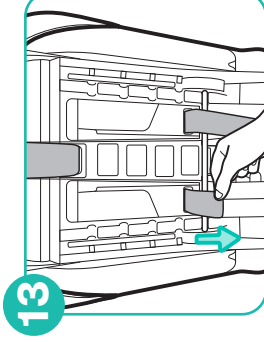

13

From the back of the car seat, pull the harness straps through the seat pad and car seat.

DO NOT twist the harness straps. Make sure the straps are positioned over the horizontal bar.


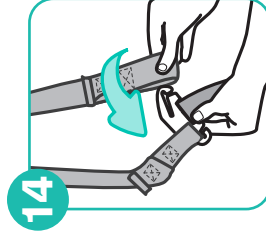


14

Attach the first harness strap loops to the splitter plate. The sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist the harness straps or the harness adjustment strap.

Make sure the same lower harness strap loops (labeled "1" above) are fitted

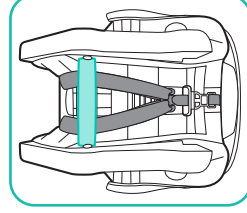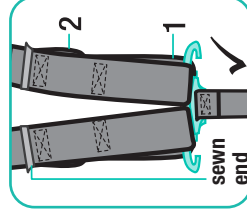

15

completely on both sides of the splitter plate. The loops labeled "2" are for smaller infants only (see page 48).

On the bottom of the car seat, the harness system straps **MUST** lie under the horizontal portion of the harness strap as shown.

Turn the seat over and pull the harness adjustment strap straight out to tighten the harness system.




For **Rear-Facing Child Fit Requirements**, see page 11.

For **Forward-Facing Child Fit Requirements**, see page 23.

To check harness tightness, see pages 35–38.

If you cannot achieve a snug harness fit for your child, see Adjusting the Harness System for Smaller Infants on pages 48–53.

⚠ WARNING

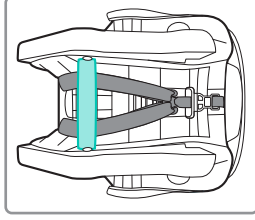

Failure to place harness adjustment strap behind the harness strap as shown can result in serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

DO NOT use a child restraint with damaged harness straps.

Vehicle Belt, LATCH Belt, & Tether Strap Information


Refer to the following sections for information about the belts and straps used to install your car seat.

1 Vehicle Belts

2 LATCH: Lower Anchor Belt

3 Tether Strap

Vehicle Belts

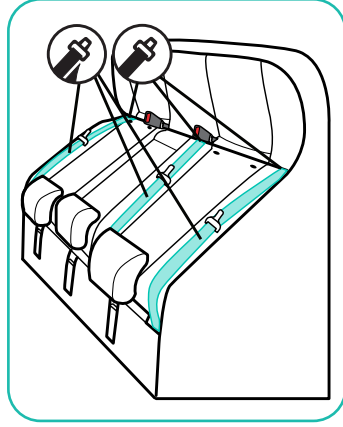

Your vehicle's features may be considerably different than those pictured here.

**WARNING**

DO NOT use both the lower anchor belt and vehicle belt at the same time.

If LATCH: lower anchors are not an option or if your child weighs more than 55 lb (24.9 kg), you **MUST** use the vehicle seat belt system to install the car seat.

Not all vehicle belts and seating positions will work with car seats. Follow the steps in this section to learn how to lock a car seat in [Rear-Facing Mode](#) or [Forward-Facing Mode](#) with a vehicle belt.



You **MUST** review your vehicle owner's manual


Review your vehicle owner's manual to determine the type of vehicle belts in your car and the seating positions available for installing a car seat.



Check how this car seat can be locked into place with the vehicle belt

The vehicle belt **MUST NOT** loosen after tightening it. This requires locking it by using either:

- The vehicle belt's retractor (see step 3) **OR**
- The vehicle belt's latch plate (see step 4)


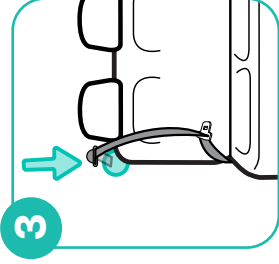


Check the retractor on your vehicle belts

Retractors pull vehicle belts into stored positions and lock the belt to hold passengers in place. The following retractors will work with this car seat:

- **Switchable retractor (most vehicles have this type).**

This retractor can be manually switched to a locking mode. Your retractor **MUST** be in this locking mode to use the vehicle belt with this car seat.

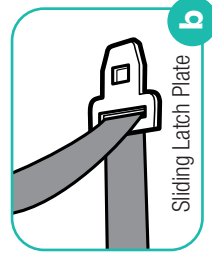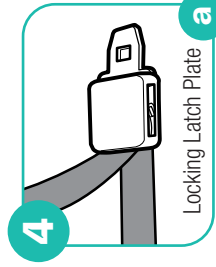

Check the latch plates on your vehicle belts

Latch plates are the part of the vehicle belt that goes into the buckle.

To check if the latch plate locks:

1. Buckle the vehicle belt.
2. Slowly pull up on the lap portion of the vehicle belt.
 - a. If the vehicle belt does not slide through the latch plate, it's locked. You can use the locking latch plate with this car seat.

To switch to locking mode:

1. Slowly pull the shoulder belt all the way out and then let it go back into the retractor 1–2 in. (2.5–5 cm).
2. As it retracts, you will likely hear a ratcheting sound.
3. Gently pull the belt to see if it has locked. You will not be able to pull any more of the belt out once the lock has engaged.

- **Automatic locking retractor.** This retractor always locks. It will automatically lock after slowly pulling the shoulder belt out at least halfway and letting it go back into the retractor 1–2 in. (2.5–5 cm).

Emergency locking retractor

If the retractor does not lock, it is likely an emergency locking retractor. This retractor only locks during a sudden stop or collision. Continue to step 4 to determine if your vehicle belt's latch plate can lock the belt.




NEVER use the following with this car seat:

- Emergency locking retractor lap-only belt
- Inflatable seat belts

- b. If the vehicle belt slides through the latch plate, it is a sliding latch plate. Sliding latch plates easily slip between the lap and shoulder portions of the belt.

If you have an emergency locking retractor with a sliding latch plate, you MUST use a locking clip.
Please contact us for a locking clip; see the back cover.

LATCH: Lower Anchor Belt

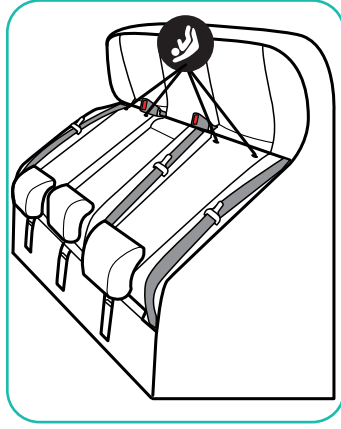



Your vehicle's features may be considerably different than those pictured here.

WARNING

DO NOT use both the lower anchor belt and vehicle belt at the same time.



The lower anchors of **LATCH** (Lower Anchors and Tethers for **CH**ildren) is a universal system for installing car seats without using vehicle seat belts. The LATCH: lower anchor belt can **ONLY** be used in vehicles that have the lower anchor bars installed in designated seating positions. Most vehicles manufactured after September 2022 are equipped with LATCH: lower anchor bars. Check your vehicle owner's manual to see which seating positions may be equipped with LATCH: lower anchor bars.

Removing the Lower Anchor Belt from the Storage Location

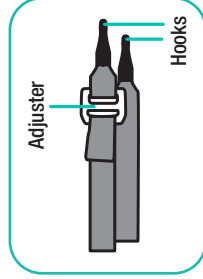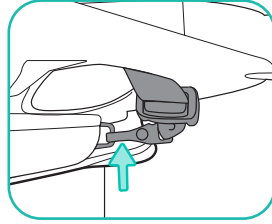

Squeeze the spring lever on the hook and remove it from the storage attachment next to the **Forward-Facing Belt Path**. Repeat with the hook on the other side of the car seat. Reach into the **Forward-Facing Belt Path** to pull the lower anchor belt out for use.


Removing the Lower Anchor Belt from the Vehicle's Lower Anchor Bars

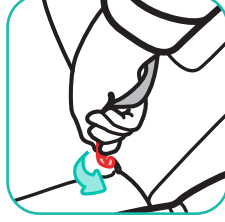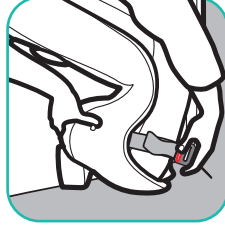

Remove the tension from the belt by pushing down on the side of the car seat with the adjuster. Press the adjuster's button to loosen the belt.

Squeeze the spring lever on the hooks, push the hooks back into the vehicle seat, and rotate the hooks to the side. Pull the hooks out of the vehicle seat.

Storing the Lower Anchor Belt

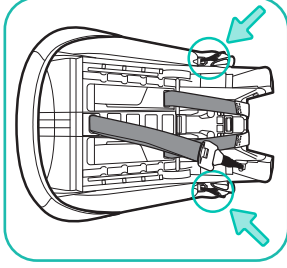


The lower anchor belt **MUST** be properly stored in its location when:

- Using the vehicle belts to install the car seat **OR**
- The car seat is not installed in a vehicle.

To store the lower anchor belt, route the belt through the **Forward-Facing Belt Path**. Secure the hooks to the storage attachments on both sides of the car seat as shown. Gently tighten the belt to remove slack.

74

Tether Strap

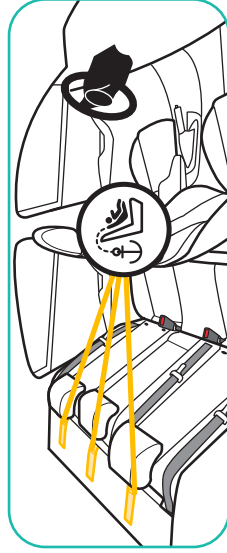


Your vehicle's features may be considerably different than those pictured here.

When anchors are available, you **MUST ALWAYS** attach, adjust, and secure the tether (top anchorage) strap when installing the car seat in **Forward-Facing Mode** with the internal harness. Tethers improve the installation and stability of car seats and reduce the risk of injury. Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information. If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic to have one installed.

⚠ WARNING

Using this child restraint without the tether strap anchored as required by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could result in serious injury or death. Serious injury can include paralysis and/or permanent brain injury.

DO NOT fasten multiple tether hooks on the same tether anchor in the vehicle.

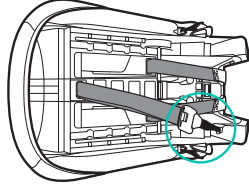

Storing the Tether Strap

The tether strap **MUST** be properly stored in its storage location when:

- Installing the car seat in **Rear-Facing Mode** **OR**
- The car seat is not installed in a vehicle.

Attach the tether hook to its storage location as shown. Use the tether strap adjuster to gently tighten the tether strap and remove any slack.

75



Safety Information

Review the following sections to learn about car seat safety and other important information.

- 
- 1 Child Restraint Use
 - 2 Vehicle Seating Position
 - 3 Installation in Vehicle
 - 4 Replacement and Expiration
 - 5 Registration and Safety Notices
 - 6 Aircraft Information
 - 7 Warranty

Child Restraint Use

WARNING

NEVER take your child out of the child restraint while the vehicle is moving.

NEVER leave your child unattended.

Placing your child in a hot child restraint may result in burns.

DO NOT use a child restraint with damaged or missing parts.

DO NOT use a child restraint with cut, frayed, or damaged harnesses.

DO NOT substitute parts or try to modify the child restraint in any way. **DO NOT** lubricate buckles and fasteners.

DO NOT use any child restraint accessory except those approved by Dorel Juvenile Group.

NEVER allow any child to play with this child restraint; it is not a toy.

DO NOT remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. **DO NOT** use in a boat, on a motorcycle, or in a cargo van or bus where there are no seat belts or tether anchors.

Read all instructions for additional warnings.

Vehicle Seating Position

⚠ WARNING

NEVER place a child rear-facing in a seating position with an active frontal air bag.



Check the vehicle owner's manual for more information about air bag/child restraint use.

Use the child restraint only on vehicle seats that face forward.



DO NOT use on seats that face the sides or rear of the vehicle.



For vehicles without a back seat, refer to your vehicle owner's manual.



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

Rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the car seat in your vehicle:

- Consult your vehicle owner's manual; **OR**
- Contact Dorel Juvenile Group Consumer Care Department; **OR**
- Visit your local Child Passenger Inspection Station. Go to <https://www.nhtsa.gov/vehicle-safety/car-seats-and-boosters> to find your closest station.

Installation in Vehicle

To avoid your child being seriously burned, take the following precautions:

- Park in the shade or where the sun does not directly hit the car seat.
- Cover the car seat with a sheet or blanket when not in use.
- Check for hot seat and buckles before placing child in car seat.

To help protect your vehicle seat's upholstery from damage: You may use an accessory approved by Dorel Juvenile Group or a single layer towel underneath and behind car seat.

⚠ WARNING

Check the vehicle belt or lower anchor belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Even when unoccupied, this child restraint **MUST** be firmly secured to the vehicle with the lower anchor belt or with the vehicle seat belt.

In a crash or sudden stop, an unsecured child restraint could injure occupants.

Replacement and Expiration

DO NOT risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash, even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL of the following MUST be true:**

- Vehicle able to drive away from the crash site; **AND**
- Vehicle door nearest the car seat was not damaged; **AND**
- No passengers were injured; **AND**
- Airbags did not deploy; **AND**
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **MUST** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat **MUST** be replaced immediately.

Expiration



On the side of the car seat there is a date of manufacture label as shown. **DO NOT** use this car seat more than 10 years after the date of manufacture.

Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us.

Child restraints could be recalled for safety reasons.

You must register this restraint to be reached in a recall.

Send your name, address, email address if available, and the restraint's model number and manufacturing date to:

Dorel Juvenile Group

P.O. Box 2609

Columbus, IN 47202

or call 1-800-544-1108 or register online at

www.djgusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to www.NHTSA.gov.

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the car seat.

4346-00010
Tear Off and Mail This Part or Register Online
Consumer: Just fill in your name, address and email. Please print (use dark ink).

Your Name
Your Street Address
City State Zip Code
Email Address (optional)

Model Number
AB123CDE

Model Name
Brand-Car Seat

Manufacture Date
2024/05/16

#11 B26503

Aircraft Information

This restraint is certified for aircraft use when used with the internal harness.



Rear-Facing Aircraft Installation

Follow the vehicle belt install steps on pages 14–20.




Forward-Facing Aircraft Installation

Follow the vehicle belt install steps on pages 26–33, skipping the tether strap steps.

Install the car seat in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward-facing aircraft seats. Contact the airline for their specific policies.

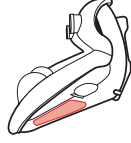

Some airlines may ask to see a label stating that this car seat is certified for aircraft use. There is an airplane certification label located on the side of this car seat as shown.

⚠ WARNING

You **MUST** store the lower anchor belt and tether strap when installing with aircraft belts.

82

Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty, please contact our Consumer Care Department by phone: 1-800-544-1108 or text:

1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights: Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

83