



# HADDIE GLASS MINI PENDANT ASSEMBLY/INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

## CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

## GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## TOOLS REQUIRED

Phillips Screwdriver

## ASSEMBLY AND INSTALLATION


NOTE: This fixture is suitable for mounting on Sloped Ceiling (sloped Angle  $\leq 90^\circ$ ).

- Carefully pull the wires through the STEM(s) into the FIXTURE CANOPY.
- Thread PIPE NIPPLE(s) into STEM(s) as shown. Attach as many of the STEMS as desired to make the suitable height. This fixture includes (2) 6" STEMS and (2) 12" STEMS which can make 6 adjustable lengths (including fixture): 16", 22", 28", 34", 40" and 46".
- Attach the first STEM to SWIVEL located at bottom of FIXTURE CANOPY.
- Attach the last STEM to FIXTURE SOCKET ASSEMBLY and carefully pull excess wires through FIXTURE CANOPY.
- Using (2) JUNCTION BOX SCREWS, securely fasten the CROSSBAR to the JUNCTION BOX.
- MAKE WIRE CONNECTIONS: Position the fixture under the Junction Box(not included). Connect the SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE with a wire nut and then secure it to the CROSSBAR with GREEN GROUND SCREW. Using wire Connectors, connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE(or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Make sure that there are no exposed wires and wrap all connections with approved electrical tape.
- Fit the heads of the FIXTURE SCREWS through keyhole in FIXTURE CANOPY. Thread (2) LOCKING BALLS onto the ends of FIXTURE SCREWS. Hand tighten to secure fixture to ceiling. Be sure that there are no trapped or pinched wires.
- Locate GLASS SHADE and pass over the SOCKET. Thread SOCKET COLLAR onto end of the SOCKET. Hand tighten until snug.
- Install the LIGHT BULB (not included).
- Caution:** Risk of Fire, Use 1 x 60W MAX Medium base bulb or energy saving equivalent. DO NOT exceed the maximum wattage.
- Turn on the power at the main fuse or circuit breaker box.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.**

Customer Service:  
262-518-1877

Figure 1.

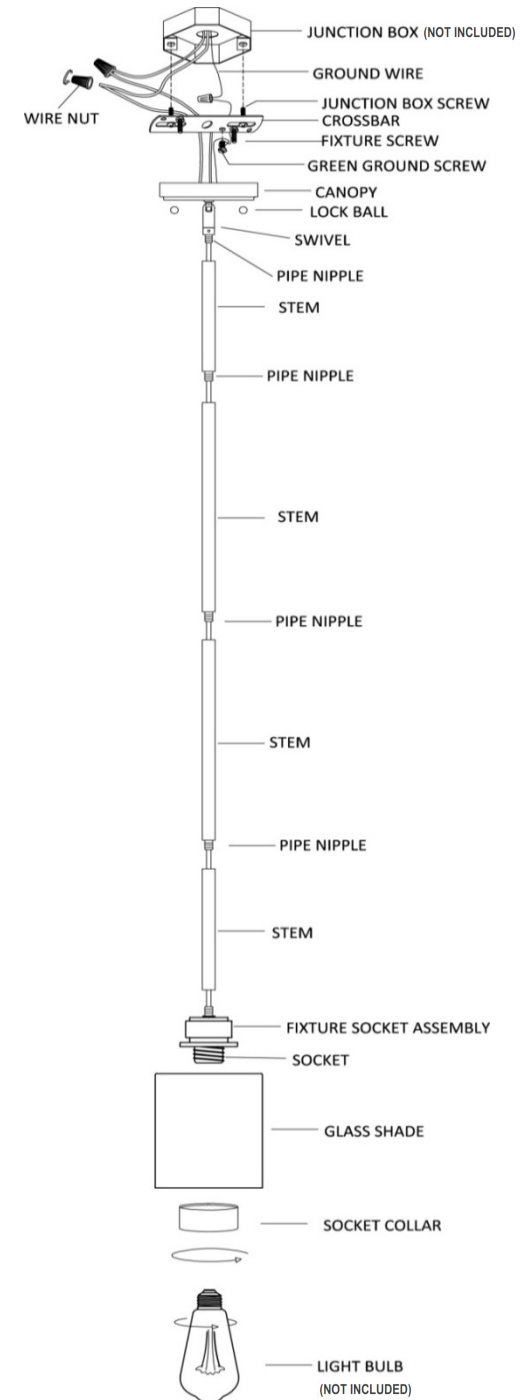

#588467-BLK-CG  
#588467-BLK-FG #588467-SN-FG