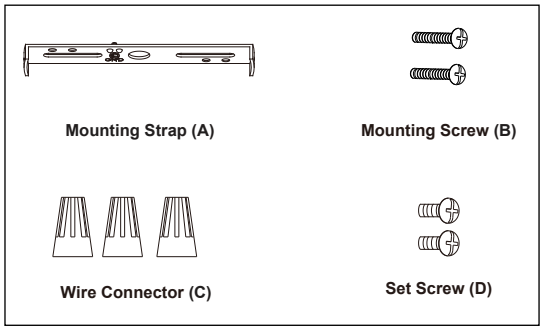
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0387

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.

Hardware Package(included):




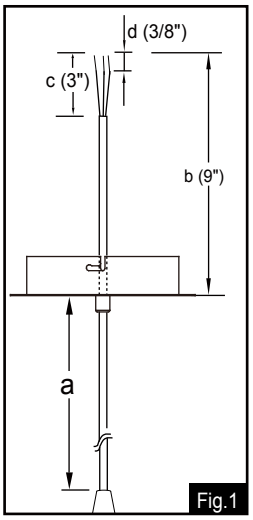


Fig.1

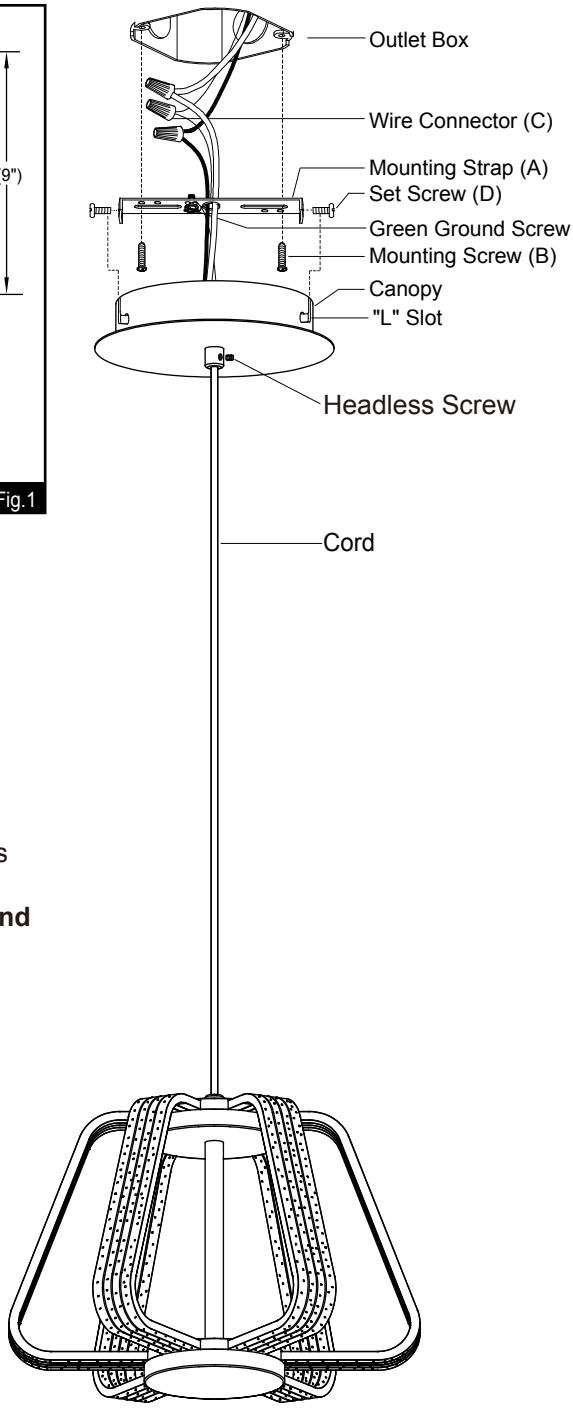

Installation Steps

Turn off the power at fuse or circuit box.

1. Measure the desired length of the cord (a) from the canopy to the top side of the cover and leave an additional 9" of cord (b) above the canopy (include the canopy), then cut off the unnecessary cord. (See Fig.1)

2. Adjust strain relief at 9" position from the top of the cord.

3. Mark the 3" of cord (c) from the top of the cord (b). Use a knife to peel off the insulation of the cord (c) carefully to expose the 3 wires inside. (See Fig.1)
   Caution: Cutting too deep may cut off the three inside wires and destroy the insulation surface of the three inside wires.

4. Peel off the 3 wires from the top about 3/8" long (d) to expose the copper for wiring.

5. Adjust desired length of cord by pulling the cord through canopy, tighten headless screw with slotted screwdriver (not included), fold excess cord and fasten it using the cable tie (not included), then put them into canopy.

6. Attach the set screws (D) to the hole on the mounting strap (A), thread them in part way: 4 to 5 turns only.
   Attach the mounting strap (A) to the outlet box by using two mounting screws (B).

7. Connect fixture black wire to house black wire and fixture white wire to house white wire using wire connectors (C) provided. Connect the copper wire or green/yellow wire on the light fixture to the mounting strap (A) by securing it with the preinstalled green ground screw, then connect it to the house ground wire with wire connector (C).
   Tuck all the wires into outlet box.


VAXCEL
220725


8. Attach the canopy to the mounting strap (A) by inserting set screws into "L" slots of the canopy, rotate the canopy until it is locked in place and then tighten two set screws (D).

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

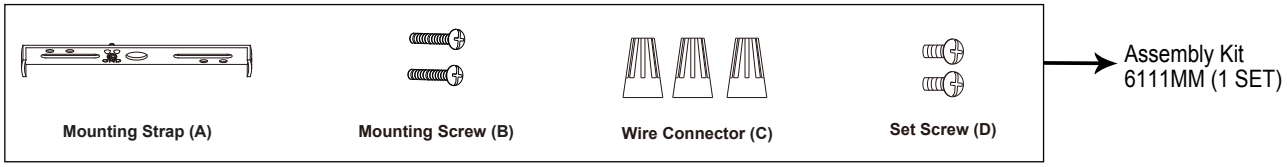

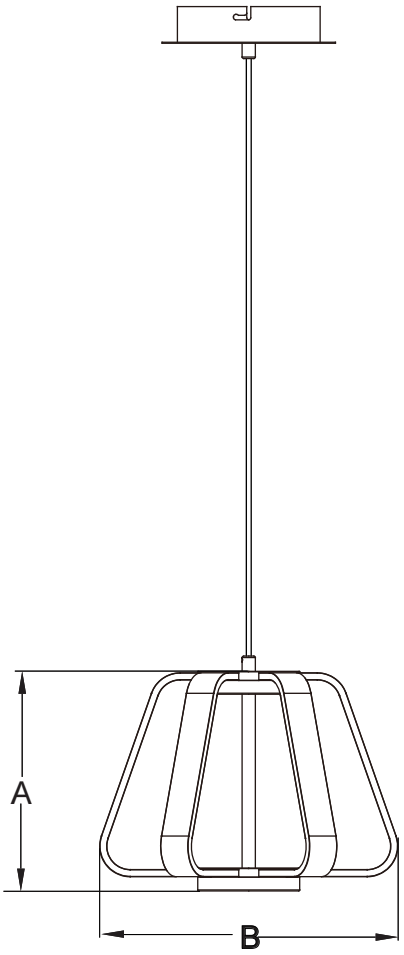

A: 34-1/2"

B: 11-1/2"

VAXCEL

220725