
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

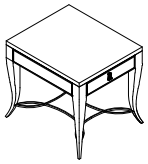

929-915

TOOLS REQUIRED:

Allen key (supplied, part # F)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Remove the drawer from the inner frame. (see Figure 2).

2. Attach 4 legs to the iron frame. (see Figure 2).

3. Carefully lay table top upside down on a flat, soft surface. Attach the legs to the inner frame by using flat washers (D), lock washers (C), and bolt (A).Tighten with Allen key (F). (see Figure 3).

Figure 1

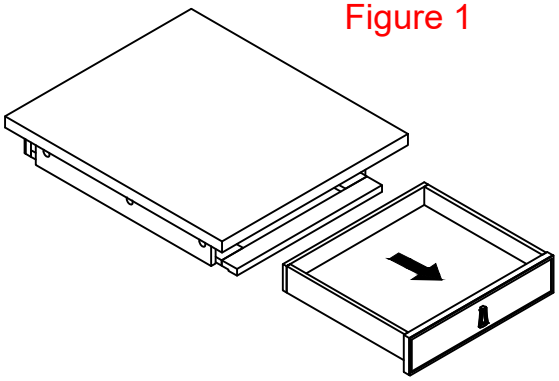


Figure 2


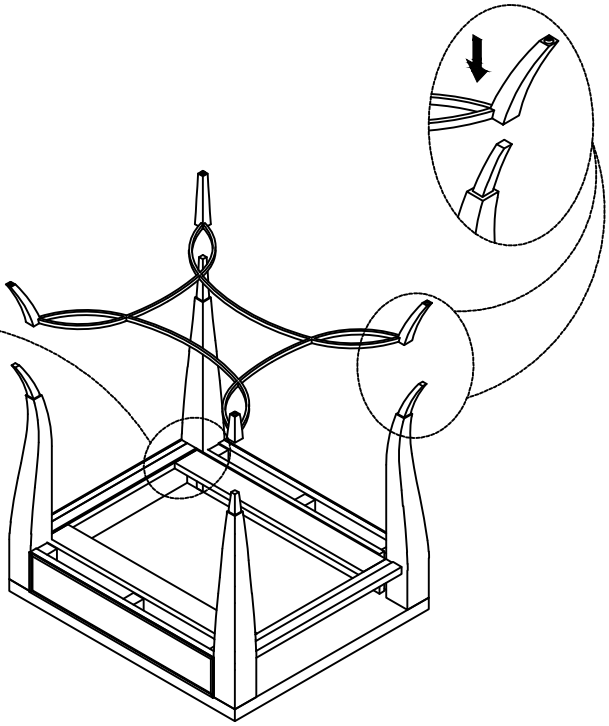


Figure 3

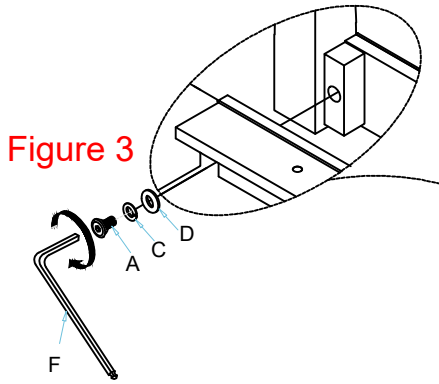


No.		Hardware List	Q'ty
A		Bolt Ø5/16 x L1-1/4"	6
B		Bolt Ø5/16 x L5/8"	8
C		Lock Washer Ø5/16"	14
D		Flat Washer Ø5/16"	14
E		Nail decoration Ø3 x L15mm	8
F		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!

a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

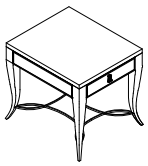

929-915

TOOLS REQUIRED:

Allen key (supplied, part # F)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

4. Attach the dust shield to the inner frame by using the Flat Washers (D), Lock Washer (C) and bolts (A). With Allen key (F). (see Figure 4).

5. Use Nails decoration (E) to fix between iron frame and legs. (see Figure 5).

6. Attach the drawer to the inner frame. (see Figure 5).

Figure 4


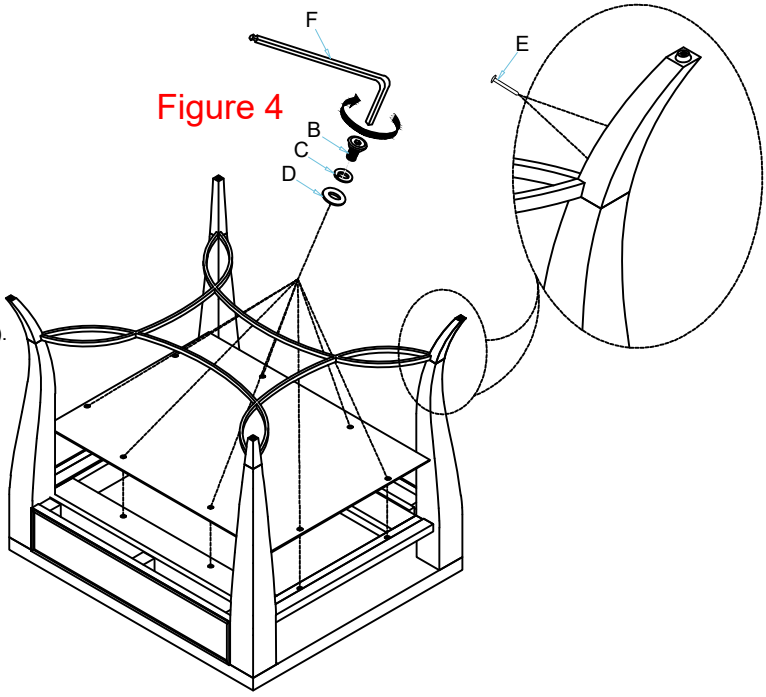


Figure 5

Figure 6

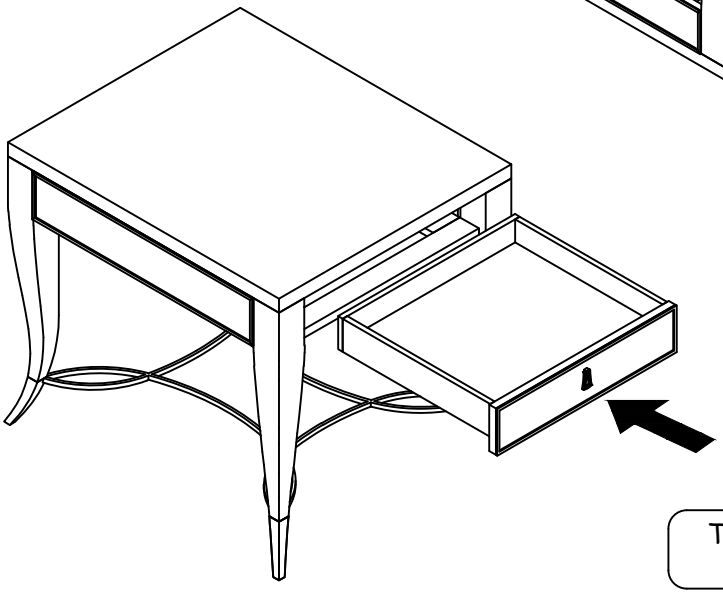

Thank you for purchasing furniture from american drew!