
Important :

Before you begin Installation please read the following instructions, observe all local plumbing and building codes.

- Check area where tub will be installed to ensure that it is leveled and structurally sound.
- Please unwrap the tub and check it carefully for any damage that may have occurred during transportation.
- Check that all parts are included.
- If you have any missing parts, damage is found or have any questions regarding the installation process contact customer service at (877)-252-7277.
- Store bathtub in a safe place until you begin installation to avoid damage to the tub's surface.
- No claims for damages or blemishes will be accepted once the tub has been installed.
- We recommend that the installation of this tub be done by a qualified licensed professional.
- Because of its weight and volume we recommend that the installation of this tub be done with the help of at least one other person, a fall even what may seem like a minor one may result in cracking of the tub, moving straps and rubber gripped gloves are recommended.
- These Installation instructions do not include details of waste connections, the final details should be determined by your contractor

KINGSTON

AQUA EDEN

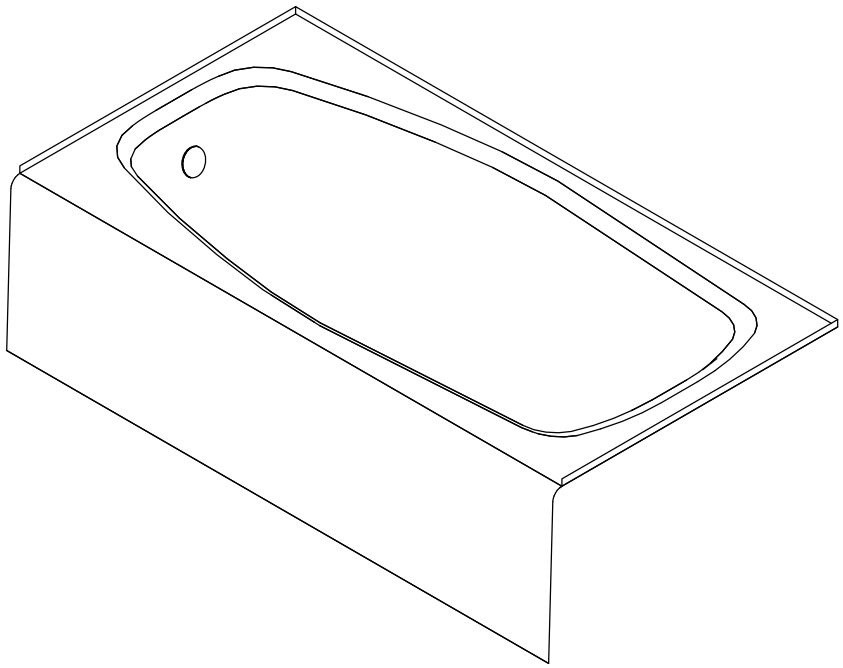

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks which may result in water damage



⚠WARNING

Lifting hazard.

Single person lift could cause injury.
Use assistance when moving or lifting.

KINGSTON


AQUA EDEN

Alcove Tub with or without Drain
Installation Instructions


Important points to remember before beginning installation :

1. Verify that floor is structurally sound and level, floor must be able to support the full load of the tub including water to the overflow level.
2. Provide access to all plumbing connections.
3. Observe all local building and plumbing codes.

Tools Required

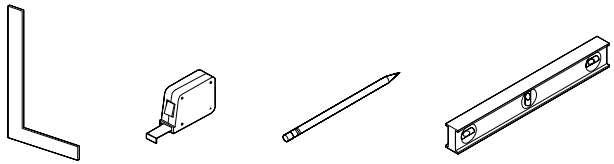


Conventional Woodworking Tools & Materials




100% Silicone Sealant

1

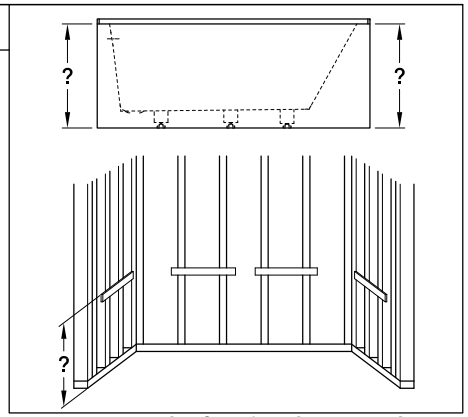


1. Prepare area by framing the area where the tub will be installed, measure the distance from the floor to the bottom of the tub lip, using that measurement attach a 1" x 4" piece of lumber on the walls where the tub will be secured.

2

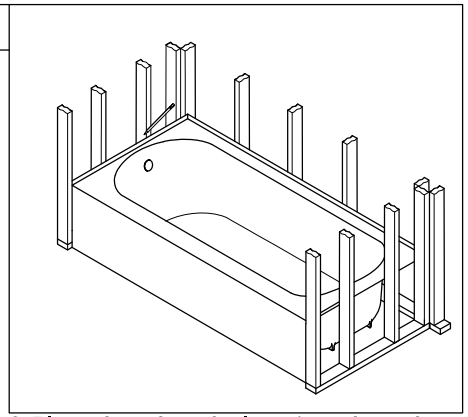


2. Place the tub at the location where the tub will be installed, level tub on all sides, deck should be level or have a slight slope towards the tub, it might be necessary to adjust the 1" x 4" lumber supports to insure proper deck drainage, mark the location of the drain and the wall studs on the tile flange.

3

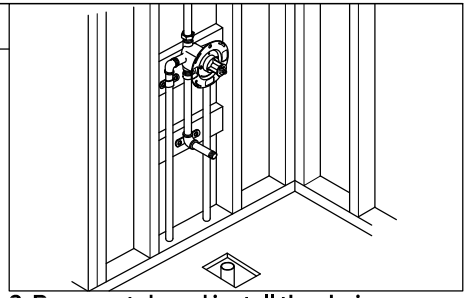


3. Remove tub and install the drain, predrill holes on tile flange at the marked location of the studs.

4

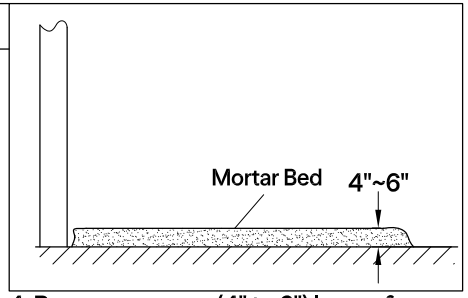


4. Pour a generous, (4" to 6") layer of mortar mix cement to the area where your tub basin will be sitting, please note that due to the tubs slope, it is necessary to apply a thicker layer on the side opposite the drain, make sure to cover the drain to prevent any mortar from falling inside, leave the area where the feet will be resting free of mortar as well.

5

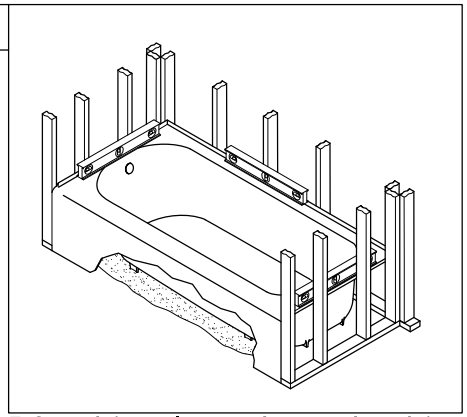


5. Set tub into place, make sure the tub is level, make sure that the mortar bed is in contact with the entire tub basin.

6

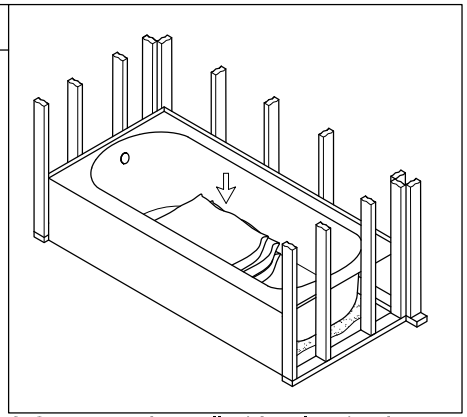


6. Secure to the wall with galvanized screws at the predrilled screw location, apply weight to the middle of the tub until the mortar sets.

7

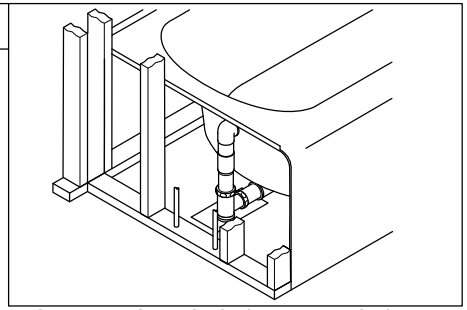

7. Connect the tub drain to your drain system.

8

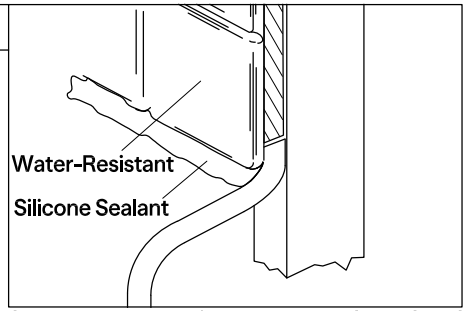

8. Install water resistant gypsum board and finish surface material (tile, stone) and seal all edges with silicone caulking to prevent water damage.

©2025 LVC Kingston LLC. All Rights Reserved.
2026-05-TL


Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.

KINGSTON

Brass Tub Bath Drain

Installation Instructions

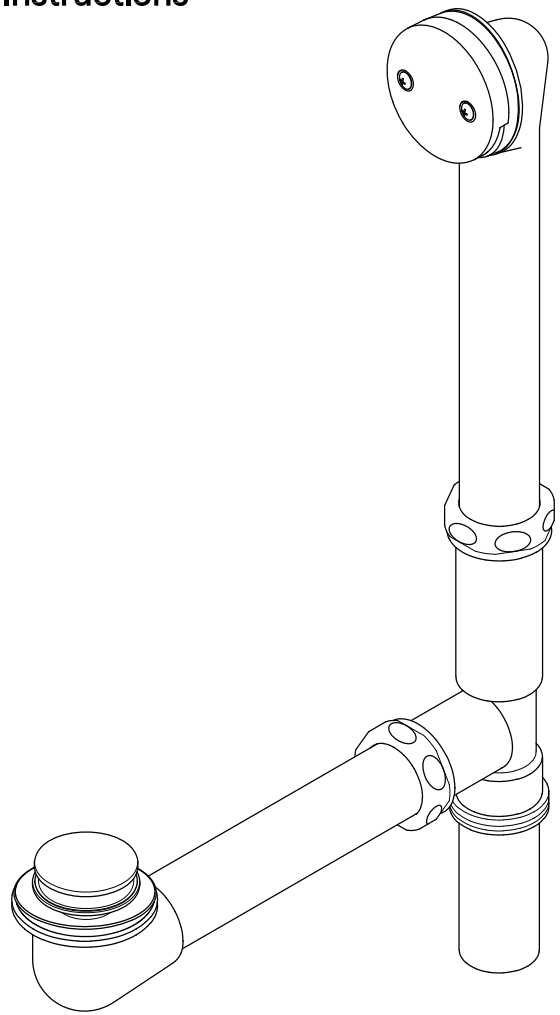

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

Tools Required




Note:

1. Observe all local plumbing and building codes.
2. Inspect waste and supply tubing; replace if necessary.
3. If you are installing a new bath, install the drain before installing the bath.
   Refer to the manufacturer's installation instructions.
4. The brass tube on (4) or (9) is glued on its elbow and can be trimmed to fit the tub.
   Don't try to disassemble the brass tube from elbow, or it will cause water leakage.

Installation Instructions:

1. Place rubber washer (10) onto waste tube (9) and set them under the tub.
2. Apply Teflon tape on strainer thread and a bead of silicone sealant under waste strainer (11) and thread into waste tube (9). Wipe off excess sealant.
3. Place rubber gasket (3) on over flow elbow, hold to the back of the tub at the overflow opening, and screw in cover plate (2).
4. Slip joint nuts (5) and Washers (6) onto overflow tube (4) and waste tube (9).
5. Apply Teflon tape to the two threads on three way tee (7) and the thread on drain tube (8) .
6. Slip tee onto both the waste tube (9) and overflow tube (4), adjust to desired location and tighten slip joint nuts.
7. Thread on drain tube (8) and make the necessary connection to your drain system.
8. Fill tub with water, sufficient to cover the overflow cover plate (2), check for leaks and retighten any connections as necessary.

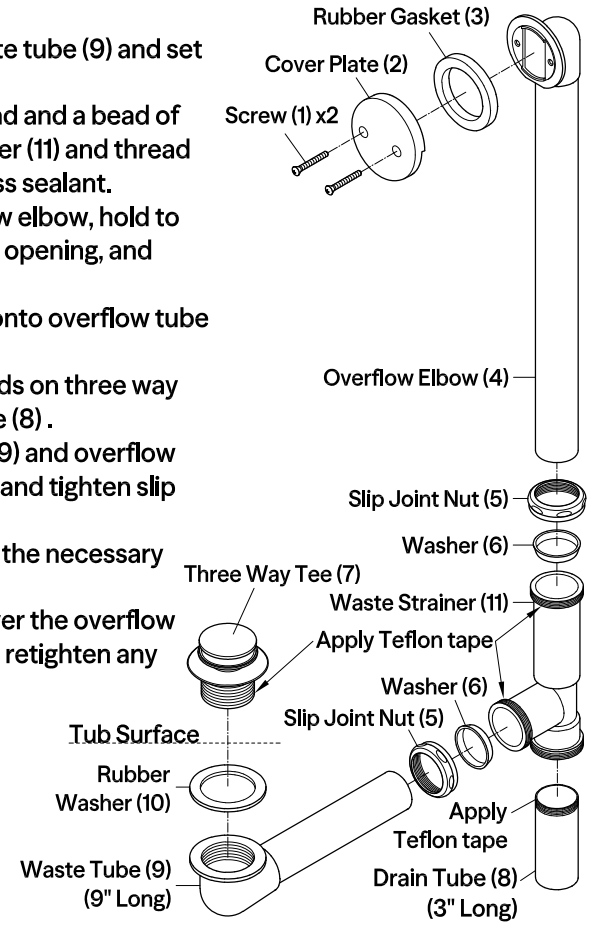

©2025 LVC Kingston LLC. All Rights Reserved.

2025-05-D