STEP 6
Install faucet on the sink, make sure to pre-install any supply lines behind the back of the sink.


STEP 7
Place sink at the desired location, making sure that the “Z” brackets are aligned with the wall brackets, slide down, gently test sink by lightly pulling on it to make sure that the sink is properly installed.

STEP 8
Apply a small bead of silicone based caulking, clean excess caulking.

©2025 LVC Kingston LLC. All Rights Reserved.
2026-04-T

KINGSTON

GOURMETIER

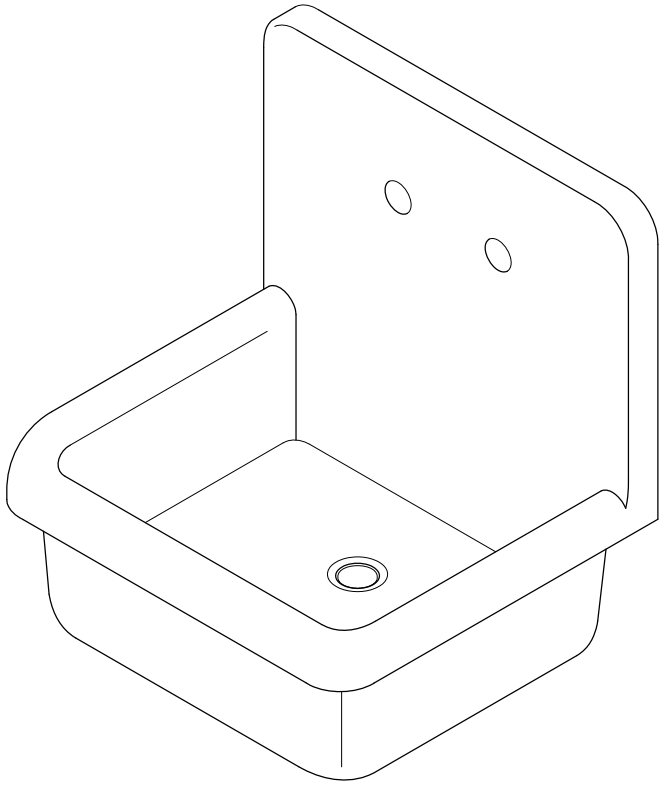

⚠CAUTION

Failure to follow all installation directions may cause product to detach from the wall and cause serious injury

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710



⚠WARNING

Lifting hazard.

Single person lift could cause injury.
Use assistance when moving or lifting.

KINGSTON

GOURMETIER

Top-Mount Sink
Installation Instructions

Before installation :


This sink is designed to be installed supported by a countertop, not to be installed as a wall hung sink.

Do not make any alterations to your cabinet or top until you have the actual sink on hand.
Determine the type of installation desired, you may install it as a drop-in or as an apron sink application.

For Drop-in Installation :


Carefully measure the perimeter of the sink under the rim, as well as the distance from the bottom of the sink to below the rim.

Build a support structure using 2" x 4" lumber, being careful to allow enough space for the drain assembly to be installed.

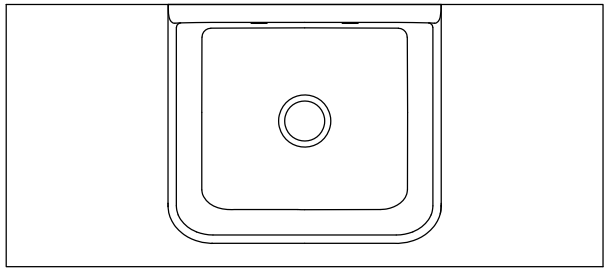


Installation Step :

STEP 1
Place sink at the location where it will be installed, using a pencil draw a very light line at the top perimeter of the sink, as well as the bottom of the sink.

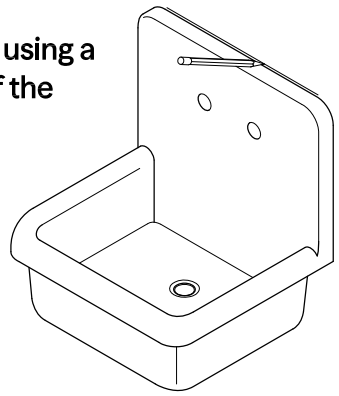

Tools Required

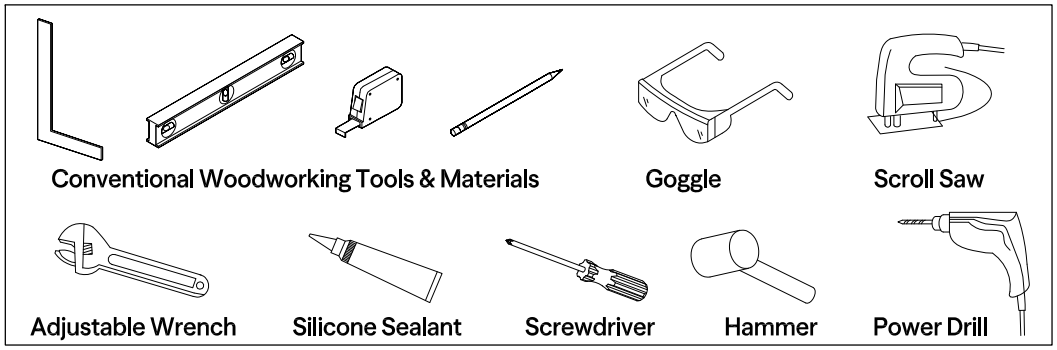

STEP 2
Draw a horizontal line 2-3/16" (55mm) below the top of the sink.

STEP 3
Find the wall support bracket template and alignment center line, make sure to use the appropriate distance for your type of sink.

STEP 4
Mark the location of the wall support bracket on the template, then drill holes at the marked locations, Insert anchors into the holes with a hammer until flush with the wall.

STEP 5
Screw the wall support bracket to the wall with the mounting screws and attach the wall brackets.

