KINGSTON

Pin Mount Swivel Shower Connector

Installation Instructions

Installation Step:

1. Thread the hand shower onto the IPS female thread hole, make sure there is a rubber washer inside the hole.
2. Thread the shower hose onto the IPS male thread, make sure there is a rubber washer inside the hose adapter.
3. Hang it on a pin wall bracket.
   Loosen and tighten up the slotted head screw to adjust the angle of hand shower as desired.

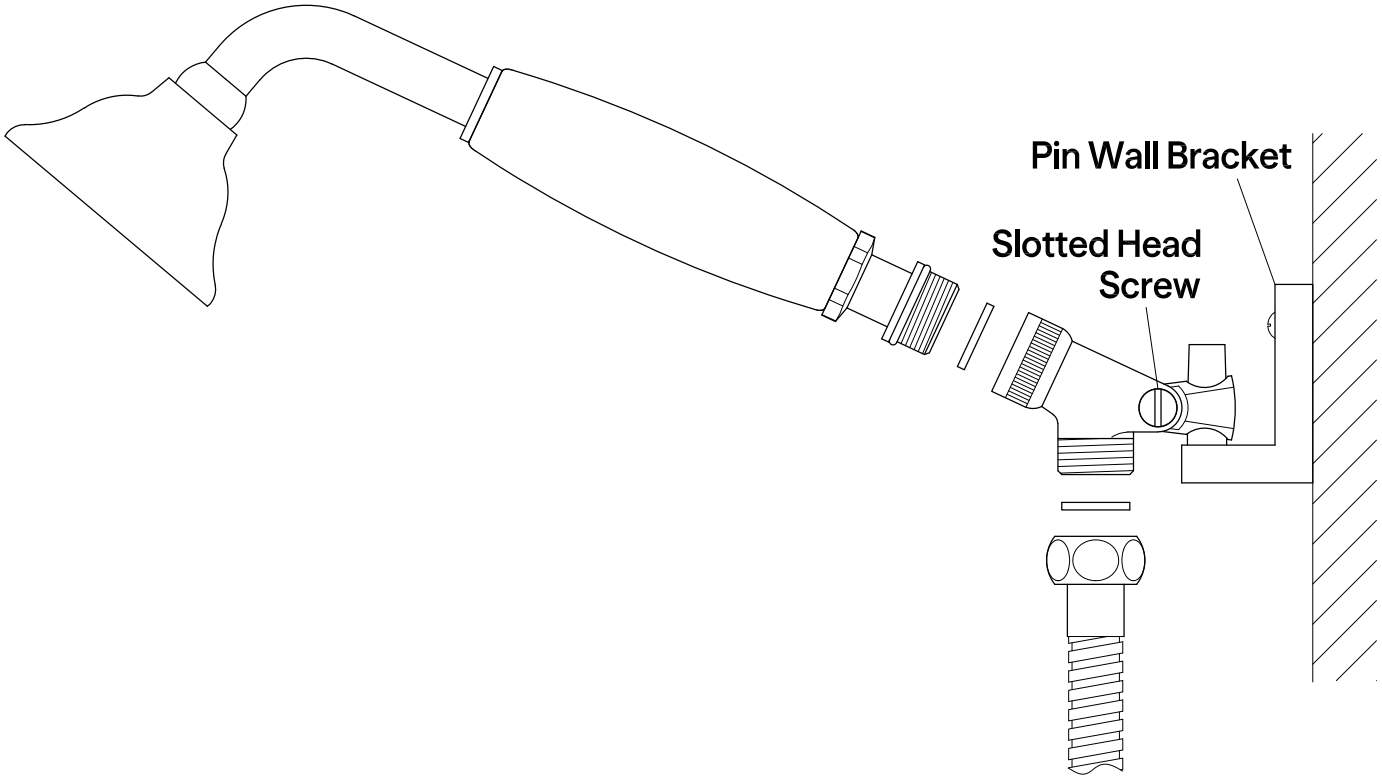

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

©2025 LVC Kingston LLC. All Rights Reserved.
2025-05-D