
KINGSTON

Ceiling Support
Installation Instructions

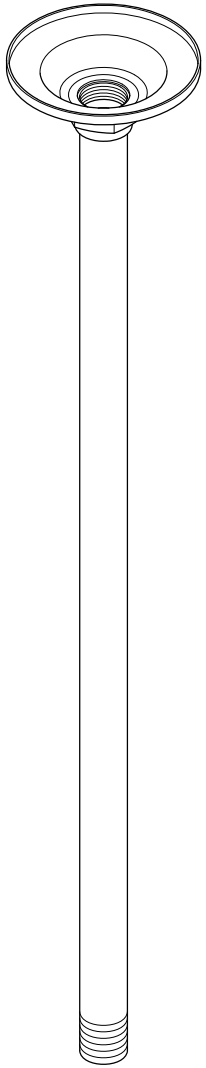

NOTICE


Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

Tools Required

 Teflon Tape

 Silicone Sealant

 Pipe Wrench


This product is designed to be installed on a level ceiling surface, rough in showerhead stub-out with 1/2" IPS pipe, make sure that the stub-out protrudes 3/4" from the finished ceiling surface.

WARNING:

To avoid wrongful installation to damage thread and product by wrong ceiling pipe thread size, you need to make sure:

1. Please MEASURE CEILING pipe is cut 3/4" long distance protrusion from the ceiling, exact size is needed to seal the shower arm correctly.
2. To assure your pipe thread is 1/2" IPS with NPT 14 Thread for shower head applications.
3. You may test your ceiling PIPE THREAD by mounting a shower head.
4. To perform the above require procedure to avoid leak of the installation.

Installation Steps:

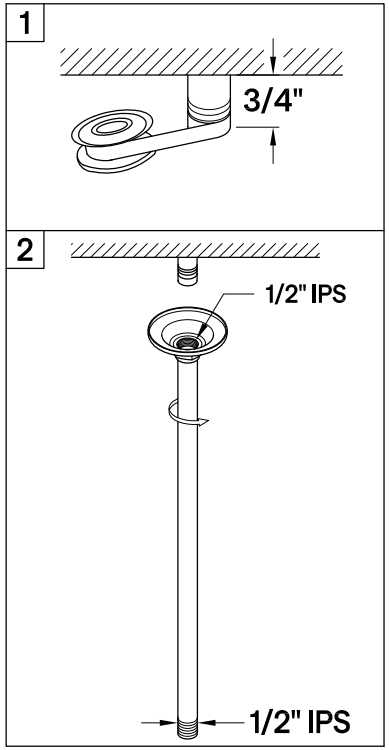

1. Apply a minimum 3 revolutions of Teflon tape to the threads on the stub out.

2. Apply a small bead of silicone based caulking to the perimeter of the flange and thread onto the 1/2" IPS stub-out, clean excess caulking.

©2025 LVC Kingston LLC. All Rights Reserved.
2025-05-KB

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.