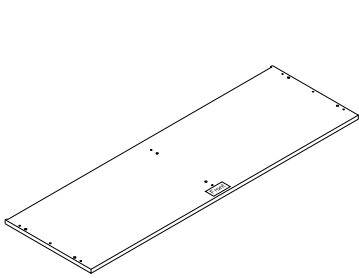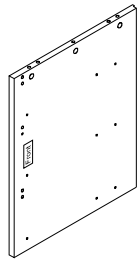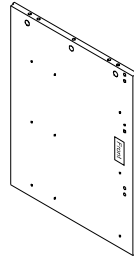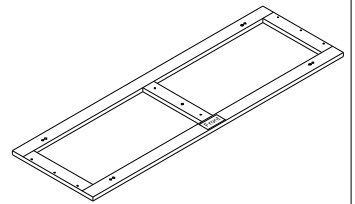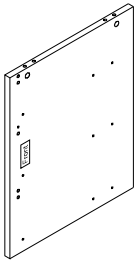# PARTS LIST

NAME: TOP PANEL
CODE: 1
QTY: 1Pc

NAME: SIDE PANEL(LEFT)
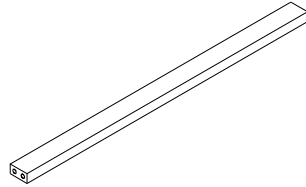CODE: 2
QTY: 1Pc

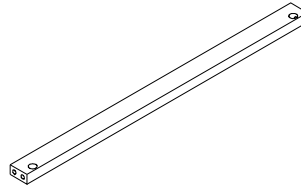NAME: SIDE PANEL(RIGHT)
CODE: 3
QTY: 1Pc

NAME: BOTTOM FRAME
CODE: 4
QTY: 1Pc

NAME: PARTITION
CODE: 5
QTY: 1Pc

NAME: TOP&BOTTOM BAR
CODE: 6
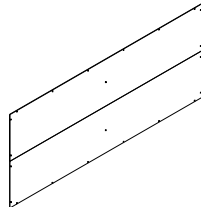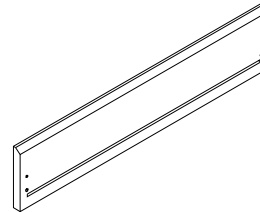QTY: 4Pcs

NAME: CENTER BAR
CODE: 7
QTY: 2Pcs
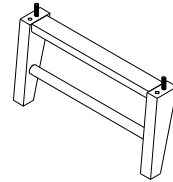
NAME: LEG
CODE: 8
QTY: 2Pcs

NAME: SUPPORT STAND
CODE: 9
QTY: 1Pc

NAME: BACK PLYWOOD
CODE: 10
QTY: 1Pc

NAME: DRAWER FRONT(TOP)
CODE: 101
QTY: 2Pcs
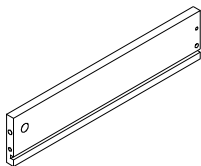
NAME: SMALL DRAWER SIDE(LEFT)
CODE: 102
QTY: 2Pcs
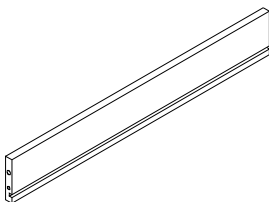
NAME: SMALL DRAWER BACK
CODE: 103
QTY: 2Pcs
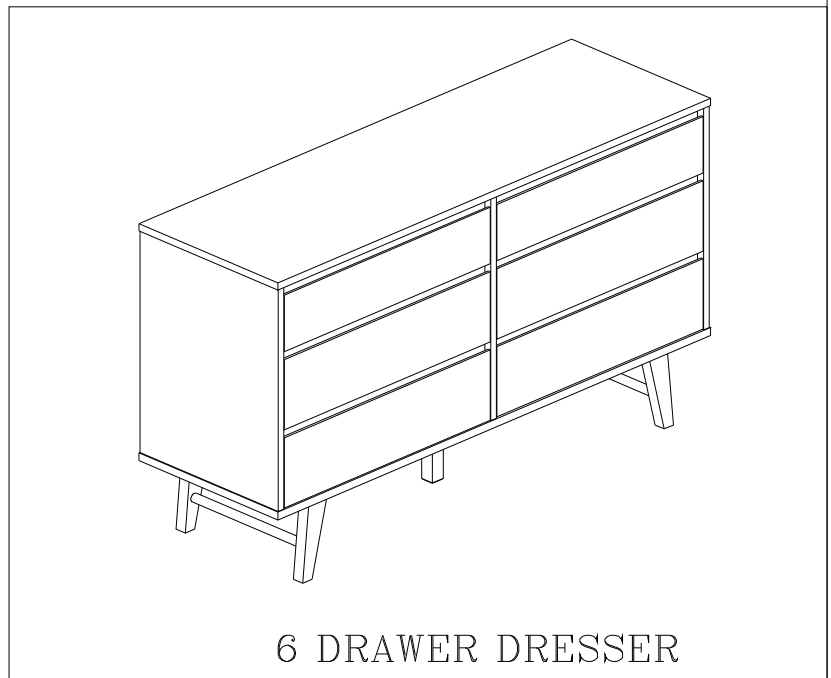
6 DRAWER DRESSER

-THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE
-EXTRA HARDWARE INCLUDED
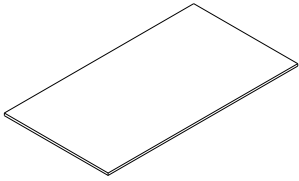
NAME: DRAWER BASE
CODE: 104
QTY: 6Pcs

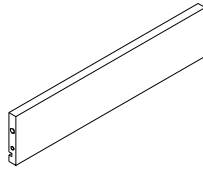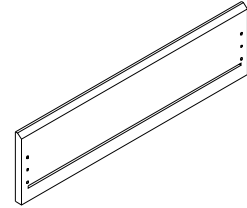NAME: SMALL DRAWER SIDE(RIGHT)
CODE: 105
QTY: 2Pcs

NAME: DRAWER FRONT(CENTER&BOTTOM)
CODE: 106
QTY: 4Pcs
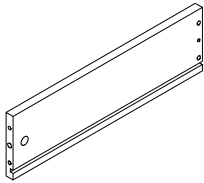
NAME: BIG DRAWER SIDE(LEFT)
CODE: 107
QTY: 4Pcs
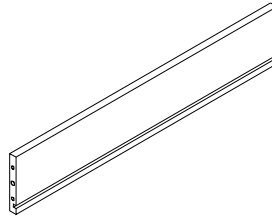
NAME: BIG DRAWER BACK
CODE: 108
QTY: 4Pcs
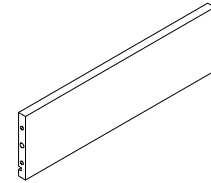
NAME: BIG DRAWER SIDE(RIGHT)
CODE: 109
QTY: 4Pcs

HARDWARE LIST

NAME: CHIPBOARD SCREW M3X16mm
CODE: A
QTY: 72Pcs

NAME: CHIPBOARD SCREW M4X38mm
CODE: B
QTY: 8Pcs

NAME: WOOD DOWEL M8X35mm
CODE: C
QTY: 36Pcs

NAME: CAM LOCK & CAM BOLT
CODE: D
QTY: 36Sets

NAME: WOOD DOWEL M6X30mm
CODE: E
QTY: 40Pcs

NAME: RUNNER 400mm
CODE: F
QTY: 6Sets

NAME: CAM LOCK COVER
CODE: G
QTY: 36Pcs

NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)
CODE: H
QTY: 22Pcs

NAME: FLAT WASHER M8
CODE: I
QTY: 4Pcs

NAME: SPRING WASHER M8
CODE: J
QTY: 4Pcs

NAME: HEX NUT M8
CODE: K
QTY: 4Pcs

NAME: SPANNER
CODE: L
QTY: 1Pc

STEP 1

A) Insert Cam Bolt(D) to Top Panel(1)
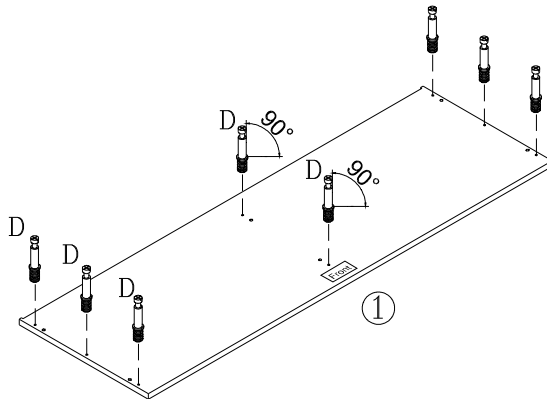
STEP 2

A) Insert Wood Dowel(C) to Left&Right Side Panel(2&3)

B) Attach Cam Lock(D) to Left&Right Side Panel(2&3)

C) Attach Cam Bolt(D) to Left&Right Side Panel(2&3)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes
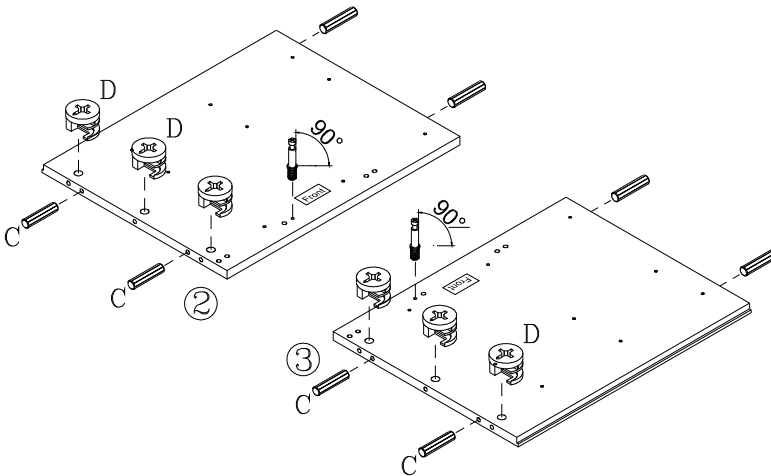
STEP 3

A) Attach Runner(F) to Left&Right Side Panel(2&3) using Chipboard Screw(A) to secure

NOTE : Do not over tighten the screw

NOTE : Runner roller should be towards the front of the panel

NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from A^1, A^2 then A^3

NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole
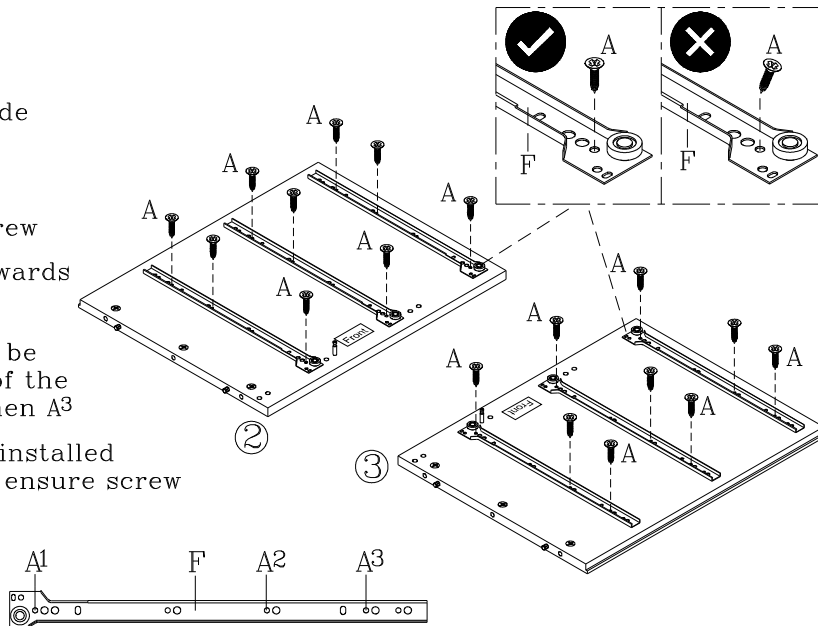
STEP 4

A) Insert Wood Dowel(C) to Partition(5)

B) Attach Cam Lock(D) to Partition(5)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes
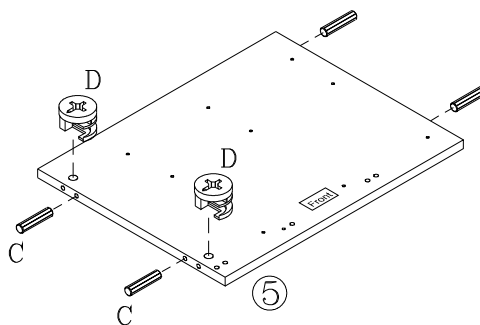
STEP 5

A) Attach Runner(F) to both side of Partition(5) using Chipboard Screw(A) to secure

B) Attach Cam Bolt(D) to both side of Partition(5)

    NOTE : Do not over tighten the screw

    NOTE : Runner roller should be towards the front of the panel

    NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from A^1, A^2 then A^3

    NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

FLIP OVER

STEP 6

A) Attach Wood Dowel(C) to 4 Top&Bottom Bar(6) & both Center Bar(7)

B) Attach Cam Lock(D) to Center Bar(7)

    NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

STEP 7

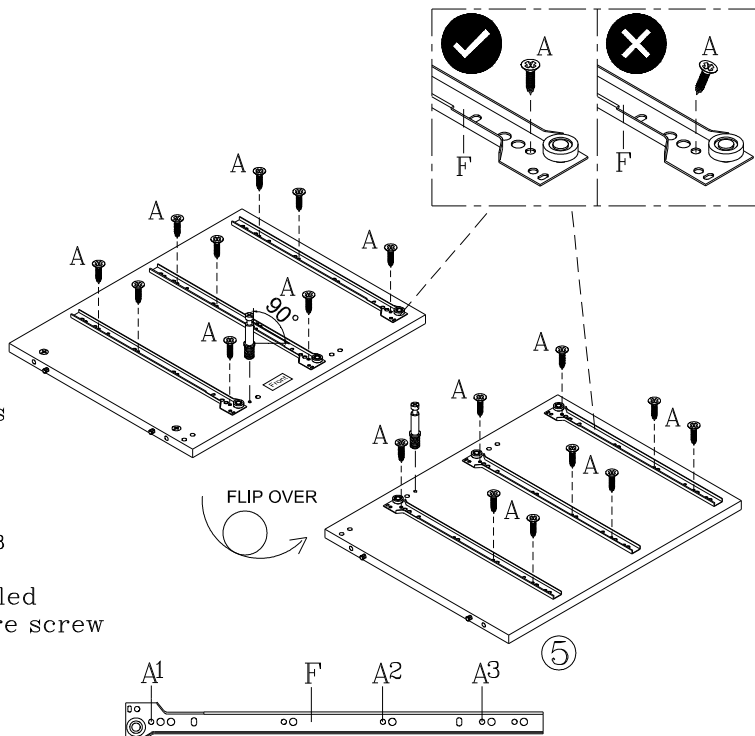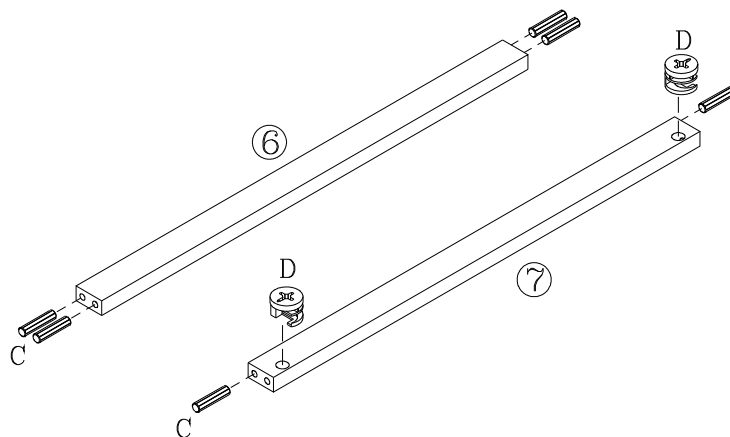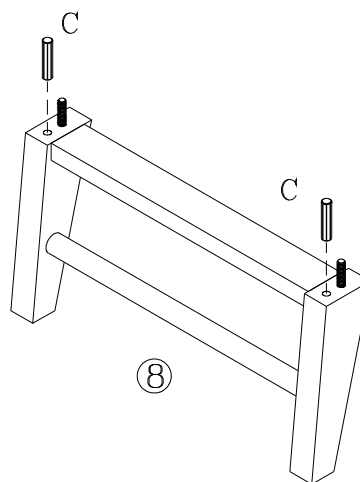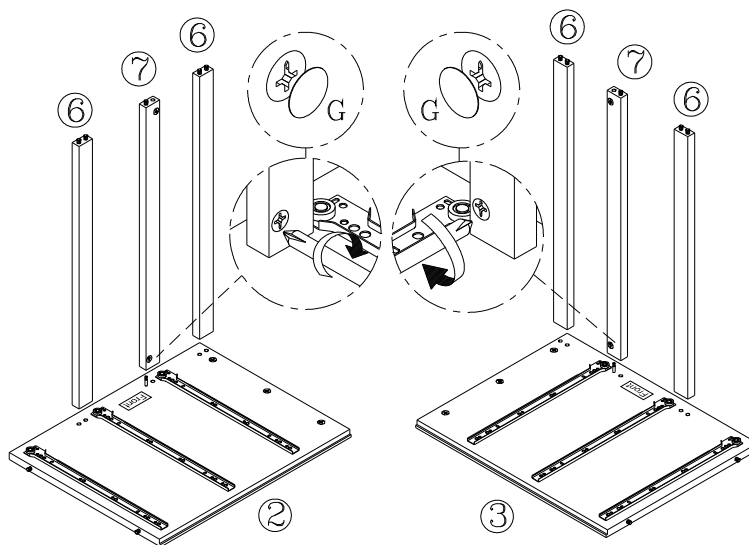A) Attach Wood Dowel(C) to both Leg(8)

STEP 8

A) Attach Top&Bottom Bar(6) &
    Center Bar(7) to Side Panel
    Left&Right(2&3) and secure with
    Cam Lock(D)

B) Cover Cam Lock with Cam Lock
    Cover(G)

STEP 9

A) Attach Top&Bottom Bar(6) & Center
    Bar(7) to Partition(5) secure with
    Cam Lock(D)

B) Cover Cam Lock with Cam Lock
    Cover(G)

    NOTE : Do not over tighten the
           Cam Lock

STEP 10

A) Turn over the semi−assembled unit,
    attach Bottom Frame(4) to underneath
    of Side Panel Left&Right(2&3) and
    secure with Chipboard Screw(B)
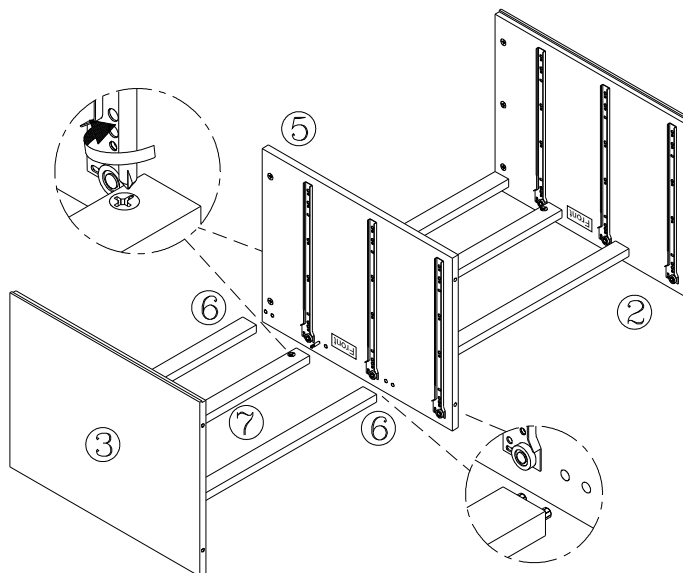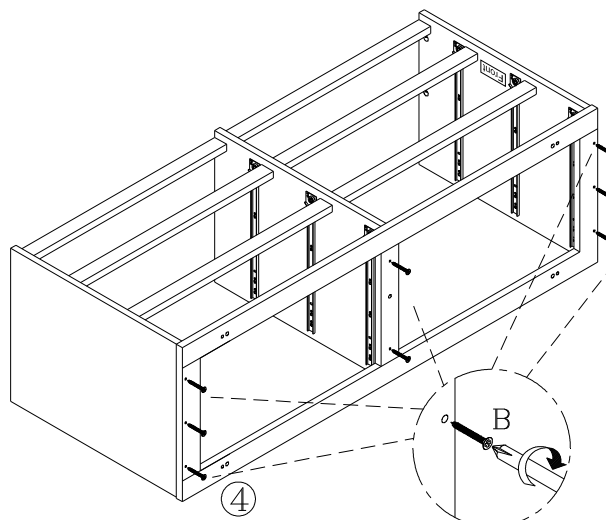
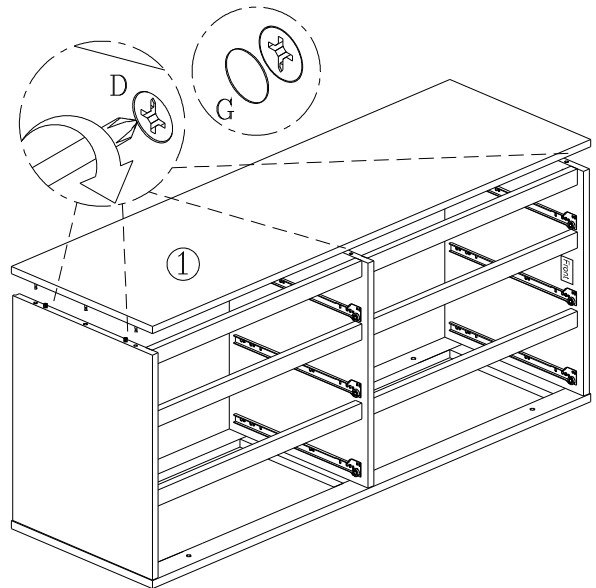   NOTE: Do not over tighten the
          Screw

STEP 11

A) Attach Top Panel(1) to Side Panel Left&Right(2&3) secure with Cam Lock(D).

B) Cover Cam Lock with Cam Lock Cover(G)
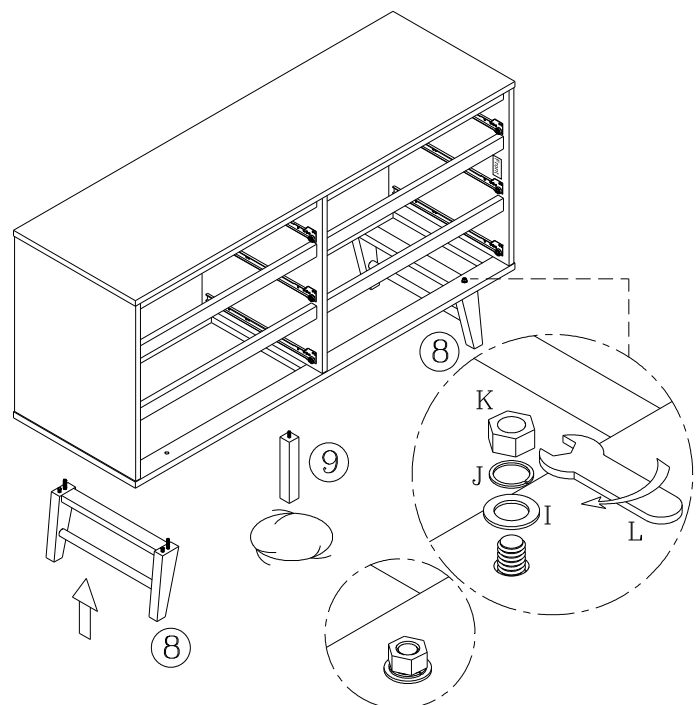
   NOTE : Do not over tighten the Cam Lock

STEP 12

A) Attach Back Plywood(10) to assembled unit using Panhead Chipboard Screw(Black)(H) to secure
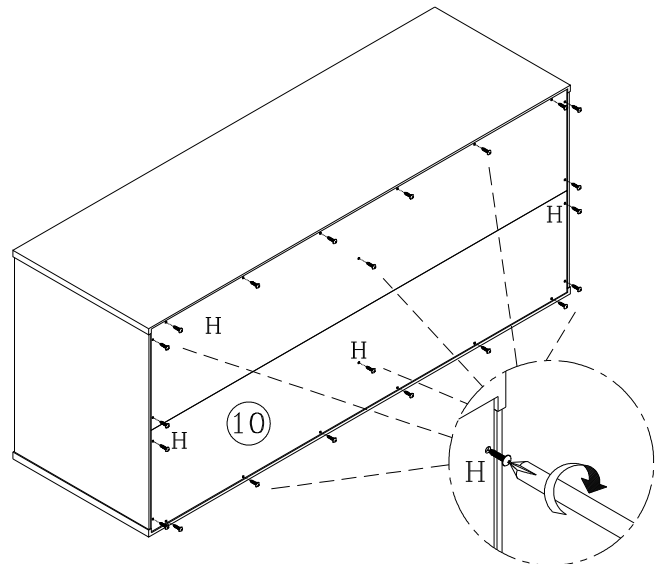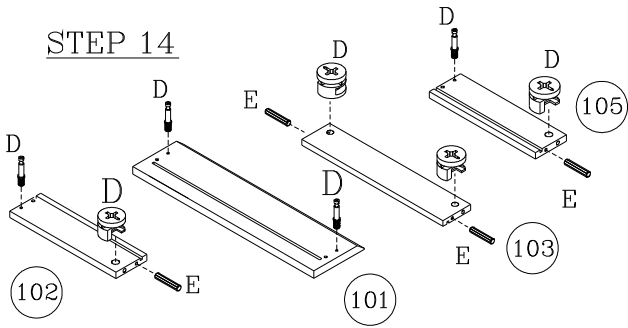
STEP 13

A) Attach both Leg(8) to Bottom Frame(4) using Flat Washer(I), Spring Washer(J)& Hex Nut(K) with Spanner(L)

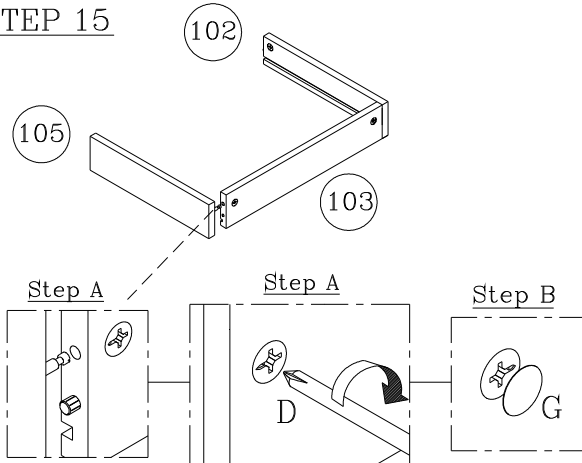B) Attach and secure Support Stand(9) to Bottom Frame(4)

STEP 14

A) Insert Wood Dowel(E) to Left&Right Drawer Side(102&105) & Drawer Back(103)

B) Attach Cam Lock(D) to Left&Right Drawer Side(102&105) & Drawer Back(103)

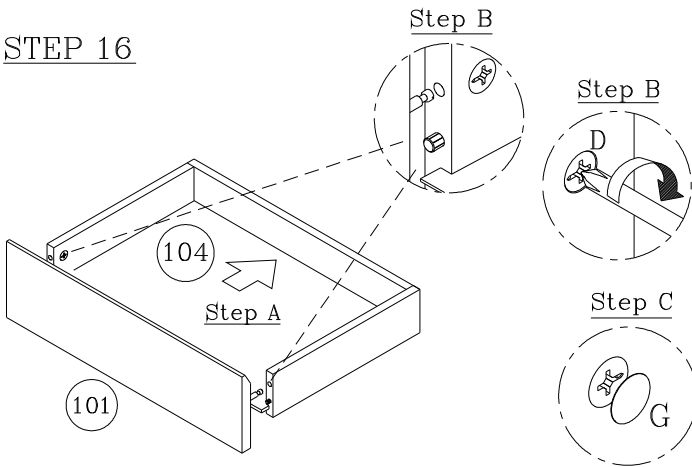C) Attach Cam Bolt(D) to Drawer Front(101) & Left&Right Drawer Side(102&105)

STEP 15

A) Attach Left&Right Drawer Side(102&105) to Drawer Back(103) secure with Cam Lock(D)

B) Using Cam Lock Cover(G) to cover Cam Lock(D)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

Step A   Step A   Step B

STEP 16

Step B

Step B

Step C

A) Slot in Drawer Base(104) in corresponding grooves

B) Attach Drawer Front(101) to Drawer Box secure with Cam Lock(D)

C) Using Cam Lock Cover(G) to Cover Cam Lock(D)

Step A

STEP 17

A) Turn over the Drawer box, Attach Runner(F) to Drawer Side(102&105) using Chipboard Screw(A) to secure

NOTE: Runner roller should be flush and toward the back of the Drawer Box

STEP 18

A) Insert Wood Dowel(E) to Left&Right Drawer Side(107&109) & Drawer Back(108)

B) Attach Cam Lock(D) to Left&Right Drawer Side(107&109) & Drawer Back(108)

C) Attach Cam Bolt(D) to Center&Bottom Drawer Front(106) & Left&Right Drawer Side(107&109)

STEP 19

A) Attach Left&Right Drawer Side(107&109) to Drawer Back(108) secure with Cam Lock(D)
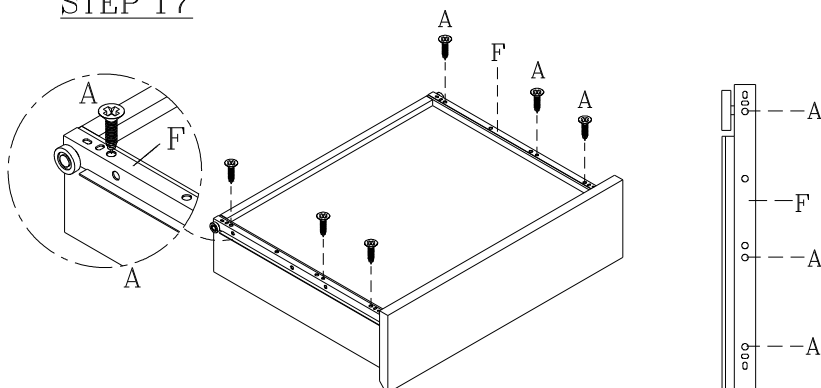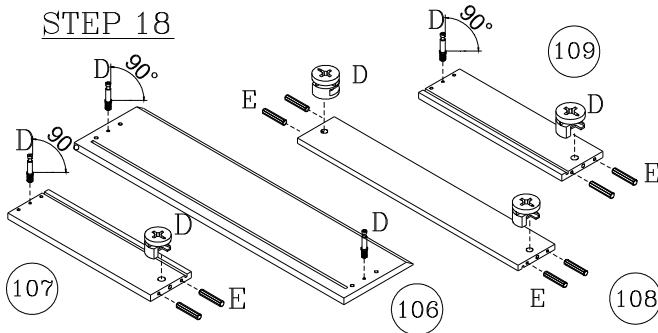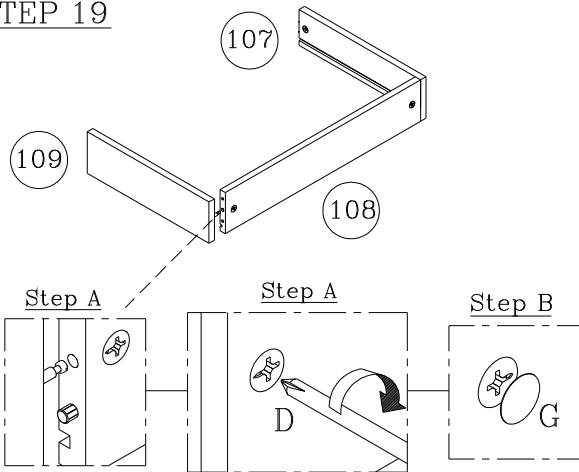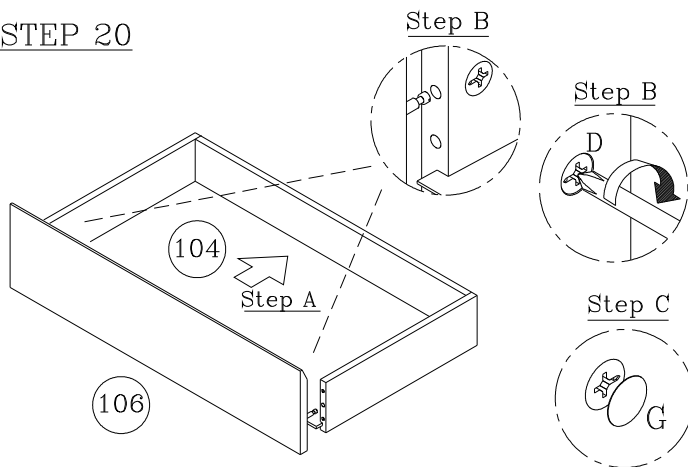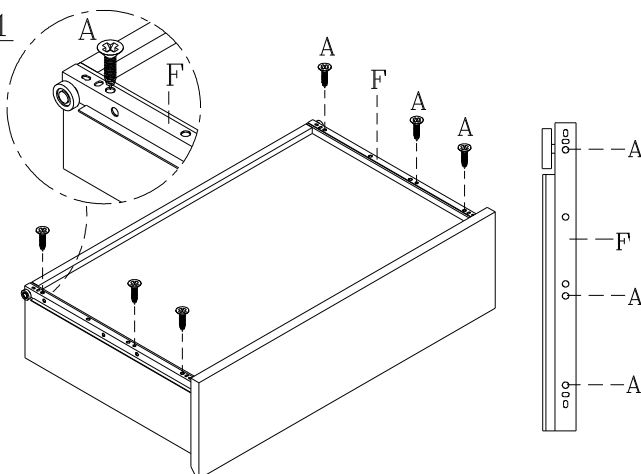
B) Using Cam Lock Cover(G) to cover Cam Lock(D)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

Step A   Step A   Step B

STEP 20

Step B

Step B

A) Slot in Drawer Base(104) in corresponding grooves

B) Attach Center&Bottom Drawer Front(106) to Drawer Box secure with Cam Lock(D)

C) Using Cam Lock Cover(G) to Cover Cam Lock(D)

Step A

Step C

STEP 21

A) Turn over the Drawer box, Attach Runner(F) to Drawer Side(107&109) using Chipboard Screw(A) to secure

NOTE: Runner roller should be flush and toward the back of the Drawer Box