ASSEMBLY INSTRUCTION
INSTRUCTION DE MONTAGE

ITEM NO : 1808A ARM CHAIR/ CHAISE CAPITAINE

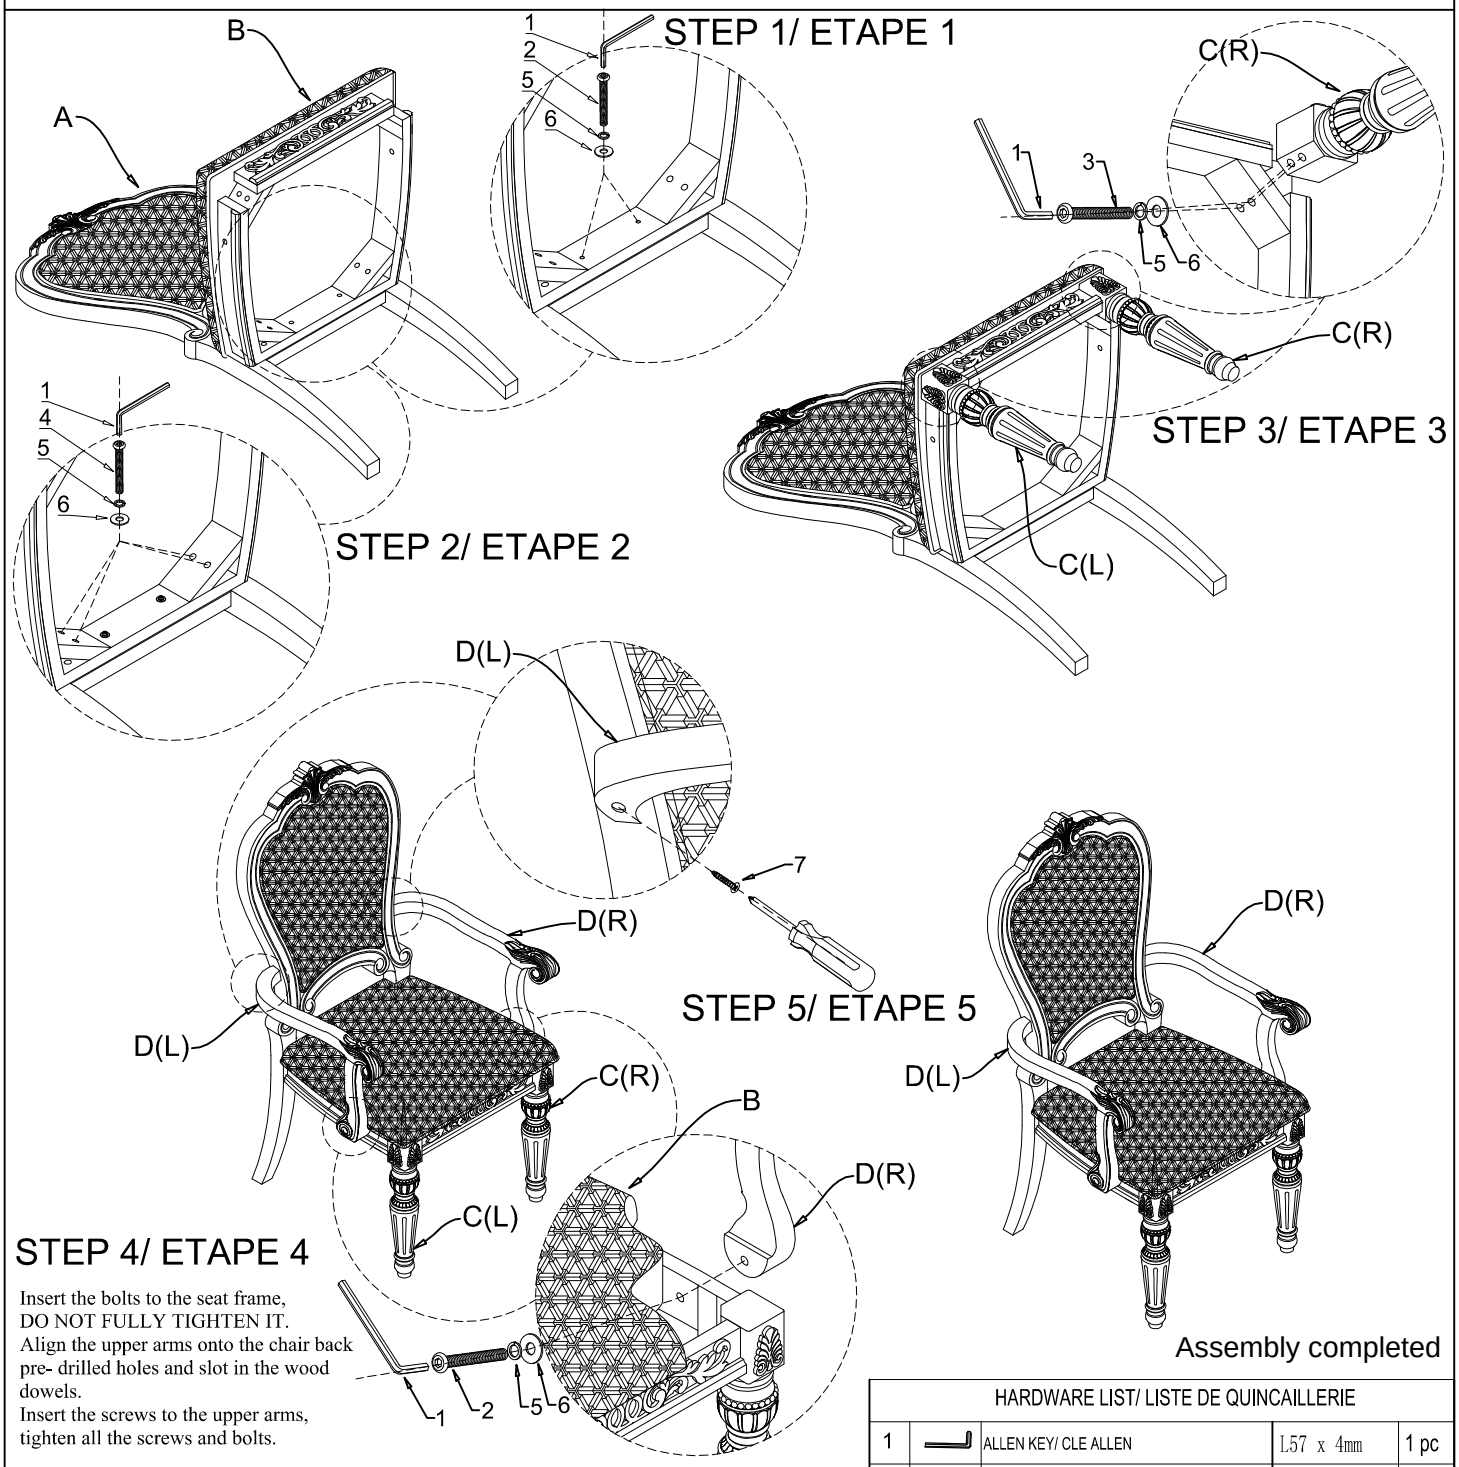

Insert the bolts to the seat frame, DO NOT FULLY TIGHTEN IT.
Align the upper arms onto the chair back pre- drilled holes and slot in the wood dowels.
Insert the screws to the upper arms, tighten all the screws and bolts.

Assembly completed

PART LIST/ LISTE DE PIECES			
A		CHAIR BACK/ DOSSIER DE CHAISE	1 pc
B		CUSHION SEAT WITH FRAME/ ENCADREMENT DE SIÈGE AVEC SIÈGE COUSSIÉ	1 pc
C		(L/R) FRONT LEG / PIEDS AVANT	2 pcs
D		(L/R) ARM/ BRAS GAUCHE-BRAS DROIT	2 pcs

HARDWARE LIST/ LISTE DE QUINCAILLERIE				
1		ALLEN KEY/ CLE ALLEN	L57 x 4mm	1 pc
2		BOLT/ BOULON	Φ5/16″*1*1/2″	4 pcs
3		BOLT/ BOULON	Φ5/16″*2*1/4″	4 pcs
4		BOLT/ BOULON	Φ5/16″*3*1/4″	4 pcs
5		LOCK WASHER/ RONDELLE D'ARRET	Φ5/16”*13*1.2	12 pcs
6		FLAT WASHER/ RONDELLE PLATE	Φ5/16”*19*1.8	12 pcs
7		SCREW/ VIS	Φ8*45mm	2 pcs

Made in Vietnam

FABRIQUEÙ EN VIETNAM