KINGSTON


Tub Spout

Installation Instructions

This tub spout is designed for installation on a 1/2" (5/8" O.D.) copper pipe stub out.

Installation Instruction:

1. Prepare a 1/2" copper stub out to protrude from the wall 1-1/2" to 1-3/4", deburr end of the stub out and apply a light coating of petroleum jelly or similar.
2. Apply a small bead of silicone around the back of the spout.
3. Smoothly press spout onto the stub-out until fully inserted.
4. Using a Phillips head screwdriver tighten side screw and clean any excess silicone from the perimeter of the spout.

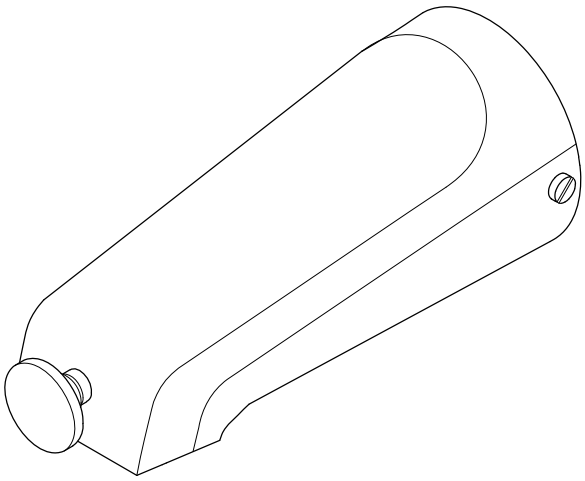

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

©2025 LVC Kingston LLC. All Rights Reserved.
2025-05-T