
KINGSTON
KITCHEN & BATH

INSTALLATION INSTRUCTIONS
Shower Bracket

Installation Steps:

Step 1. Apply Teflon tape on the 1/2" IPS threads of the shower arm.
Step 2. Thread-connecting with the shower arm, then with hand shower hose. Hand tighten-do not use a wrench or plier.
Step 3. Turn on the valve to do water test and mark sure no leakage around the connections.

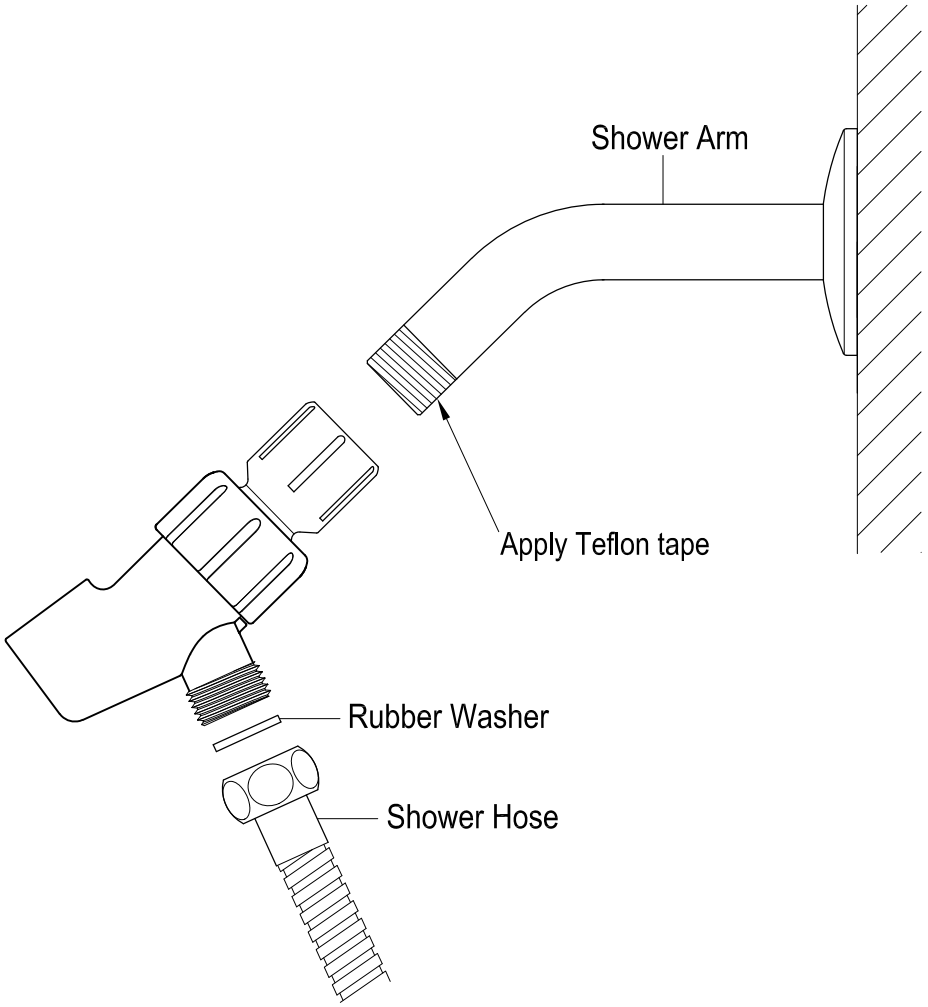

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

©2025-03-D Kingston Brass