KINGSTON


Quarter Turn Valve
1/2" Sweat & 5" Extension x 3/8" OD Comp.
Installation Instructions

Note:

1. The extension tube on valve body (1) can be cut to your required length.
2. Turn off the main water supply before installing.

Installation Steps:

1. Clean the extension tube on valve body (1) and the 1/2" Copper stub-out using a wire brush or sandpaper.
2. Slide flange (4) onto the extension tub (1). Insert the extension tube onto the 1/2" copper stub-out on the floor, then solder the connection. Make sure the outlet of shut-off valve (1) points upward.
3. Slide nut (2) and ferrule (3) onto the 3/8" tube, then insert the tube into the outlet hole of valve body (1).
4. Tighten nut (2) by hand, then use a wrench to tighten an additional 1/4 turn. Do not overtighten.
5. If you are connecting a 3/8" hose to the outlet of valve body (1), remove both nut (2) and ferrule (3). Make sure a rubber washer is inside the compression nut of the 3/8" hose, then follow Step 4 to tighten the compression nut.

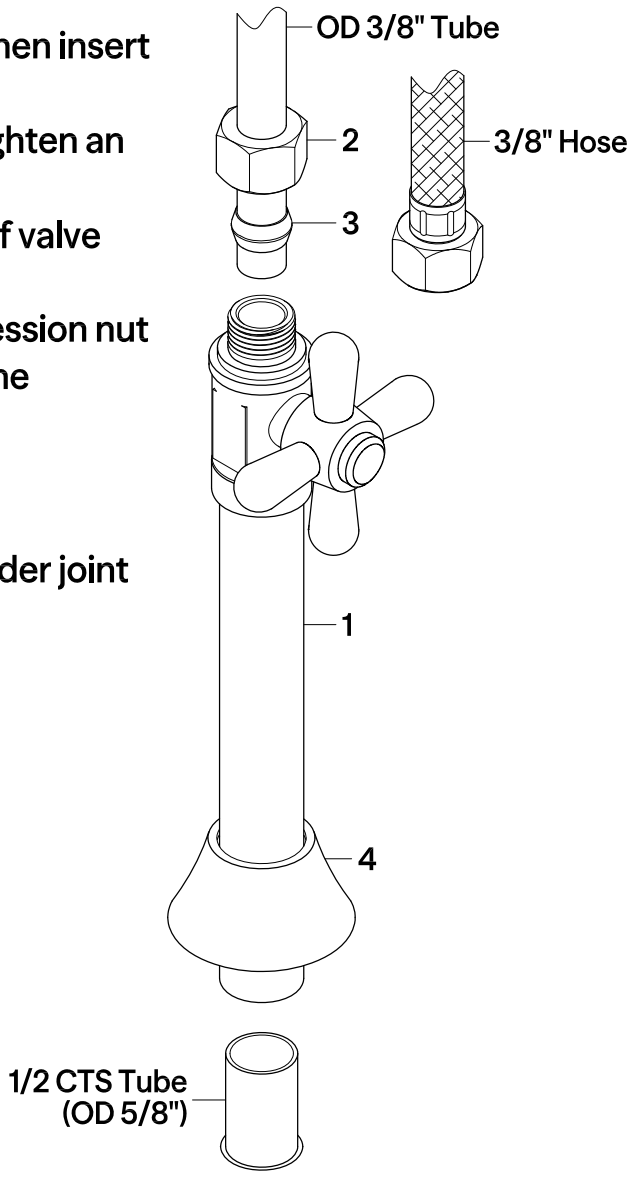

Final Check:

Turn on the water and check for leaks at the solder joint and at the nut connection.

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

©2025 LVC Kingston LLC. All Rights Reserved.

2026-04-TD