


OPERATION


- 1. To install batteries, open the compartment by unscrewing the two screws and remove the battery cover off the unit (Photo #1 and #2).
- 2. Insert three "AA" Alkaline batteries (not included-Photo #3). This acts as the Power On function and starts the 5 hour timer so insert batteries at the time you want the chandelier to turn on.
- 3. Replace the battery cover and screw two screws in firmly to seal the unit.

ON/OFF: Installing the batteries turns the unit ON. The installation of the batteries should be done at the time you want the unit to light up everyday. **FOR EXAMPLE:** If the unit is turned on (batteries are installed) at 6 pm, then the unit will stay lit for 5 hours and turn off at 11 pm. Then the next day at 6 pm, the unit will come on again and repeat. You can expect about three months of continuous use depending on the type of the batteries selected.

Once the batteries are installed, you can select WHITE LED by putting switch in the left position or choose CHANGING COLOR LED by putting switch in right position (Photo #4).

NOTE: TO CHANGE THE START TIME YOU MUST REMOVE ALL THREE BATTERIES AND START THE INSTALLATION PROCESS AGAIN FROM STEP 1.

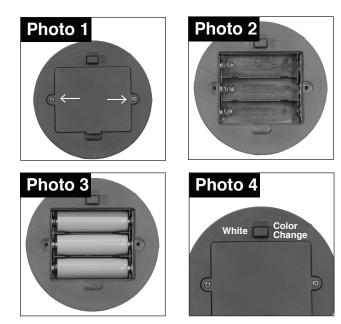

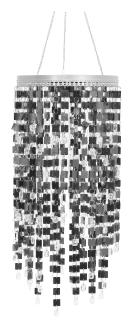



MAINTENANCE

Check the battery periodically, especially after winter months, and replace when necessary.

Warning:

- Only use three "AA" Alkaline batteries.
- Failure to insert the battery in the correct polarity, as indicated in the battery compartment, may shorten the life of the battery or cause the battery to leak.
- Do not dispose of batteries in fire, or heat, as battery may explode.
- Do not open, short circuit, or mutilate battery, as injury may occur.
- Batteries should be recycled, or disposed of, in accordance with Federal, state and local regulations.
- Battery must be recycled or disposed of properly. Do not short circuit or dispose of in fire.

• Electrical rating is 0.05W.

"**PROP 65 WARNING:** This product may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling."

