



# Dry Wipes

## Disposable Wiping System

The Dry Wipes Disposable Wiping System provides the flexibility and ease to be used in a spray and wipe application. Simply apply the cleaner, disinfectant, or sanitizer of your choice to the desired surface and allow it to remain wet for the required contact time. Then wipe away. Dry Wipes is a convenient on-demand solution for any facility.

### Features & Benefits

- Can be used with a variety of Diversey cleaners, disinfectants and sanitizers
- High quality fibers allow for easy pick-up and removal of dirt, dust and other soils
- Use on all hard, nonporous surfaces that are outlined on the chemical label
- Low linting for applications where it is necessary to clean or dry sensitive surfaces without depositing cloth fibers helping to reduce the risk of contamination
- A 6" x 8" 500 ct. box and a larger 12"x12" 100 ct. shrink wrapped pack allows convenience for multiple applications
- Softer hand feel that is more cloth-like, with strong material strength

### Applications

- For use in a spray and wipe application






# Dry Wipes

## Disposable Wiping System

Dry Wipes are the perfect choice for dust and dirt removal in facilities with no laundering capabilities, and recommended for traditional spray-and-wipe cleaning.

Both ready-to-use (RTU) and concentrated cleaners, sanitizers and disinfectants that have been properly diluted, may be used with Dry Wipes to clean, sanitize and disinfect hard nonporous surfaces.

Dry Wipes may be pre-wetted for up to 24 hours. If using an Improved or Accelerated Hydrogen Peroxide® product with Dry Wipes, the shelf life is 28 days (when pre-wetted onsite). Refer to the Diversey Disposable Wiping System Pre-wetting Instructions. Some quaternary-based chemicals may bind with the wipes and testing is recommended prior to pre-wetting, or use in a spray and wipe application. Please refer to the original product label for directions for use and surface contact times.

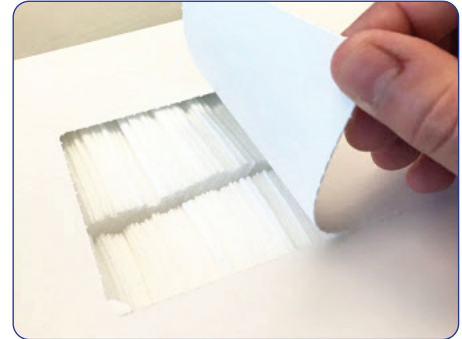

*Dry Wipes are horizontally stacked within the box*

### Use Instructions

- Refer to the chemical SDS and follow the appropriate safety advice and that of your work environment
- Apply the cleaners, disinfectant or sanitizer to the surface to be treated
- Allow the surface to remain wet for the contact time on the manufacturer’s instructions
- Dispense a dry wipe from the box
- Wipe the surface to remove any pathogens or residue

### Disposal Instructions

- Dispose of wipe in trash after use. Do not flush

Technical data	Dry Wipes
Color/Material	White, Meltblown Polypropylene
Sizes	6 in. x 8 in. (15.24 cm x 20.32 cm), 12 in. x 12 in. (30.48 cm x 30.48 cm)

Product	Pack size	Dilution	Product code	
Dry Wipes	4 x 500 Disposable Wipes (6" x 8" in Box)	Ready-to-use	D1228884	
Dry Wipes	6 x 100 Disposable Wipes (12"x12" Shrink wrap pack)	Ready-to-use	D1229237	