


Fixed Monitor Mount Installation

The CarePod[™] Fixed Monitor Mount hooks easily to the preinstalled top horizontal interior track and are secured at the bottom to prevent shifting. To install follow the steps below.

Step 1 - Mount Monitor to Plate

Determine the desired mounting height, and attach your monitor to the fixed plate as shown at right. Note: Hardware for mounting a monitor is not included as it varies widely by manufacturer.

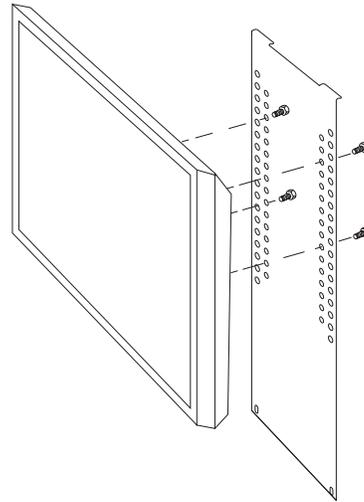

Step 2 - Hook Top to Horizontal Track

Hook the top of the plate into the open slots on the top horizontal track and slide the monitor to the desired left or right location.

Step 3 - Insert Square Nut into Track

Locate a notch in the top lip of the CarePod bottom horizontal track. Insert two (2) square nuts (provided) into the track and position by sliding left or right to the desired location.

Step 4 - Secure with Screws

Using a Phillips screwdriver, attach the monitor mount to the nuts with the provided screws.

