

MOUNTING THE DISPENSER

OPTION 1: DOUBLE-SIDED ADHESIVE

1. Place double-sided self-stick adhesive strips on back of unit and stick onto wall.




For best results, adhere to a smooth surface that is clean and dry. To clean, wipe surface until dry and use rubbing alcohol to clean the surface.



OPTION 2: MOUNTING HARDWARE

1. Open the unit by pressing the button located at the top-rear of the dispenser (Fig.1).
2. Remove soap container prior to mounting.
3. Place the dispenser on desired wall location.
3. Mark and install wall anchors.
4. Mount using screws and washers.
5. Re-install the soap container.

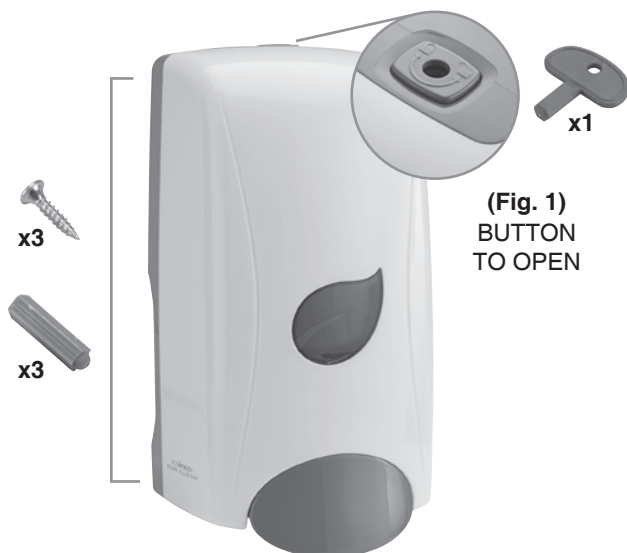


LOCKING THE UNIT (OPTIONAL)


1. Close the dispenser.
2. Insert locking key (included) into the button located at the top-rear of the dispenser (Fig.1).
3. Turn key to lock unit.

FILLING THE DISPENSER

NOTE: PLEASE CHECK YOUR UNIT TO MAKE SURE YOU ARE FILLING WITH THE CORRECT TYPE OF SOAP OR SANITIZER.

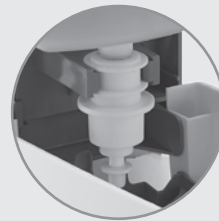

LIQUID / GEL = SMALL TUBE

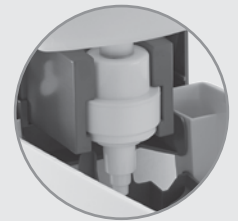

FOAM = LARGE TUBE

1. Open the unit by pressing the button located at the top-rear of the dispenser (Fig.2).

NOTE: the key will be required if unit was locked with the key (Fig. 1).

2. Unscrew the cap (Fig.3) and fill the container with soap.
3. Reinstall the cap loosely and close the unit.
4. To prep the pump for dispensing, press the pump bar approximately 10-20 times until it begins to dispense. Repeat for each refill.

