




Quality Tools for Smart Cleaning™

HydroPower® NANO Base (NANO B)

Setup Instructions

1. Check the bottom of the NANO base to ensure the 4 green clips are in the open position.
2. Connect the NANO input line to your existing HydroPower Ultra DI tank (UHP01) to the bottom water inlet valve.
3. Place the HydroPower Ultra tank on the NANO base and ensure the 4 pillars connect to the base of the HydroPower Ultra tank.
4. Secure tank by locking the 4 green clamps underneath the NANO base.
5. Follow the steps in the NANO Operations Manual to finish setting up the system.
(Refer to page 17, section 4.4 To start the HydroPower NANO when NEW)

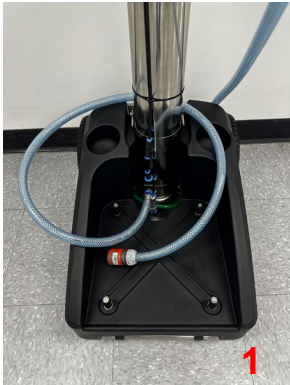

Scan here for more information

To find the most up-to-date information, and to download the operating instructions manual, please visit: <https://usa.ungerglobal.com/resource-center/manuals-instructions/>