

TRUFIG

BY SONANCE

TRUFIG 195X95 Solid Surface Installation

INSTALLATION MANUAL

INTRODUCTION

This installation guide will provide instructions to install a TRUFIG 195x95 Solid Surface Mounting Platform installed in Solid Surfaces, wiring and Device installation

ASSEMBLY CONTENTS:

1 195x95 Solid Surface Mounting Platform

2 5/8" or 1/2 drywall clips

SOLID SURFACE MOUNTING PLATFORM

To install and finish the 195x95 Mounting Platform follow the standard TRUFIG Procedure for Solid Surfaces.

SOLID SURFACE INSTALLATION:

WIRING:

1. The Enclosure has two 1/2" KO's, remove either one and feed enough wire into it so once the MP is installed there is enough slack to wire the device.


INSTALLING THE MOUNTING PLATFORM:

1. See Mounting Platform manual for full instructions.

INSTALLING THE DEVICE:


This procedure is to be done once the wall is finished.

1. If installed remove the Alignment Block by removing the four screws and gently pulling the Alignment Block out.

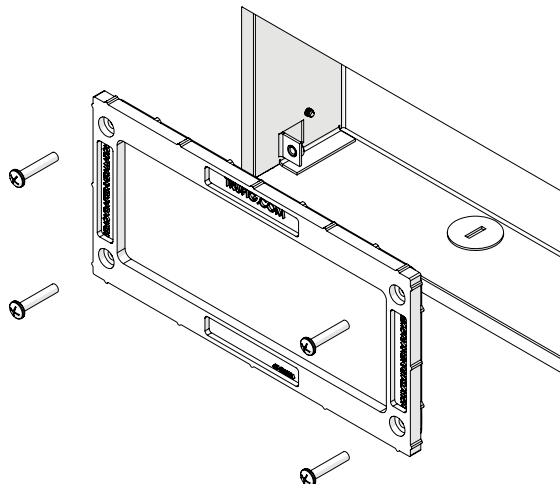


2. When the Keypad is ready to install insert the Trim Component into the box aligning the 4 screws with the
- page 1 of 3

for tabs in the Enclosure.


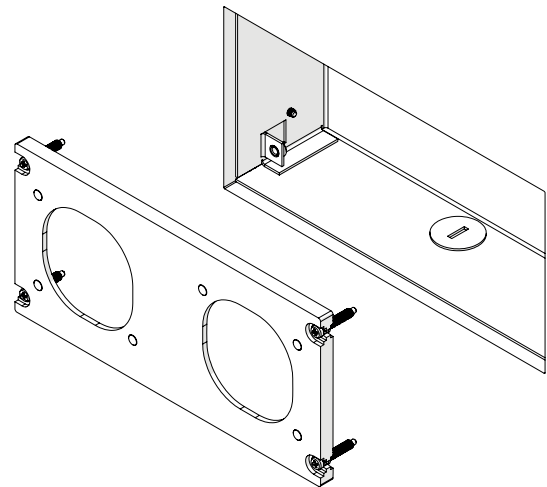


3. Use a Phillips screw driver to lower the Trim Component evenly with 3-4 turns on each screw.

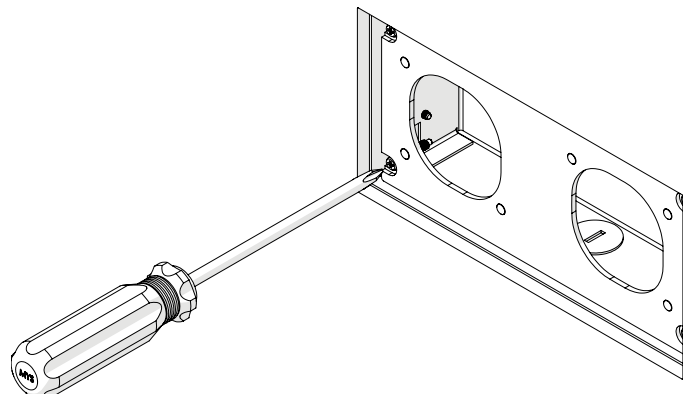


NOTE: A Depth Adjustment Tool is recommended for the process, follow the instructions in the package.

4. If not using a Depth Adjusting Tool lower the Trim Component to approximate the thickness of the device to be installed.
5. For Black Nova 3/8" [10.0mm]

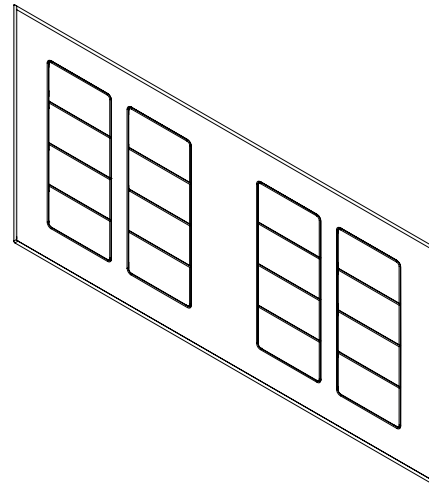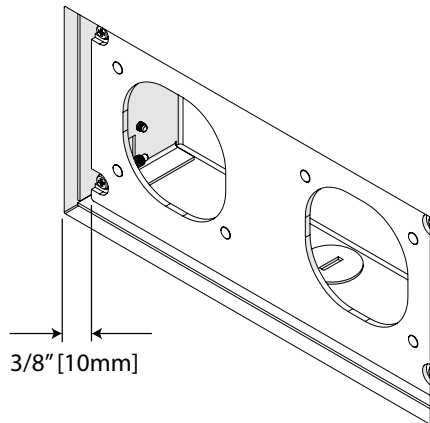

6. This will approximate the location of the Fascia or Device flush to the finished surface, if there is a need to further adjust the Device or Fascia remove it by using the suction cup and adjust in or out the screws as needed.

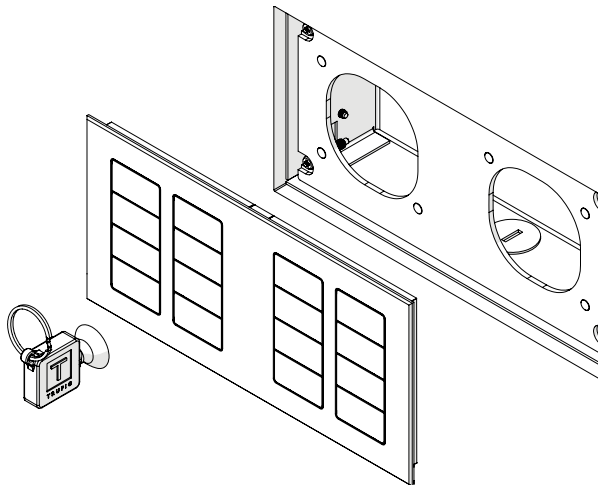

7. Connect the device being installed and test.



Scan QR code for additional information and resources. For technical support call (949) 492-7777 or visit trufig.com/keypad-downloads



® 2025 SONANCE All rights reserved. TRUFIG is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest SONANCE and TRUFIG product specification information visit our website at www.sonance.com.

991 Calle Amanecer - San Clemente, CA 92673 USA • Phone: 949.492.7777 • Fax: 949.361.5151 • Technical Support: 949.492.7777 • www.sonance.com