

TRUFIG

BY SONANCE

TRUFIG Depth Adjusting Tool 1 and 2G

INSTALLATION MANUAL




INTRODUCTION

This installation guide will provide instructions to adjust a TRUFIG 1G or 2G Fascia in a Solid Surface installation

ASSEMBLY CONTENTS:

1G Adjustment Tool or 2G Adjustment Tool

These instructions are the same for 1G or 2G installations.
1G is used in all illustrations.
The Solid Surface Mounting Platform should be installed before this procedure.

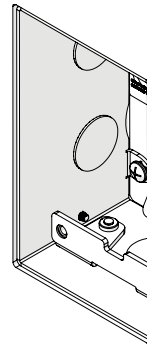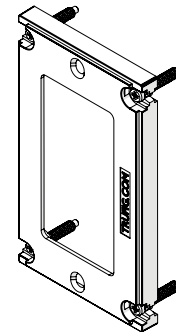
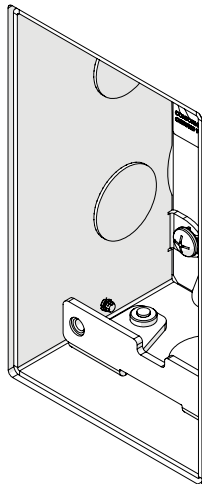


NOTE: keep the Trim Component level by turning 2 or 3 turns on each screw in a circular motion.

4. Repeat the above step until the surface of the Trim Component is just below the surface.


INSTALLING THE TRIM COMPONENT:

1. Insert the proper Trim Component into the opening of the Solid Surface.
2. If needed orient the Trim Component as indicated.
3. Engage the Trim component screws into the threaded inserts of the enclosure brackets by turning 2 or 3 turns on each screw in a circular motion.

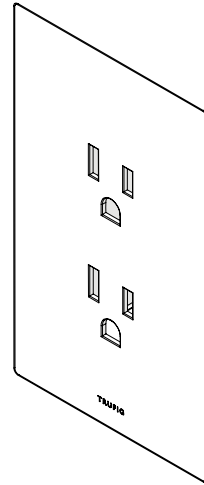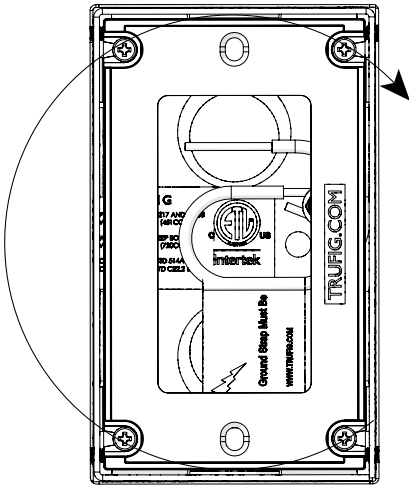

ADJUSTING THE FASCIA:

1. Place the Adjustment Tool into the opening and verify that the holes align with the Trim Component Screws.
2. Using a Phillips screwdriver adjust the surface of the Adjustment Tool until it is flush with the solid surface.
4. If needed to re-adjust the Trim Component remove the Fascia using the Removal Tool and turn the screws clockwise to move the corners down or counterclockwise to move the corners up, re-install the Fascia, repeat as needed.

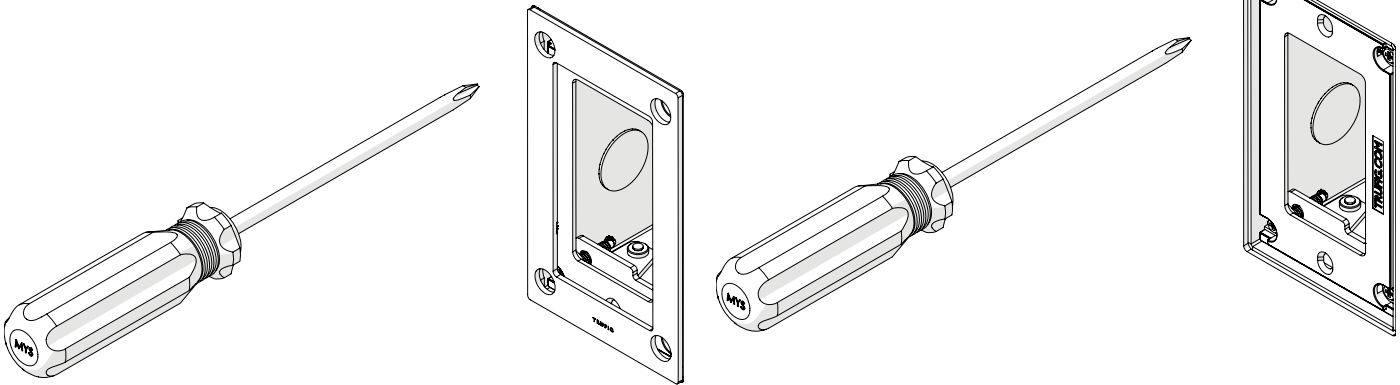

3. Remove Adjustment tool and verify the adjustment by installing the proper Fascia.



Scan QR code for additional information and resources. For technical support call (949) 492-7777 or visit trufig.com/keypad-downloads



© 2022 SONANCE All rights reserved. TRUFIG is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest SONANCE and TRUFIG product specification information visit our website at www.sonance.com.
991 Calle Amanecer - San Clemente, CA 92673 USA • Phone: 949.492.7777 • Fax: 949.361.5151 • Technical Support: 949.492.7777 • www.sonance.com