IPURT CONNECT PRO

PHONE MULTIDOCK



72399 - CONNECT PHONE MultiDock 6

1

IPURT CONNECT PRO

PHONE MULTIDOCK

IPORT CONNECT PHONE MultiDock Install Manual

Thank you for purchasing the all new IPORT CONNECT Platform. We hope you enjoy this revolutionary new system and if at any time you need more assistance, please Contact IPORT Tech Support via Online chat or through our

help desk online.

- IPORT Team

Whats in box:

- 1 IPORT CONNECT PHONE Multidock
- 1 160W EDAC Power Supply 19V DC, 8.4A.
- 8 Mounting Screws 4ea Wood 4ea M4
- 1 Info Card


Glossary of Terms:


- MultiDock The main mounting station consisting of the 6 Charging Docks for IPORT CONNECT iPad or iPhone Cases.
- **Charging Cradle** The removable back portion of each Charging Dock interchangeable for different sized iPhone or iPad devices.
- Charging LED The LED indicating the current charge status of the iPhone or iPad when docked. Red for charging: Green for fully charged.

IPCRT CONNECT PRO

PHONE MULTIDOCK

- 1. Remove the Multidock and Power Supply from the box and place on a table.
- 2. Insert the DC Power plug into the bottom of the MultiDock and press the cable into the cable retention

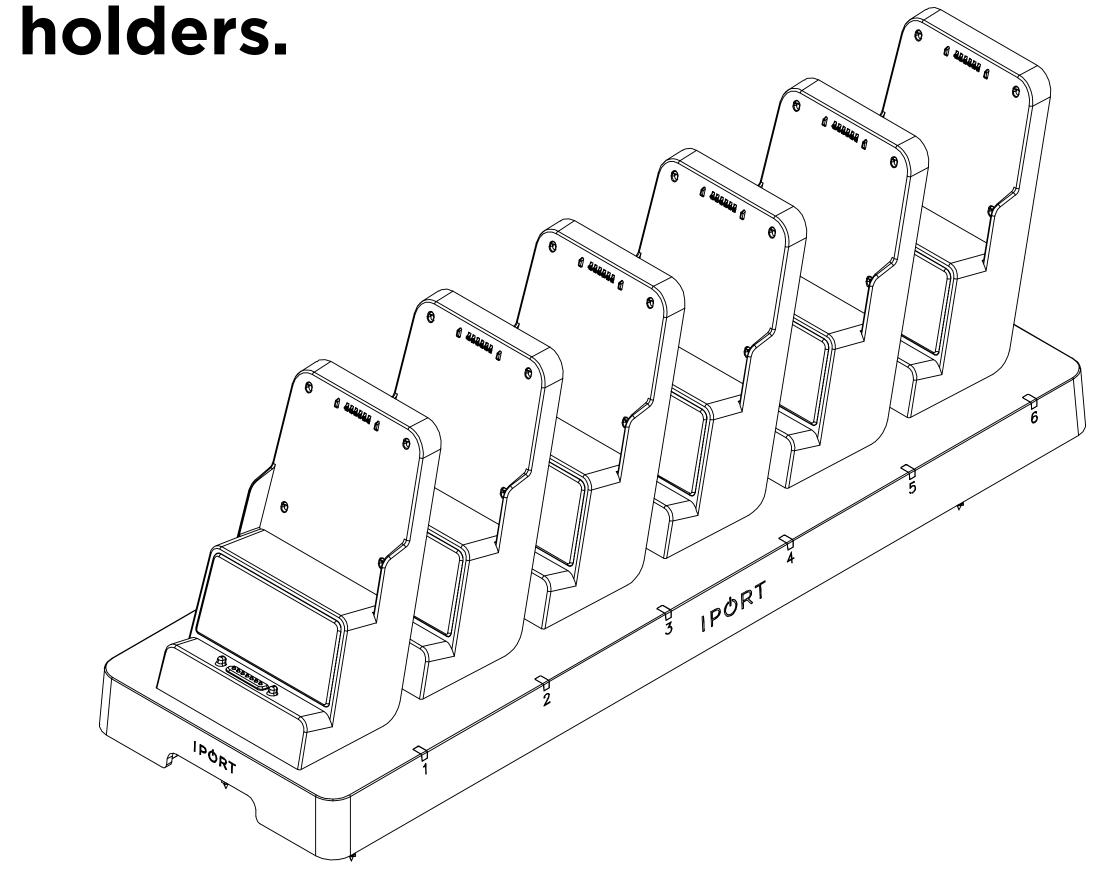


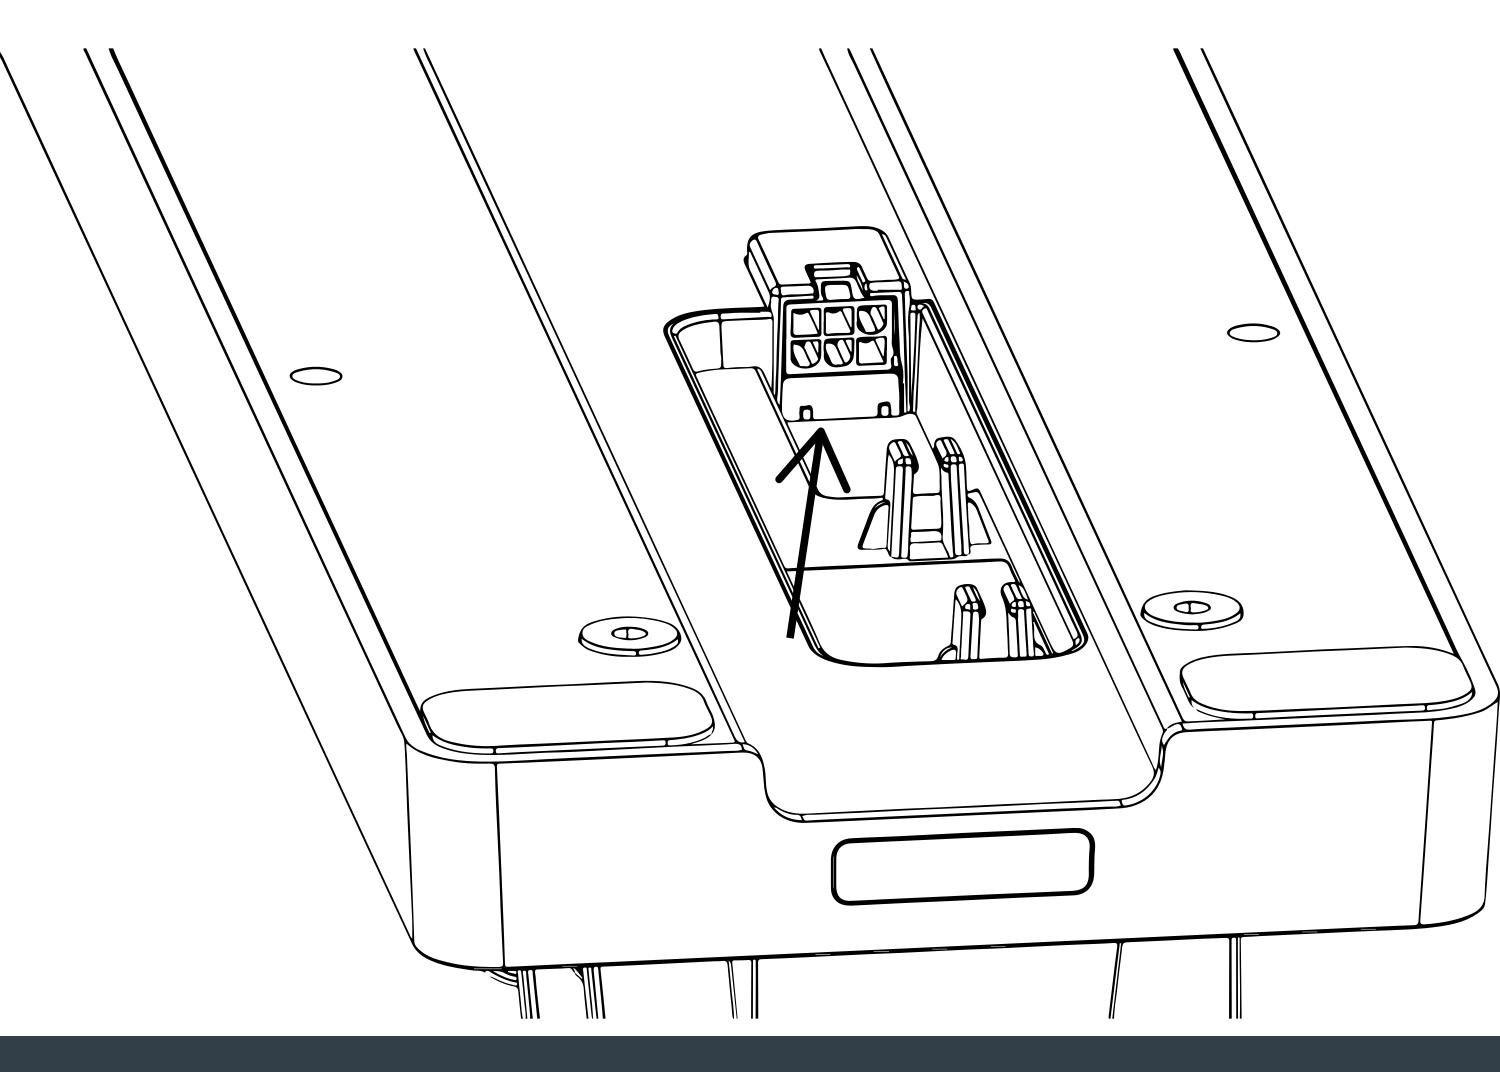


IPURT CONNECT PRO

PHONE MULTIDOCK

3. To charge the CONNECT Phone Case and Pay Case on a MultiDock, Detach the Pay Case and place it in the upper Cradle. Then, place the CONNECT Phone Case into the lower Cradle.

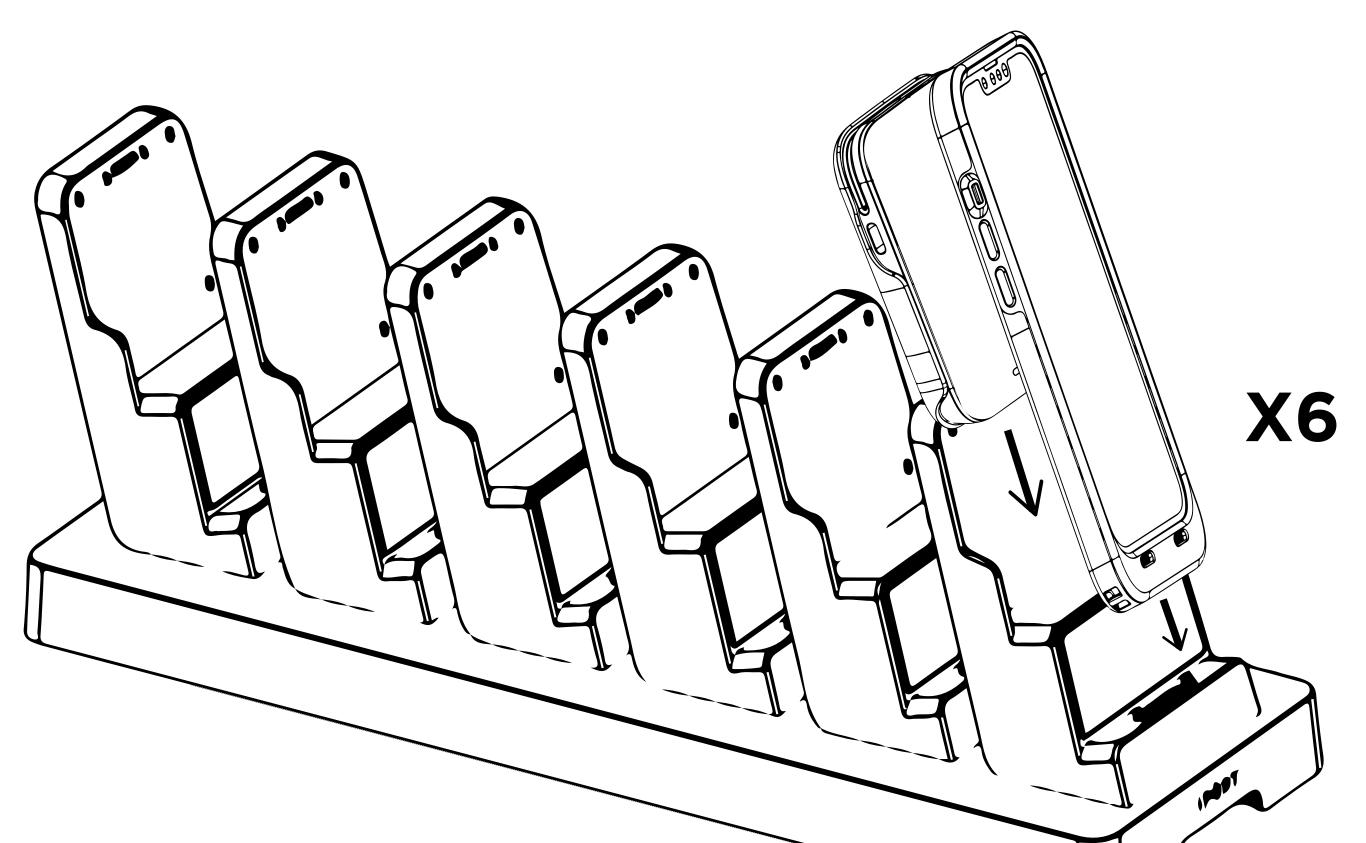




IPCRT CONNECT PRO

PHONE MULTIDOCK

4. Optional - to securly mount MulitDock to a desk or table, remove the first and last Charging Cradle (see step 5), insert the provided screws through the four openings on the MultiDock and

hand tighten with a screwdriver. Reinstall the Charging Cradles previously removed.

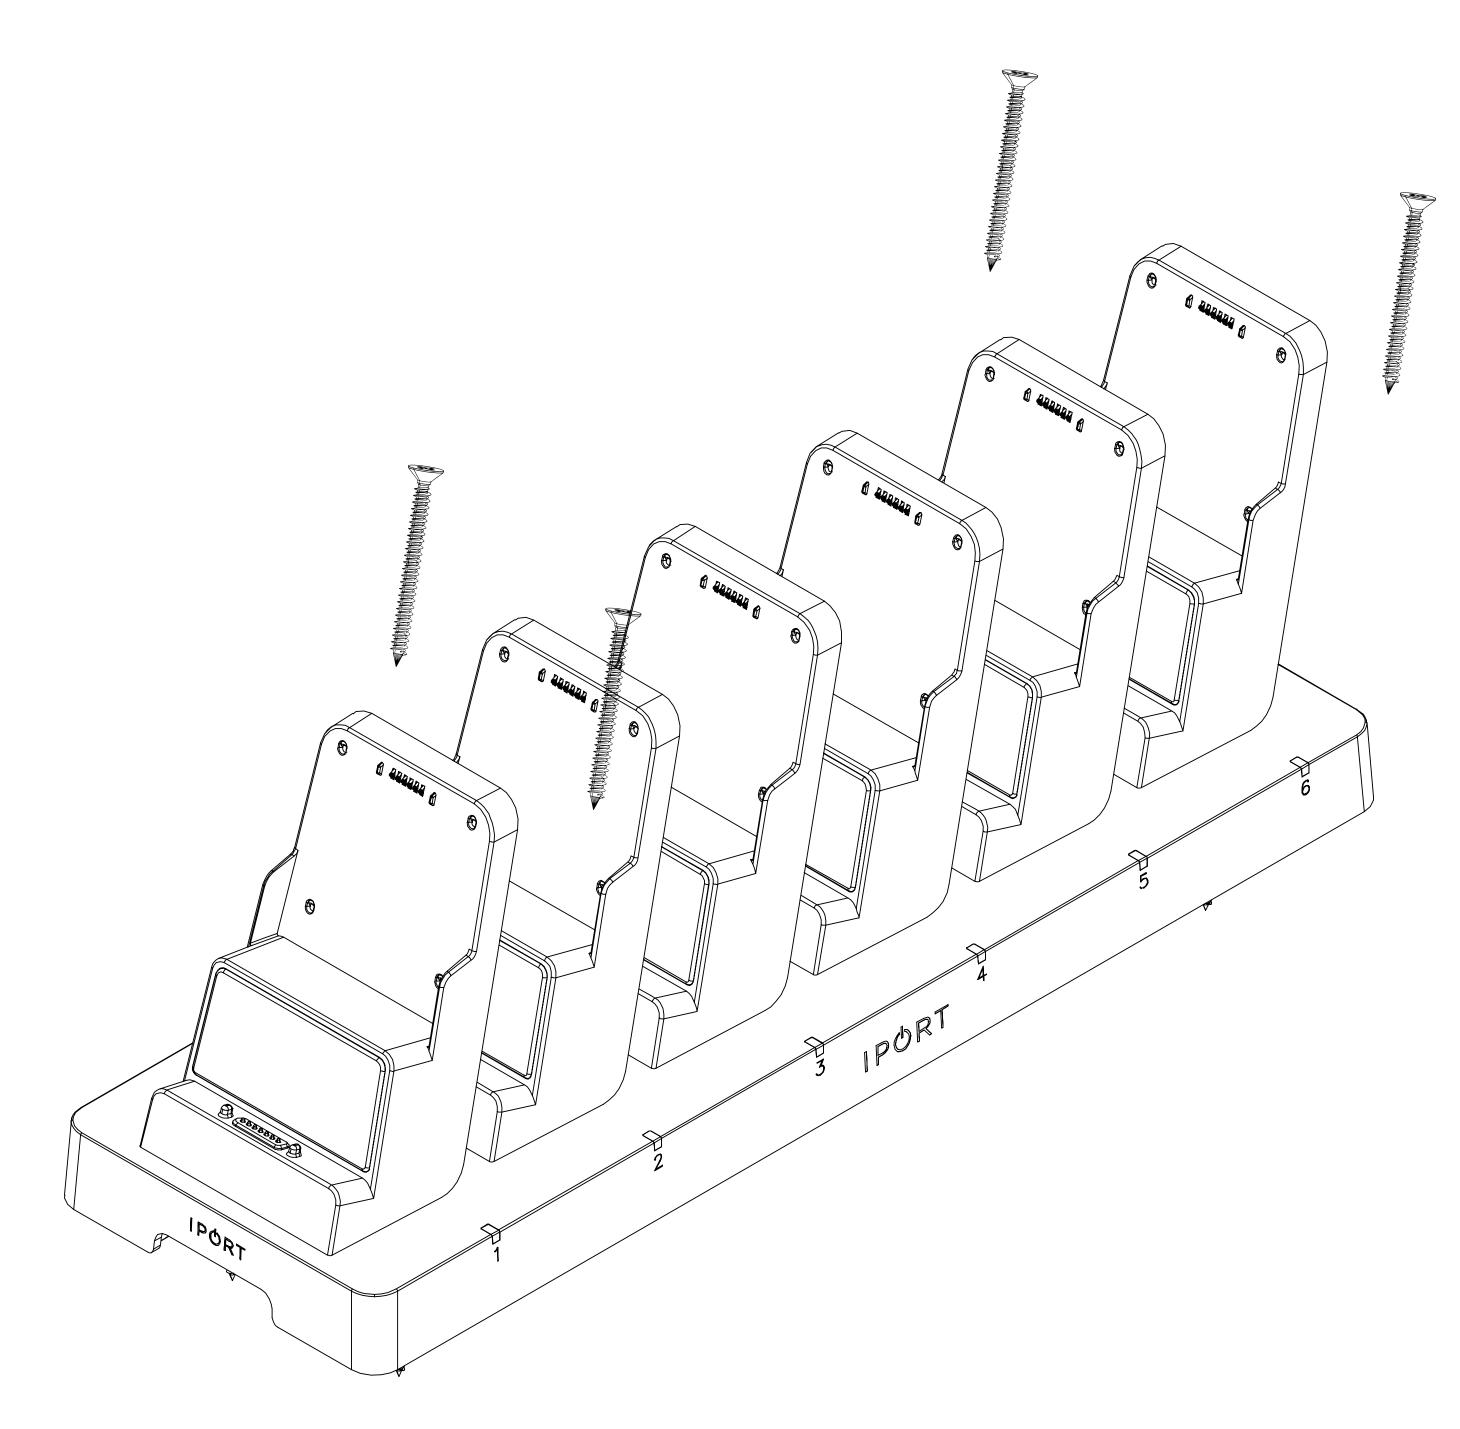

IPCRT CONNECT PRO

PHONE MULTIDOCK

5. To remove or change the Charging Cradle, slide the Cradle towards the front of the Multidock then pull up.

