

TRUFIG

BY SONANCE

TRUFIG FASCIA IPAD AIR11 AND A16 installation

INSTALLATION MANUAL

INTRODUCTION

This installation guide will provide instructions to install a TRUFIG iPad Air11 or A16 Fascia.

ASSEMBLY CONTENTS:



1 Primed Fascia
1 Metal Retainer
2 Plastic Spacers
8 Thumb Nuts

1 Fascia Removal Tool
1 Depth Adjustment Tool
1 Thumb Nut (Lanyard)

Remove all parts from packaging and place them on a clean flat surface.

ORIENTATION & PLACEMENT


1. Before installing the iPad unit into the metal fascia, be sure that the indentation of the Plastic Spacer aligns with the hole in the Fascia.
2. Insert the 2 Plastic Spacers as shown.
3. Align the ON/OFF button of the iPad with the Plastic Spacer indentation and the hole on the Fascia.

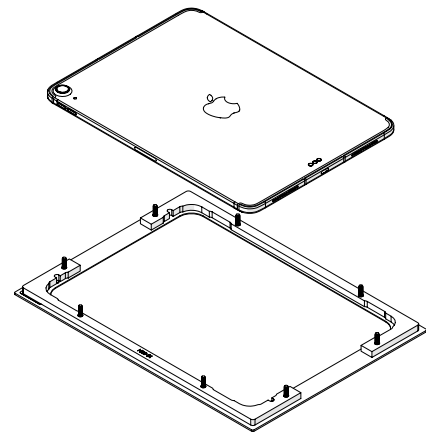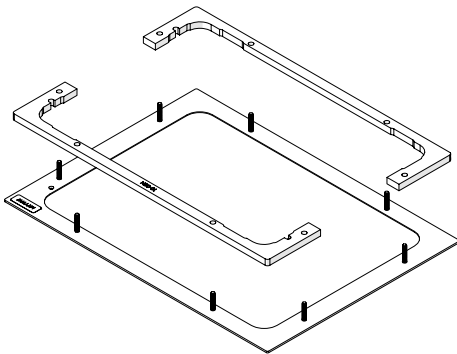

5. Align the Metal Retainer with the threaded studs and verify that the wire management tabs are towards the outside.

NOTE: If installing an iPad 10 Gen, place the side of the spacers marked "10 GEN" up.


4. Insert the iPad.

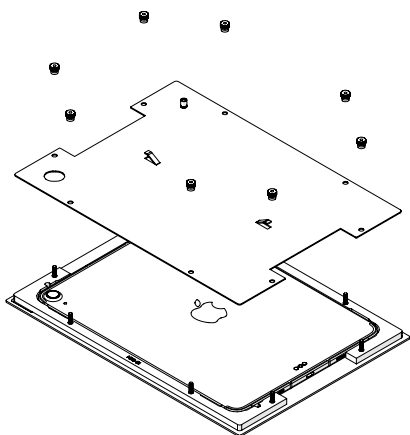

6. To secure the Metal Retainer use the 8 Thumb Nuts.

ADJUSTING THE MAGNETS

1. To properly adjust the magnets the Mounting Platform must be installed in the wall and the wall surface finished.
2. Place the Depth Adjusting Tool on one corner with the long side on the wall surface pointing the short stem towards the inside of the Mounting Platform.
3. Using a Phillips screwdriver adjust the magnet till it contacts the Adjusting Tool

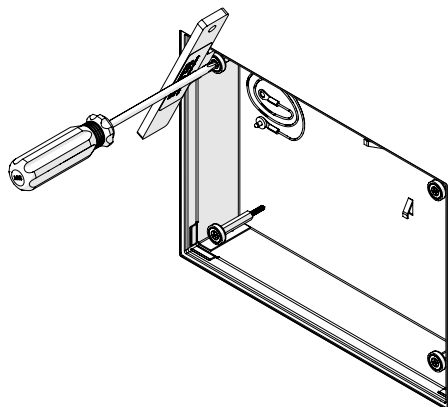


NOTE: Care should be taken not to mark or damage the finished surface of the wall.
Slowly move the Adjustment tool towards one of the magnets until it touches it.
Using a Phillips screwdriver adjust the magnet as needed so the short stem of the Adjustment Tool just touches the surface of the magnet

4. Repeat this process as needed to all the magnets.

INSTALLING THE STANDOFF IN THICK SOLID SURFACE

When the installation is on a thick substrate a standoff is needed.


1. Remove the 4 magnet assemblies from the enclosure.

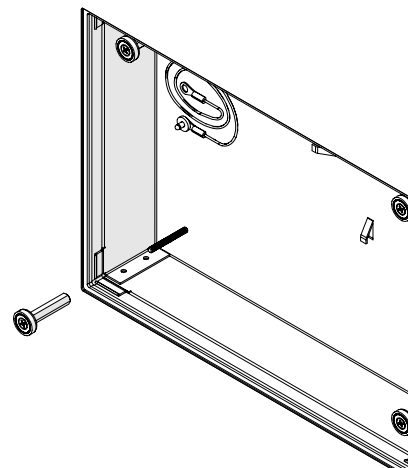

2. Disassemble the Magnet assembly.




3. Insert the male threaded standoff into the female threads end of the large standoff.




4. Re-assemble the assembly.
5. Re-install in the enclosure.
6. Follow the ADJUSTING MAGNETS procedure as explained above.

INSTALLATION OF THE FASCIA INTO THE MOUNTING PLATFORM.

1. Connect the cable to the iPad and secure the cable using one of the wire management tabs, press down to lightly pinch the cable.
2. Retrieve the Lanyard from the Mounting Platform and attach the loose end to the Fascia assembly using the thumb screw

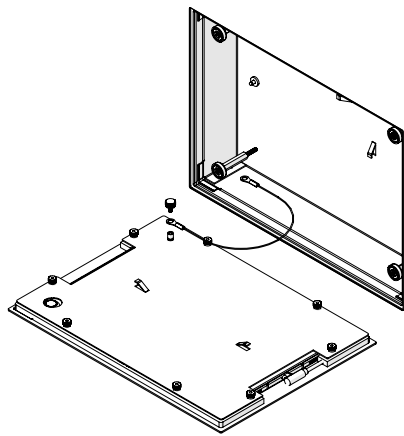


3. Retrieve the Fascia Assembly and carefully insert it into the Mounting Platform opening.

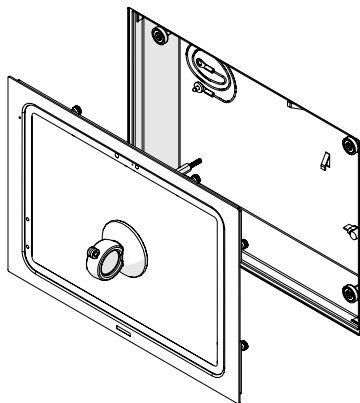


NOTE: Using the Removal tool on one of the corners of the Touch Panel will help inserting the Fascia Assembly into the opening
Care should be taken not to damage the edge of the wall opening.

1. Once the Fascia is placed in the opening verify that it sits flat on the opening, if one or more corners are not flush with the wall opening, remove the Fascia Assembly using the removal tool and adjust the magnets as needed to achieve a flush install.

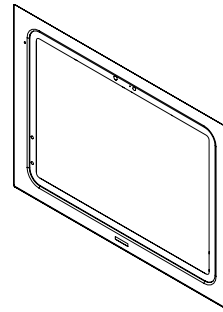

REMOVING THE FASCIA FROM THE MOUNTING PLATFORM.

1. To remove the assembly use the Removal tool by attaching it to a corner of the Touch Panel and pulling straight out.

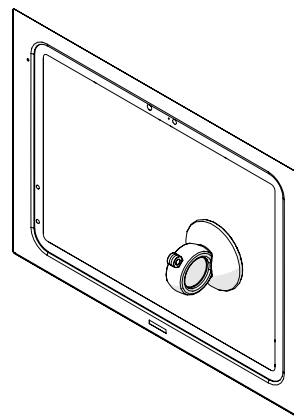

Scan QR code for additional information and resources. For technical support call (949) 492-7777 or visit www.trufig.com/support/#ipads



© 2025 SONANCE All rights reserved. TRUFIG is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest SONANCE and TRUFIG product specification information visit our website at www.sonance.com.

991 Calle Amanecer - San Clemente, CA 92673 USA • Phone: 949.492.7777 • Fax: 949.361.5151 • Technical Support: 949.492.7777 • www.sonance.com