

INSTALLATION INSTRUCTIONS



WARNING

1. Risk of Fire-Supply conductors (power wires) connecting the fixture must be rated minimum 90°C. If uncertain consult an electrician.
2. Risk of Electric Shock-Disconnect power at fuse or circuit breaker before installing or servicing.
3. Risk of Fire/Electric Shock-If not qualified, consult an electrician.

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape




Phillips screwdriver



Flat blade screwdriver




Pliers



Wire strippers

INCLUDED ACCESSORIES BAG



Wire Nut
Qty: 3 pcs
P3



Junction Box Screw
#8-32 x 1"
Qty: 2pcs

HOUSING INSTALLATION

1. Prior to installation, twist the diffuser off from the disk light.
2. Attach two mounted screws into outlet box leaving enough of screw exposed to engage keyholes in the top of disk light (Fig.1).
3. Provide electrical service according to the "National Electrical Code" or your local electrical code to the outlet box.
4. Connect supply wires to wires on fixture with wirenuts. Connect white to white, black to black and green wire to green wire as grounding connection.
5. Secure the disk light with the two mounted screws.
6. Twist and lock the diffuser on disk light.

NOTE: Select desired LED color temperature by using the switch of luminaire situated on disk light for the color temperature selectable items.

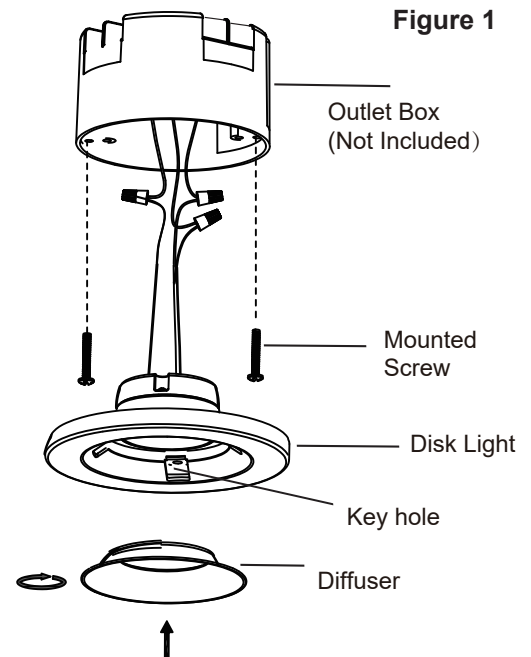


Figure 1

VERIFIED LIST OF TESTED DIMMERS

Brand	Model No.
LUTRON	DVCL-153P-AL
	DVCL-253P-WH
	AYCL-253P-LA
	PD-6WCL-WH-R
Leviton	IPL06-10Z
	IPE04-1LZ

MAINTENANCE

- Do not modify this fixture. Any modifications may render the product unsafe and void warranty.
- This product is suitable for wet locations.

IMPORTANT!

If the control is not paired properly to LED fixtures, irreparable damage may occur.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.