



Dispenser Cleaning Guide

Version 1.0


Refer to Manufacturer's User Manual for more details.

General Cleaning Instructions

- **The cleaning schedule must be followed to maintain sanitary operations.**
- Defer to any local health codes which apply to dairy dispensers and the dispenser manufacturer's instruction manual.

Cleaning Schedule

- **Throughout the Day**
 - Empty and wipe drip tray
 - Wipe valve area and hand lever
- **End of the Day**
 - Fully clean drip tray
 - Fully clean valve area
- **Weekly or as Needed**
 - Fully clean product compartment
 - Fully clean exterior of the dispenser
- **Monthly or as Needed**
 - Disassemble and fully clean valve assembly
- **Every 6 Months**
 - Clean condenser using vacuum

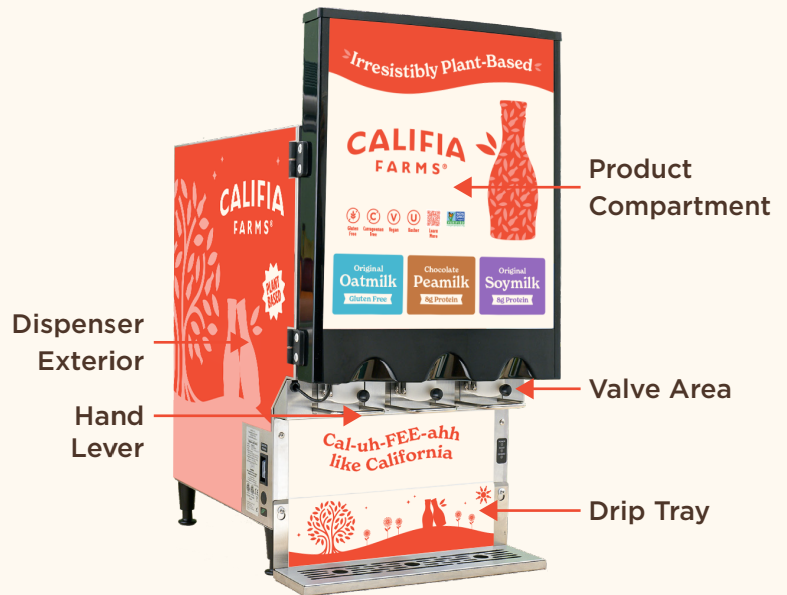

End of the Day

- **Clean the valve area.**
 1. Open the door of the dispenser.
 2. Wipe around the valve and the hand lever with a soft cloth dampened with warm, clean soapy water or a sanitizer wipe.
 3. Wipe the same area with a soft cloth dampened with warm clean water.
 4. Wipe the same area with a dry soft cloth.
- **Clean the drip tray.**
 1. Remove the drip tray and drip tray insert from the dispenser.
 2. The tray and drip tray insert can be cleaned in a dishwasher on a full wash cycle.
 3. If a dishwasher is not available.
 - Rinse in warm water.
 - Wash with a cleaner or detergent. Be sure to reach all corners and crevices.
 - Rinse with clean water or sanitizer.
 - Drip dry.
 4. Reinstall drip tray and drip tray insert.



Questions? Contact us at hello@californiafarms.com or (401) 216-7172



Dispenser Cleaning Guide

Version 1.0

Refer to [Manufacturer's User Manual](#) for more details.

Weekly or as Needed

- **Clean the product compartment.**
 1. Remove all product cases from the dispenser.
 - **Note:** If there are any partially filled product cases, refrigerate elsewhere during the cleaning. To avoid spilling, replace the tube in the locking feature in the cap.
 2. Turn on the dispenser.
 3. To clean the product ramp.
 - Remove the product ramp from the product compartment.
 - Rinse in warm water.
 - Wash with a cleaner or detergent. Be sure to reach all corners and crevices.
 - Rinse with clean water or sanitizer.
 - Drip dry.
 4. If there is ice buildup, allow it to partially thaw by leaving the dispenser door open for roughly 10 minutes.
 5. Wipe the inside of the dispenser compartment, including the inside of the door and door gasket, with a soft cloth dampened with warm soapy water.
 6. Wipe the same area with a soft cloth dampened with warm, clean water.
 7. Wipe the same area with a dry soft cloth.
 8. Place the clean product ramp in the dispenser compartment.
 9. Turn on the dispenser and allow it to chill before installing the product.
- **Clean the dispenser exterior.**
 1. Wipe exterior surfaces with a soft cloth dampened with warm soapy water.
 2. Wipe the same area with a soft cloth dampened with warm, clean water.
 3. Wipe the same area with a dry soft cloth.

Manufacturer Support

- **1 (800) 569-0826 or kpservice@kanpak.us**

