

Purchase Date:	/ /	Order/Customer Reference	Number


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <a href="https://tiny.cc/SunnydazeWarranty">https://tiny.cc/SunnydazeWarranty</a>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: <a href="mailto:customerservice@sunnydazedecor.com">customerservice@sunnydazedecor.com</a>, or via our contact us page at <a href="https://tiny.cc/SunnydazeContact">https://tiny.cc/SunnydazeContact</a>

## 9-DRAWER CHEST AGR-393

Carefully review assembly and care instructions before using this product. Save this document for future reference.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

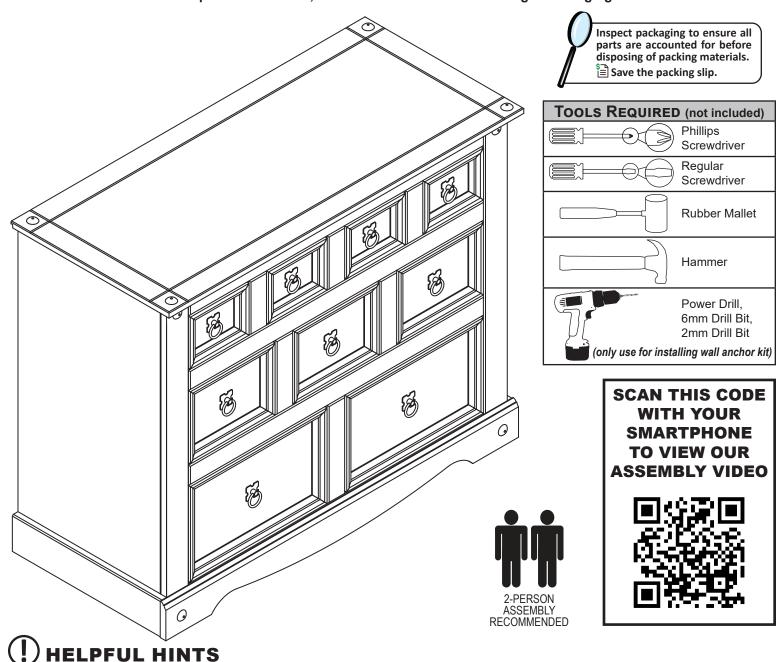

Sunnydaze Decor advises reviewing this manual fully, and assembling the unit soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

## INTRODUCTION

# Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.



Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.



Regularly clean with a clean microfiber cloth to prevent dust accumulation.



Assemble on a soft, flat, clean, and dry surface.

Use a soft, protective barrier when assembling the furniture.

**TIP:** Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not paint the unit.

Do not use abrasive materials or cleaners to clean the furniture.



Do not push or drag furniture as doing so may damage the unit.

Only move furniture when it is empty.



Indoor use only.

Do not expose the furniture to heat or humidity.



Always ask for help when moving furniture



When cleaning nearby the furniture, do not allow contact with water or cleaners as it may deteriorate the furniture.



**Avoid Accidents** - Do not climb, sit or stand on the furniture.

Do not allow children to play on or inside the furniture.




Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.



Keep sharp objects away as they may scratch or damage the unit.


Do not use the furniture as a writing surface without a padded barrier.

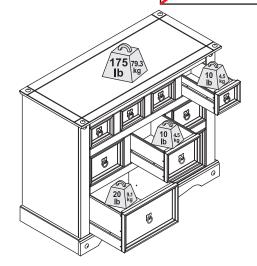

### **MARNING**:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

## **COMPONENTS**

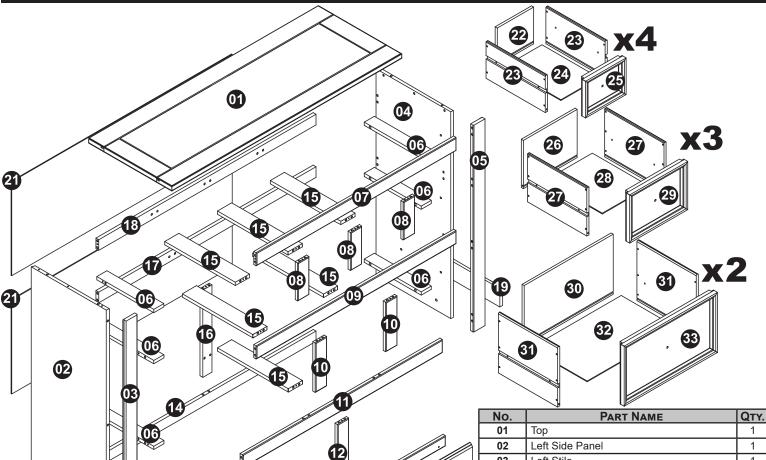

$\supset$	
)	Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



## WARNING CHOKING HAZARD—

This item contains small parts that can be swallowed. Keep children and pets away during assembly.

No.	HARDWARE		QTY.
Α		Wood Dowel	102
В		M4.5x28mm Pan Screw	43
С	•	Connector	12
D	<b>B</b>	Handle Set	9
Е		M3.5x30mm Flat Screw	80
F	( <del>)</del>	Tack	8
G		M3.5x25mm Pan Screw	20
Н		M4x14mm Flat Screw	54
J	95	Drawer Slide	18
K		M4x8mm Bolt	18
L		M4.5x25mm Pan Screw	6
Υ		Wall Anchor Kit	1
Z	0	8x8mm Nail	44


01	Тор	1
02	Left Side Panel	
03	Left Stile	
04	Right Side Panel	
05	Right Stile	
06	Outside Drawer Rail (L/R)	
07	Front Top Horizontal Face Frame	1
08	Top Drawer Vertical Face Frame	
09	Top Drawer Horizontal Face Frame	
10	Middle Drawer Vertical Face Frame	
11	Bottom Drawer Horizontal Face Frame	1
12	Bottom Drawer Vertical Face Frame	1
13	Bottom Horizontal Frame	1
14	Back Bottom Horizontal Support	1
15	Center Drawer Rail	6
16	Back Bottom Vertical Support	1
17	Back Center Horizontal Support	1
18	Back Top Horizontal Support	1
19	Side Trim Board (L/R)	
20	Front Trim Board	
21	Backing Board	2
22	Small Drawer Back	4
23	Small Drawer Side (L/R)	8
24	Small Drawer Bottom	4
25	Small Drawer Face	4
26	Medium Drawer Back	3
27	Medium Drawer Side (L/R)	6
28	Medium Drawer Bottom	3
29	Medium Drawer Face	3
30	Large Drawer Back	2
31	Large Drawer Side (L/R)	
32	Large Drawer Bottom	2
33	Large Drawer Face	2



## **ASSEMBLY**

#### Carefully review all steps and fully understand assembly before beginning.

IMPORTANT: Take care not to over-tighten screws as doing so may crack the wood or strip the screw hole, causing a weak connection and reduced stability.

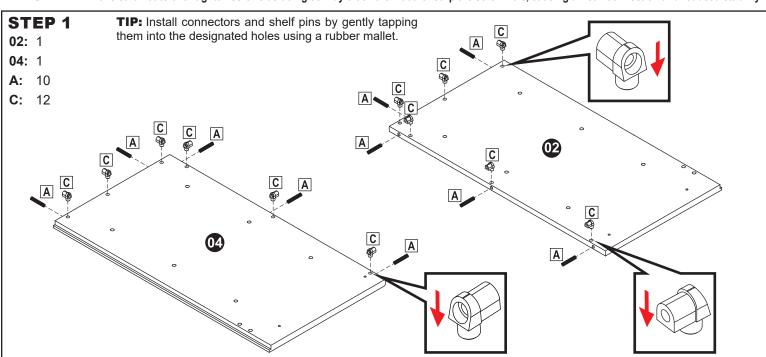


Locate and lay out Left Side Panel (02) and Right Side Panel (04).

Install components as shown in the diagrams and noted below:

Left Side Panel (02), install five Wood Dowels (A) and six Connectors (C).

Right Side Panel (04), install five Wood Dowels (A) and six Connectors (C).


Set components aside.

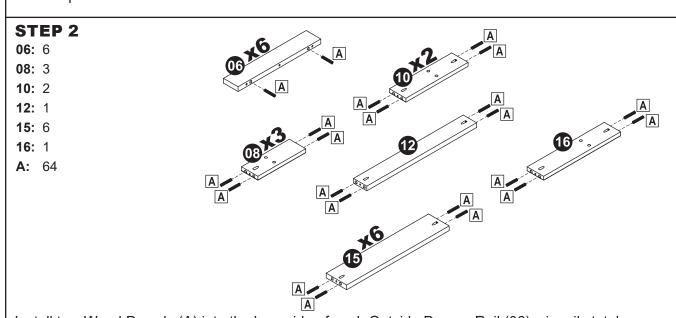


Install two Wood Dowels (A) into the long side of each Outside Drawer Rail (06), six rails total.

Install two Wood Dowels (A) into each end of the these components: three Top Drawer Vertical Face Frames (08), two Middle Drawer Vertical Face Frames (10), one Bottom Drawer Vertical Face Frame (12), six Center Drawer Rails (15), and one Back Bottom Vertical Support (16).

Set components aside, label if necessary.

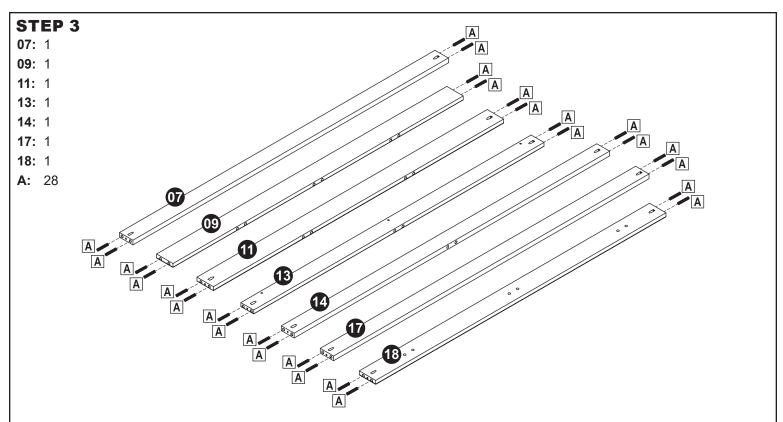


Install two Wood Dowels (A) into each end of the these components: Front Top Horizontal Face Frame (07), Top Drawer Horizontal Face Frame (09), Bottom Drawer Horizontal Face Frame (11), Bottom Horizontal Frame (13), Back Bottom Horizontal Support (14), Back Center Horizontal Support (17), and Back Top Horizontal Support (18). Set components aside, label if necessary.

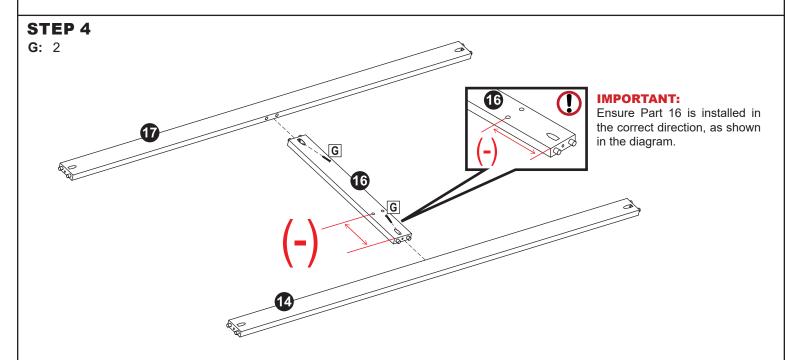

With the angled mounting holes facing upward, lay out Back Bottom Horizontal Support (14), Back Bottom Vertical Support (16), and Back Center Horizontal Support as shown. **NOTE:** Notice there is a shorter space between the mounting holes and one end on Part 16, this edge must be installed toward Part 14.

After components are aligned as shown above, secure using two M3.5x25mm Pan Screws (G).

Flip these assembled components over.

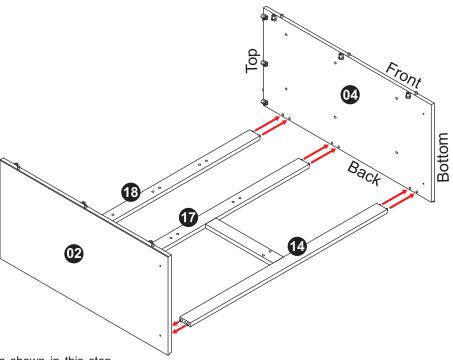



**NOTE:** Components shown in this step will be secured with hardware in Step 7.


Identify the front, back, top and bottom of each component shown.

Place the backside support pieces (18,17,14) on a smooth, clean surface with the angled holes facing down.

Ensuring Part 14 is on the bottom and Part 18 is on top, align the dowels with the back side of the side panels (02,04).

#### STEP 6

**01**: 1 **L**: 6

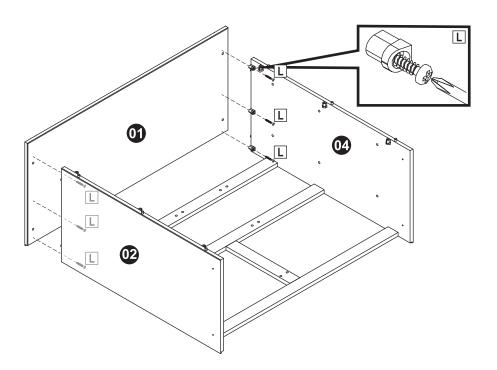


#### **IMPORTANT:**

Ensure the side panels and backside supports are tight against each other before securing the screws into the top.

Align Top (01) with the top of the side panels and secure using six M4.5x25mm Pan Screws (L).

**B**: 6

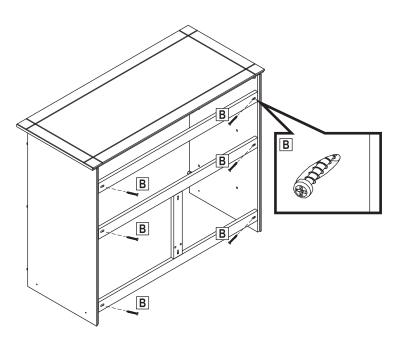


Carefully flip the unit upright.

Secure the backside supports using six M4.5x28mm Pan Screws (B), as shown.

#### STEP 8

**B**: 12

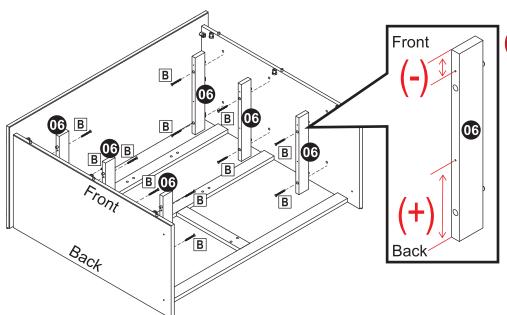




#### **IMPORTANT:**

Ensure the drawer rails are installed in the correct direction, as indicated in the diagrams.

Identify the two indents on Outside Drawer Rails (06), the indent with the shortest distance between the indent and the edge of the rail must be installed toward the <u>front</u> of the cabinet.


Secure three Drawer Rails (06) to each side of the cabinet using two M4.5x28mm Pan Screws (B) for each rail.

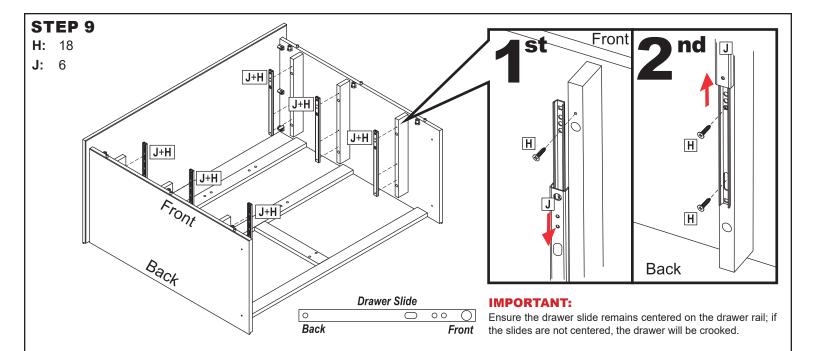

Push the front of Drawer Slide (J) backward. Align the 3rd round hole on the front of the drawer slide with the front indent on the drawer rail and secure using one M4x14mm Flat Screw (H).

Slide the top piece of the drawer slide forward, the backside indent will align with the 1st small round hole on the back of the slide. Ensuring the slide is centered on the drawer rail, secure the 1st small round hole, then secure the oblong hole using two M4x14mm Flat Screws (H), as shown.

Repeat this process to secure drawer slides to the five remaining rails.

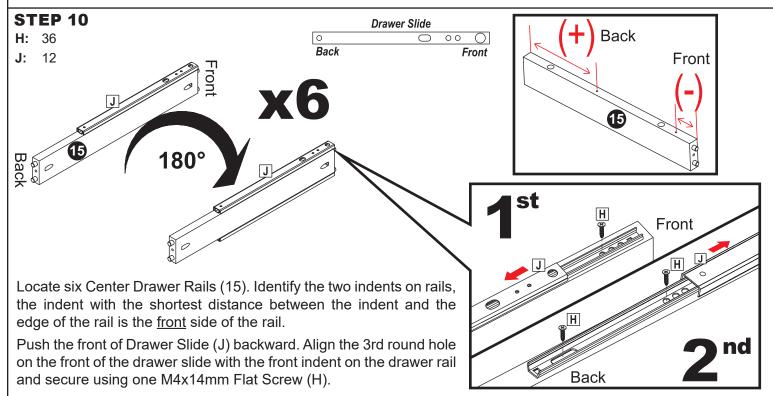


Slide the top piece of the drawer slide forward, the backside indent will align with the 1st small round hole on the back of the slide. Ensuring the slide is centered on the drawer rail, secure the 1st small round hole, then secure the oblong hole using two M4x14mm Flat Screws (H), as shown.

Flip the rail over and repeat this process to secure another slide to the other side of the rail.

Repeat this process to secure two sets of drawer slides to the five remaining rails.

**B**: 6

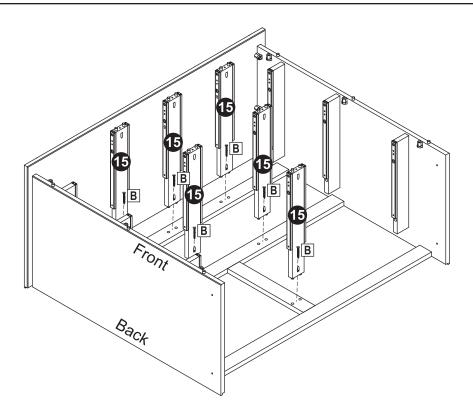


#### **IMPORTANT:**

Ensure Part 15 is installed in the correct direction, as shown in the diagram.

Ensuring the drawer slides are toward the front, install six Center Drawer Rails (15) into the back supports as shown. Secure each rail to the back supports using M4.5x28mm Pan Screws (B).

#### **STEP 12**

**G**: 2

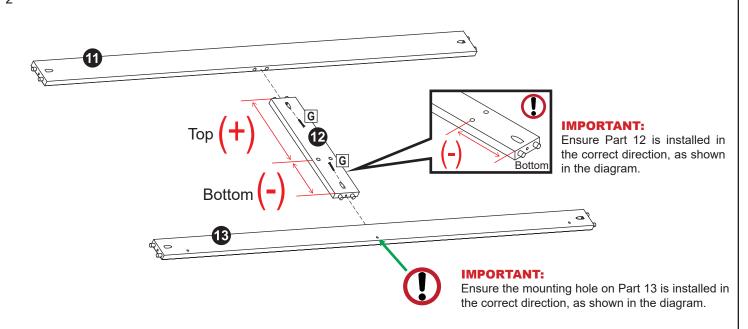

With the angled mounting holes facing upward, lay Bottom Drawer Horizontal Face Frame (11), Bottom Drawer Vertical Face Frame (12), and Bottom Horizontal Frame (13) as shown. **NOTE:** Notice there is a shorter gap between the mounting holes and one end on Part 12, this edge must be installed toward Part 13.


After components are aligned as shown above, secure using two M3.5x25mm Pan Screws (G).





#### **IMPORTANT:**


Ensure the vertical face frames are installed in the correct direction, as shown in the diagram.

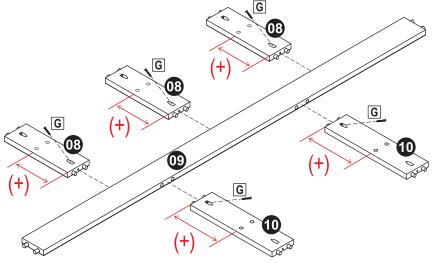


Installation direction is very important in this step. Identify the longer gap between the dowel mounting holes and the edge of Top Drawer Vertical Face Frames (08) and Middle Drawer Vertical Face Frames (10).

With the angled mounting holes facing upward, align three Top Drawer Vertical Face Frames (08) and two Middle Drawer Vertical Face Frame (10) with Top Drawer Horizontal Face Frame (09).


After components are aligned as shown above, secure the components using M3.5x25mm Pan Screws (G).

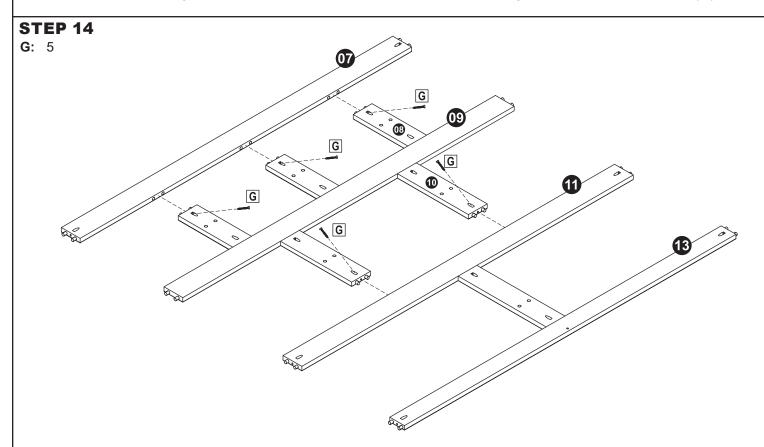

With the angled mounting holes facing upward, align Front Top Horizontal Face Frame (07) with Parts 8. With the angled mounting holes facing upward, align Bottom Drawer Horizontal Face Frame (11) with Parts 10. After components are aligned, secure using M3.5x25mm Pan Screws (G), as shown.

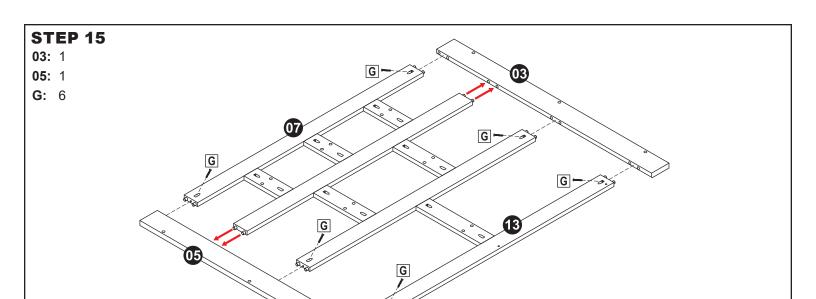

With the dowel mounting holes facing upward, align the Left and Right Stiles (03,05) with the front face frames. Secure each side using three M3.5x25mm Pan Screws (G), as shown.

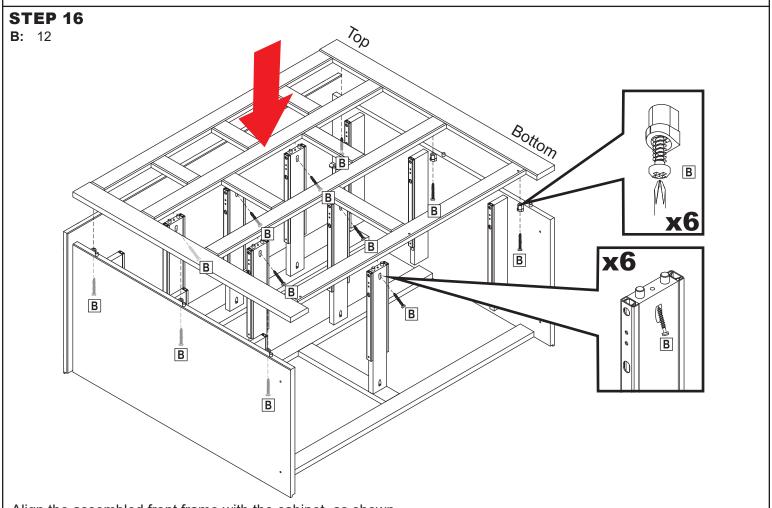


Align the assembled front frame with the cabinet, as shown.


Secure the side panels of the cabinet to the stiles using six M4.5x28mm Pan Screws (B).

Then, secure the center drawer rails to the vertical face frames using six M4.5x28mm Pan Screws (B).



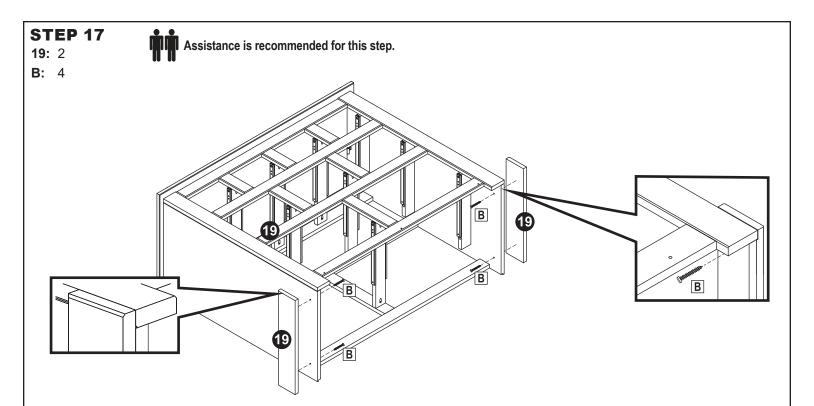


Align two Side Trim Boards (19) with the bottom of the unit, as shown. To ensure the trim boards remain flush with the unit, have an assistant hold them firmly in place while the hardware is secured. From the inside of the side panels, secure each trim board using two M4.5x28mm Pan Screws (B).

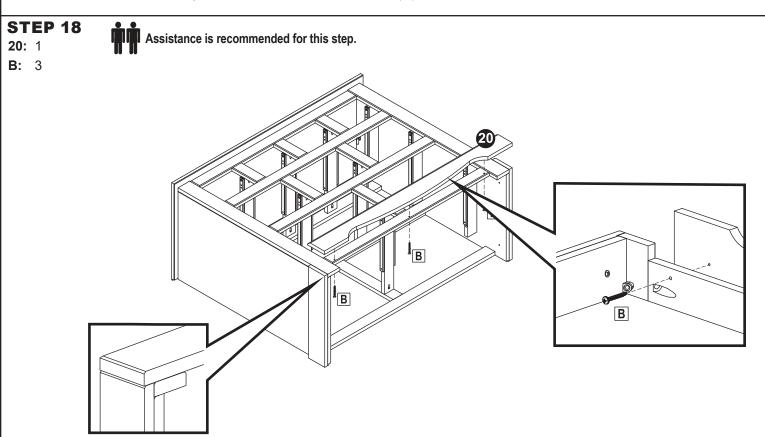

Align Front Trim Board (20) with the bottom, front of the unit. To ensure the trim board remains flush with the unit, have an assistant hold it firmly in place while the hardware is secured. From the backside of the bottom horizontal frame, secure the trim board using three M4.5x28mm Pan Screws (B).


Sunnydaze Decor

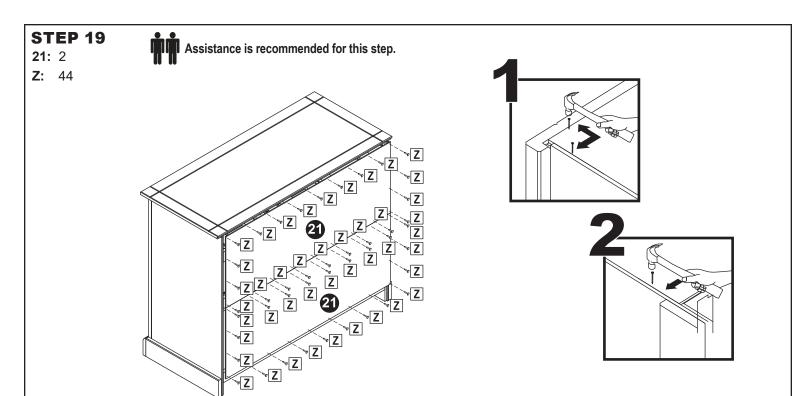

Gently lay the unit face-down on a soft, clean surface.

Place two Backing Boards (21) onto the back of the unit, ensuring they are snug within the lips of the top and side panels.

Secure the backing board using fourty-four 8x8mm Nails (Z).

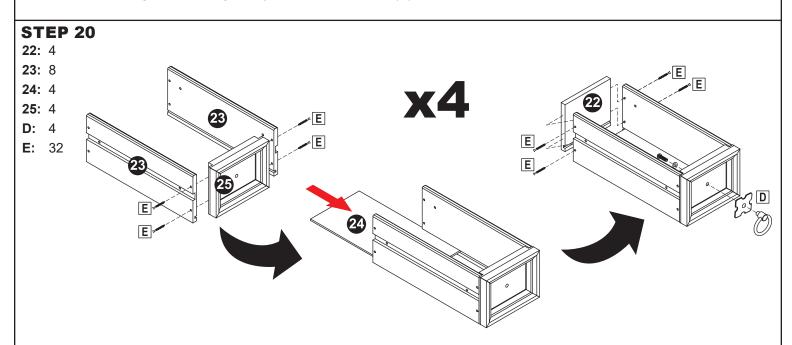


Ensuring the inside grooves align, secure two Small Drawer Sides (23) to Small Drawer Face (25) using four M3.5x30mm Flat Screws (E).

Slide Small Drawer Bottom (24) into the grooves, as shown.

Secure Small Drawer Back (22) to the drawer sides using four M3.5x30mm Flat Screws (E).

Ensuring the handle and handle plate remain straight, install one Handle Set (D) to the drawer face, as shown.

Repeat this process to assemble the three remaining small drawers.

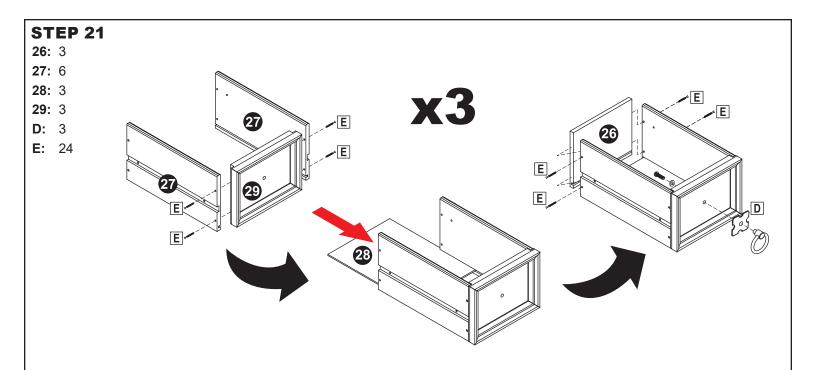


Ensuring the inside grooves align, secure two Medium Drawer Sides (27) to Medium Drawer Face (29) using four M3.5x30mm Flat Screws (E).

Slide Medium Drawer Bottom (28) into the grooves, as shown.

Secure Medium Drawer Back (26) to the drawer sides using four M3.5x30mm Flat Screws (E).

Ensuring the handle and handle plate remain straight, install one Handle Set (D) to the drawer face, as shown.

Repeat this process to assemble the two remaining medium drawers.

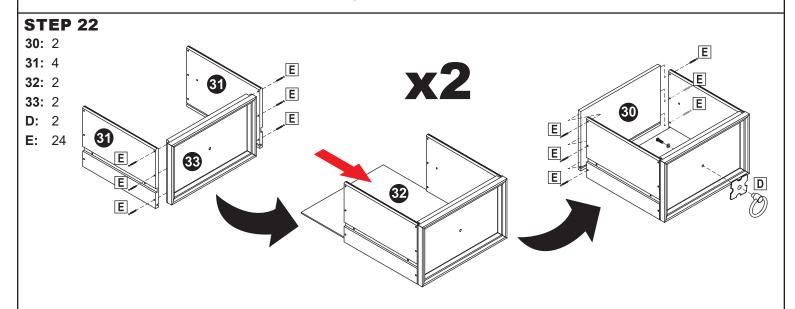

Ensuring the inside grooves align, secure two Large Drawer Sides (31) to Large Drawer Face (33) using six M3.5x30mm Flat Screws (E).


Slide Large Drawer Bottom (32) into the grooves, as shown.

Secure Large Drawer Back (30) to the drawer sides using six M3.5x30mm Flat Screws (E).

Ensuring the handle and handle plate remain straight, install one Handle Set (D) to the drawer face, as shown.


Repeat this process to assemble the remaining large drawer.


**K**: 4

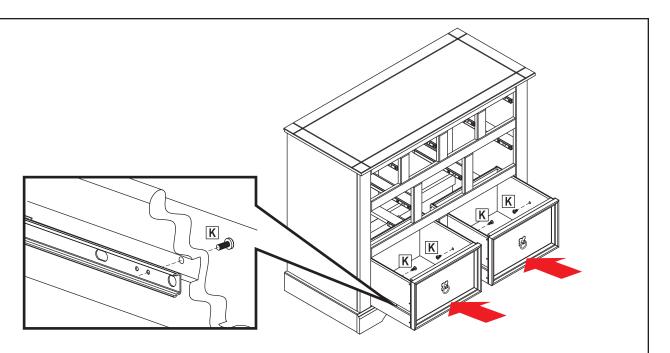

Working one drawer at a time, extend the drawer slides out from the bottom row cabinet. Align the first small hole on the drawer slide with the pre-drilled hole on the front of the drawer sides. From the inside of the drawer, secure the drawer to the slide using one M4x8mm Bolt (K). Repeat to secure the other side of the drawer to the other slide.

**NOTE:** The drawers have a second pre-drilled hole toward the back of the drawer sides, this hole is a result of the manufacturing process and is not intended for securing the drawer to the slide.

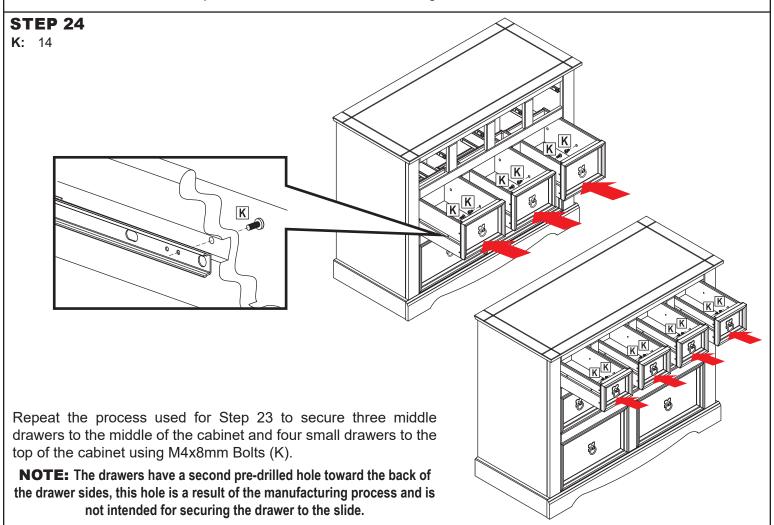

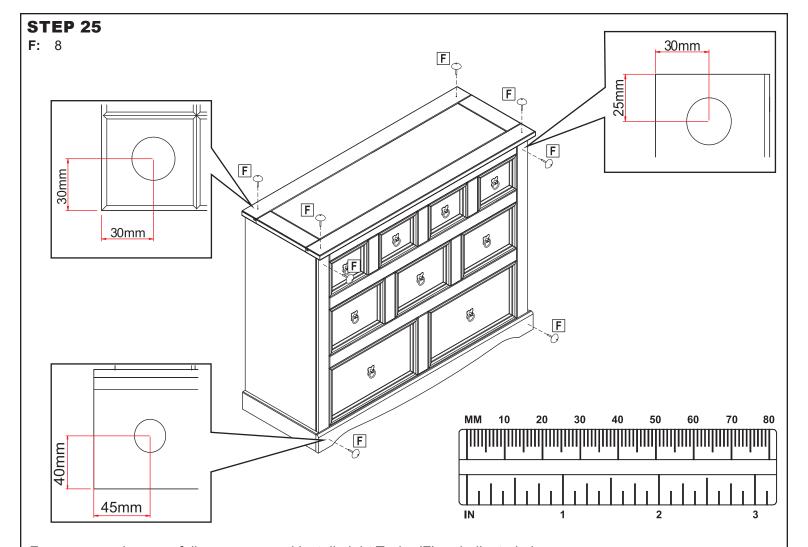

For even spacing, carefully measure and install eight Tacks (F) as indicated above.

### •••• HELPFUL MEASURING HACK

To help ensure tacks are evenly spaced, we developed a hack to make this step easier. Grab a blank white piece of paper or tracing paper, a writing utensil, a ruler and scissors.


The blocks below are sized to the dimensions noted in the above diagrams.


Place the blank piece of paper over the blocks below. Use a writing utensil to mark the corner of each block. Use a ruler to connect the dots of each block. Write the size inside the block and cut them out.


Align the cutout with the designated corner (shown above).


Use the sharp end of one of the tacks to make a small indent at inside corner of cutout.

After tack placement has been marked, install tacks using a rubber mallet.

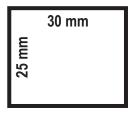




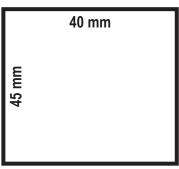

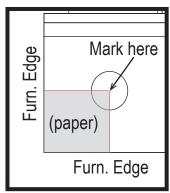

Page 16 / 17

**Y**: 1

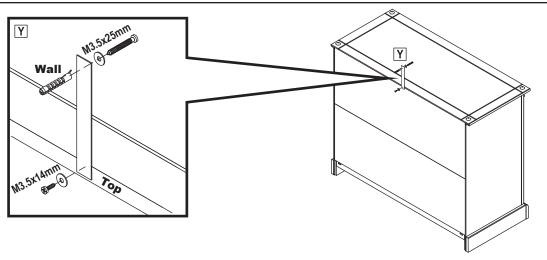

**WARNING:** Check for pipes and electrical wiring before drilling.

**IMPORTANT:** If walls are not solid like brick, stone or concrete, you will require special fittings (not included). When in doubt, consult a professional.

Carefully measure the location of pilot hole before drilling and installing the unit.

- Place wall mounting strap against the wall and mark the position for drilling the hole.
- Using a power drill with a 6mm bit, drill a hole to 30mm depth. If the wall is softer, using a 5mm bit is recommended.
- Insert the wall anchor into the hole until the opening is flush with the wall.
- Secure the strap to the wall using the 25mm screw and washer.
- Use a 2mm drill bit to drill a small pilot hole on the back of the furniture top. Secure the other end of the strap to the furniture using the 14mm screw and washer.

### **▲** SAFETY STATEMENTS & WARNINGS **▲**

- · For residential use only. Not for commercial or industrial use.
- · For indoor use only.
- · Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- · Only use this unit on a flat, level surface.
- · Do not sit, stand or climb on the unit.
- Supervise children; never allow children to climb or sit on this unit as it may tip over and cause serious injury.
- Do not place liquids or hot items directly on the furniture.
- · Never use chemical cleaning products or polishes as they may damage the finish.
- · Do not exceed the weight capacity of the furniture.
- Do not overload the drawers as doing so may cause damage.
- · Do not place the unit in direct sunlight.
- Avoid placing unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write on furniture without a padded barrier to protect the surface.

#### Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

### **⚠**NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.